■ REAR BRAKE DISC PAD REMOVAL/INSTALLATION

id041100001000

id041100001000


Without Electric Parking Brake

1.Remove the center console tray. (See CENTER CONSOLE TRAY REMOVAL/INSTALLATION.)

2.Loosen the adjusting nut. (See PARKING BRAKE LEVER ADJUSTMENT.)

3.Remove the clip and disconnect the rear parking brake cable from the rear caliper. (See REAR PARKING BRAKE CABLE REMOVAL/INSTALLATION.)

4.Remove the rear ABS wheel-speed sensor from the wheel hub component.

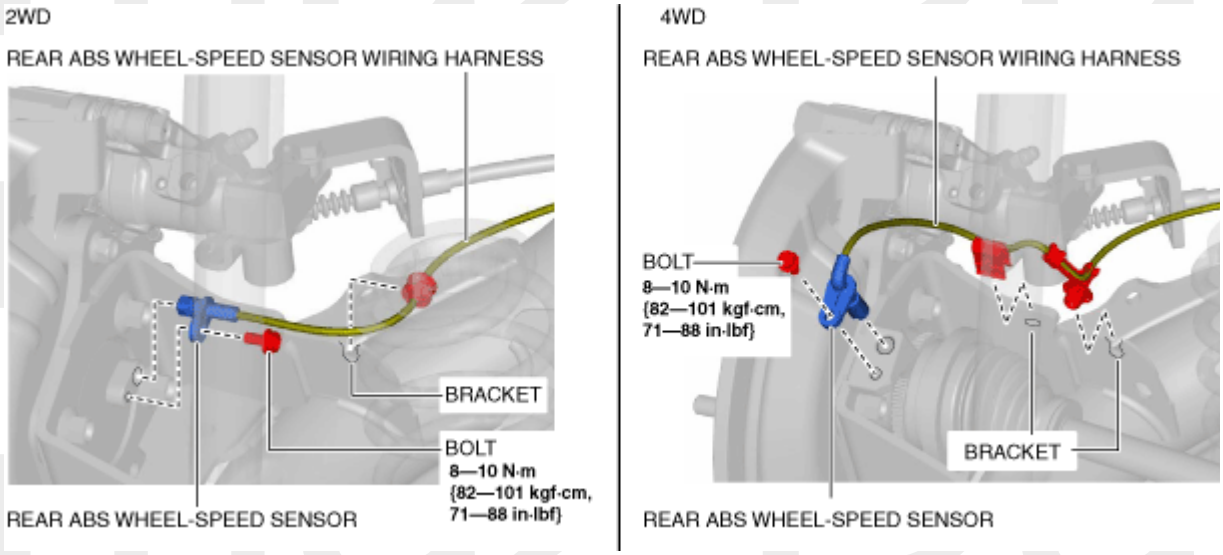


ac3wzw00002326

5.Remove the rear ABS wheel-speed sensor wiring harness from the bracket and set it aside.


6.Loosen the caliper installation bolt.

© 2019 Mazda Motor Corporation.

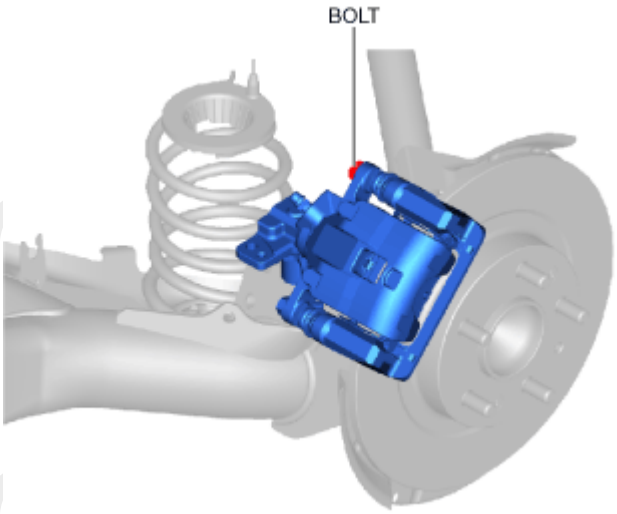

ac3uuw00001210

7.Remove the mounting support bolt and suspend it with a cable. (See REAR BRAKE MOUNTING SUPPORT REMOVAL/INSTALLATION.)

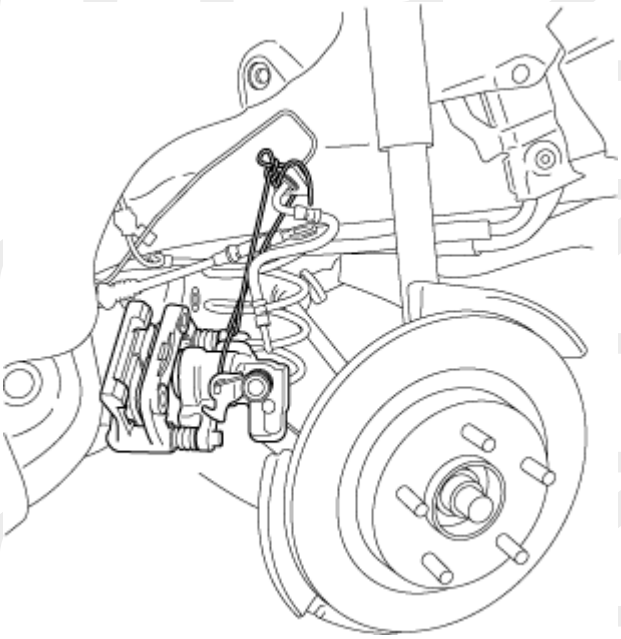

ac3uuw00001211

Caution


• If a shim is deformed, it cannot be reused.

© 2019 Mazda Motor Corporation.

- When removing a shim, be careful not to deform it.
- Do not repair and reuse a deformed shim.
- If the rubber coating of a shim has peeled off, the shim cannot be reused.

8.Press the disc pad component against the disc plate side, and peel off the shims from the caliper and piston.

9.Remove the caliper bolt and move the mounting support.

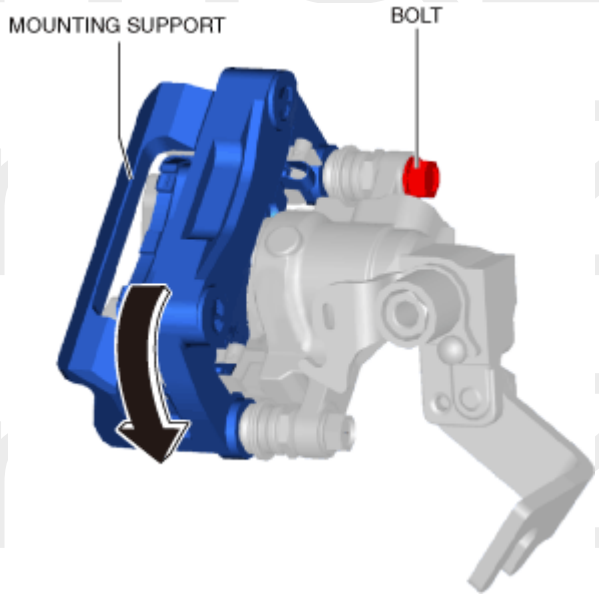

ac3uuw00001212

10.Remove the disc pad component from the mounting support.


11.Remove the shims from the disc pad.

12.Clean the areas where the following parts and the double-sided adhesive tape come into contact.

- Caliper
- Piston
- Disc pad
- Shim

13.Rotate the piston clockwise slowly using the SST and push the piston completely until the piston grooves are in the position shown in the figure.

© 2019 Mazda Motor Corporation.

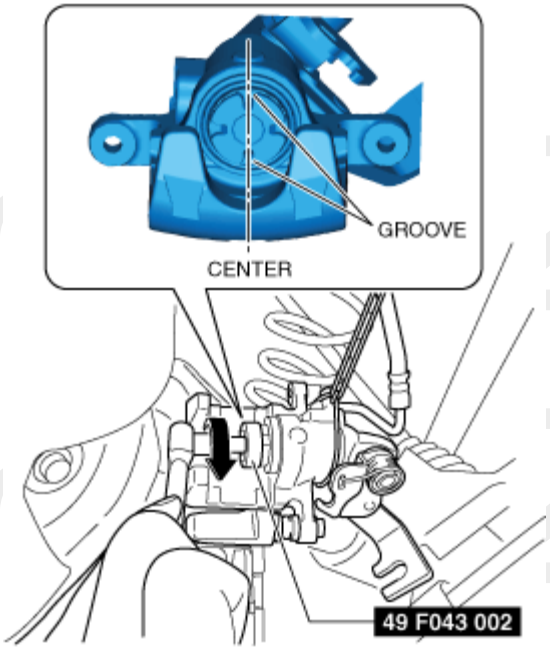


ac3uuw00001213

14.Inspect the shims using the following procedure.

(1)Install the shim to the disc pad. (2)Hold the disc pad with the shim pointed downwards. (3)If the shim falls off, replace it with a new one.

15.Apply double-sided adhesive tape to the positions shown in the figure.

© 2019 Mazda Motor Corporation.

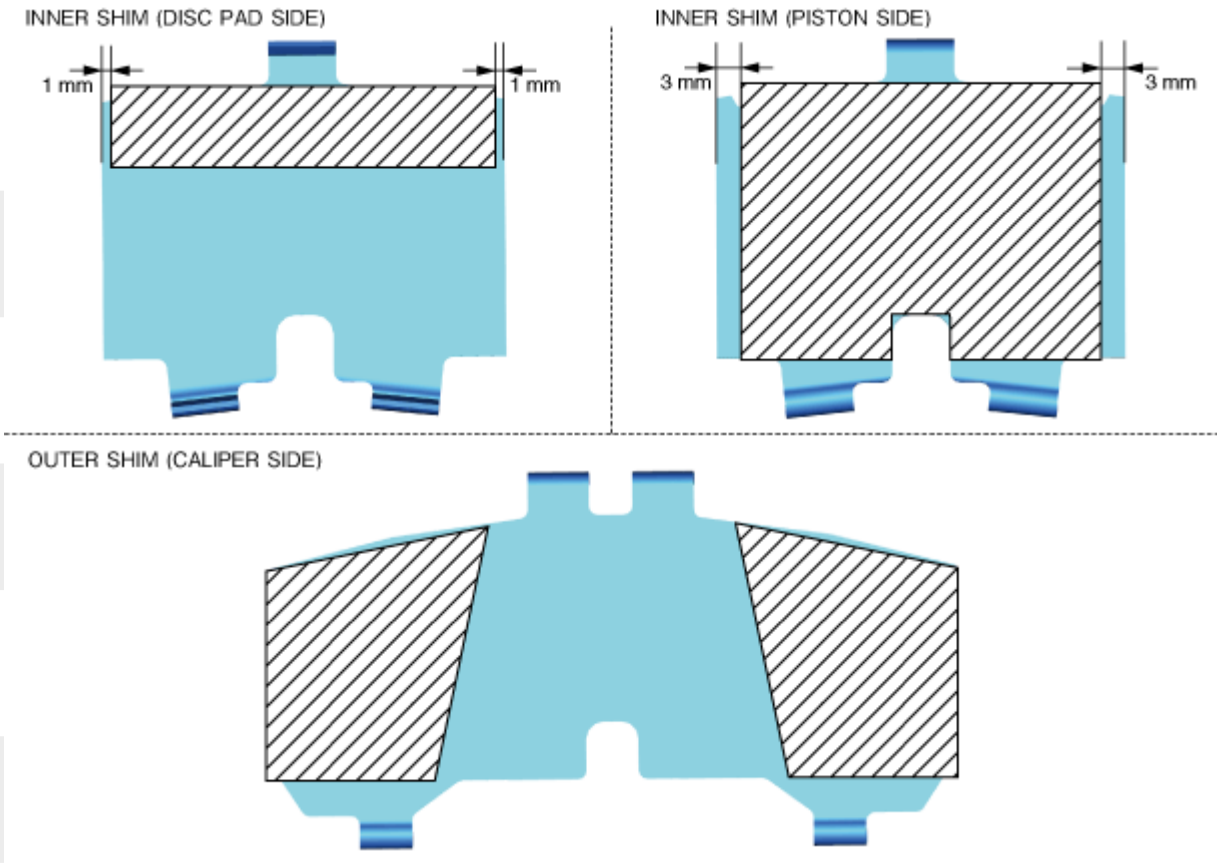

ac3uuw00002179


16.Peel off the paper backing of the double-sided adhesive tape from the inner shim (disc pad side).

17.Install the new shim to the disc pads.

18.Install the disc pad components to the mounting support.

19.Move the disc pad components and shim in the direction of the arrows shown in the figure.


© 2019 Mazda Motor Corporation.

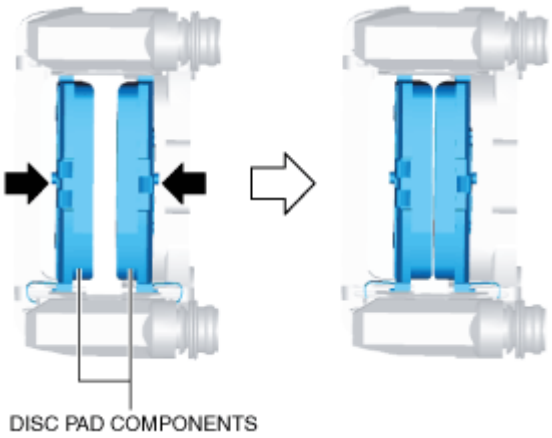

ac3uuw00001214

20.Peel off the backing of the double-sided adhesive tape from the shim.

21.Move the mounting support in the direction of the arrow shown in the figure.

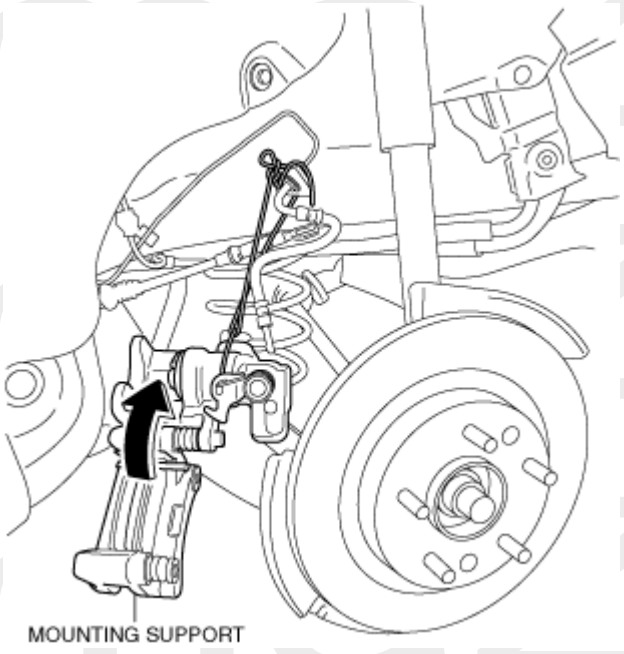

ac3uuw00001215


Caution

• If the double-sided adhesive tape affixed to the shim contacts the caliper and piston, the tape's adhesive surface will roughen causing disc pad wear which may become a source of noise when the

© 2019 Mazda Motor Corporation.

mounting support moves. When moving the mounting support be careful not to allow the double-sided adhesive tape on the shim to contact the caliper and piston.


22.Temporarily install the caliper installation bolt.

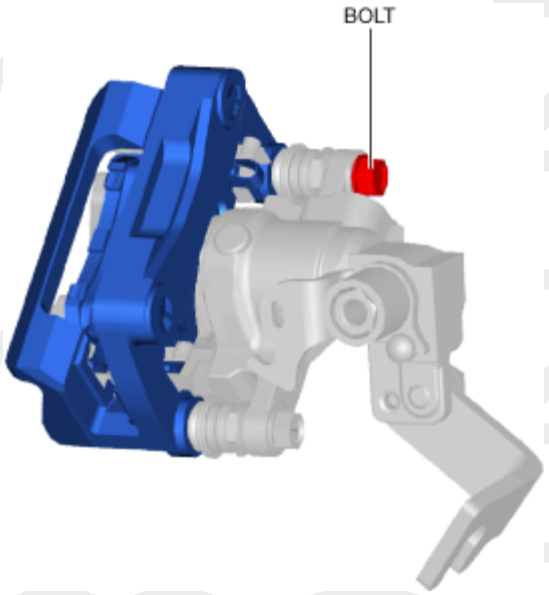

ac3uuw00001216

23.Move the disc pad components in the direction of the arrows shown in the figure and lightly affix the double-sided adhesive tape on the shim to the piston and caliper.

© 2019 Mazda Motor Corporation.

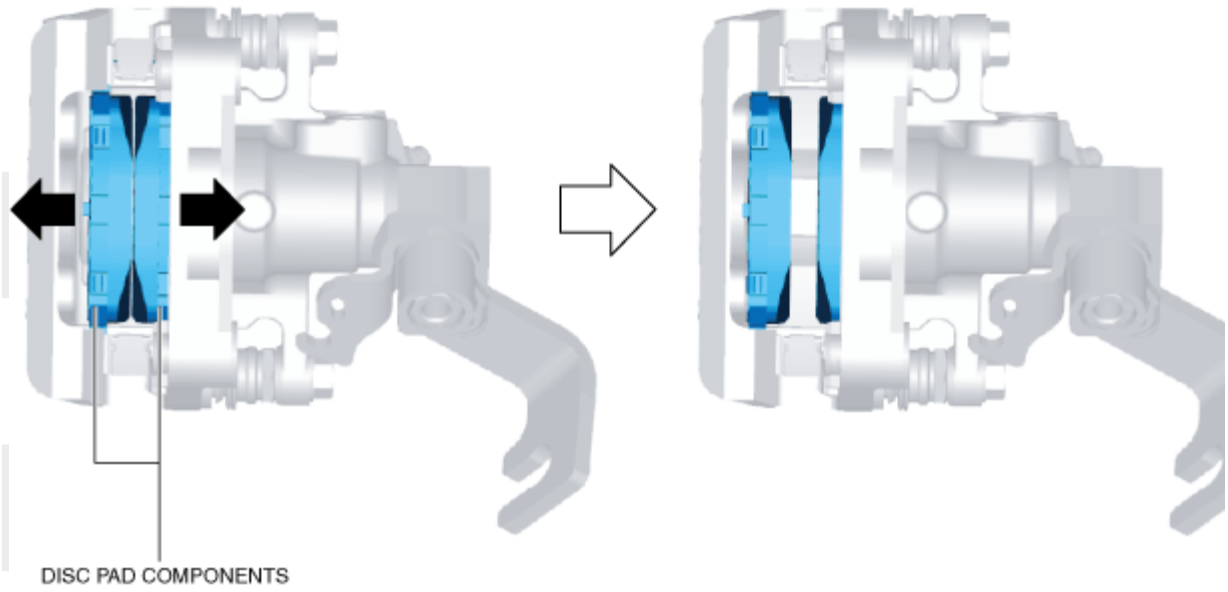

ac3uuw00001217

24.Install the mounting support. (See REAR BRAKE MOUNTING SUPPORT REMOVAL/INSTALLATION.)

25.Tighten the caliper installation bolt. (See REAR BRAKE MOUNTING SUPPORT REMOVAL/INSTALLATION.)

26.Install the rear parking brake cable. (See REAR PARKING BRAKE CABLE REMOVAL/INSTALLATION.)

27.Inspect the parking brake lever stroke. (See PARKING BRAKE LEVER INSPECTION.)

28.Pump the brake pedal a few times to apply pressure to attach the double-sided adhesive tape on the shim to the caliper and piston.

29.Inspect the following:

— The disc pad projection is securely installed to the piston groove

— Brake drag

— No abnormal noise during gentle braking.

With Electric Parking Brake

Note

• When in maintenance mode, the clearance between the disc pad and the disc plate expands.

• When the maintenance mode is completed, perform the electric parking brake automatic adjustment.


© 2019 Mazda Motor Corporation.

• With the electric parking brake automatic adjustment, the electric parking brake motor gear unit operation time is longer than normal.

1.Switch to the maintenance mode. (See MAINTENANCE MODE.)

2.Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION.)

3.Disconnect the electric parking brake motor gear unit connector.

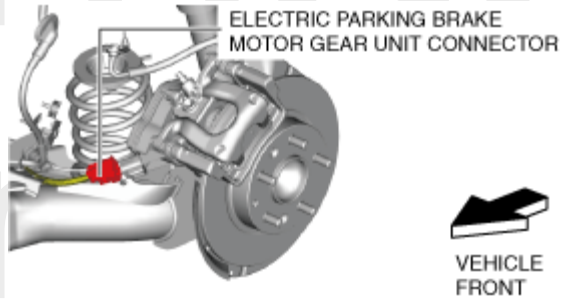

ac3uuw00002323

4.Remove in the order indicated in the table.

5.Install in the reverse order of removal.


6.End the maintenance mode. (See MAINTENANCE MODE.)

7.After installation, pump the brake pedal a few times and inspect the following:

— Disc pad projection does not contact piston and caliper

— Brake drag

© 2019 Mazda Motor Corporation.

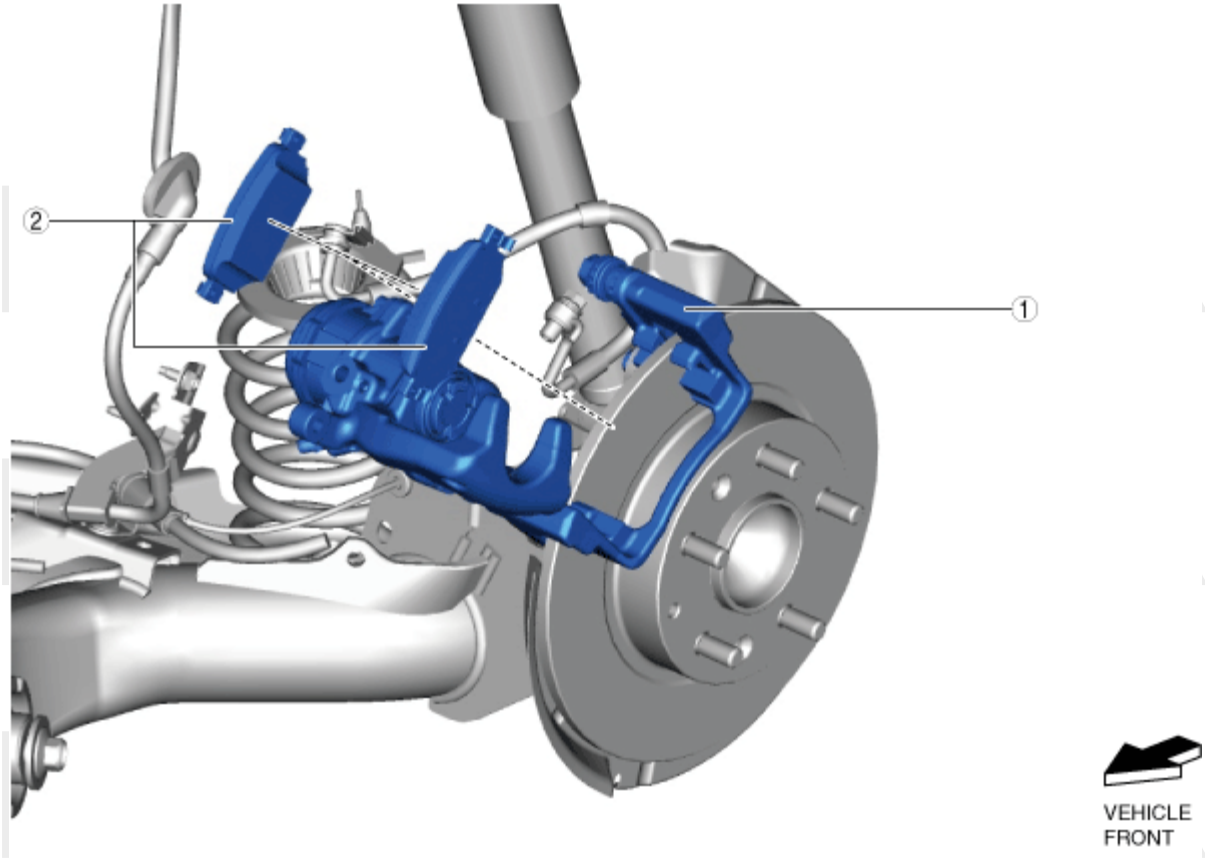


ac3uuw00002324

1	Rear brake caliper (See Caliper removal note.) (See Rear brake caliper installation note.)
2	Disc pad

Caliper removal note

1.Remove the bolt shown in the figure and lift up the rear brake caliper.

© 2019 Mazda Motor Corporation.

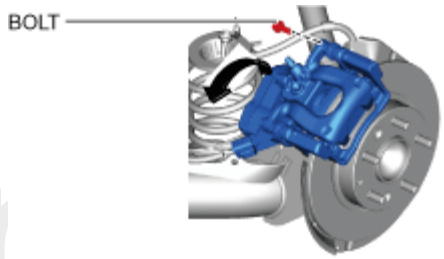

ac3uuw00002325


Rear brake caliper installation note

1.Clean the exposed area of the piston.

Caution

• When pressing the piston into the rear brake caliper, the rear brake caliper internal parts could be damaged while rotating and pressing the piston. Be careful not to rotate the piston when pressing the piston into the rear brake caliper.


2.Press in the piston using a commercially available disc brake expander tool.

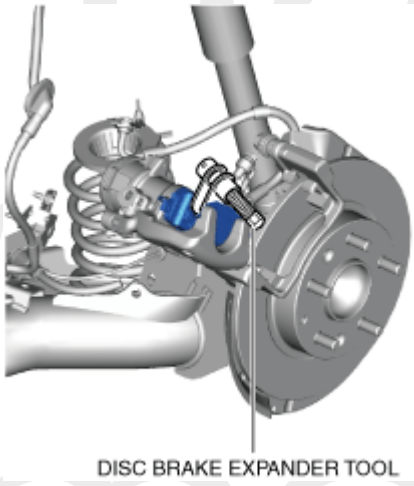

ac3uuw00002326

3.Return the rear brake caliper to the original position and install the bolt.

© 2019 Mazda Motor Corporation.

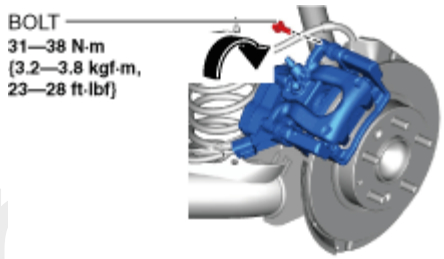

ac3uuw00002327

© 2019 Mazda Motor Corporation.