

Software description

LICCON 2 Data bus binder



7.1 General information

Service-Ebene 1

The service level 1 LICCON Remote Diagnostics expands the service level 0 diagnostics system (see chapter 6 "LICCON Remote Diagnostics service level "). The service level 1 must be released by entering a LICCON day code. The release is indicated by a "@" sign in the top right hand corner of the screen. The following extended functions are available to the crane operator under service level 1:

- Manual addressing of LSB bus participants, "Change address" in the LSB diagnostics menu.
- Setting the LSB bus participants parameter "standard values"
- Simulation of LSB bus participants "Sim off/on"
- Setting the time and time zone in the BSE test system

Note:

Service level 1 LICCON Remote Diagnostics may only be used authorised service personnel.

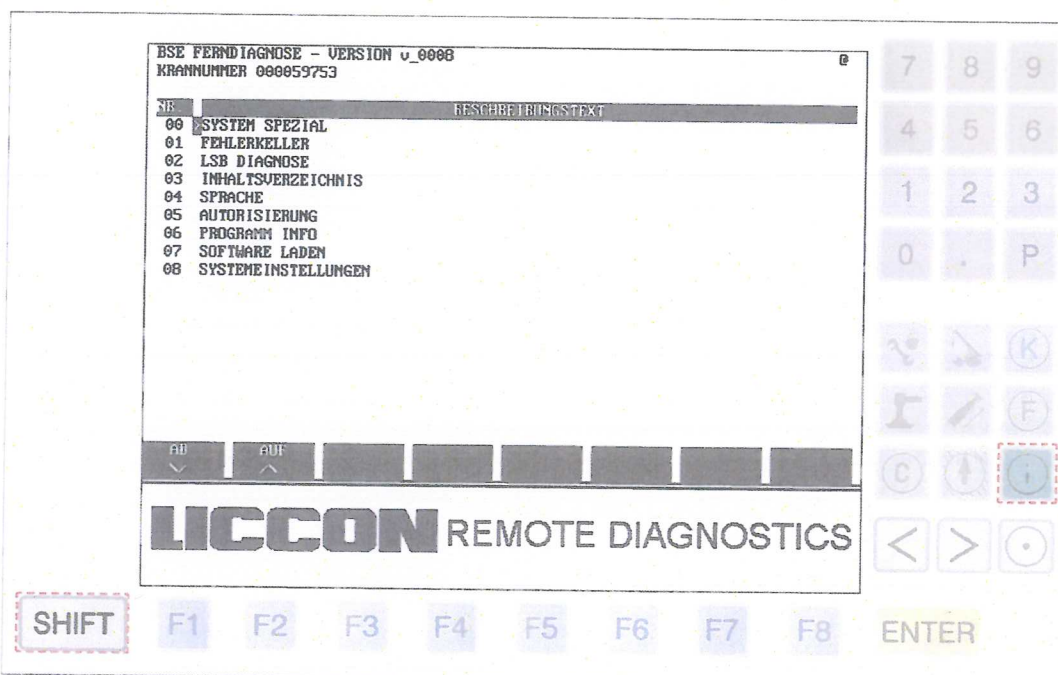


Fig. 1: LICCON Remote Diagnostics (LTM1070-4.2)

Software description

LICCON 2 Data bus binder



7.2 Authorisation service level 1

Service-Level 1

In order to work in service level 1 it must be activated. The "Authorisation" menu in the LICCON Remote Diagnostics must be run for this purpose. Use the crane number and the date that is displayed on the monitor to generate the current day code. Enter the day code into the system via the numeric keypad.

Service level 1 is deactivated if an invalid daily code is entered, LICCON Remote Diagnostics is exited or if the ignition is switched off.

Note:

Service level 1 can also be activated via the BSE test system. See chapter 5.2 "Service levels".

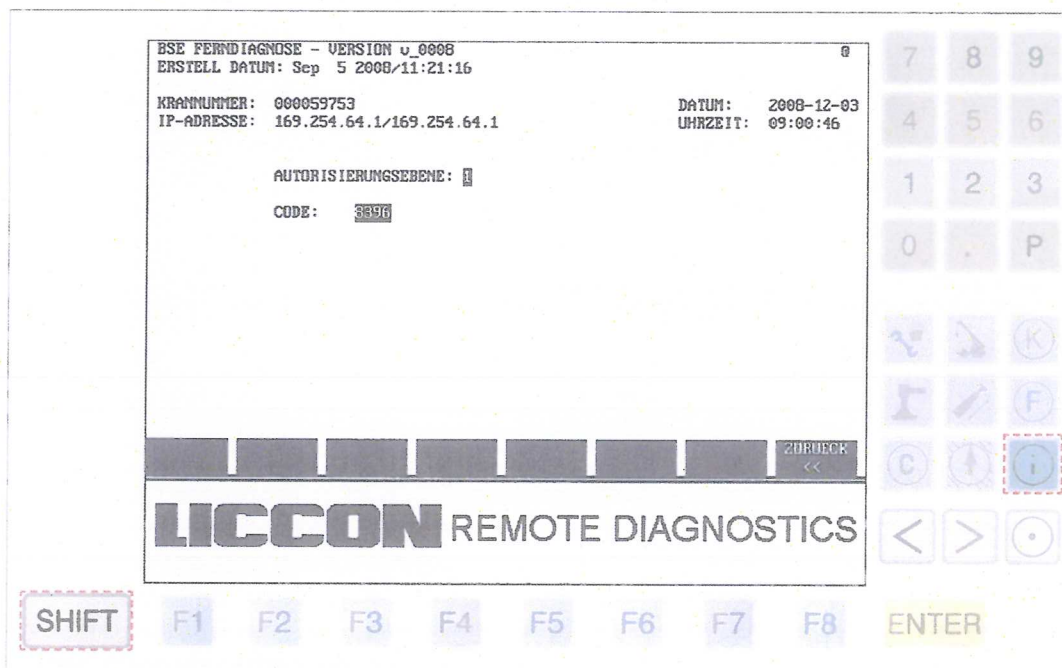


Fig. 2: Service level 1 activation (LTM1070-4.2)

Software description

LICCON 2 Data bus binder

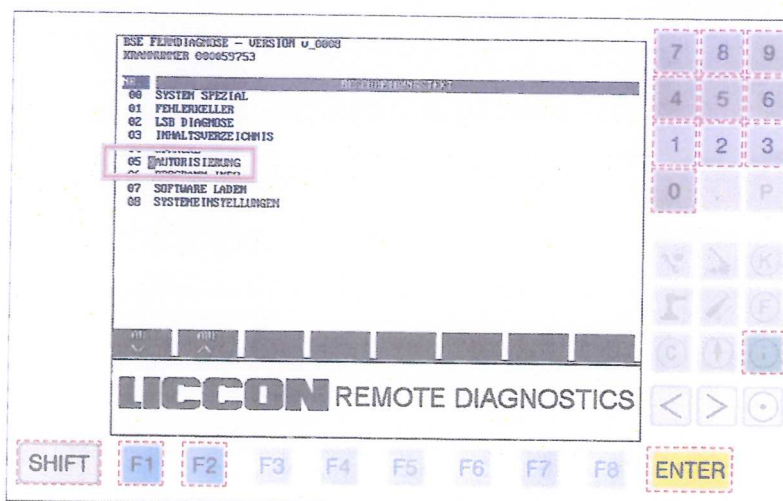


Fig. 3:
Authorisation menu
(LTM 1070-4.2)

SHIFT + **i** Open LICCON Remote Diagnostics with the key combination: "SHIFT" and "i".

F1 OR **F2** — **ENTER** Select the "Authorisation" menu via the numeric keypad or with the "F1", "F2" buttons and confirm your selection with the "Enter" button.

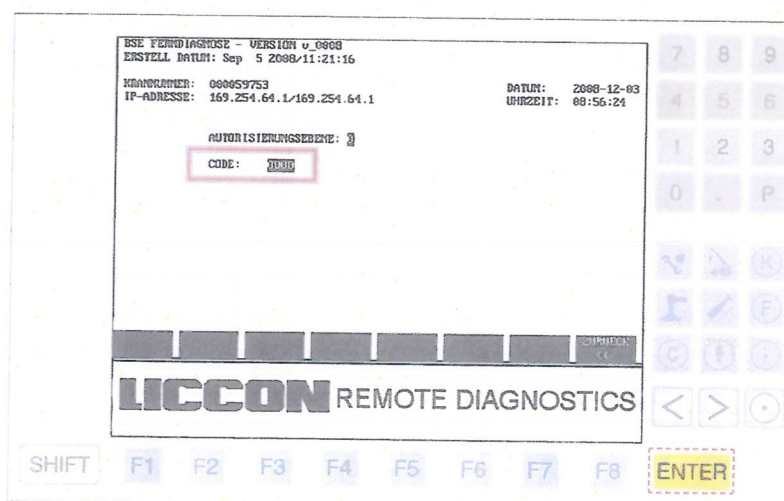


Fig. 4:
Activate entry
(LTM 1070-4.2)

ENTER Activate the entry of the day code with the "Enter" button.

Software description

LICCON 2 Data bus binder

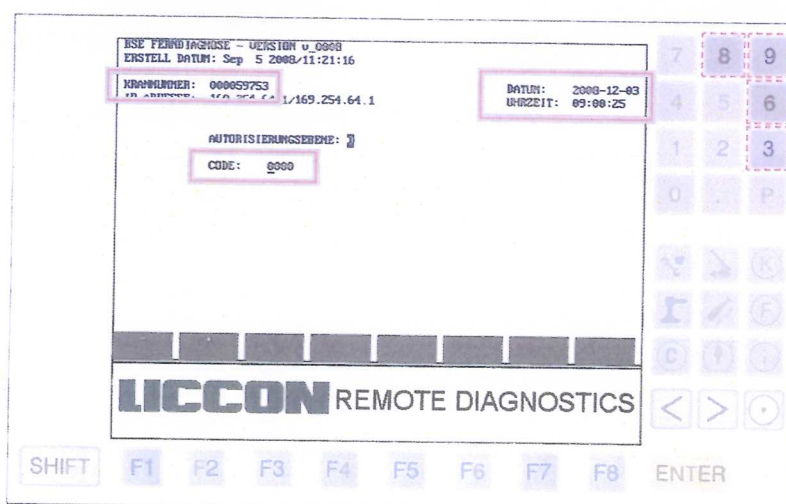


Fig. 5:
Entry of day
code
(LTM 1070-4.2)

8 - 3 - 9 - 6

Enter the day code generated by the day code calculator into the LICCON via the numeric keypad.

Note:

In order to avoid calculation errors only use the crane number and date that are displayed on the monitor to generate the day code.

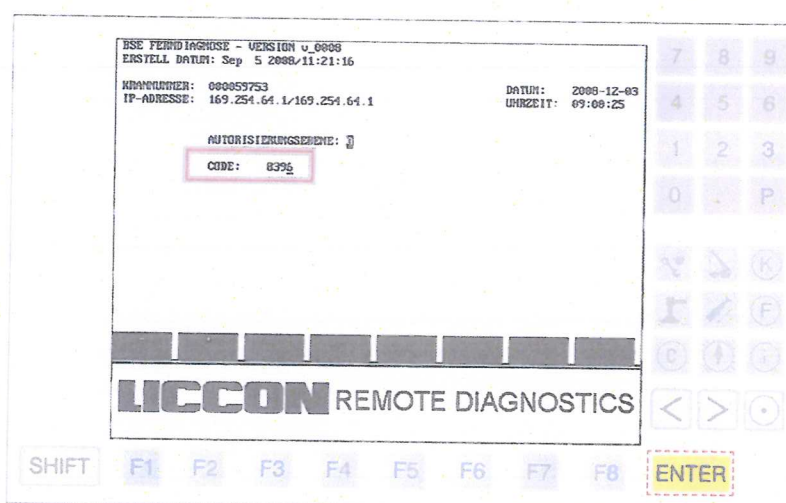


Fig. 6:
Confirm
the entry
(LTM 1070-4.2)

ENTER Confirm the entry with the "Enter" button.

Software description

LICCON 2 Data bus binder

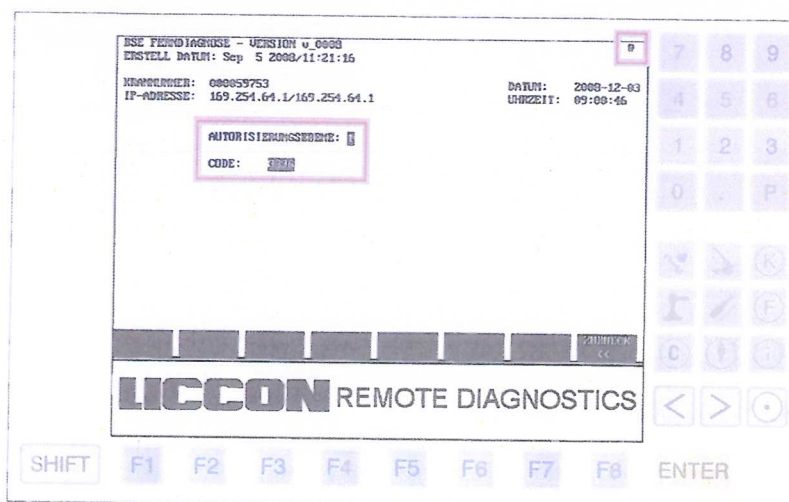


Fig. 7:
Service level 1
(LTM 1070-4.2)

Note:

If service level 1 has been successfully activated then this will be indicated by a "@" symbol in the upper right hand corner of the screen.