MIDI MAPPING


Two LOOM layouts for the KeyLab mkII

The KeyLab mkII has nine faders, nine knobs and nine buttons in three banks, 16 pads, a transport row and ten DAW buttons. LOOM has nine tracks: five audio tracks and four instrument tracks. These pages map one to the other in two ways.

LAYOUT 1

One control per track

Every track has its own ring, stop, clear and mute button, and its own fader and pan. The pads keep six drum parts. Undo and redo act on the focused track.

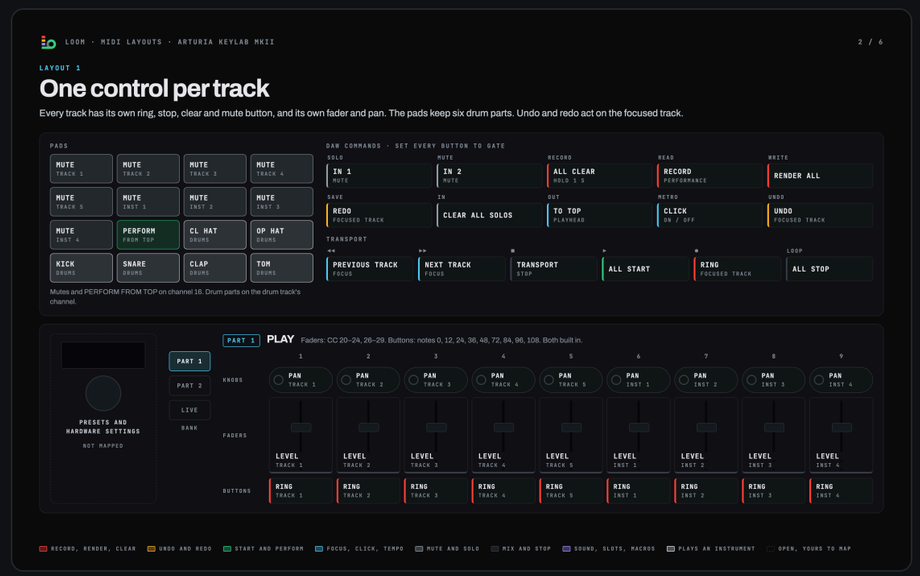


PAGES 2 AND 3

LAYOUT 2

Follow the focus

Rewind and fast-forward choose a track, and the transport row works it. Knobs 1 to 8 play its macros. They are relative, so they follow the focus without waiting for pickup.

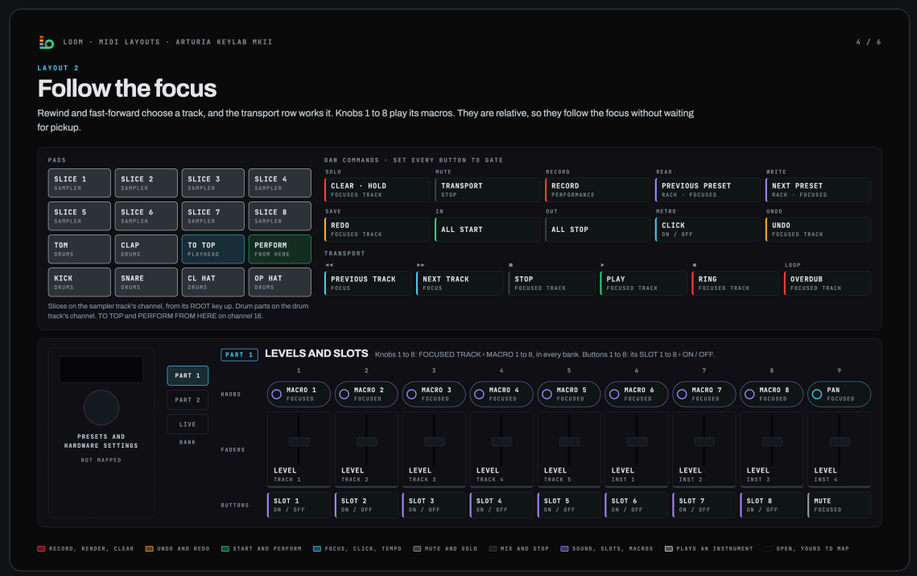

PAGES 4 AND 5

Both layouts keep the keys free for the synth and the sampler. Page 6 lists the settings on the KeyLab and in LOOM that make them work.

LAYOUT 1

One control per track

Every track has its own ring, stop, clear and mute button, and its own fader and pan. The pads keep six drum parts. Undo and redo act on the focused track.

PADS

MUTE TRACK 1	MUTE TRACK 2	MUTE TRACK 3	MUTE TRACK 4
MUTE TRACK 5	MUTE INST 1	MUTE INST 2	MUTE INST 3
MUTE INST 4	PERFORM FROM TOP	CL HAT DRUMS	OP HAT DRUMS
KICK DRUMS	SNARE DRUMS	CLAP DRUMS	TOM DRUMS

Mutes and PERFORM FROM TOP on channel 16. Drum parts on the drum track's channel.

DAW COMMANDS · SET EVERY BUTTON TO GATE

SOLO	MUTE	RECORD	READ	WRITE
IN 1 MUTE	IN 2 MUTE	ALL CLEAR HOLD 1 S	RECORD PERFORMANCE	RENDER ALL

SAVE	IN	OUT	METRO	UNDO
REDO FOCUSED TRACK	CLEAR ALL SOLOS	TO TOP PLAYHEAD	CLICK ON / OFF	UNDO FOCUSED TRACK

TRANSPORT

◂◂	▸▸	■	▸	●	LOOP
PREVIOUS TRACK FOCUS	NEXT TRACK FOCUS	TRANSPORT STOP	ALL START	RING FOCUSED TRACK	ALL STOP

PRESETS AND HARDWARE SETTINGS

NOT MAPPED

PART 1

PART 2

LIVE

BANK

PART 1 PLAY

Faders: CC 20–24, 26–29. Buttons: notes 0, 12, 24, 36, 48, 72, 84, 96, 108. Both built in.

	1	2	3	4	5	6	7	8	9
KNOBS	PAN TRACK 1	PAN TRACK 2	PAN TRACK 3	PAN TRACK 4	PAN TRACK 5	PAN INST 1	PAN INST 2	PAN INST 3	PAN INST 4
FADERS	LEVEL TRACK 1	LEVEL TRACK 2	LEVEL TRACK 3	LEVEL TRACK 4	LEVEL TRACK 5	LEVEL INST 1	LEVEL INST 2	LEVEL INST 3	LEVEL INST 4
BUTTONS	RING TRACK 1	RING TRACK 2	RING TRACK 3	RING TRACK 4	RING TRACK 5	RING INST 1	RING INST 2	RING INST 3	RING INST 4

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO · MUTE AND SOLO · MIX AND STOP · SOUND, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAYOUT 1 · THE THREE BANKS

One control per track

PART 1, PART 2 and LIVE switch the knobs, faders and buttons together. The pads, DAW buttons and transport stay the same in every bank.

PART 1 PLAY

Faders: CC 20–24, 26–29. Buttons: notes 0, 12, 24, 36, 48, 72, 84, 96, 108. Both built in.

KNOBS	PAN TRACK 1	PAN TRACK 2	PAN TRACK 3	PAN TRACK 4	PAN TRACK 5	PAN INST 1	PAN INST 2	PAN INST 3	PAN INST 4
FADERS	LEVEL TRACK 1	LEVEL TRACK 2	LEVEL TRACK 3	LEVEL TRACK 4	LEVEL TRACK 5	LEVEL INST 1	LEVEL INST 2	LEVEL INST 3	LEVEL INST 4
BUTTONS	RING TRACK 1	RING TRACK 2	RING TRACK 3	RING TRACK 4	RING TRACK 5	RING INST 1	RING INST 2	RING INST 3	RING INST 4

PART 2 SHAPE

Faders: CC 40–44, 46–49. Buttons: the RING notes + 4. Both built in. Knobs are examples; map them per song.

KNOBS	CUTOFF SYNTH	RES SYNTH	DRIVE SYNTH	ENV AMT SYNTH	FEEDBACK DELAY	WET DELAY	DECAY REVERB	WET REVERB	DEPTH CHORUS
FADERS	CUE TRACK 1	CUE TRACK 2	CUE TRACK 3	CUE TRACK 4	CUE TRACK 5	CUE INST 1	CUE INST 2	CUE INST 3	CUE INST 4
BUTTONS	STOP TRACK 1	STOP TRACK 2	STOP TRACK 3	STOP TRACK 4	STOP TRACK 5	STOP INST 1	STOP INST 2	STOP INST 3	STOP INST 4

LIVE SAFETY

Faders: CC 50–54, 56–59. Buttons: the RING notes + 5, held for one second. Both built in.

KNOBS	IN 1 LEVEL	IN 1 CUE	IN 2 LEVEL	IN 2 CUE	CLICK LEVEL	FX 1 BUS LEVEL	FX 2 BUS LEVEL	MASTER LEVEL	TEMPO RELATIVE 64
FADERS	FX 1 TRACK 1	FX 1 TRACK 2	FX 1 TRACK 3	FX 1 TRACK 4	FX 1 TRACK 5	FX 1 INST 1	FX 1 INST 2	FX 1 INST 3	FX 1 INST 4
BUTTONS	CLEAR TRACK 1 · HOLD	CLEAR TRACK 2 · HOLD	CLEAR TRACK 3 · HOLD	CLEAR TRACK 4 · HOLD	CLEAR TRACK 5 · HOLD	CLEAR INST 1 · HOLD	CLEAR INST 2 · HOLD	CLEAR INST 3 · HOLD	CLEAR INST 4 · HOLD

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO · MUTE AND SOLO · MIX AND STOP · SOUND, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAYOUT 2

Follow the focus

Rewind and fast-forward choose a track, and the transport row works it. Knobs 1 to 8 play its macros. They are relative, so they follow the focus without waiting for pickup.

PADS

SLICE 1 · SAMPLER	SLICE 2 · SAMPLER	SLICE 3 · SAMPLER	SLICE 4 · SAMPLER
SLICE 5 · SAMPLER	SLICE 6 · SAMPLER	SLICE 7 · SAMPLER	SLICE 8 · SAMPLER
TOM · DRUMS	CLAP · DRUMS	TO TOP · PLAYHEAD	PERFORM · FROM HERE
KICK · DRUMS	SNARE · DRUMS	CL HAT · DRUMS	OP HAT · DRUMS

Slices on the sampler track's channel, from its ROOT key up. Drum parts on the drum track's channel. TO TOP and PERFORM FROM HERE on channel 16.

DAW COMMANDS · SET EVERY BUTTON TO GATE

SOLO	MUTE	RECORD	READ	WRITE
CLEAR · HOLD · FOCUSED TRACK	TRANSPORT · STOP	RECORD · PERFORMANCE	PREVIOUS PRESET · RACK · FOCUSED	NEXT PRESET · RACK · FOCUSED
SAVE	**IN**	**OUT**	**METRO**	**UNDO**
REDO · FOCUSED TRACK	ALL START	ALL STOP	CLICK · ON / OFF	UNDO · FOCUSED TRACK

TRANSPORT

◂◂	▸▸	■	▸	●	LOOP
PREVIOUS TRACK · FOCUS	NEXT TRACK · FOCUS	STOP · FOCUSED TRACK	PLAY · FOCUSED TRACK	RING · FOCUSED TRACK	OVERDUB · FOCUSED TRACK

PRESETS AND HARDWARE SETTINGS

NOT MAPPED

PART 1

PART 2

LIVE

BANK

PART 1 LEVELS AND SLOTS

Knobs 1 to 8: FOCUSED TRACK › MACRO 1 to 8, in every bank. Buttons 1 to 8: its SLOT 1 to 8 › ON / OFF.

	1	2	3	4	5	6	7	8	9
KNOBS	MACRO 1 · FOCUSED	MACRO 2 · FOCUSED	MACRO 3 · FOCUSED	MACRO 4 · FOCUSED	MACRO 5 · FOCUSED	MACRO 6 · FOCUSED	MACRO 7 · FOCUSED	MACRO 8 · FOCUSED	PAN · FOCUSED
FADERS	LEVEL · TRACK 1	LEVEL · TRACK 2	LEVEL · TRACK 3	LEVEL · TRACK 4	LEVEL · TRACK 5	LEVEL · INST 1	LEVEL · INST 2	LEVEL · INST 3	LEVEL · INST 4
BUTTONS	SLOT 1 · ON / OFF	SLOT 2 · ON / OFF	SLOT 3 · ON / OFF	SLOT 4 · ON / OFF	SLOT 5 · ON / OFF	SLOT 6 · ON / OFF	SLOT 7 · ON / OFF	SLOT 8 · ON / OFF	MUTE · FOCUSED

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO · MUTE AND SOLO · MIX AND STOP · SOUND, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAYOUT 2 · THE THREE BANKS

Follow the focus

PART 1, PART 2 and LIVE switch the knobs, faders and buttons together. The pads, DAW buttons and transport stay the same in every bank.

PART 1 LEVELS AND SLOTS

Knobs 1 to 8: FOCUSED TRACK › MACRO 1 to 8, in every bank. Buttons 1 to 8: its SLOT 1 to 8 › ON / OFF.

KNOBS	MACRO 1 FOCUSED	MACRO 2 FOCUSED	MACRO 3 FOCUSED	MACRO 4 FOCUSED	MACRO 5 FOCUSED	MACRO 6 FOCUSED	MACRO 7 FOCUSED	MACRO 8 FOCUSED	PAN FOCUSED
FADERS	LEVEL TRACK 1	LEVEL TRACK 2	LEVEL TRACK 3	LEVEL TRACK 4	LEVEL TRACK 5	LEVEL INST 1	LEVEL INST 2	LEVEL INST 3	LEVEL INST 4
BUTTONS	SLOT 1 ON / OFF	SLOT 2 ON / OFF	SLOT 3 ON / OFF	SLOT 4 ON / OFF	SLOT 5 ON / OFF	SLOT 6 ON / OFF	SLOT 7 ON / OFF	SLOT 8 ON / OFF	MUTE FOCUSED

PART 2 CUE AND SOLO

Faders: CC 40–44, 46–49, built in. The cue faders set your headphone mix.

KNOBS	MACRO 1 FOCUSED	MACRO 2 FOCUSED	MACRO 3 FOCUSED	MACRO 4 FOCUSED	MACRO 5 FOCUSED	MACRO 6 FOCUSED	MACRO 7 FOCUSED	MACRO 8 FOCUSED	TEMPO RELATIVE 64
FADERS	CUE TRACK 1	CUE TRACK 2	CUE TRACK 3	CUE TRACK 4	CUE TRACK 5	CUE INST 1	CUE INST 2	CUE INST 3	CUE INST 4
BUTTONS	SOLO TRACK 1	SOLO TRACK 2	SOLO TRACK 3	SOLO TRACK 4	SOLO TRACK 5	SOLO INST 1	SOLO INST 2	SOLO INST 3	SOLO FOCUSED

LIVE FX 1 AND RENDER

Faders: CC 50–54, 56–59, built in. Instrument tracks have no RENDER.

KNOBS	MACRO 1 FOCUSED	MACRO 2 FOCUSED	MACRO 3 FOCUSED	MACRO 4 FOCUSED	MACRO 5 FOCUSED	MACRO 6 FOCUSED	MACRO 7 FOCUSED	MACRO 8 FOCUSED	OPEN
FADERS	FX 1 TRACK 1	FX 1 TRACK 2	FX 1 TRACK 3	FX 1 TRACK 4	FX 1 TRACK 5	FX 1 INST 1	FX 1 INST 2	FX 1 INST 3	FX 1 INST 4
BUTTONS	RENDER TRACK 1	RENDER TRACK 2	RENDER TRACK 3	RENDER TRACK 4	RENDER TRACK 5	OPEN NO RENDER	OPEN NO RENDER	OPEN NO RENDER	RENDER FOCUSED

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO · MUTE AND SOLO · MIX AND STOP · SOUND, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

SETUP

Settings that make both layouts work

ON THE KEYLAB

01 **Use a User preset.**
Press USER, then turn the centre knob to choose one of the ten presets. Make your edits in MIDI Control Center and store them to that preset.

02 **Send LOOM's controls on channel 16.**
Set every fader, knob, Select button, DAW button and command pad to channel 16, LOOM's command channel. Notes on any other channel never reach LOOM's commands.

03 **Set every button to Gate.**
In Toggle mode the KeyLab keeps its own on/off state, which can disagree with LOOM's. A Gate button sends 127 when pressed and 0 when released, and LOOM keeps the state.

04 **Set the knobs to Relative.**
Layout 2 needs this. An endless knob in Relative mode sends steps, not a position, so a macro knob moves the newly focused track's control from your first turn. It never waits for pickup and does not jump when you change bank.

05 **Put the keys and the instrument pads on their own channels.**
For example: keys on 1 for the synth, sampler pads on 2, drum pads on 10.

IN LOOM

01 **Leave MIDI CH at 16.**
It is in the side panel's GLOBAL tab, under MIDI.

02 **Set each instrument track's MIDI input.**
Point the synth at the keys' channel, the sampler at its pads' channel and the drum track at the drum pads' channel.

03 **Learn everything that is not built in.**
Open the MIDI Mapping window, press + ADD MAPPING, choose the control, then touch the hardware. Faders and the per-track RING, STOP and CLEAR buttons in layout 1 use built-in numbers and need no learning.

04 **Choose the type LOOM proposes.**
Buttons are BUTTON, so each press flips a mute, a solo or a slot. Knobs, TEMPO included, are RELATIVE 64. Faders are CONTROLLER.

05 **Assign the macros for layout 2.**
On each track, point MACRO 1 to MACRO 8 at the controls you want under the knobs, in the side panel's MACROS block. An empty macro does nothing.

06 **Keep the rig in RIG.**
Mappings kept in RIG work in every song. Map a knob with KEEP IN set to THIS SONG when one song needs it for something else.

Command pads that are not built in send any note LOOM's layout leaves free, such as 7 to 11 or 19 to 23, and are learned. A Clear held for one second clears; a tap does nothing.