MIDI MAPPING


LOOM layouts for the Launchkey MK4

The Novation Launchkey 49 and 61 MK4 have nine faders with a button under each, eight knobs, 16 pads, four workflow buttons and a transport block. The 25 and 37 have the same panel without the faders. LOOM has nine tracks: five audio tracks and four instrument tracks. These pages map one to the other.

LAUNCHKEY 49 AND 61

Faders for every track

The faders are the nine track levels, with mute under each. The knobs play the focused track's macros. Track ‹ › moves the focus, and the transport and workflow buttons work the track it lands on.

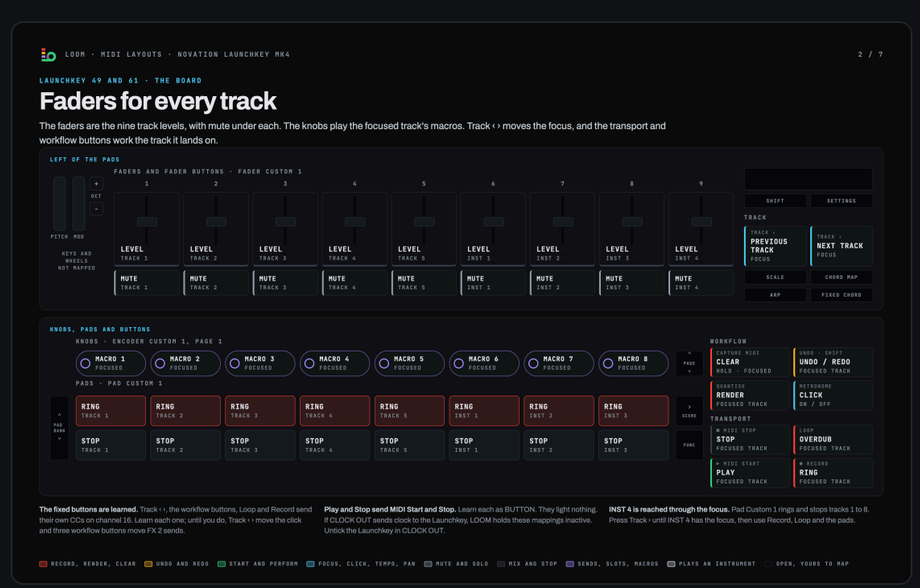


PAGES 2 TO 4

LAUNCHKEY 25 AND 37

Knobs and pads

With no faders, the second knob page is the focused track's mix, and the fourth pad mode holds mutes and solos. Everything else matches the 49 and 61.

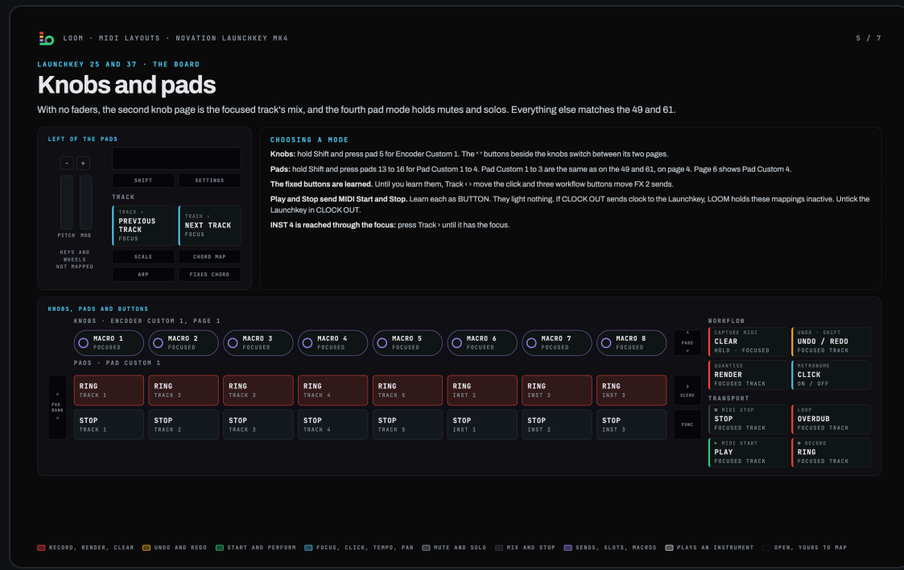


PAGES 5 AND 6

Both layouts keep the keys free for the synth and the sampler. Page 7 lists the settings in Novation Components and in LOOM that make them work.

LAUNCHKEY 49 AND 61 · THE BOARD

Faders for every track

The faders are the nine track levels, with mute under each. The knobs play the focused track's macros. Track ‹ › moves the focus, and the transport and workflow buttons work the track it lands on.

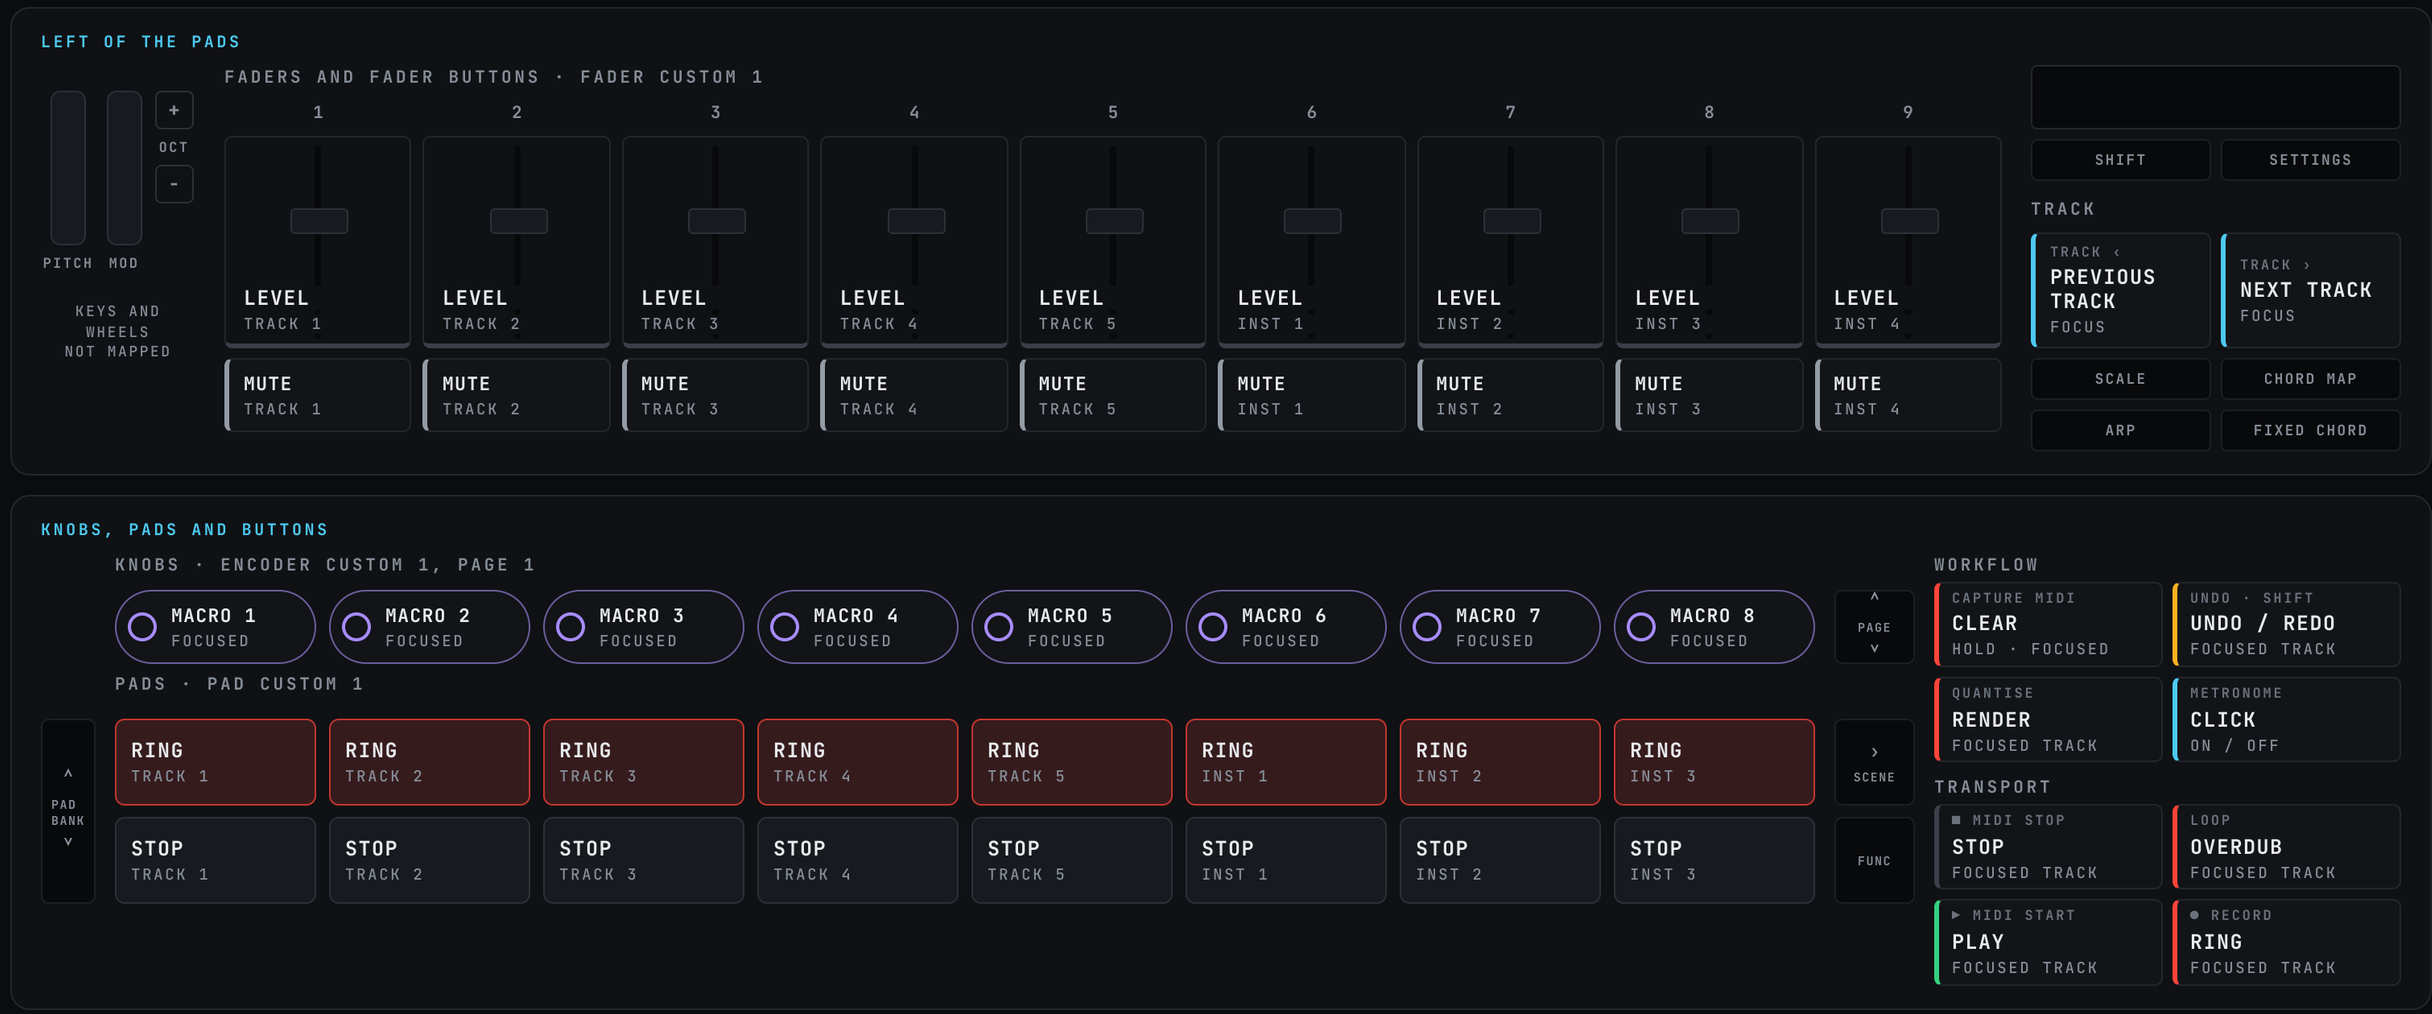

The fixed buttons are learned. Track ‹ ›, the workflow buttons, Loop and Record send their own CCs on channel 16. Learn each one; until you do, Track ‹ › move the click and three workflow buttons move FX 2 sends.

Play and Stop send MIDI Start and Stop. Learn each as BUTTON. They light nothing. If CLOCK OUT sends clock to the Launchkey, LOOM holds these mappings inactive. Untick the Launchkey in CLOCK OUT.

INST 4 is reached through the focus. Pad Custom 1 rings and stops tracks 1 to 8. Press Track › until INST 4 has the focus, then use Record, Loop and the pads.

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO, PAN · MUTE AND SOLO · MIX AND STOP · SENDS, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAUNCHKEY 49 AND 61 · FADERS AND KNOBS

Faders for every track

Each custom mode is a bank. Changing the fader mode changes the fader buttons with it. The knobs have one custom mode with two pages.

FADER CUSTOM MODES

SHIFT + FADER BUTTON 2 — LEVELS

Faders: CC 20–24, 26–29, built in. Buttons: learn TRACK n › MUTE as BUTTON.

FADERS	LEVEL TRACK 1	LEVEL TRACK 2	LEVEL TRACK 3	LEVEL TRACK 4	LEVEL TRACK 5	LEVEL INST 1	LEVEL INST 2	LEVEL INST 3	LEVEL INST 4
BUTTONS	MUTE TRACK 1	MUTE TRACK 2	MUTE TRACK 3	MUTE TRACK 4	MUTE TRACK 5	MUTE INST 1	MUTE INST 2	MUTE INST 3	MUTE INST 4

SHIFT + FADER BUTTON 3 — CUE

Faders: CC 40–44, 46–49, built in. Buttons: learn COMMANDS › TRACK n › SOLO as BUTTON.

FADERS	CUE TRACK 1	CUE TRACK 2	CUE TRACK 3	CUE TRACK 4	CUE TRACK 5	CUE INST 1	CUE INST 2	CUE INST 3	CUE INST 4
BUTTONS	SOLO TRACK 1	SOLO TRACK 2	SOLO TRACK 3	SOLO TRACK 4	SOLO TRACK 5	SOLO INST 1	SOLO INST 2	SOLO INST 3	SOLO INST 4

SHIFT + FADER BUTTON 4 — FX 1

Faders: CC 50–54, 56–59, built in. The buttons are yours to map.

FADERS	FX 1 TRACK 1	FX 1 TRACK 2	FX 1 TRACK 3	FX 1 TRACK 4	FX 1 TRACK 5	FX 1 INST 1	FX 1 INST 2	FX 1 INST 3	FX 1 INST 4
BUTTONS	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN

ENCODER CUSTOM 1

SHIFT + PAD 5 · PAGE 1 — MACROS

Learn as CONTROLLER: FOCUSED TRACK › MACRO 1 to 8. The knobs send positions, so after you move the focus a macro waits until the knob passes the new track's value.

KNOBS	MACRO 1 FOCUSED	MACRO 2 FOCUSED	MACRO 3 FOCUSED	MACRO 4 FOCUSED	MACRO 5 FOCUSED	MACRO 6 FOCUSED	MACRO 7 FOCUSED	MACRO 8 FOCUSED

SHIFT + PAD 5 · PAGE 2 — MIX AND TEMPO

MASTER LEVEL is built in on CC 104. Learn the rest. TEMPO's range runs from where you first touch the knob and stops at the knob's ends.

KNOBS	PAN FOCUSED	LEVEL - CUE FOCUSED	LEVEL - FX 1 FOCUSED	LEVEL - FX 2 FOCUSED	TEMPO CONTROLLER	LEVEL CLICK	LEVEL MASTER	OPEN

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO, PAN · MUTE AND SOLO · MIX AND STOP · SENDS, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAUNCHKEY 49 AND 61 · PADS

Faders for every track

Hold Shift and press pads 13 to 16 to choose a pad mode. Each pad sets its own channel, so one mode can mix commands and instruments.

SHIFT + PAD 13 — RING AND STOP

Notes on channel 16, built in: RING on 0, 12, 24, 36, 48, 72, 84, 96, and STOP on each + 4. INST 4 is reached through the focus.

TOP ROW	RING TRACK 1	RING TRACK 2	RING TRACK 3	RING TRACK 4	RING TRACK 5	RING INST 1	RING INST 2	RING INST 3
BOTTOM ROW	STOP TRACK 1	STOP TRACK 2	STOP TRACK 3	STOP TRACK 4	STOP TRACK 5	STOP INST 1	STOP INST 2	STOP INST 3

SHIFT + PAD 14 — PLAY

Slices on the sampler's channel from its ROOT key. Drums on the drum track's channel: 36, 38, 42, 46, 45, 39. The last two pads are yours to map.

TOP ROW	SLICE 1 SAMPLER	SLICE 2 SAMPLER	SLICE 3 SAMPLER	SLICE 4 SAMPLER	SLICE 5 SAMPLER	SLICE 6 SAMPLER	SLICE 7 SAMPLER	SLICE 8 SAMPLER
BOTTOM ROW	KICK DRUMS	SNARE DRUMS	CL HAT DRUMS	OP HAT DRUMS	TOM DRUMS	CLAP DRUMS	OPEN	OPEN

SHIFT + PAD 15 — SLOTS AND SONG

ALL START, ALL STOP, TRANSPORT STOP and ALL CLEAR are built in on notes 120, 121, 124 and 122. Learn the rest as BUTTON.

TOP ROW	SLOT 1 ON / OFF · FOCUSED	SLOT 2 ON / OFF · FOCUSED	SLOT 3 ON / OFF · FOCUSED	SLOT 4 ON / OFF · FOCUSED	SLOT 5 ON / OFF · FOCUSED	SLOT 6 ON / OFF · FOCUSED	SLOT 7 ON / OFF · FOCUSED	SLOT 8 ON / OFF · FOCUSED
BOTTOM ROW	ALL START	ALL STOP	TRANSPORT STOP	ALL CLEAR HOLD 1 S	TO TOP PLAYHEAD	PERFORM FROM HERE	RENDER ALL	RECORD PERFORMANCE

SHIFT + PAD 16 — YOURS TO MAP

Unassigned. Learn anything from the chooser, as BUTTON.


TOP ROW	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN
BOTTOM ROW	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN	OPEN

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO, PAN · MUTE AND SOLO · MIX AND STOP · SENDS, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAUNCHKEY 25 AND 37 · THE BOARD

Knobs and pads

With no faders, the second knob page is the focused track's mix, and the fourth pad mode holds mutes and solos. Everything else matches the 49 and 61.

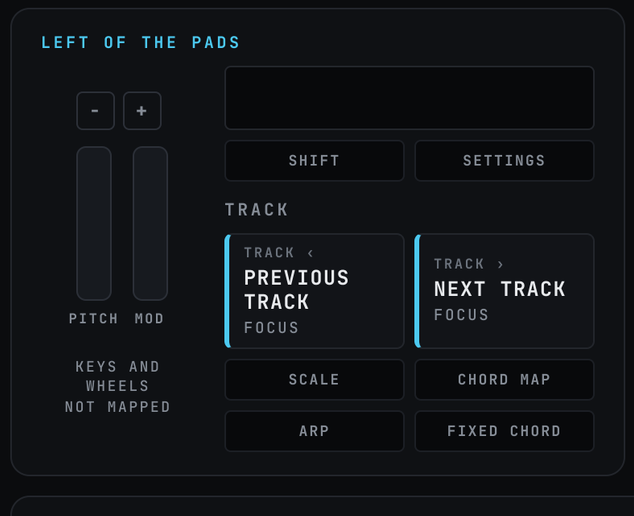

CHOOSING A MODE

Knobs: hold Shift and press pad 5 for Encoder Custom 1. The ^ v buttons beside the knobs switch between its two pages.


Pads: hold Shift and press pads 13 to 16 for Pad Custom 1 to 4. Pad Custom 1 to 3 are the same as on the 49 and 61, on page 4. Page 6 shows Pad Custom 4.

The fixed buttons are learned. Until you learn them, Track ‹ › move the click and three workflow buttons move FX 2 sends.

Play and Stop send MIDI Start and Stop. Learn each as BUTTON. They light nothing. If CLOCK OUT sends clock to the Launchkey, LOOM holds these mappings inactive. Untick the Launchkey in CLOCK OUT.

INST 4 is reached through the focus: press Track › until it has the focus.

KNOBS, PADS AND BUTTONS

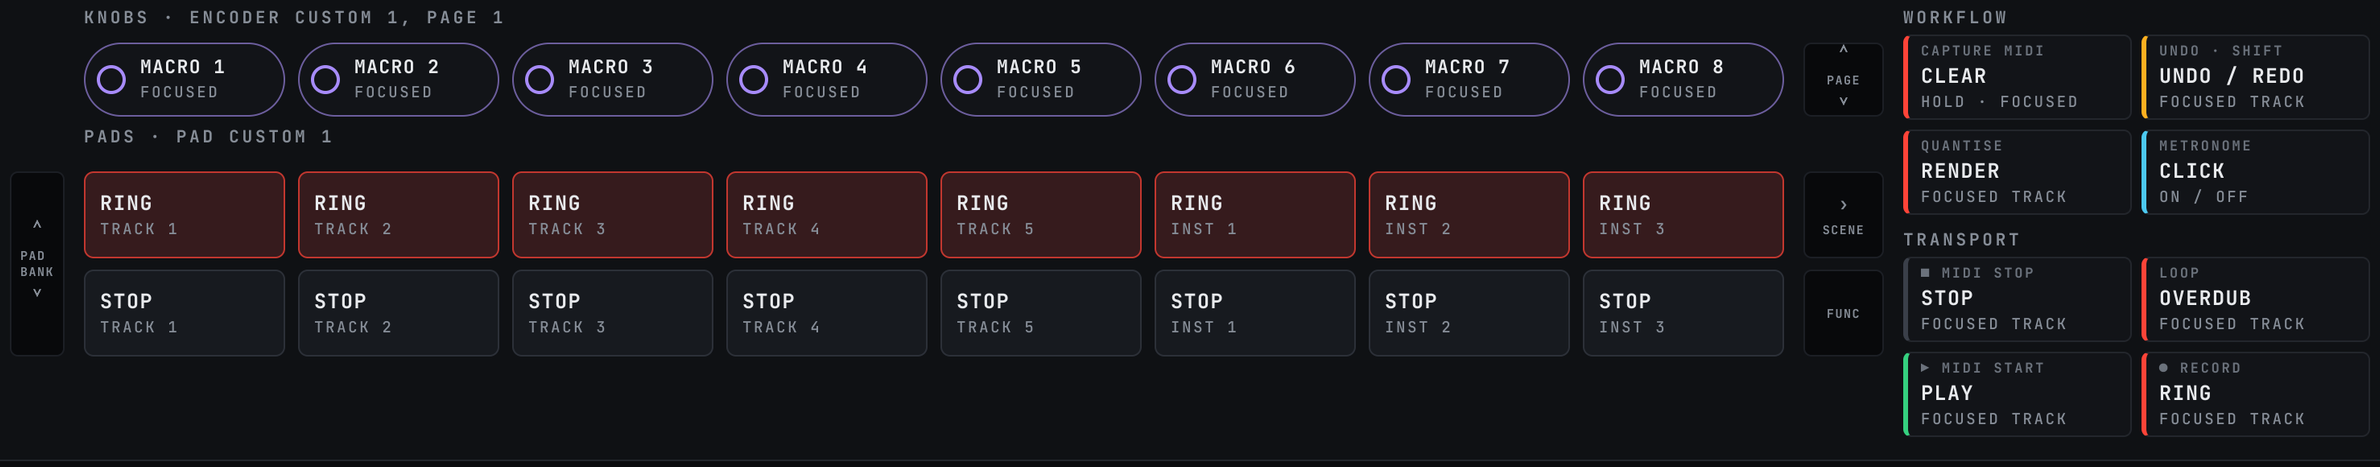

RECORD, RENDER, CLEAR · UNDO AND REDO · START AND PERFORM · FOCUS, CLICK, TEMPO, PAN · MUTE AND SOLO · MIX AND STOP · SENDS, SLOTS, MACROS · PLAYS AN INSTRUMENT · OPEN, YOURS TO MAP

LAUNCHKEY 25 AND 37 · KNOBS AND PADS

Knobs and pads

The knobs have one custom mode with two pages. Pad Custom 1 to 3 are the same as on the 49 and 61, on page 4. Pad Custom 4 holds the mutes and solos the faders' buttons carry on the larger models.

ENCODER CUSTOM 1

SHIFT + PAD 5 · PAGE 1 — MACROS

Learn as CONTROLLER: FOCUSED TRACK › MACRO 1 to 8. The knobs send positions, so after you move the focus a macro waits until the knob passes the new track's value.

KNOBS	MACRO 1 FOCUSED	MACRO 2 FOCUSED	MACRO 3 FOCUSED	MACRO 4 FOCUSED	MACRO 5 FOCUSED	MACRO 6 FOCUSED	MACRO 7 FOCUSED	MACRO 8 FOCUSED

SHIFT + PAD 5 · PAGE 2 — FOCUSED MIX

MASTER LEVEL is built in on CC 104. Learn the rest. TEMPO's range runs from where you first touch the knob and stops at the knob's ends.

KNOBS	LEVEL FOCUSED	PAN FOCUSED	LEVEL - CUE FOCUSED	LEVEL - FX 1 FOCUSED	LEVEL - FX 2 FOCUSED	TEMPO CONTROLLER	LEVEL CLICK	LEVEL MASTER

PAD CUSTOM 4

SHIFT + PAD 16 — MUTE AND SOLO

Learn as BUTTON: TRACK n › MUTE, and COMMANDS › TRACK n › SOLO. INST 4 has no pad here.

TOP ROW	MUTE TRACK 1	MUTE TRACK 2	MUTE TRACK 3	MUTE TRACK 4	MUTE TRACK 5	MUTE INST 1	MUTE INST 2	MUTE INST 3
BOTTOM ROW	SOLO TRACK 1	SOLO TRACK 2	SOLO TRACK 3	SOLO TRACK 4	SOLO TRACK 5	SOLO INST 1	SOLO INST 2	SOLO INST 3

SETUP

Settings that make both layouts work

ON THE LAUNCHKEY

01 **Build the custom modes in Novation Components.**
Make Pad Custom 1 to 4 and Encoder Custom 1 with both pages, and on the 49 or 61 Fader Custom 1 to 3, as these pages show. Send them to the Launchkey.

02 **Set every pad and button to momentary.**
A toggle keeps its own on and off state, which can disagree with LOOM's. A momentary press sends on, then off, and LOOM keeps the state.

03 **Send LOOM's controls on channel 16.**
Faders, knobs, fader buttons and command pads go on 16, LOOM's command channel. Drum pads go on the drum track's channel and slice pads on the sampler's. Leave the keys on the synth's channel.

04 **Keep custom controls off the fixed buttons' numbers.**
Track ‹ ›, the workflow buttons, Loop and Record send CC 74 to 77, 102, 103, 117 and 118 on channel 16. Give your own controls other numbers.

05 **Leave External Feedback on.**
It is in Settings, and it lets LOOM's feedback light the custom-mode pads. Whether the note's velocity picks the colour, or the pad shows its Components on and off colours, is not documented. Check on your unit.

06 **Set Fader Pickup Type to Jump.**
LOOM does the pickup itself: a fader moves its control once it passes LOOM's value.

IN LOOM

01 **Leave MIDI CH at 16, and set MIDI OUT to the Launchkey.**
Both are in the side panel's GLOBAL tab, under MIDI. Choose the Launchkey's MIDI port, not its DAW port.

02 **Set each instrument track's MIDI input.**
Point the synth at the keys' channel, the sampler at its pads' channel and the drum track at the drum pads' channel.

03 **Learn the fixed buttons first.**
Until you do, Track ‹ › set the click's level and switch it on and off, and Capture MIDI, Undo and Metronome move FX 2 sends. Learning a button replaces that built-in number. Learn by pressing it rather than typing a number.

04 **Learn Play and Stop as BUTTON.**
They send MIDI Start and Stop, which have no channel, so the mapping answers only the Launchkey. They light nothing. If CLOCK OUT sends clock to the Launchkey, LOOM holds them inactive. Untick the Launchkey in CLOCK OUT.

05 **Learn the rest with + ADD MAPPING.**
Choose the target, touch the control, check the type and press USE. Buttons and pads are BUTTON, knobs are CONTROLLER. Faders, MASTER LEVEL and the RING, STOP, ALL START, ALL STOP, TRANSPORT STOP and ALL CLEAR pads are built in and need no learning.

06 **Assign the macros.**
On each track, point MACRO 1 to MACRO 8 at the controls you want under the knobs, in the side panel's MACROS block. An empty macro does nothing.

One thing to check on your unit: if Shift + Undo sends nothing LOOM hears, map REDO to a spare control.