
MIDI MAPPING

Hands on the keys, with the MC6 Pro

The MC6 Pro has six footswitches, A to F, three screens and four Omniports for an expression pedal. LOOM has nine tracks: five audio tracks and four instrument tracks. This layout gives your feet the focused track and the song, so both hands stay on your instrument.

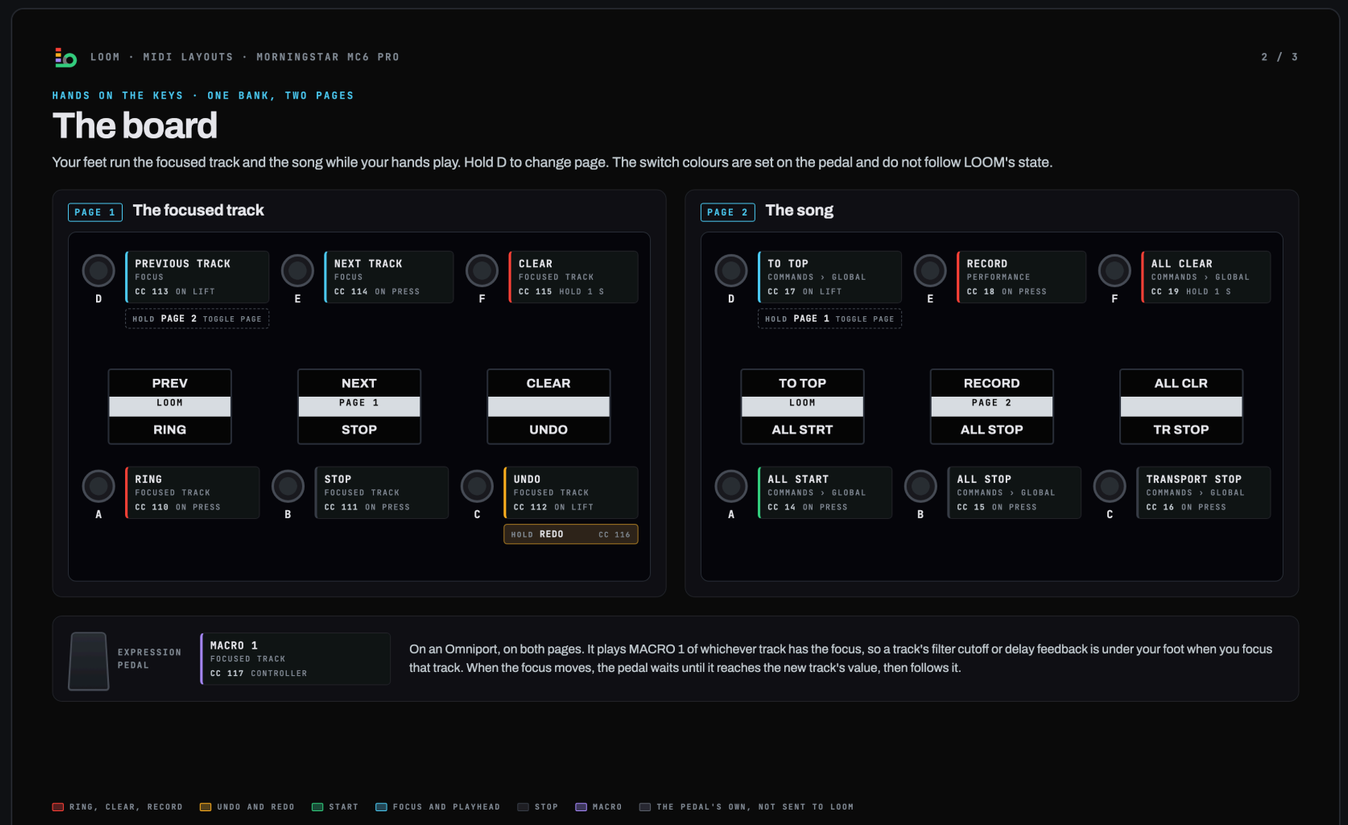

PAGE 2: THE BOARD

PAGE 1 · THE FOCUSED TRACK

Ring, stop, undo and clear the track that has the focus. Hold C to redo. D and E move the focus.

PAGE 2 · THE SONG

Start and stop every track, stop the transport, record the performance, return to the top and clear everything.

THE EXPRESSION PEDAL

Plays the focused track's MACRO 1 on both pages.

CHANGING PAGE

Hold D. A tap on D is its LOOM command, and a hold changes page.

Page 3 lists the settings in Morningstar Editor and in LOOM, and the controller number each switch sends.

HANDS ON THE KEYS · ONE BANK, TWO PAGES

The board

Your feet run the focused track and the song while your hands play. Hold D to change page. The switch colours are set on the pedal and do not follow LOOM's state.

PAGE 1 The focused track

D — PREVIOUS TRACK
FOCUS
CC 113 ON LIFT

HOLD PAGE 2 TOGGLE PAGE

E — NEXT TRACK
FOCUS
CC 114 ON PRESS

F — CLEAR
FOCUSED TRACK
CC 115 HOLD 1 S

PREV	NEXT	CLEAR
LOOM	PAGE 1	
RING	STOP	UNDO

A — RING
FOCUSED TRACK
CC 110 ON PRESS

B — STOP
FOCUSED TRACK
CC 111 ON PRESS

C — UNDO
FOCUSED TRACK
CC 112 ON LIFT

HOLD REDO CC 116

PAGE 2 The song

D — TO TOP
COMMANDS › GLOBAL
CC 17 ON LIFT

HOLD PAGE 1 TOGGLE PAGE

E — RECORD
PERFORMANCE
CC 18 ON PRESS

F — ALL CLEAR
COMMANDS › GLOBAL
CC 19 HOLD 1 S

TO TOP	RECORD	ALL CLR
LOOM	PAGE 2	
ALL STRT	ALL STOP	TR STOP

A — ALL START
COMMANDS › GLOBAL
CC 14 ON PRESS

B — ALL STOP
COMMANDS › GLOBAL
CC 15 ON PRESS

C — TRANSPORT STOP
COMMANDS › GLOBAL
CC 16 ON PRESS

EXPRESSION PEDAL

MACRO 1
FOCUSED TRACK
CC 117 CONTROLLER

On an Omniport, on both pages. It plays MACRO 1 of whichever track has the focus, so a track's filter cutoff or delay feedback is under your foot when you focus that track. When the focus moves, the pedal waits until it reaches the new track's value, then follows it.

RING, CLEAR, RECORD · UNDO AND REDO · START · FOCUS AND PLAYHEAD · STOP · MACRO · THE PEDAL'S OWN, NOT SENT TO LOOM

SETUP

Settings that make the layout work

IN MORNINGSTAR EDITOR

01 **Use one bank with two pages.**
Connect the MC6 Pro by USB and open Morningstar Editor. Choose an empty bank, name it LOOM, and set its page limit to 2.

02 **Turn Toggle Mode off.**
Every preset is momentary. A latching switch keeps its own on and off state, which can disagree with LOOM's.

03 **Send a CC on channel 16 from each switch.**
Use the number in the table. Send value 127 on Press and 0 on Release. Add 0 on Long Press Release too, so a long hold also ends with a release.

04 **Leave Press empty on C and D.**
On Release, send the CC with 127, then 0. On Long Press, C sends CC 116 with 127, then 0, for REDO, and D sends Toggle Page. A long press does not fire Release, so a hold never also undoes or moves the focus.

05 **Name each preset.**
The screens show the names. Set the colours you want; LOOM does not change them.

06 **Add the expression pedal.**
Set an Omniport to expression and calibrate heel and toe. In the bank's expression preset, send CC 117 on channel 16, from 0 to 127.

IN LOOM

01 **Leave MIDI CH at 16.**
It is in the side panel's GLOBAL tab, under MIDI.

02 **Learn each switch.**
Open MIDI Mapping with ⇧⌘M, press + ADD MAPPING, choose the target, then press the switch. Hold C to learn REDO. Hold D to reach page 2.

03 **Use BUTTON for every switch.**
LOOM proposes it for a switch that sends 127, then 0. CLEAR and ALL CLEAR then take the one-second hold.

04 **Learn the pedal as CONTROLLER.**
Choose FOCUSED TRACK › MACRO 1 and move the pedal.

05 **Assign each track's MACRO 1.**
In the side panel's MACROS block, on each TRACK and INST tab, press the MACRO 1 tile and choose the control the pedal plays on that track.

WHAT EACH SWITCH SENDS · CHANNEL 16

	PAGE 1	CC	PAGE 2	CC
A	RING FOCUSED TRACK	110	ALL START COMMANDS › GLOBAL	14
B	STOP FOCUSED TRACK	111	ALL STOP COMMANDS › GLOBAL	15
C	UNDO FOCUSED TRACK	112	TRANSPORT STOP COMMANDS › GLOBAL	16
C hold	REDO FOCUSED TRACK	116		
D	PREVIOUS TRACK FOCUS	113	TO TOP COMMANDS › GLOBAL	17
D hold	Toggle Page on the pedal	–	Toggle Page on the pedal	–
E	NEXT TRACK FOCUS	114	RECORD COMMANDS › GLOBAL	18
F	CLEAR FOCUSED TRACK	115	ALL CLEAR COMMANDS › GLOBAL	19
Pedal	MACRO 1 FOCUSED TRACK	117	MACRO 1 FOCUSED TRACK	117

LOOM's MIDI feedback does not light the MC6 Pro, so the colours on the switches and screens are the ones you set in the editor. When the focus moves, the pedal waits to pick up the newly focused track's control.