
To adapt to different types of chassis, the source code needs to be modified with the type parameter values and low voltage alarm thresholds!!!

Since the RRC communication routine with the host computer is compatible with multiple chassis types, only the code of this routine needs to be modified. If the type parameters are not modified, the motors may become uncontrolled!!!

If the low voltage alarm threshold is not modified, low voltage warnings cannot be correctly executed!!!

1. Change Chassis Type

1) Open the app.c file under the Hiwonder/System folder, and replace it with the corresponding chassis type value.

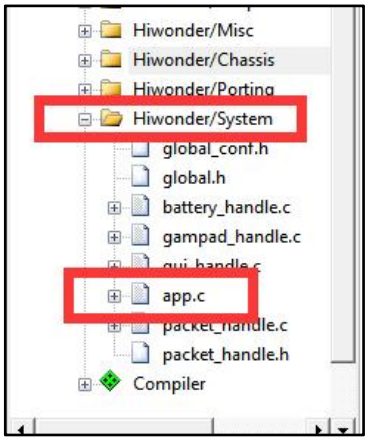


```
74
75      //注意：这里需要修改为相应的底盘类型！！！
76      set_chassis_type(CHASSIS_TYPE_TI4WD);
77
```

2) Optional type macro definitions

```
    CHASSIS_TYPE_JETAUTO,
    CHASSIS_TYPE_JETTANK,
    CHASSIS_TYPE_TI4WD,
    CHASSIS_TYPE_TANKBLACK,
```

CHASSIS_TYPE_JETAUTO —— Mecanum-wheel chassis

CHASSIS_TYPE_JETTANK —— Big continuous track chassis
CHASSIS_TYPE_TI4WD —— Four-wheel differential chassis
CHASSIS_TYPE_TANKBLACK —— Small continuous track chassis


2. Revise Voltage Alarm Threshold

1) Open the global_conf.h file under the Hiwonder/System folder.



2) If the battery voltage is 12V, choose 9600; if it is 8V, choose 6300.

Configuration for an 8V battery is as follows:

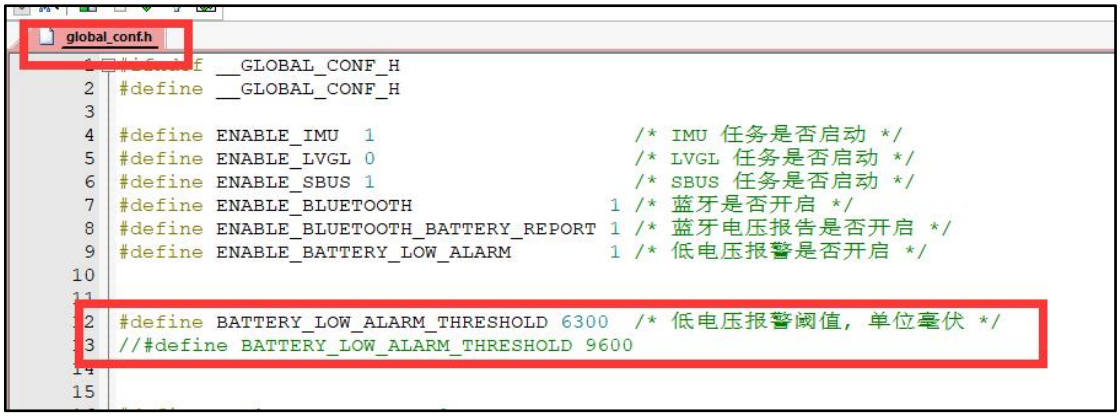

Configuration for a 12V battery is as follows:

```
//#define BATTERY_LOW_ALARM_THRESHOLD 6300  /* 低电压报警阈值，单位毫伏 */
#define BATTERY_LOW_ALARM_THRESHOLD 9600
```