


Instruction of Remote Control

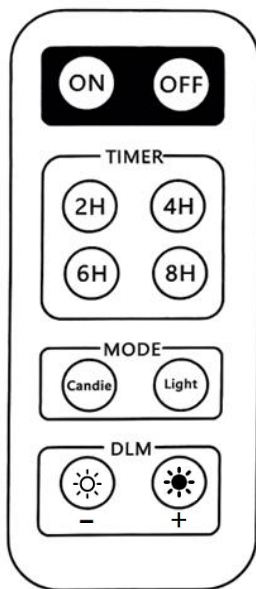

WARNING

- Insert batteries with the correct polarity (+/-).
- Do not mix old and new batteries.
- Keep batteries out of reach of children.
- Remove batteries if not using the product for a long time.
- Recycle electronics and batteries as required by local regulations.

ON-OFF Button:

Turns the candle light ON or OFF.

(Note: Before you use the Remote control, switch the ON-OFF button at the bottom of the candles.)

TIMER Function:

Sets automatic ON/OFF cycles with preset durations: 2H / 4H / 6H / 8H.

Example: If you set the timer to 2 hours at 8:00 PM, the candle will turn off automatically at 10:00 PM. It will then turn back on at 8:00 PM the next day and shut off again at 10:00 PM, repeating this 24-hour cycle daily.

MODE Button:

Press once: Non-flickering flame (steady light)

Press again: Flickering flame (realistic candlelight effect)

Brightness Control:

Left button: Decrease brightness

Right button: Increase brightness

Important Tips:

Remove the insulating protective tab from the remote control before first use.

The remote control requires 2 AAA batteries (not included). When the remote's battery runs low, open the battery compartment and replace both batteries with new AAA cells.

Specifications

Material	Real Wax
Remote Control Range	5 Meter (16.4 ft)
Battery Type	Requires 2 X AA batteries per candle (batteries not included)
LED Lamp Life	50,000 hours
LED Glow Time	250–300 hours (high-grade battery required; constant use of the timer may reduce battery life)

How to Inserting the Batteries

1. Open the battery compartment cover by unlatching it and removing the cover completely.
2. Insert 2 AA batteries into the battery compartment according to the polarity indicators inside the compartment.
3. Close the battery compartment cover by placing the 2 small tabs into the slots and pressing down to secure the latch.

How to Illuminating the Candle

The candle will illuminate until you manually move the switch to OFF.

Care and Maintenance

Clean as needed with a soft, dry or slightly damp cloth.

Keep out of direct sunlight, away from heat sources and extreme temperatures — otherwise, your candle may soften or melt.

- When not in use for an extended period, please remove the battery from the candle.
- Use fresh batteries of the required size and type only. Do not insert mixed old and new batteries, or place in a lantern — to protect furniture from wax deposits.
- Place the candle on a protective base, on a candle holder, or in a lantern to protect furniture from wax deposits.

Cautions and Warnings

1. This candle is made of plastic and is flammable. Do not attempt to light this candle. Doing so could result in personal injury or damage to the light and its components.
2. Warning! This product contains small parts, which if removed, can pose a choking hazard. Keep away from small children.