


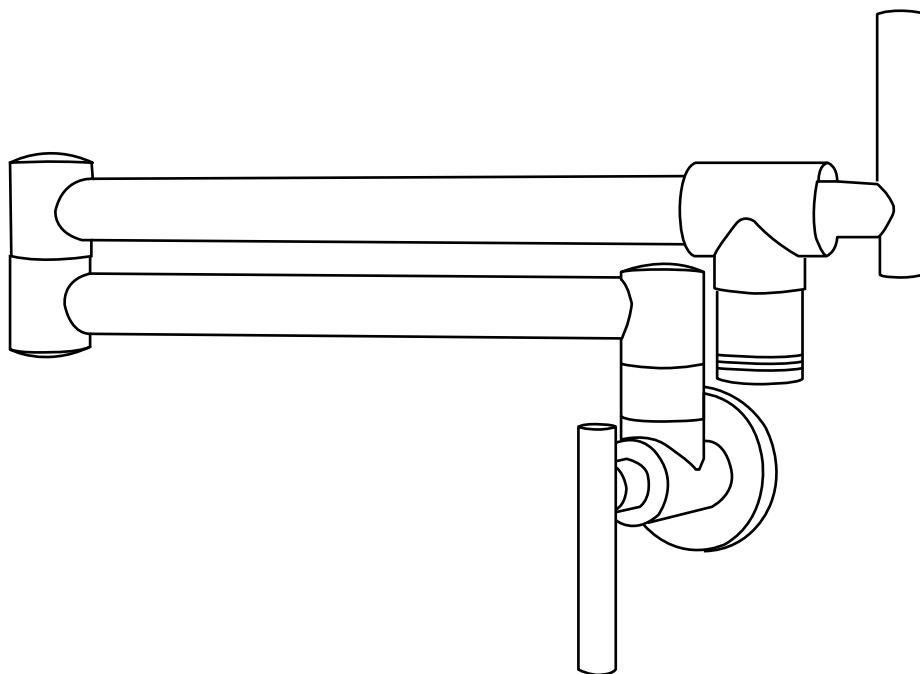

# **Faucets**

## **User Manual**

### **Pot Filler Faucet**

# Faucets

## 3 - YEAR WARRANTY GUARANTEE:

Scan the QR code within 7 days  
to activate 3-year warranty.



Have product questions? Need technical support? Please  
feel free to contact us:

[support@diamondforge.com](mailto:support@diamondforge.com)


## Product Introduction

Cartridge Certification: **CUPC-certified**

3 Mode Folding Kitchen Faucet.


### Standard Mode :

The mode is used for rinsing.

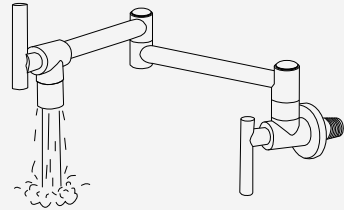


### Rain Shower Mode :

The mode effectively cleans dirt  
and impurities from the surface  
of the items with its micro - bubbles.

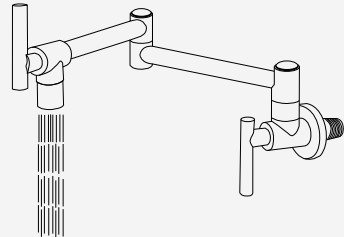

### High Pressure Mode :

The mode is specifically designed  
to scrape and wash away stubborn  
dirt and grime which is difficult to  
clean.

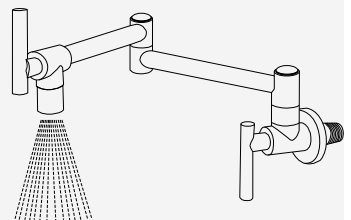


# Cleaning and Care

---


Take care when cleaning this product.

Although its finish is extremely durable, it can still be damaged by harsh abrasives or polish. To clean it, simply wipe it gently with a damp cloth and then dry it with a soft towel by blotting with a soft towel.

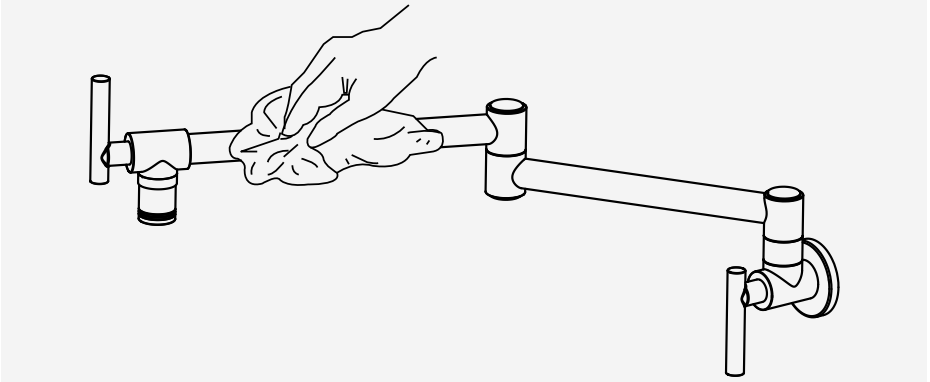

## Installation

---

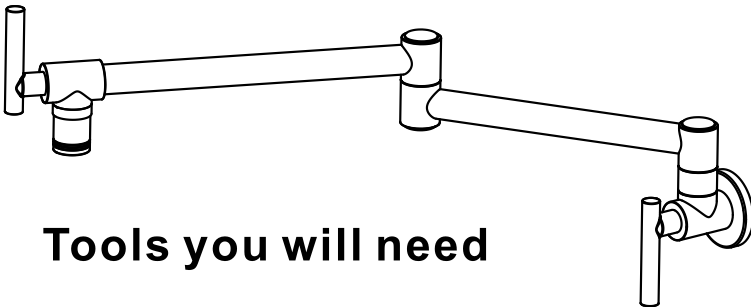


### Tools you will need



Waterproof Tape




Adjustable Wrench

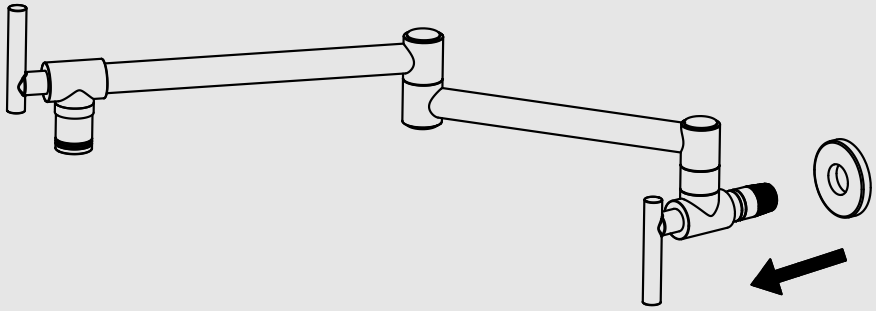


### **Step 1 : Install the escutcheon:**

Screw the escutcheon into the water inlet pipe of the faucet.

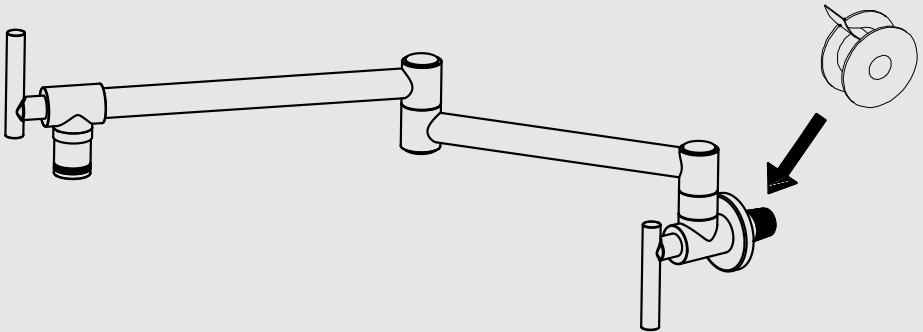

### **Step 2: Tighten the water inlet pipe:**


Wrap the water inlet pipe with waterproof adhesive tape to increase friction.

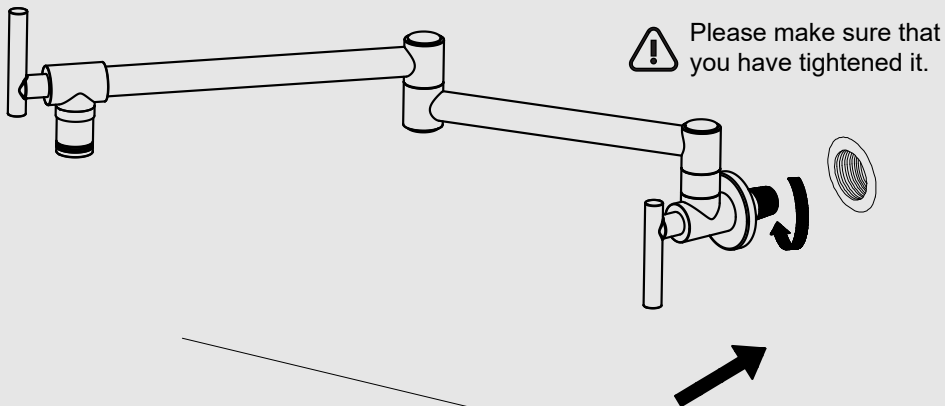

⚠ Please make sure that you have tightened it.

### Step 3 : Install the faucet into the wall:

Rotate the faucet body and insert it into the wall. Adjust the faucet body to the correct position and ensure it is tightened.

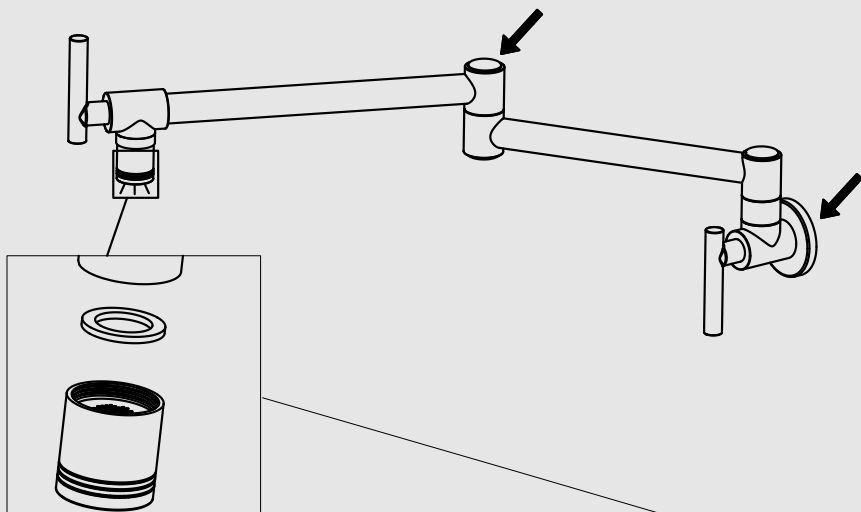


### Step 4: Flush the faucet spout and check for leaks:

Turn on the faucet and let the water run for 60 seconds to flush out any debris. Check for leaks at the connections. Retighten if necessary.

# Turn Off Both Switches When Not In Use

1. The momentary switch allows the customer to promptly stop the water flow once the container is filled, thus preventing the water from overflowing. It is crucial to turn off the main switch after completing the task.
2. If the main switch of the faucet is on while the momentary switch is off, the water will keep flowing in the faucet, which may cause damage due to long-term pressure.

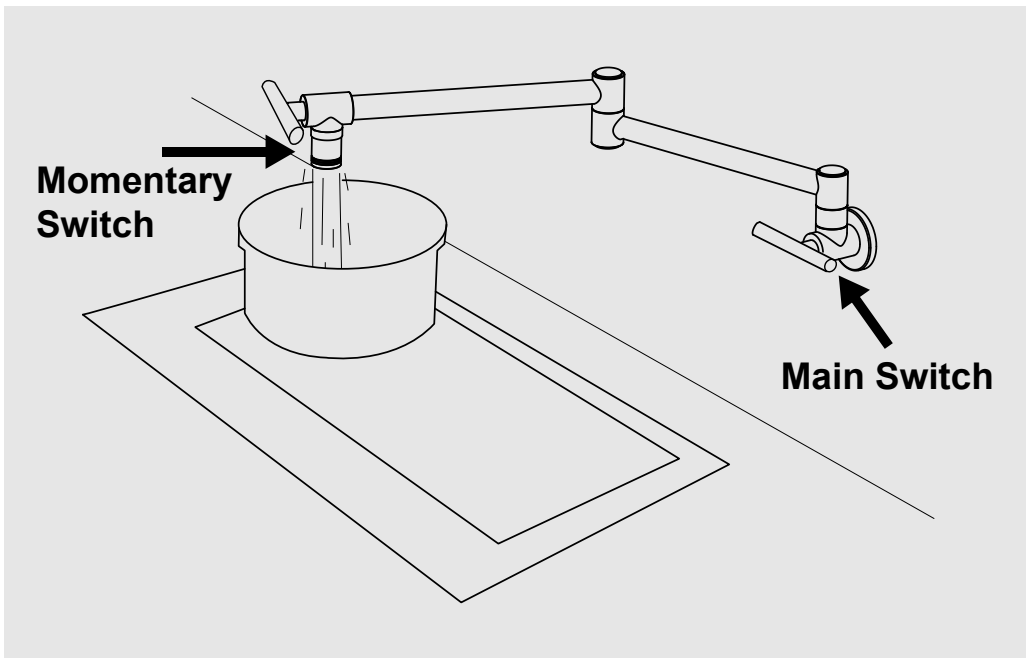

## Need Help?

Contact the DIAMONDFORGE Customer Care Center  
E-mail: [support@diamondforge.com](mailto:support@diamondforge.com)  
Phone: (332) 201-8325