

Folding Treadmill with Auto Incline

Model: TM032



USER MANUAL

*Thank you for selecting our treadmill. To provide a better using experience, please read this manual carefully before operation or maintenance, and SAVE THESE INSTRUCTIONS for future reference.

Language

English	1-22
Deutsch	25-48
Français	49-72
Nederlands	73-96

Contents

1. Customer Support	1
2. Important Precautions	2
3. Product Introduction	3
3.1 Product Diagram	3
3.2 Console Diagram	5
3.3 Package Contents	5
3.4 Specifications	6
4. Assembly Instructions	7
4.1 Lock the Upright Tube	7
4.2 Attach the Phone/Pad Holder	7
4.3 Assembly and Fold the Handrail	8
5. Exercise Instructions	8
5.1 Quick Start	8
5.2 How to Pair the Remote Control	9
5.3 Treadmill Mode Select	10
6. How to Fold & Move the Treadmill	11
6.1 How to Fold the Treadmill	11
6.2 How to Move the Treadmill	11
6.3 Folding Handle Tension Adjustment	12
7. WELLFIT Health & Fitness App	13
8. Maintenance & Care	18
8.1 Centering the Running Belt	18
8.2 Tighten the Running Belt	19
8.3 Running Belts & Treadmill Lubricant	20
9. Troubleshooting	22

1.Customer Support

HOW TO CONTACT US?

3 WAYS TO CONTACT US BEFORE/AFTER ORDER

24/7/365 Online Service, response within 24 hours


OPTION 1:

Find the Seller Profile -- have a question for seller, ask a question -- an item for sale -- Product details



OPTION 2:

Product details page -- Customer questions & answers part -- post your question

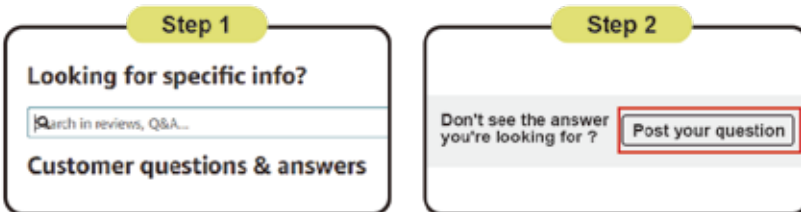

OPTION 3:

For technical support, the user manual and other information, you can also contact us via service@fit365.community or our forum: fit365.community

2. Important Precautions


WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons, read all important precautions and instructions in this manual and all warnings before using your treadmill.

Seller assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


1. It is the responsibility of the owner to ensure that all users of this treadmill are adequately informed of all warnings and precautions.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. Keep the treadmill indoors, away from moisture and dust. Do not put the treadmill in a garage or covered patio, or near water.
4. Do not operate the treadmill where aerosol products are used or where oxygen is being administered.
5. During running, it's recommended to wear athletic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals to avoid injury.
6. The treadmill is capable of high speeds. Adjust the speed in small increments to avoid sudden jumps in speed.
7. Read, understand, and test the emergency stop procedure before using the treadmill.
8. Never leave the treadmill unattended while it is running. Always press the power switch into the off position, and unplug the power cord when the treadmill is not in use.
9. Please add 10ml of lubricant before first use. Add lubrication oil every 3-4 months. We recommend you to use the WELLFIT App so that it will send you a notification when the running belt is "hungry".
10. Treadmills are made by fusing the belt together, which creates a seam. The seam is made when the belt is heated up, and all belts are tested to make sure they're good quality. This way of making treadmill belts is the standard in the industry, so you can trust that they're strong and will last a long time.

3.Product Introduction

3.1 Product Diagram

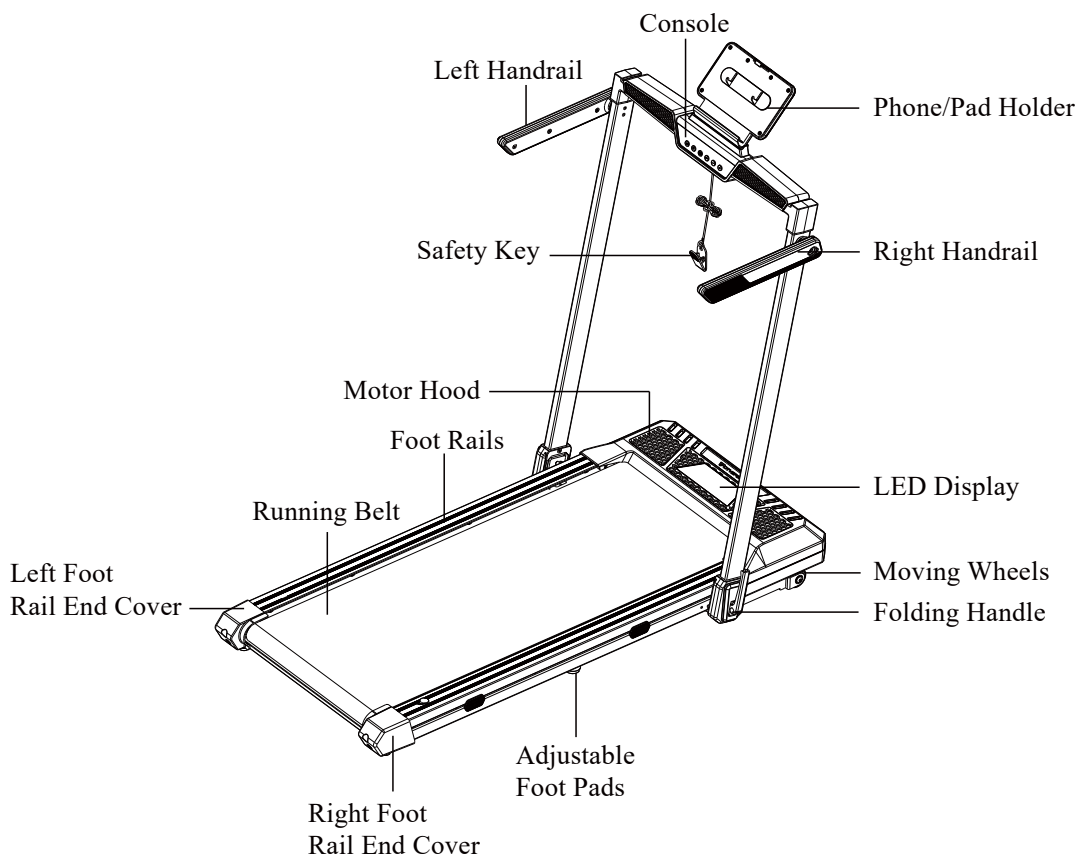

Function Key

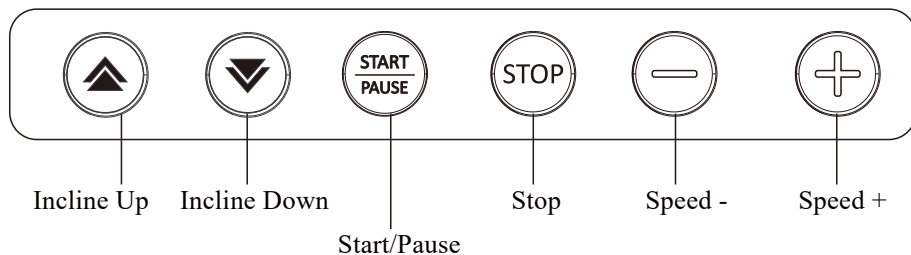

1. Incline Up:

During treadmill operation, short press the ▲ button to increase the incline.

2. Incline Down:

During treadmill operation, short press the ▼ button to decrease the incline.

3. Start/Pause:

Start: To start the treadmill, attach the safety key to the yellow area under the console and then press this button. This treadmill requires the Safety Key in order to start 1.0 km/h is the default start speed.

Pause: While the treadmill is running, short press this button to pause. The display will show "PAU".

Continue: While paused, short press this button again to continue running.

4. Stop:

The button is to stop the treadmill, press to stop it and all data will be deleted and reset to the initial setting.

5. Speed -:

Press the - button to decrease the speed in increments of 0.5 km/h. Pressing the button for a duration of over 1 second will decrease the speed continually.

6. Speed +:

Press the + button to increase the speed in increments of 0.5 km/h. Pressing the button for a duration of over 1 second will increase the speed continually.

3.2 Console Diagram



Data switches every 5 seconds

Incline(Levels): 0-5

Speed(km/h):1.0-14.0

Time(min:sec):0:00-99:59


Distance(km):0:00-99.99

Calories(kcal):0:00-9999

3.3 Package Contents

Description	Qty.	Description	Qty.
Treadmill Body	1	Remote Control	1
Handrails	2	Safety Key	1
Phone/Pad Holder	1	Power Cord	1
Holder Stand Base	1	User Manual	1

Tool pack

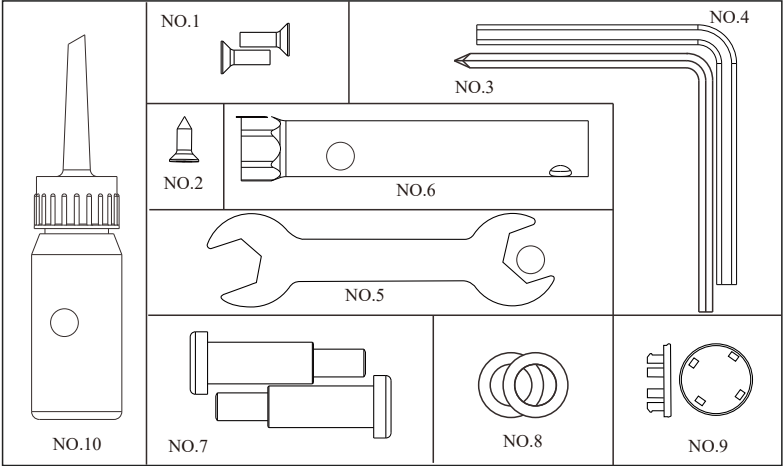

NO.1	4.2*14mm Screws	2
NO.2	4.2*13mm Screw	1
NO.3	5mm Allen Wrench	1
NO.4	6mm Allen Wrench	1
NO.5	Open Wrench	1
NO.6	Socket Wrench	1
NO.7	Bolts	2
NO.8	Flat Washers	2
NO.9	Handrail End Caps	2
NO.10	Lubrication Oils	1

3.4 Specifications

Power Supply	AC 220-240V, 50/60Hz
Speed Range	1.0-14.0 km/h
Controlling Mode	Console/Remote/App Control


4. Assembly Instructions

4.1 Lock the Upright Tube

After removing the treadmill from the packing box, place it flat on the ground. As shown in Step (A) below, pull the “folding handle” outward in the direction indicated. The lower ends of the upright tube will naturally expand outward.

As shown in Step (B) below, lift the upright tube upward until they reach the upper limit position.

As shown in Step (C) below, press down the “folding handle” to lock the upright tube in place.

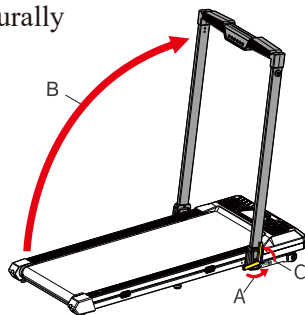


4.2 Attach the Phone/Pad Holder

As shown in Step ① below, attach the holder stand base to the top of the console using two 4.2*14mm screws and 5mm Allen Wrench (make sure to distinguish between the front and back of the base during installation).


As shown in Step ②, insert the phone/pad holder into the stand base and tighten it clockwise with 4.2*13mm screw and 5mm Allen Wrench.

Attach the red safety key (E) to the yellow area under the console. When using the treadmill, clip the end of the safety key with the clip to the edge of your clothing.

①

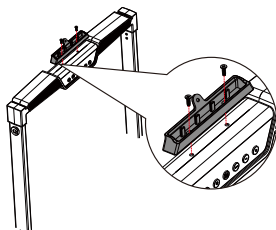

②

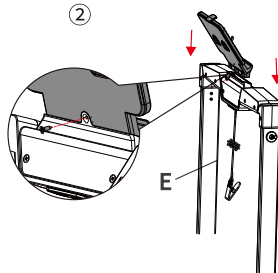


4.3 Assembly and Fold the Handrail

As shown in the image, insert the left handrail (F) vertically into the corresponding position on the left upright post. Use the bolt (G) to pass through the flat washer (I) and secure the left handrail to the upright. Tighten the handrail screw hole with the handrail end cap (H).

Note: The installation method for the right handrail is the same, please distinguish between the left and right handrails during installation.

After both handrails are installed, rotate them clockwise or counterclockwise to the limit position. This allows the handrails to be folded for storage or unfolded for use.

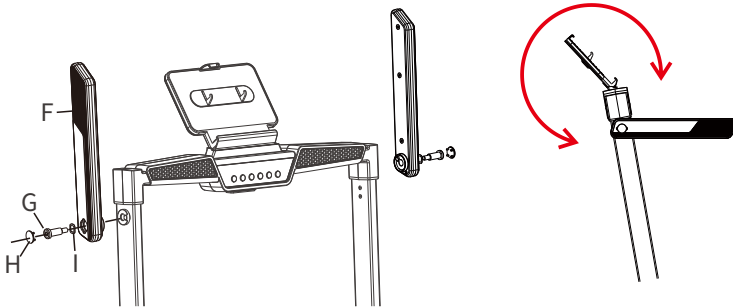


5. Exercise Instructions

5.1 Quick Start

Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising immediately if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, light headache, dizziness, or feelings of nausea.

Get to know your treadmill. Before attempting to use the treadmill take some time to stand alongside and familiarize yourself with the controls.

1. As shown in the image, insert the power cord into the socket at the front of the treadmill. Connect to a power source and turn on the power switch located at the lower front of the machine. The treadmill will enter standby mode.
2. Attach the safety key to the yellow area under the console and then press the Start button. This treadmill requires the Safety Key in order to start. 1.0 km/h is the default start speed.
3. To adjust the speed, you can use the speed+/- button on the console/remote control.
4. To adjust the incline, you can use the incline up/down button on the console/remote control.

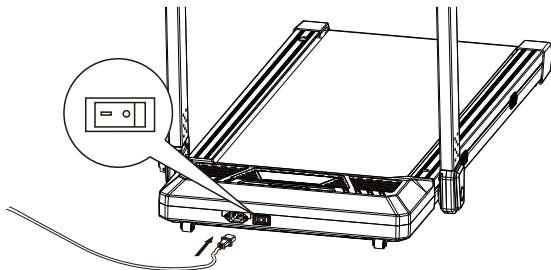

When you are finished with your exercise, press the STOP button to stop the machine or you can remove the magnetic end of the Safety Key to stop the machine. Once the Safety Key is removed the window displays "E07".


5.2 How to Pair the Remote Control

⚠ Important: Before using the remote control, remove the insulating paper to enable normal operation.

How to pair the remote control?

Step 1: Start the treadmill and unplug the safety lock.

Step 2: Within 5 seconds of unplugging the safety lock, point the remote control at the display window and press and hold the "Start/Stop" button to pair. You will hear a "D.D.D" sound to confirm successful pairing.

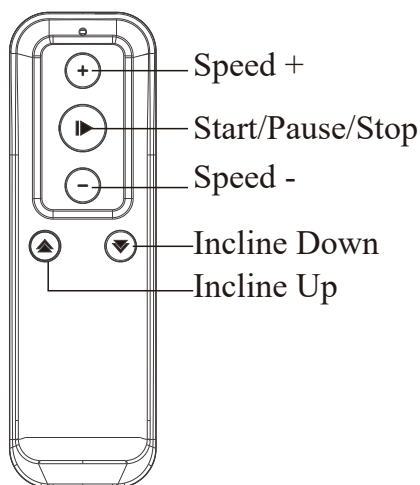


5.3 Treadmill Mode Select

Walking Mode: When the handlebar is folded (parallel to the treadmill), it is in walking mode. In walking mode, the treadmill operates at speed from 1.0-6.0 km/h.



Running Mode: When the handlebar is unfolded, it is in running mode. In running mode, the treadmill operates at speeds from 1.0-14.0 km/h.

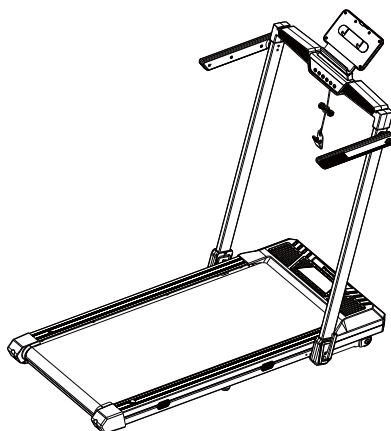


6. How to Fold and Move the Treadmill

6.1 How to Fold the Treadmill

Steps(E), pull the "folding handle" outward in the indicated direction. At this point, the lower end of the upright tube will naturally open to both sides.


Steps(F), slowly lower the upright tube downwards until it reaches the folding limit.

Steps(G), press down on the "folding handle" to ensure the upright tube in place.

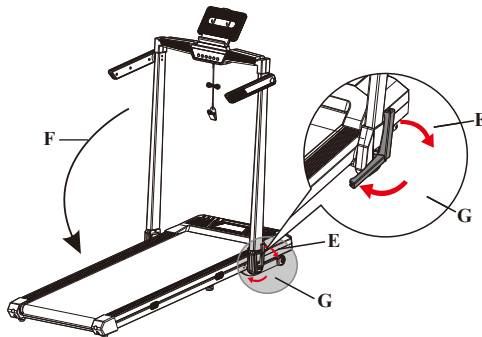

6.2 How to Move the Treadmill

To move the treadmill, unplug the power cord, fold and hold the frame until the wheels are able to move on the ground.

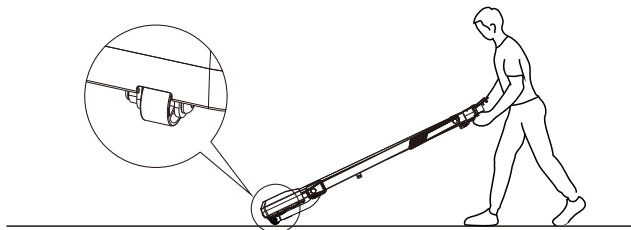


6.3 Folding Handle Tension Adjustment

To adjust the folding handle according to wrist strengths and preferences, following the steps:

1. Locate the plug at the bottom of the left upright tube and remove it.
2. Take the provided hex wrench and socket wrench and combine them to form a lever.
3. Insert the hexagonal end of the socket wrench into the hole at the bottom of the left upright tube. Align the hexagonal screw with the socket wrench. To tighten the folding handle, turn the wrench clockwise. To loosen it slightly, turn the wrench counterclockwise.

Note: It is important to make only small adjustments to the tension to avoid any shaking between the folding parts.

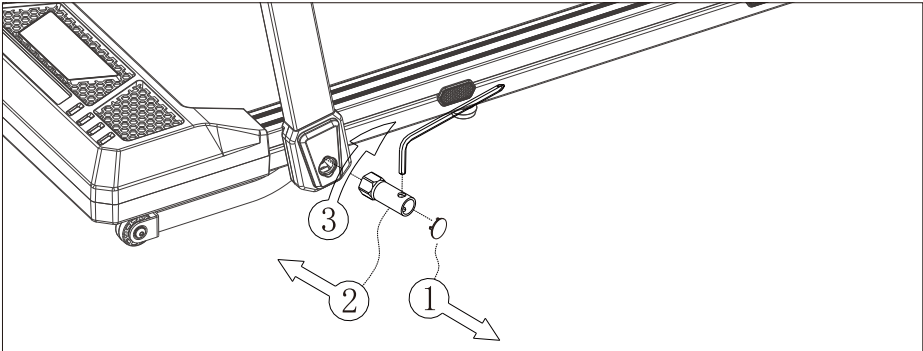

7. WELLFIT Health & Fitness App

7.1 The Smart App Setup

Step 1: Scan the QR code to download "WELLFIT FITNESS" App, you can also search "WELLFIT FITNESS" from  or  to download the App




or



Step 2: Run the "WELLFIT FITNESS" App, tap "Register" to register a "WELLFIT FITNESS" account with your email or login with Google account. Then sign in.

Step 3: Turn on your mobile phone Bluetooth and Location enable your treadmill to be found.


Follow the steps as below pics shown. (APP Bluetooth Name:WELLFIT TM Linker)

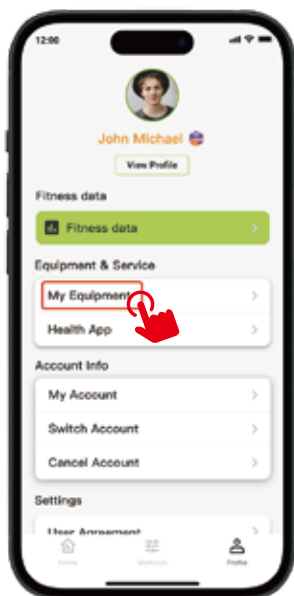


Step 1



Step 2

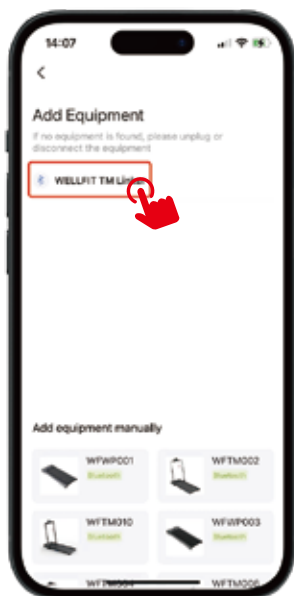

Step 3

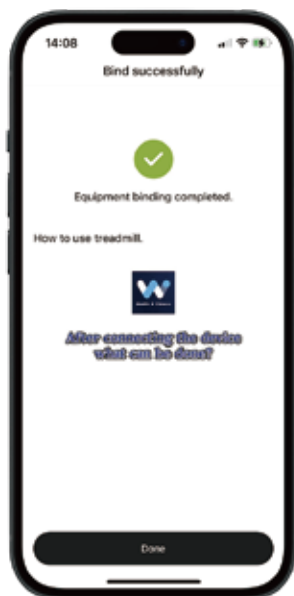


Step 4

Explore more functions and wonder how to use below functions in detail, please kindly contact us via service@fit365.community or our forum: fit365.community, so that we can offer video guide.


7.2 Online Remote Control

Activate the online remote control on your APP by clicking the remote icon.(If your remote is defective or at low power, you can also control your treadmill by this way before you fix the remote issue)

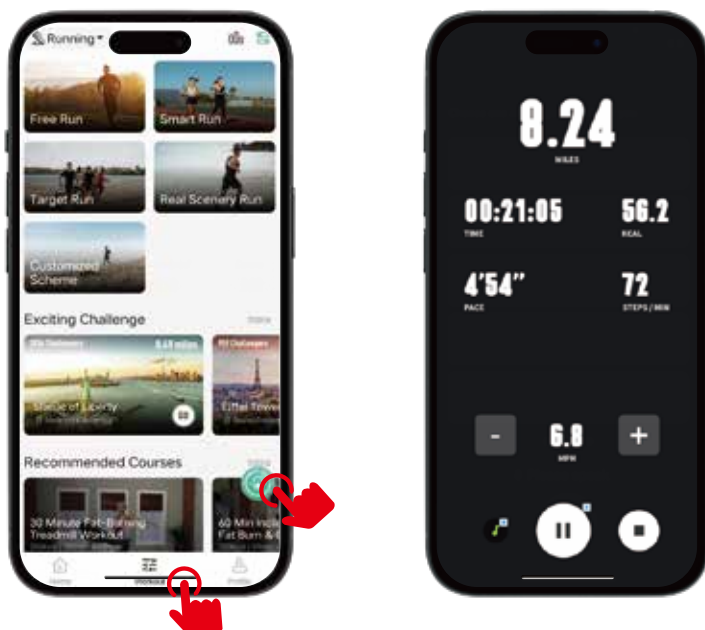


7.3 Smart Voice Control


AI fitness AI smart voice fitness assistant that understands you better.

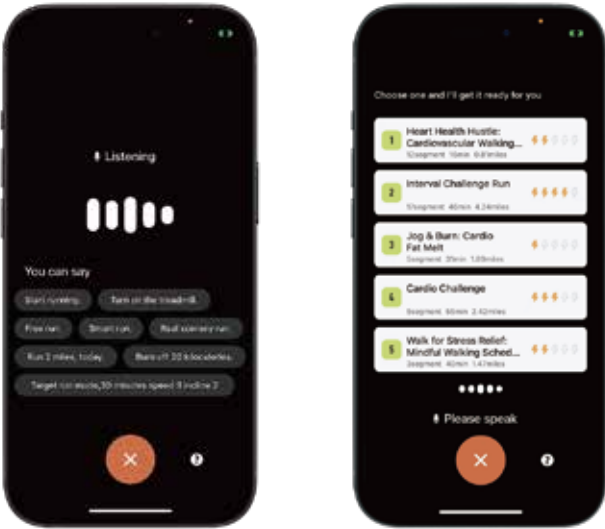


7.4 Free Running Training Courses and Programs

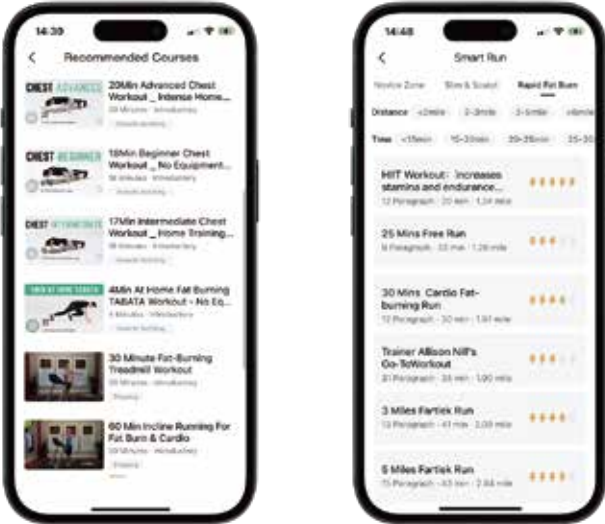

7.5 Apple Health Fitness

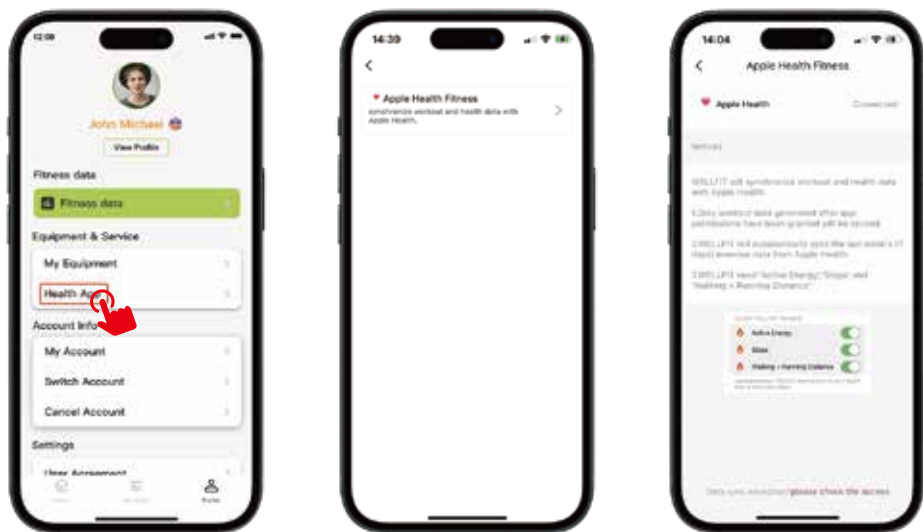

7.6 Workout Statistic Track and Analyse

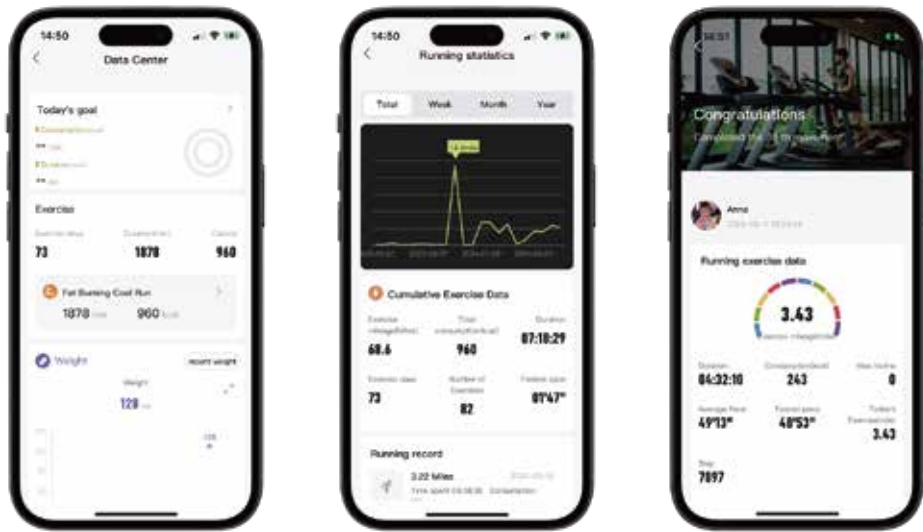

8. Maintenance & Care

General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the running belt to prevent dust from accumulating underneath the belt. Keep your running shoes clean so that dirt from your shoes does not wear out the running board and belt. Clean the surface of the running belt with a clean damp cloth.

> To better maintain the treadmill and prolong its life it is suggested that the machine be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.

> The moving parts should turn freely and quietly. Abnormality of moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.

8.1 Centering The Running Belt


Place the treadmill on level ground and set it at 3-6 km/h to check if the Running Belt drifts. Before and after installation, all treadmills need to undergo belt alignment. However, over time, the treadmill may still experience belt deviation.

The possible causes for this phenomenon are as follows:


1. Uneven placement of the main unit.
2. User's feet not centered on the treadmill while exercising.
3. Uneven distribution of force applied by the user's feet.

If the belt deviation is caused by user error, it can be resolved by running the treadmill without any load for a few minutes. If the issue persists and cannot be automatically corrected, please use the provided Allen Wrench to adjust the belt alignment gradually as following.

1. If the Running Belt moves to the right, turn the adjusting bolt on the right side 1/4 turn clockwise, then turn the left adjustment bolt 1/4 turn counter-clockwise. If the belt does not move, keep adjusting 1/4 turn at a time until it centers. Refer to picA.

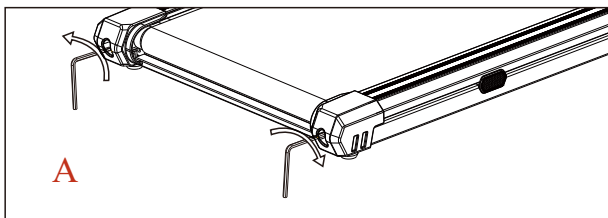

2. If the Running Belt moves to the left, turn the adjusting bolts on the left side 1/4 of a turn clockwise, then turn the right adjustment bolt 1/4 turn counter-clockwise. If the belt does not move, keep adjusting 1/4 turn at a time until it centers. Refer to pic B

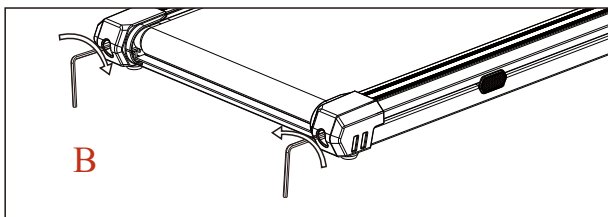


8.2 Tighten the Running Belt

> A loose Running Belt will result in the runner sliding off when running, while too tight of a Running Belt will result in decrease to the motors performance and also create more friction between the roller and running belts. The most suitable tightness for the belts is pulled out 0.5-0.8 cm (two fingers height) from the Running Board.

Over time the Running Belt will loosen. To tighten the belt turn the Left & Right side adjustment bolts one full turn clockwise, check the tension of the belt.

Continue this process until belt is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to pic C

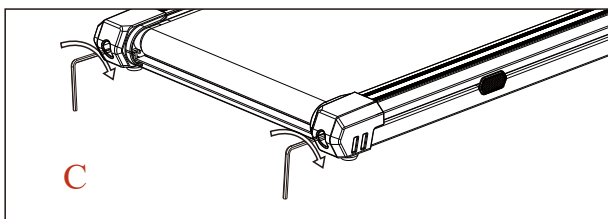

8.3 Running Belts & Treadmill Lubricant

⚠ NOTE: You will need to lubricate your treadmill before the first use.

Lubricating the running board and running belt is essential as the friction between the two affects the lifespan and function of the treadmill, therefore it is suggested that the running board and belt be inspected regularly. Should you find any wear on the Running Board, please contact us at:

service@fit365.community

Lubrication Check: To determine if lubrication is needed, simply grab the treadmill belt and touch your hand to the center of the backside of the belt. If your hand feels slightly damp or has a silicone residue, it means no additional lubrication is required. However, if the belt feels dry and there is no residue on your hand, lubrication is needed.


⚠ Note: Excessive lubrication is not recommended.

Suggestion:

The following time table is recommended	
Light user (less than 3 hours/ week)	every 6 months
Medium user (3-5 hours/week)	every 3 months
Heavy user (more than 5 hours/ week)	every 2 months

Lubricant Steps:

- 1. Turn off the treadmill.
- 2. Open the lubricant cap located behind the right side foot rail.
- 3. Use scissors to cut open the lubricant bottle cap.
- 4. Insert the thin nozzle of the bottle into the oil injection port on the running deck, as shown in the image.

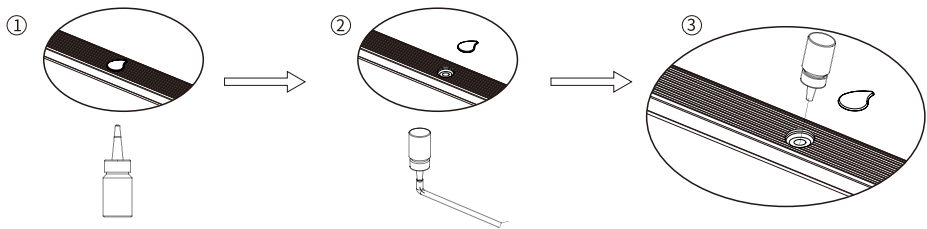

9. Troubleshooting

ERROR CODE	POSSIBLE CAUSE	SOLUTION
E01	Communication failure between controller and display	Check if the communication cable between the controller and the display is loose or disconnected
E02	1.Motor wire is loose or disconnected 2. Motor carbon brushes are worn out or not making contact 3.Controller failure	Check if the motor wire is loose or disconnected.If yes,reconnect. Check if the motor carbon brushes are worn or floating and not making contact. If the motor is normal, the controller may be faulty.
E05	Overload protection	The load is too heavy or current exceeds the limit.Turn off power and restart.
E07	Safety key not in place	Check if the safety key is properly inserted. If not, insert the safety key correctly.
E08	Communication failure between upper and lower control boards	Check if the communication cable between upper and lower control boards is loose or disconnected.
Display Error	External interference	Turn off the power switch, wait 1 minute, then turn it back on.

 **NOTE:** If you are unable to resolve an issue using the troubleshooting guide above, please contact Customer Service at service@fit365.community our forum: fit365.community