

1

2

3

4

A

A

B

B

C

C

D


D

音量-

暂停/播放

音量+

开关机

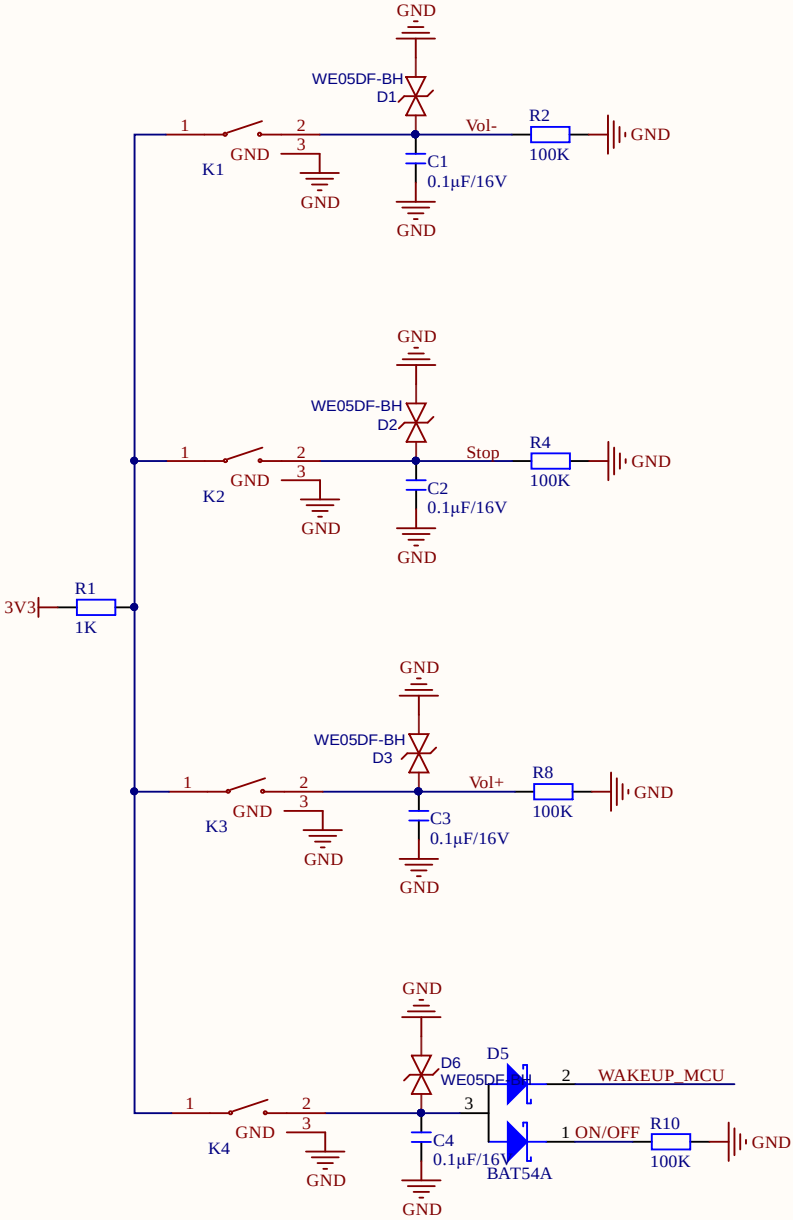

J1 8PIN	1	3V3
	2	ON/OFF
	3	Vol-
	4	Stop
	5	Vol+
	6	WAKEUP_MCU
	7	GND
	8	