


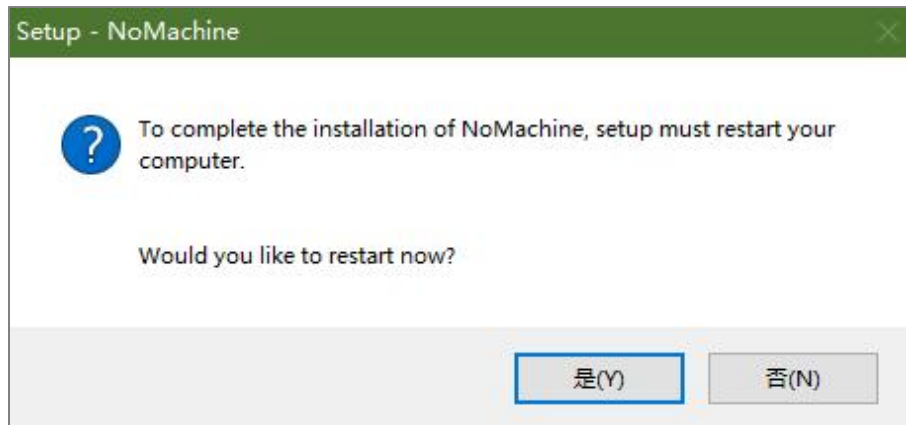

11.2 Device Connection


Note: When establishing a remote desktop connection, JetArm kit with a screen must disconnect the screen power cable before booting up. Otherwise, it may cause resolution issues.

You can remotely connect to the device in three ways as follows:


- ① AP direct connection mode: the demo board can generate a WiFi network that can be accessed by a phone. However, in this mode, the user cannot connect to the Internet.
- ② STA LAN mode: the demo board can connect to the specific hotspot/ Wi-Fi. Different from AP direct connection mode, you can access the external Internet in STA LAN mode.
- ③ USB connection: connect the demo board and computer through USB cable, then remotely access the robot's system desktop using the fixed IP address. However, in this mode, the user cannot connect to the Internet.

11.2.1 Access under AP Direct Connection/ STA LAN Mode


JetArm is default to AP direct connection mode. After it boots up successfully, it will create a WiFi starting with 'HW'. Connect your computer to this WiFi.

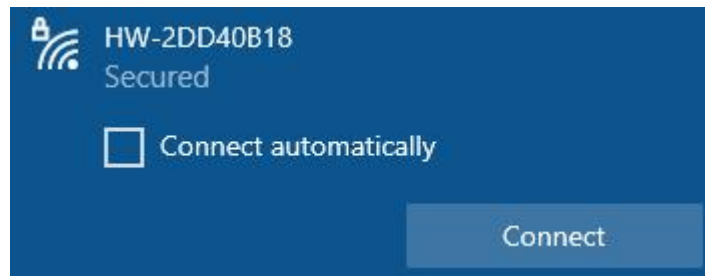


2) Open NoMachine. Input “**192.168.149.1**” in the search bar, then click-on “**Configure connection to new host 192.168.149.1**”.

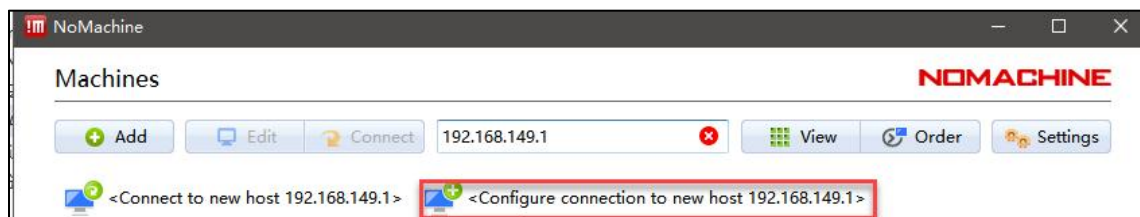

3) Change the name to “**JetAuto**”, then click-on “**Connect**” button.


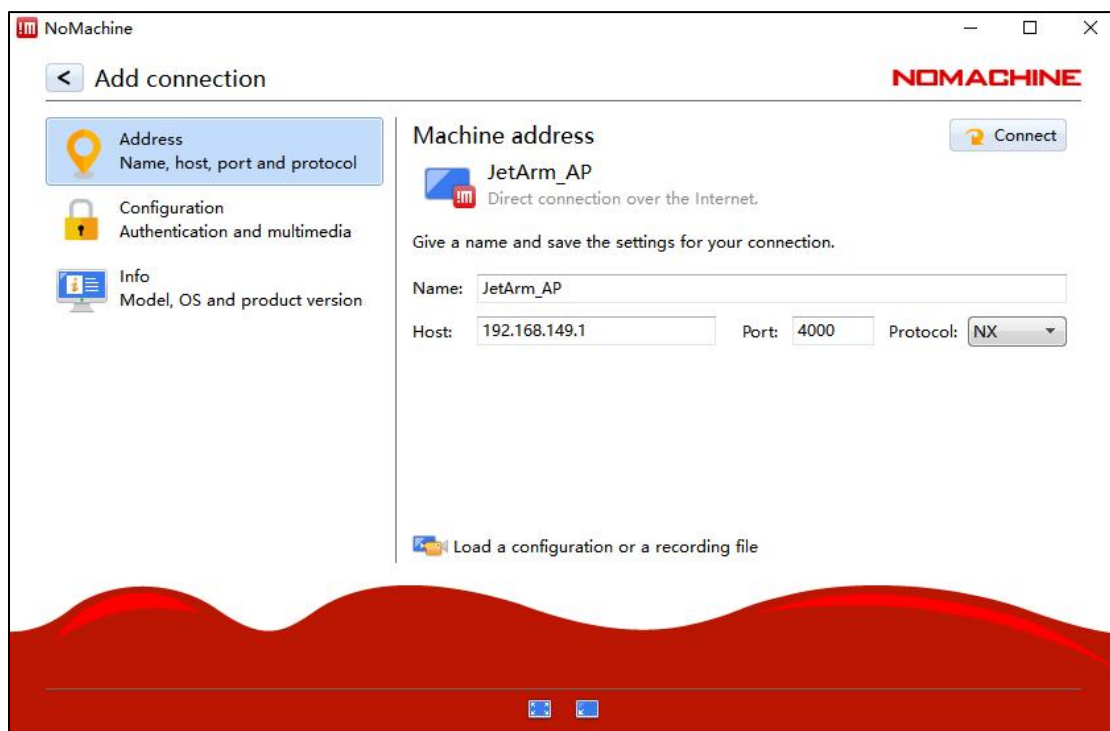




4) Use the username “**hiwonder**” and password “**hiwonder**” to log in.
Remember to select “**Save this password in the connection file**” before clicking the “**Login**” button to access the Jetson Nano desktop.

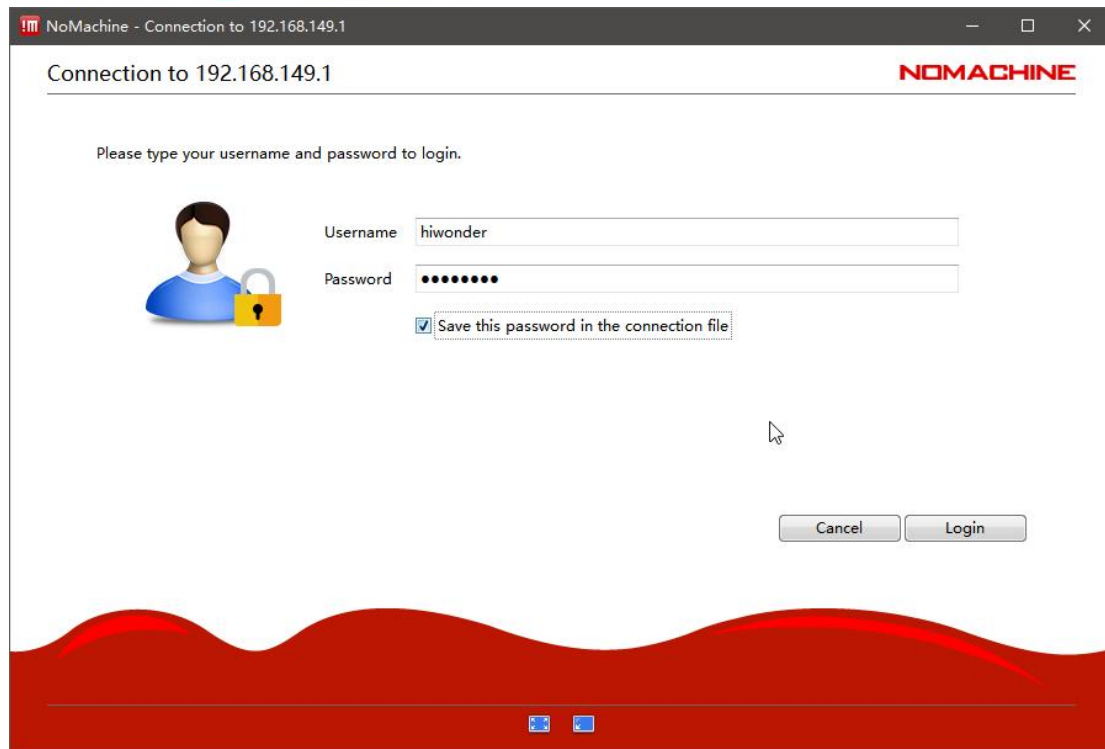


Note: if the robot is configured as STA LAN mode, above operations are also applicable. You need to replace with the corresponding IP, username (it can be changed as requirement) and password (hiwonder). (The IP in LAN mode can be viewed in “5.2.2 LAN Mode Connection (Optional)”)

5) Tick the below box and click “Ok”. (If you do not tick this option, the pop-up window will occur next time.)

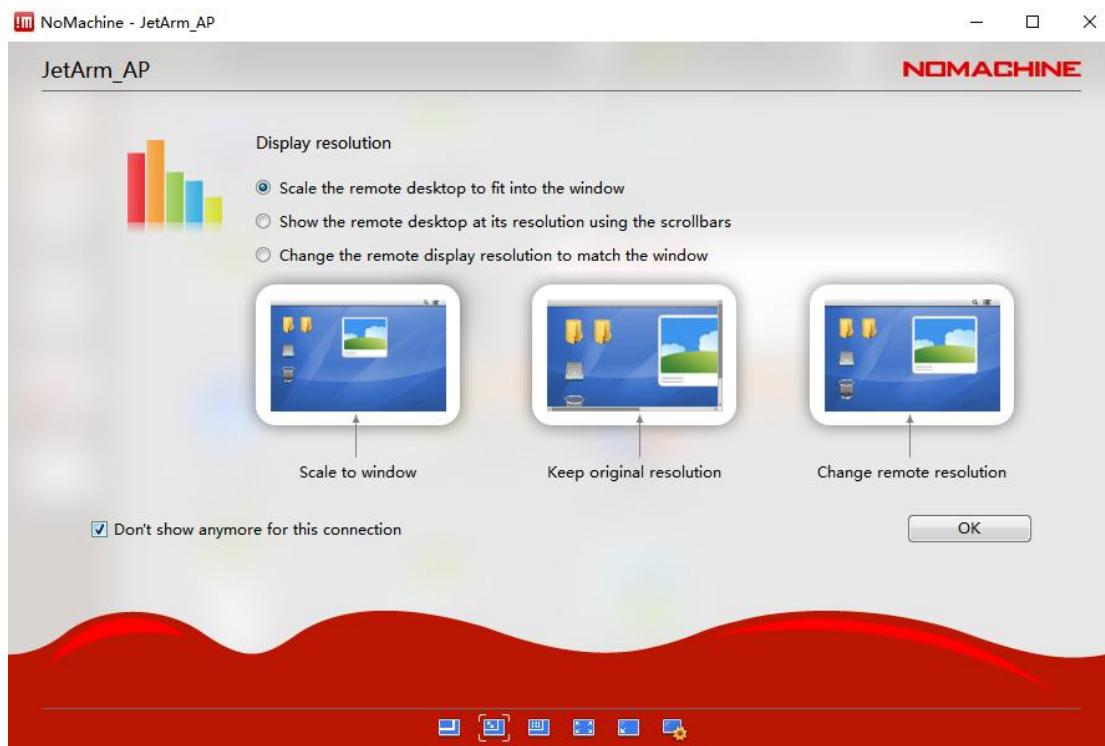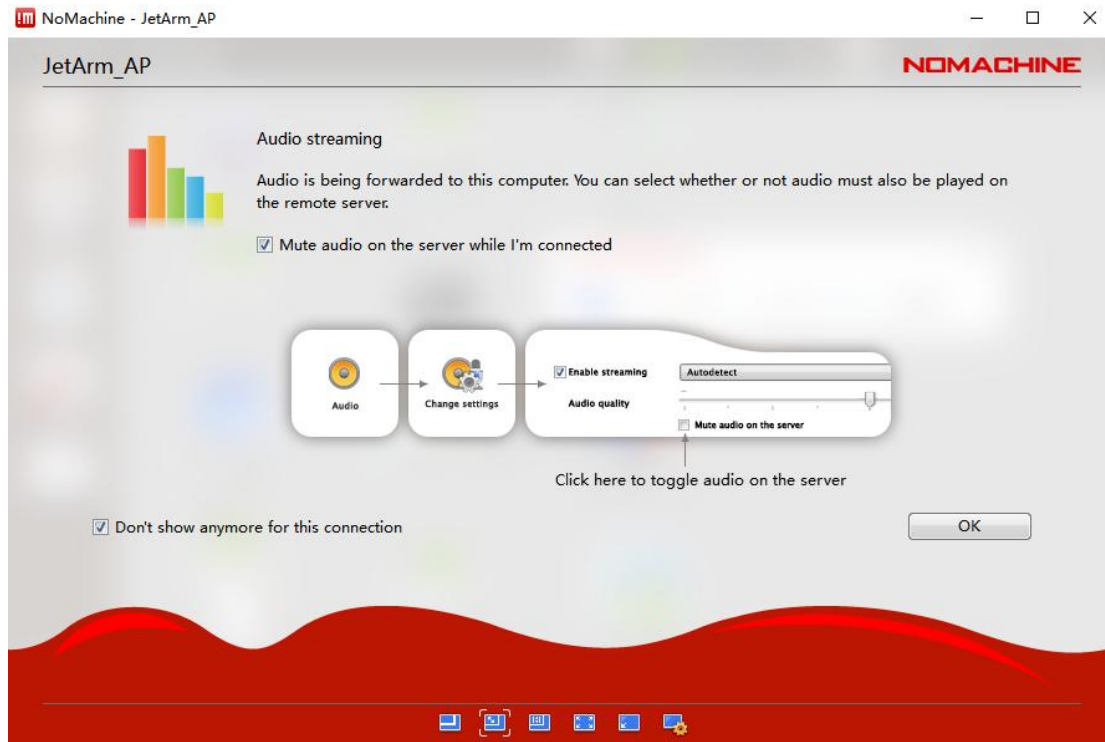

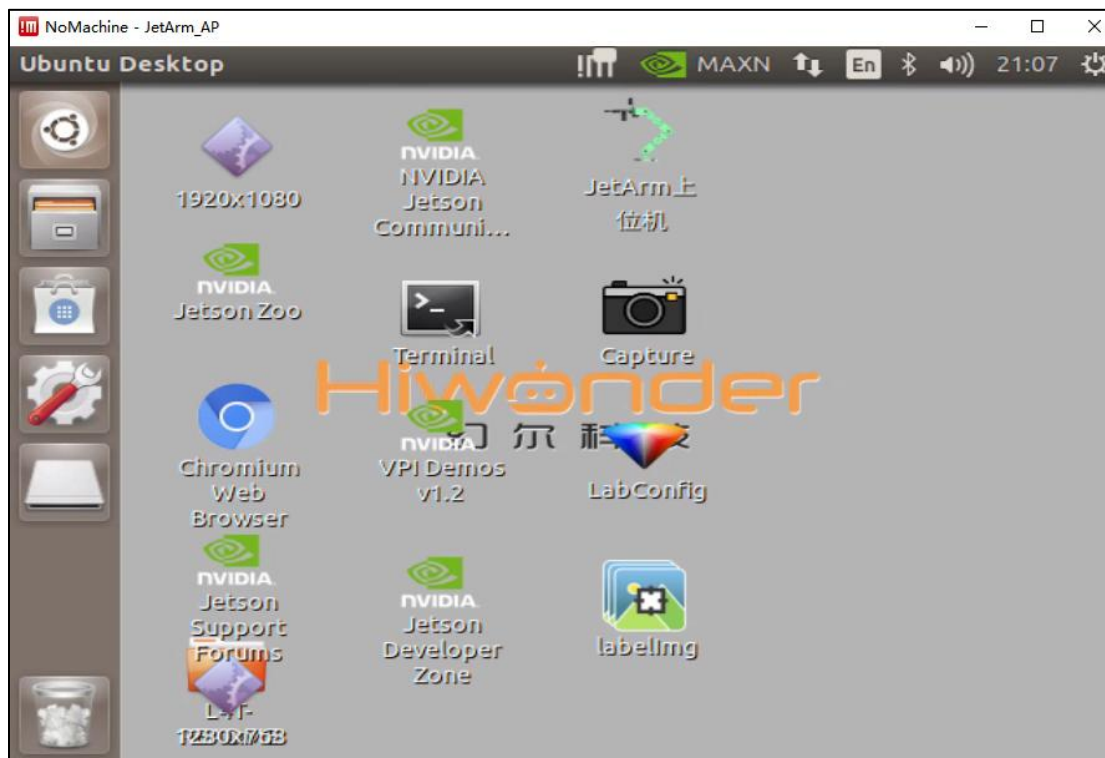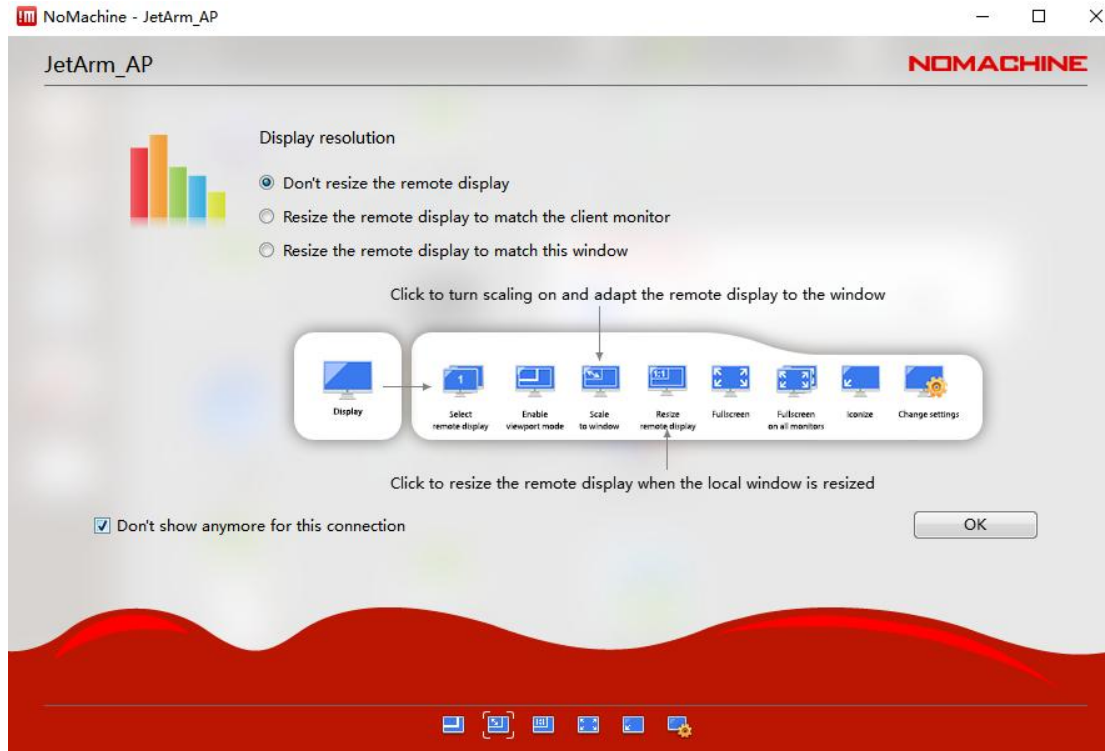

6) After starting up and connecting for the first time, the resolution may be abnormal. At this time, you need to click  on the upper left corner to modify the resolution manually.

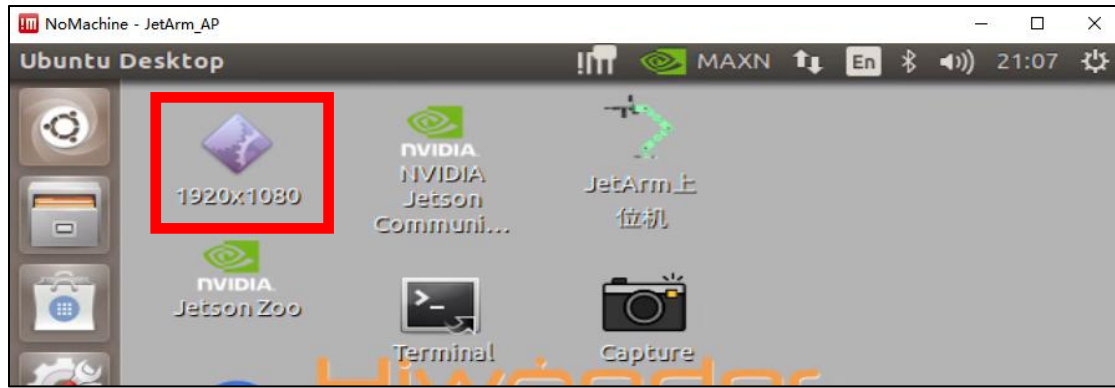

7) Then click  on the upper right corner to close the current page, then re-connect robot.

