


SD CARD

CS	GP5 (7)
SCK	GP2 (4)
MOSI	GP3 (5)
MISO	GP4 (6)
VCC	
GND	

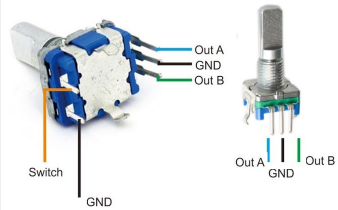

EC11 ENCODERS (Rotation)

Encoder 1	OUT A	GP6 (9)
Encoder 2	OUT A	GP7 (10)
Encoder 3	OUT A	GP8 (11)
Encoder 4	OUT A	GP9 (12)
Encoder 5	OUT A	GP10 (14)
Encoder 6	OUT A	GP11 (15)
Encoder 7	OUT A	GP12 (16)
Encoder 8	OUT A	GP13 (17)
Encoder 9	OUT A	GP14 (19)
Encoder 10	OUT A	GP15 (20)

EC11 ENCODERS (Push)


All Encoders	SWITCH	GP16 (21)
--------------	--------	-----------

AUDIO - I2S (Shared by 2x MAX98357A)

LRC	GP19 (25)
BCLK	GP20 (26)
DIN	GP21 (27)
GAIN	-
SD	
GND	
VIN	

SPEAKER SELECTION (SD pin)

GP17 (22)	SPEAKER ENABLE (MAX98357A #1)
GP18 (24)	HANDSET ENABLE (MAX98357A #2)

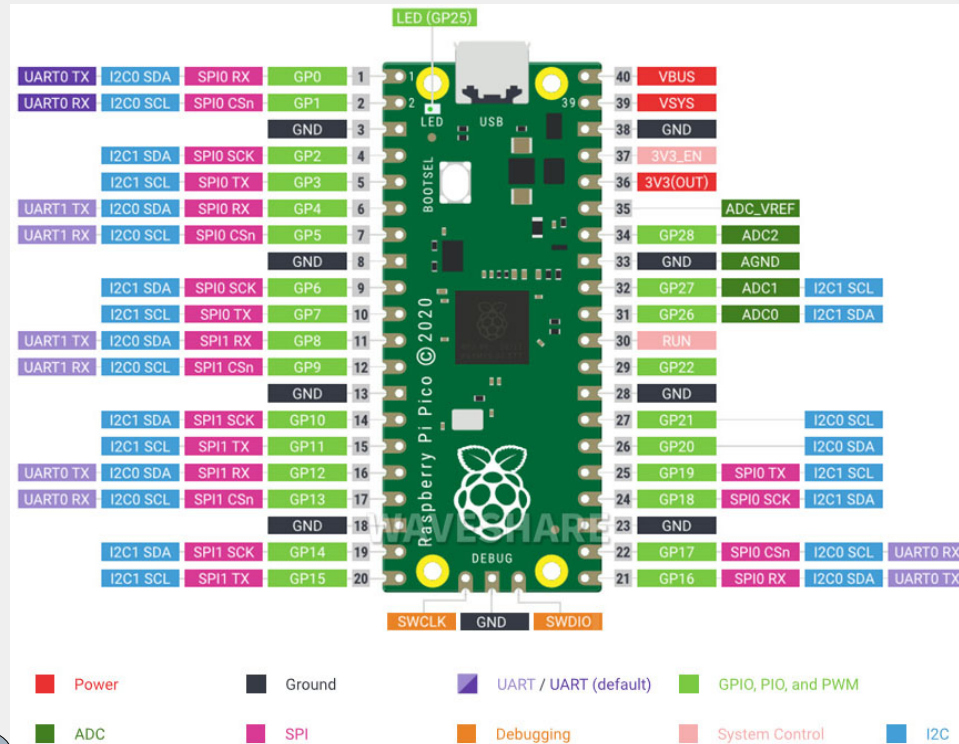

BUTTONS/KEYPAD

PLUS	GP22 (29)
MINUS	GP26 (31)
MULTIPLY	GP27 (32)
DIVIDE	GP28 (34)

HANDSET	GP0 (1)
---------	---------

LED	GP1 (2)
-----	---------