

Thank you for purchasing a FANUC Robot.

READ THIS FIRST

Use this guide to unpack, install, turn on, and jog your new FANUC robot.

The appropriate level of safety for your application and installation can best be determined by safety system professionals. A qualified electrician should apply power. FANUC recommends that each customer consult with such professionals in order to provide a safe application, and take the necessary FANUC training course to operate the robot safely. Refer to your FANUC documentation provided with your robot for safety procedures.

Required Tools

- ◆ Straight-head screwdriver ◆ Torque wrench
- ◆ Cross-head screwdriver ◆ Metric hex-head wrenches


Required Items

- ◆ Properly rated transport equipment as specified
- ◆ Customer-supplied properly rated power source as specified on the Controller Power Source Label
- ◆ Customer-supplied properly rated input power cable; conductor size of AWG10; terminal size is M5
- ◆ Multimeter ◆ Rigid platform to hold robot
- ◆ 4-M16 x 65mm bolts ◆ Loctite #243
- ◆ 4-M16 high strength washers


Optional Items

- ◆ Strain relief cable grip
- ◆ Robot locator pins


Three Phase



Controller

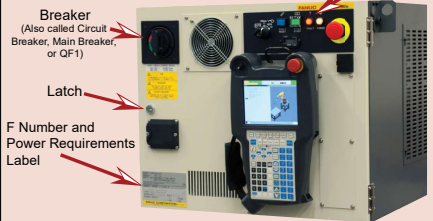

Robot (mechanical unit) with joints indicated

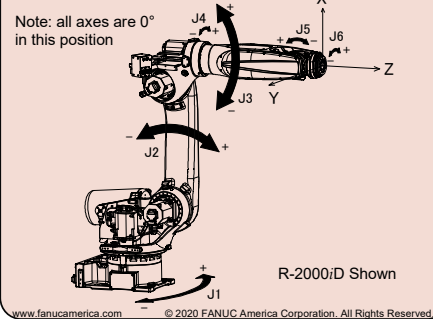

A. Unpack/Install your Robot




1. Cut the base of the plastic covering all the way around the robot and controller. Remove and discard the plastic. Open all of the boxes included in the shipment.
2. Remove the bolts holding the robot to the skid.


WARNING

Before moving heavy equipment, check and tighten any loose bolts. Do not pull eyebolts sideways. Otherwise, you will injure personnel or damage equipment.

3. Use properly rated fork lift or crane to move the robot to its new location. Forklift or crane option for all variants; R-2000iC/165F shown

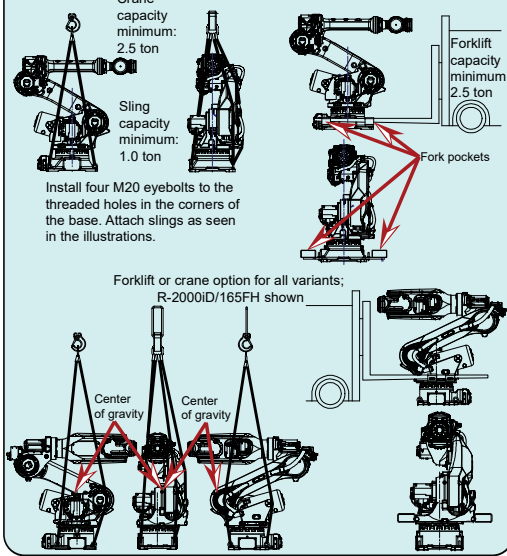


4. Fasten the robot base to the base plate with 8-M20 washers and 8-M20 X 65 bolts (tensile strength 1200N/mm² or more). Tighten them to a torque spec of 529Nm. If the highest accuracy is desired, locator pins can be used to ensure the robot and a future replacement are mounted in the same location. More information is available in the Mechanical Unit Operator's Manual.

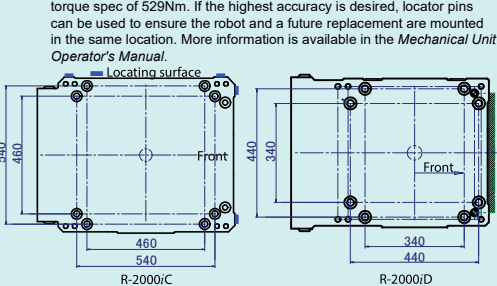

B. Unpack/Install your Controller


1. Use properly rated equipment to remove the controller from its box.

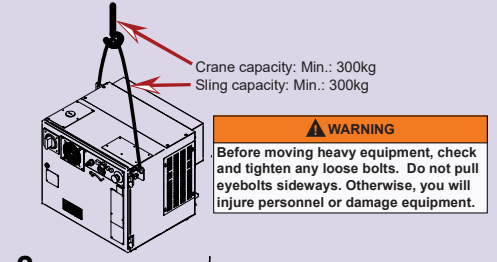


2. Place the controller in a safe location where the grounding wire, RM1, and RP1 cables can reach the robot, and the controller is safely reachable from outside of the robot work area.



3. Connect the ground wire from the controller to the corner of the robot base as shown below.

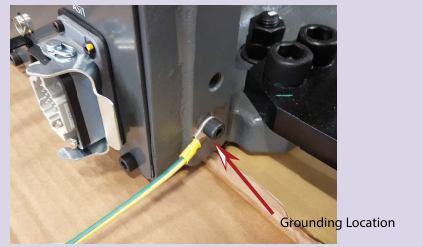

4. Connect RM1 and RP1 from the controller to the robot as shown below. These cables are also referred to as the Robot Connection Cable (RCC).

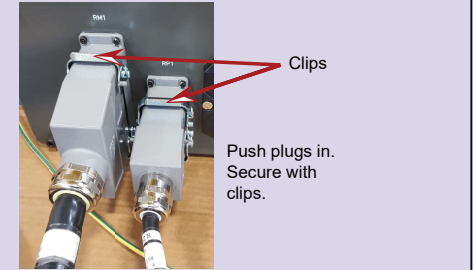

5. Connect the teach pendant to its cable as shown below.




6. Determine the power requirements for your controller from the label on the front. The label is at the bottom left corner of the controller door.

WARNING

Lethal voltage is present in the controller whenever it is connected to a power source. Be extremely careful to avoid electrical shock. Lock out and tag out the power source at the controller according to the policies of your plant.

7. Open the controller door by using a straight-head screwdriver to turn the latch clockwise, then turn the Breaker counter-clockwise past its off position.

8. Unscrew the round white plug from the side of the controller. Remove the four screws highlighted in the illustration below, and carefully remove the breaker access panel. It may stick as it has a sealant around the edges.

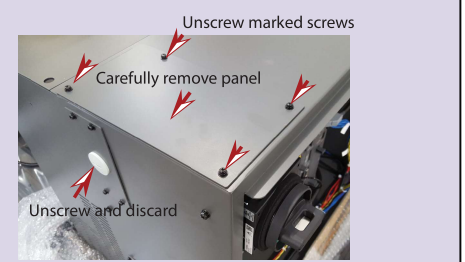

Go to Page 2

9. Route the user-supplied input power cable through the side hole. It is typical to purchase and install a strain relief cable grip (example shown below) to remove stress on the power cable connections and isolate the power cable from the controller cabinet.




Optional Customer-supplied cable grip



Customer-supplied input power cable

10. To connect power, remove the plastic cover from above the Breaker (see the diagram below.) To remove the cover, insert a straight-head screwdriver into the opening, and push the tab to the left allowing the cover to slide forward.

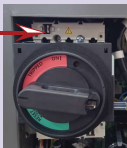

Insert a straight-head screwdriver and push the tab left. Use your other hand to pull the cover forward.

11. Verify that the input power cable is not energized. Connect it to the terminals as shown on the left below.



Replace the panel and tighten screws



Insert cover

12. Re-insert the breaker cover and click it into place. Place the breaker access panel back over top of the breaker and secure with four screws.

13. With the breaker still off, energize the input power cable and use a multimeter to verify the correct voltage is present via the holes in the breaker cover.

14. Before you close the controller door, cut loose the set of keys from inside the door, and store them in a known location outside of the controller for use later in this guide.



Key location inside controller

Controller installation is complete. You are now ready to go to C. Turn on your Controller.

C. Turn on your Controller

WARNING


Lethal voltage is present in the controller whenever it is connected to a power source. Be extremely careful to avoid electrical shock. Lock out and tag out the power source at the controller according to the policies of your plant.

1. Turn on the controller by rotating the Breaker clockwise to ON.

2. Locate the Mode switch on the Controller Operator Panel. Use the keys retrieved in Step B11 to switch to T1 mode. T1 mode limits the robot speed to 250mm/sec and requires robot control to be at the teach pendant only.

3. Pick up the teach pendant and look at the screen. Verify that the controller is in T1 Mode as seen in the figure below. If it is not, repeat the previous step and check again.

4. Press the COORD key on the teach pendant until JOINT is displayed

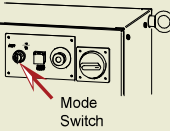

Mode Switch



T1 Mode



COORD

You have turned on your controller. You are now ready to go to D. Jog your Robot.

D. Jog your Robot

1. To jog the robot in JOINT mode Turn the teach pendant ON/OFF switch to the ON position, press MENU, move the cursor to ALARM, and press ENTER.

2. Turn the teach pendant ON/OFF switch to the ON position, press MENU, move the cursor to ALARM, and press ENTER.

3. To toggle between alarm history and active alarm display, press F3.

4. If this is a new robot with no gripper or End of Arm Tooling (EOAT), you must disable the hand broken check (error SRVO-006 Hand Broken). To do this,


a. Press MENU, select 0 (Next), and select (SYSTEM), and then select CONFIG.

b. Use the teach pendant arrow keys to move the cursor to the Hand Broken option, and press ENTER..


c. Use the teach pendant keys to disable the hand broken setting for each motion group. NOTE: It might already be disabled on your system.



MENU

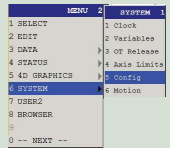

System/Config

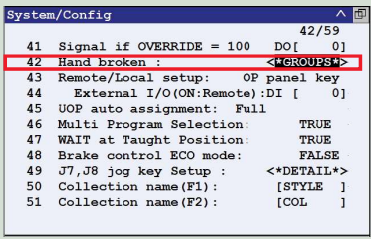


System/Config

5. If the error MCTL-013 ENBL input is off is displayed in the alarm history when you try to move the robot (it will not display as an active alarm) you must disable UI. To do this,

a. Press MENU, select 0 (Next), and select (SYSTEM), and then select CONFIG.

b. Use the teach pendant arrow keys to move the cursor to the Enable UI signals option.

c. Use the teach pendant keys to set the option to FALSE.

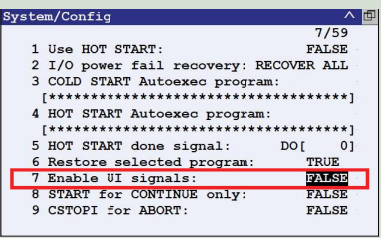

System/Config

6. Ensure the Emergency Stop buttons on the teach pendant and controller are popped out. If not, twist the button clockwise to reset.


7. While pressing and holding a DEADMAN switch on the back of the teach pendant in its middle position, press RESET on the teach pendant to clear alarms.

8. To move each joint axis of the robot (jog the robot in JOINT mode), press and hold SHIFT and press each jog key one at a time and watch the robot joint move. Refer to the Robot (mechanical unit) with joints indicated diagram on Page 1 of this guide.

9. Ensure you are able to jog each robot joint.

Turning on and Jogging the robot is complete. You are now ready to perform software installation, if necessary. Refer to the Controller-specific Software Installation manual.

Page 2

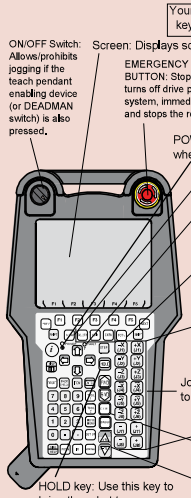

ON/OFF Switch: Allows/prohibits jogging if the teach pendant enabling device (or DEADMAN switch) is also pressed.

Screen: Displays software menus.

EMERGENCY STOP BUTTON: Stops a running program, turns off drive power to the robot servo system, immediately applies robot brakes and stops the robot.

POWER LED: Green when controller power is ON.

MENU Key: Displays the screen menu.

FAULT LED: Red when a robot fault has occurred.

FCN Key: Displays the supplementary menu.

Jog Keys: Use these keys to move the robot.

COORD (Coordinate) Key: Use this key to select the jog coordinate system.

SPEED Override Keys: Use these keys to adjust the speed of the robot when it moves.

-X (J1)

+X (J1)

-Y (J2)

+Y (J2)

-Z (J3)

+Z (J3)

-X (J4)

+X (J4)

-Y (J5)

+Y (J5)

-Z (J6)


+Z (J6)

- (J7)

+ (J7)

- (J8)

+ (J8)

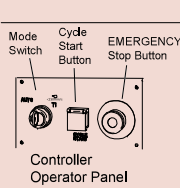


Mode Switch

Cycle Start Button

EMERGENCY Stop Button

Controller Operator Panel

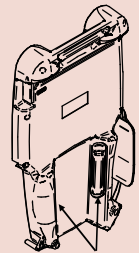

Teach Pendant Enabling Device (also called DEADMAN switch).

For more information

To access controller, robot, or application-specific manuals, scan the QR Code to the right or go to <https://www.fanucamerica.com/qredocs/>.



United States: 1-888-326-8287

Canada: 1-905-812-2300

Mexico: + 52 (449) 922-8000

South America: + 55 (11) 3619-0599

© 2020 FANUC America Corporation. All Rights Reserved.

www.fanucamerica.com

MARGUR2IC10161E REV C