



MvLogistics SDK (C#)

Developer Guide

Legal Information

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE DOCUMENT IS PROVIDED "AS IS" AND "WITH ALL FAULTS AND ERRORS". OUR COMPANY MAKES NO REPRESENTATIONS OR WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT. IN NO EVENT WILL OUR COMPANY BE LIABLE FOR ANY SPECIAL, CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES, INCLUDING, AMONG OTHERS, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR LOSS OF DATA, CORRUPTION OF SYSTEMS, OR LOSS OF DOCUMENTATION, WHETHER BASED ON BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE), OR OTHERWISE, IN CONNECTION WITH THE USE OF THE DOCUMENT, EVEN IF OUR COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES OR LOSS.

Contents

Chapter 1 Overview	1
1.1 Introduction	1
1.2 Development Environment	1
1.3 Update History	1
1.4 Notice	2
Chapter 2 Transmit Package Information	3
Chapter 3 API Reference	5
3.1 MV_LGS_CreateHandle_NET	5
3.2 MV_LGS_DestroyHandle_NET	5
3.3 MV_LGS_GetVersion_NET	5
3.4 MV_LGS_GetXmlCfgCamInfo_NET	6
3.5 MV_LGS_LoadDevCfg_NET	6
3.6 MV_LGS_RegisterExceptionCB_NET	7
3.7 MV_LGS_RegisterPackageCB_NET	7
3.8 MV_LGS_RegisterNoReadImageCB_NET	8
3.9 MV_LGS_SetTrigger_NET	9
3.10 MV_LGS_Start_NET	9
3.11 MV_LGS_Stop_NET	9
Appendix A. Appendixes	11
A.1 Data Structure	11
A.1.1 MVLGS_CODE_INFO	11
A.1.2 MVLGS_CODE_LIST	12
A.1.3 MVLGS_CODE_TYPE	12
A.1.4 MVLGS_EXCEPTION_INFO	13
A.1.5 MVLGS_IMAGE_INFO	14
A.1.6 MVLGS_IMAGE_OUTPUT_INFO	15

A.1.7 MVLGS_PACKAGE_INFO	15
A.1.8 MVLGS_POINT_I	17
A.1.9 MVLGS_VOLUME_INFO	17
A.1.10 MVLGS_XML_CFG_CAM_INFO	18
A.1.11 MVLGS_XML_CFG_CAM_INFO_LIST	19
A.2 Enumeration	20
A.2.1 MVLGS_CODE_TYPE	20
A.2.2 MVLGS_IMAGE_TYPE	20
A.2.3 MVLGS_DEVICE_TYPE	21
A.3 XML Message	21
A.3.1 XML_FusionCfg	21
A.3.2 XML_MvLogisticsSDK	22
A.4 Macro Definition	33
A.5 Error Code	34
A.6 Sample Code	37

Chapter 1 Overview

The MvLogisticsSDK is a software development kit used to encapsulate machine vision camera module, code reader module, panoramic camera module, line scan camera module, 3D camera module, weighing module, and fusion module, for meeting the requirements of different scenarios in logistics industry.

1.1 Introduction

This manual mainly introduces the MvLogisticsSDK based on C# language, which provides several APIs, MFC demo, and WinForm demo to configure the parameters of different module combinations for transmitting package information.

1.2 Development Environment

The development environment of MvLogisticsSDK is shown in the table below.

Item	Required
Operating System	Microsoft® Windows XP (32-bit)/Windows 7 (32/64-bit)/Windows 10 (32/64-bit)
Processor	Intel Pentium IV 3.0GHz CPU and above
Random Access Memory (RAM)	4GB and above

1.3 Update History

This page lists the summary of changes, including content adding, editing, and deleting, during SDK version updating process.

Summary of Changes in Version 1.1.0_03/2020

Version	Summary of Changes
Version 1.1.0_03/2020	1. Added API of getting NoRead images of code reader in callback function: <i>MV_LGS_RegisterNoReadImageCB_NET</i> .
	2. Added API of getting camera detailed information in XML configuration file: <i>MV_LGS_GetXmlCfgCamInfo_NET</i> .
	3. Extended the barcode information structure <i>MVLGS_CODE_INFO</i> :

Version	Summary of Changes
	added one member strSerialNumber (camera serial No.).
	4. Extended the package volume information structure MVLGS_VOLUME_INFO : added two members nObjEnterSysTime (volume measurement start timestamp) and nObjLeaveSysTime (volume measurement end timestamp).
	5. Extended the package information structure MVLGS_PACKAGE_INFO : added three members: blsFirstCodeOut (whether to set the barcode as first output), lITriggerStartTimeStamp (camera trigger start timestamp), and lITriggerEndTimeStamp (camera trigger end timestamp).

Summary of Changes in Version 1.0.0_03/2019

New document.

1.4 Notice

- To configure the parameters of machine vision camera, panoramic camera, and line scan camera, you should install and run the Machine Vision Software (MVS) first, then connect to the camera to check if it can acquire image, and configure the parameters. You can save the configured parameters to the camera, so each time when the camera is powered on, these saved parameters will take effect.
- To configure the parameters of code reader, you should install and run the ID Machine Vision Software (IDMVS) first, then connect to the code reader to check if it can acquire image with code information, and configure the parameters. You can save the configured parameters to the camera, so each time when the camera is powered on, these saved parameters will take effect.
- Before operating the 3D camera, you should use corresponding demo to calibrate and save the camera parameters.
- If the Machine Vision Software (MVS) version is V2.3.0 or below, you should add the installation directory to environment variables.
- To install the SoftDog driver, you should insert the iMVS1001 or iMVS-6000 SoftDog.
- For the operating system of Microsoft® Windows XP, you should install the Microsoft .NET Framework 3.5 Service Pack 1.

Chapter 2 Transmit Package Information

In the logistics industry, a fast acquisition and transmission process of package information, such as bar code information on waybill, is quite important to improve the logistics management efficiency. Here you can follow the API call process to combine and configure multiple camera or algorithm modules to get and transmit package information.

Before You Start

Make sure the Machine Vision Software (MVS) and ID Machine Vision Software (IDMVS) have installed.

Steps

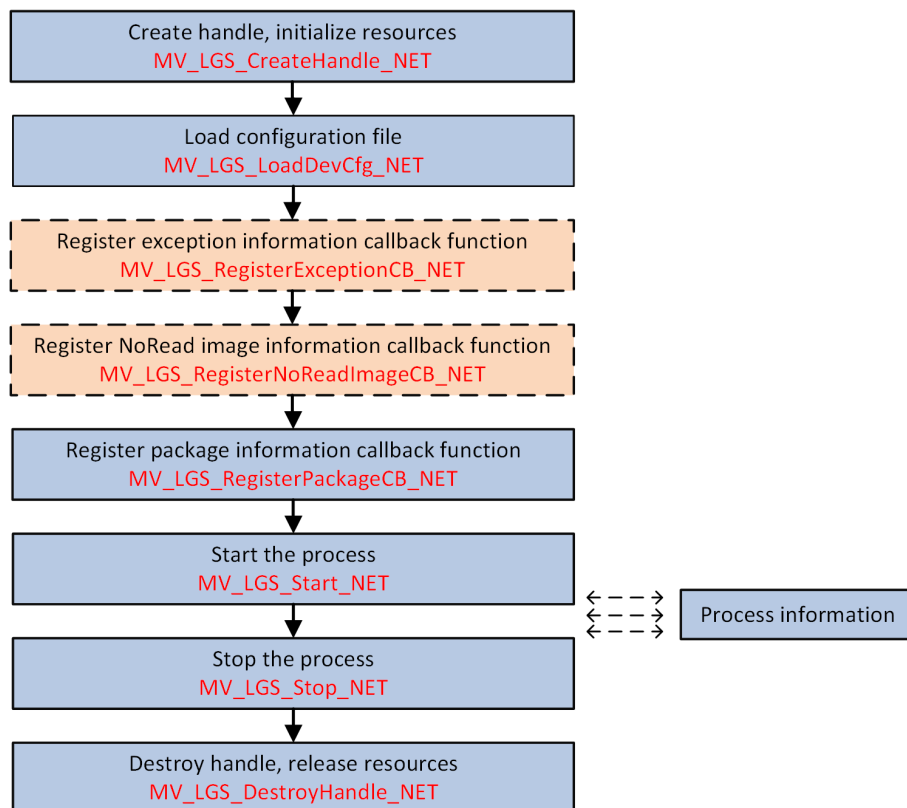


Figure 2-1 Programming Flow of Transmitting Package Information

1. Call ***MV_LGS_CreateHandle_NET*** to create the handle and initialize resources.
2. Call ***MV_LGS_LoadDevCfg_NET*** to load the device configuration file.



Note

The configuration files, including basic parameters and fusion module parameters, should be configured in the XML messages of ***XML_MvLogisticsSDK*** and ***XML_FusionCfg***, as the APIs used for setting and saving parameters are not provided.

3. **Optional:** Call ***MV_LGS_RegisterExceptionCB_NET*** to register the exception information callback function.

The exception information is returned in the structure ***MVLGS_EXCEPTION_INFO*** of callback function ***cbException***.

4. **Optional:** Call ***MV_LGS_RegisterNoReadImageCB_NET*** to register the NoRead image information callback function.

The NoRead image information is returned in the structure ***MVLGS_IMAGE_OUTPUT_INFO*** of callback function ***cbNoReadImageOutput***.

5. Call ***MV_LGS_RegisterPackageCB_NET*** to register the package information callback function.
6. Call ***MV_LGS_Start_NET*** to start the process.
7. Process the received package information.
8. Call ***MV_LGS_Stop_NET*** to stop the process.
9. Call ***MV_LGS_DestroyHandle_NET*** to destroy the handle and release resources.

Chapter 3 API Reference

3.1 MV_LGS_CreateHandle_NET

Create the handle, and initialize resources.

API Definition

```
public Int32 MV_LGS_CreateHandle_NET(  
);
```

Return Value

Return *MV_LGS_OK* on success, and return **Error Code** on failure.

3.2 MV_LGS_DestroyHandle_NET

Destroy the handle, and release resources.

API Definition

```
public Int32 MV_LGS_DestroyHandle_NET(  
);
```

Return Value

Return *MV_LGS_OK* on success, and return **Error Code** on failure.

See Also

MV_LGS_CreateHandle_NET

3.3 MV_LGS_GetVersion_NET

Get the SDK version No.

API Definition

```
public static Int32 MV_LGS_GetVersion_NET(  
);
```

Return Value

Return SDK version No. on success, for example, 0x01010000 indicates V1.1.0.0, and the format is as follows:

Main	Sub	Revision	Test
8bits	8bits	8bits	8bits

3.4 MV_LGS_GetXmlCfgCamInfo_NET

Get the detailed information of cameras in XML configuration file.

API Definition

```
public Int32 MV_LGS_GetXmlCfgCamInfo_NET(  
    ref MVLGS_XML_CFG_CAM_INFO_LIST    pstXmlCfgCamInfo,  
    String                               strCfgPath  
) ;
```

Parameters

pstXmlCfgCamInfo

[IN][OUT] List of camera information in configuration file, see structure ***MVLGS_XML_CFG_CAM_INFO_LIST*** for details.

strCfgPath

[IN] Configuration file path

Return Value

Return ***MV_LGS_OK*** on success, and return ***Error Code*** on failure.

3.5 MV_LGS_LoadDevCfg_NET

Load device configuration file.

API Definition

```
public Int32 MV_LGS_LoadDevCfg_NET(  
    String           strCfgPath  
) ;
```

Parameters

strCfgPath

[IN] Configuration file path

Return Value

Return ***MV_LGS_OK*** on success, and return ***Error Code*** on failure.

3.6 MV_LGS_RegisterExceptionCB_NET

Get exception information in callback function.

API Definition

```
public Int32 MV_LGS_RegisterExceptionCB_NET(  
    cbExceptiondelegate      cbException,  
    IntPtr                  pUser  
);
```

Parameters

cbException

[IN] Callback function for receiving exception information, see the definitions below:

```
public delegate void cbExceptiondelegate(  
    ref MVLGS_EXCEPTION_INFO      pstEcptInfo,  
    IntPtr                        pUser  
);
```

pstEcptInfo

[OUT] Exception information, see the structure **MVLGS_EXCEPTION_INFO** for details.

pUser

[OUT] Pointer to user

pUser

[IN] Pointer to user

Return Value

Return **MV_LGS_OK** on success, and return **Error Code** on failure.

3.7 MV_LGS_RegisterPackageCB_NET

Get package information in callback function.

API Definition

```
public Int32 MV_LGS_RegisterPackageCB_NET(  
    cbOutputdelegate          cbOutput,  
    IntPtr                   pUser  
);
```

Parameters

cbOutput

[IN] Callback function for receiving package information, see the definitions below:

```
public delegate void cbOutputdelegate(  
    IntPtr          pstOutput,  
    IntPtr          pUser  
)
```

pstOutput

Package information

pUser

Pointer to user

pUser

[IN] Pointer to user

Return Value

Return *MV_LGS_OK* on success, and return **Error Code** on failure.

3.8 MV_LGS_RegisterNoReadImageCB_NET

Get NoRead images of code reader in callback function.

API Definition

```
public Int32 MV_LGS_RegisterNoReadImageCB_NET(  
    cbNoReaddelegate      cbNoReadImageOutput,  
    IntPtr                pUser  
) ;
```

Parameters

cbNoReadImageOutput

[IN] Pointer to function of receiving NoRead images, see the definition below:

```
public delegate void cbNoReaddelegate(  
    ref MVLGS_IMAGE_OUTPUT_INFO    pstImageOutPutInfo,  
    IntPtr                          pUser  
)
```

pstImageOutPutInfo

[IN] NoRead image information, see the structure **MVLGS_IMAGE_OUTPUT_INFO** for details.

pUser

[IN] Pointer to user

pUser

[IN] Pointer to user

Return Value

Return *MV_LGS_OK* for success, and return **Error Code** for failure.

Remarks

This API only supports code reader.

3.9 MV_LGS_SetTrigger_NET

Set trigger status. You can call this API to stimulate the trigger under the condition of no actual physical trigger.

API Definition

```
public Int32 MV_LGS_SetTrigger_NET(  
    UInt32      nTriggerSignal  
);
```

Parameters

nTriggerSignal

[IN] Trigger status: 1-trigger started, 0-trigger ended

Return Value

Return *MV_LGS_OK* on success, and return **Error Code** on failure.

3.10 MV_LGS_Start_NET

Start the process.

API Definition

```
public Int32 MV_LGS_Start_NET(  
);
```

Return Value

Return *MV_LGS_OK* on success, and return **Error Code** on failure.

3.11 MV_LGS_Stop_NET

Stop the process.

API Definition

```
public Int32 MV_LGS_Stop_NET(  
);
```

Return Value

Return *MV_LGS_OK* on success, and return ***Error Code*** on failure.

Appendix A. Appendixes

A.1 Data Structure

A.1.1 MVLGS_CODE_INFO

Barcode information structure.

Structure Definition

```
public struct{
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = MVLGS_MAX_CODECHARATERLEN)]
    public string          strCode;
    public Int32           nLen;
    public MVLGS_CODE_TYPE enBarType;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 4)]
    public MVLGS_POINT_I   stCornerPt;
    public Int32           nAngle;
    public Int32           nFilterFlag;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string          strSerialNumber;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 23)]
    public UInt32[]        nReserved;
}MVLGS_CODE_INFO;
```

Members

strCode

Code character

nLen

Character length

enBarType

Barcode type, see the enumeration definition **MVLGS_CODE_TYPE** for details.

stCornerPt

Barcode position, see the structure **MVLGS_POINT_I** for details.

nAngle

Barcode angle, ranges from 0 to 3600

nFilterFlag

Filtered barcode mark: 0-normal barcode, 1-filtered barcode

strSerialNumber

Camera serial No.

nReserved

Reserved.

A.1.2 MVLGS_CODE_LIST

Barcode information list structure.

Structure Definition

```
public struct{
    public Int32                nCodeNum;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = MVLGS_MAX_CODENUM)]
    public MVLGS_CODE_INFO      stCodeInfo;
    public MVLGS_IMAGE_INFO     stImage;
    public IntPtr               pImageWaybill;
    public UInt32               nImageWaybillLen;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 8)]
    public UInt32[]             nReserved;
}MVLGS_CODE_LIST;
```

Members

nCodeNum

The number of barcodes.

stCodeInfo

Barcode information, see the structure ***MVLGS_CODE_INFO*** for details.

stImage

Original image information, see the structure ***MVLGS_IMAGE_INFO*** for details.

pImageWaybill

Image matting buffer, which is allocated by SDK

nImageWaybillLen

The image size

nReserved

Reserved.

A.1.3 MVLGS_CODE_TYPE

Barcode Enumeration Definition

Enumeration Type	Macro Definition Value	Description
MVLGS_CODE_NONE	0	No barcode
MVLGS_CODE_TDCR_DM	1	DM barcode
MVLGS_CODE_TDCR_QR	2	QR barcode
MVLGS_CODE_BCR_EAN8	8	EAN8 barcode
MVLGS_CODE_BCR_UPCE	9	UPCE barcode
MVLGS_CODE_BCR_UPCA	12	UPCA barcode
MVLGS_CODE_BCR_EAN13	13	EAN13 barcode
MVLGS_CODE_BCR_ISBN13	14	ISBN13 barcode
MVLGS_CODE_BCR_CODABAR	20	Codebar
MVLGS_CODE_BCR_ITF25	25	Interleaved 2 of 5 (ITF25)
MVLGS_CODE_BCR_CODE39	39	Code 39
MVLGS_CODE_BCR_CODE93	93	Code 93
MVLGS_CODE_BCR_CODE128	128	Code 128

A.1.4 MVLGS_EXCEPTION_INFO

Exception information structure.

Structure Definition

```
public struct{
    public UInt32      nExceptionID;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 256)]
    public string      strExceptionDes;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 16)]
    public UInt32      nReserved;
}MVLGS_EXCEPTION_INFO;
```

Members

nExceptionID

Exception ID

strExceptionDes

Exception description

nReserved

Reserved.

A.1.5 MVLGS_IMAGE_INFO

Output image information structure.

Structure Definition

```
public struct{
    public IntPtr          pImageBuf;
    public UInt32          nImageLen;
    public MVLGS_IMAGE_TYPE enImageType;
    public UInt16          nWidth;
    public UInt16          nHeight;
    public UInt32          nTriggerIndex;
    public UInt32          nFrameNum;
    public UInt32          nDevTimeStampHigh;
    public UInt32          nDevTimeStampLow;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 8)]
    public UInt32          nReserved;
}MVLGS_IMAGE_INFO;
```

Members

pImageBuf

Input image buffer

nImageLen

Original image size

enImageType

Image type, see the enumeration definition ***MVLGS_IMAGE_TYPE*** for details.

nWidth

Image width

nHeight

Image height

nTriggerIndex

Trigger index, it can be used as package No. in special case.

nFrameNum

Frame No.

nDevTimeStampHigh

Timestamp high 32 bits

nDevTimeStampLow

Timestamp low 32 bits

nReserved

Reserved.

A.1.6 MVLGS_IMAGE_OUTPUT_INFO

Camera's output image information structure

Structure Definition

```
public struct{
    public MVLGS_IMAGE_INFO          stImage;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string                    strSerialNumber;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 32)]
    public UInt32                    nReserved;
}MVLGS_IMAGE_OUTPUT_INFO;
```

Members

stImage

Image information, see the structure ***MVLGS_IMAGE_INFO*** for details.

strSerialNumber

Camera serial No.

nReserved

Reserved.

A.1.7 MVLGS_PACKAGE_INFO

Package information structure.

Structure Definition

```
public struct{
    public Boolean                  bCodeEnable;
    public UInt32                  nCodeListNum;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = MVLGS_MAX_CODELISTNUM)]
    public MVLGS_CODE_LIST         stCodeList;
    public Boolean                  bVolumeEnable;
    public MVLGS_VOLUME_INFO       stVolumeInfo;
    public Boolean                  bWeightEnable;
    public Single                  fWeight;
    public Boolean                  bPRMEnable;
    public MVLGS_IMAGE_INFO        stPRMImage;
}
```

```
public Boolean          bIsFirstCodeOut;
public Int64           llTriggerStartTimeStamp;
public Int64           llTriggerEndTimeStamp;
[MarshalAs(UnmanagedType.ByValArray, SizeConst = 27)]
public UInt32          nReserved;
}MVLGS_PACKAGE_INFO;
```

Members

bCodeEnable

Nonzero values indicate that the barcode information is included.

nCodeListNum

The number of barcodes lists.

stCodeList

The barcode information list, see the structure ***MVLGS_CODE_LIST*** for details

bVolumeEnable

Nonzero values indicate that the volume information is included.

stVolumeInfo

The volume information, see the structure ***MVLGS_VOLUME_INFO*** for details.

bWeightEnable

Nonzero values indicate that the weight information is included.

fWeight

Weight

bPRMEnable

Nonzero values indicate that the panoramic image is included.

stPRMImage

The panoramic image information, see the structure ***MVLGS_IMAGE_INFO*** for details.

bIsFirstCodeOut

Whether to set the barcode as first output: 1-first output, 0-second output

llTriggerStartTimeStamp

Camera trigger start timestamp (13 bits)

llTriggerEndTimeStamp

Camera trigger end timestamp (13 bits)

nReserved

Reserved.

A.1.8 MVLGS_POINT_I

Position information structure.

Structure Definition

```
public struct{
    public Int32      nX;
    public Int32      nY;
}MVLGS_POINT_I;
```

Members

nX

X-coordinate

nY

Y-coordinate

A.1.9 MVLGS_VOLUME_INFO

Package volume information structure

Structure Definition

```
public struct{
    public UInt32      nPkgID;
    public Single      fVolume;
    public Single      fLength;
    public Single      fWidth;
    public Single      fHeight;
    public int64_t      nObjEnterSysTime;
    public int64_t      nObjLeaveSysTime;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 60)]
    public UInt32      nReserved;
}MVLGS_VOLUME_INFO;
```

Members

nPkgID

Package ID

fVolume

Volume

fLength

Length

fWidth

Width

fHeight

Height

nObjEnterSysTime

Volume measurement start timestamp

nObjLeaveSysTime

Volume measurement end timestamp

nReserved

Reserved.

A.1.10 MVLGS_XML_CFG_CAM_INFO

Structure about camera information in XML configuration file

Structure Definition

```
public struct{
    MVLGS_DEVICE_TYPE          enXmlCamType;
    public UInt32               nMacAddrHigh;
    public UInt32               nMacAddrLow;
    public UInt32               nCurrentIp;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string               strManufacturerName;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string               strModelName;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string               strDeviceVersion;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 32)]
    public string               strSerialNumber;
    [MarshalAs(UnmanagedType.ByValTStr, SizeConst = 16)]
    public string               strUserDefinedName;
    public bool                 bDeviceOnline;
    public bool                 bMainCamera;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 16)]
    public UInt32               nReserved;
}MVLGS_XML_CFG_CAM_INFO;
```

Members

enXmlCamType

Camera type, see *MVLGS_DEVICE_TYPE* for details.

nMacAddrHigh

Mac high address

nMacAddrLow

Mac low address

nCurrentIp

Current IP address

strManufacturerName

Manufacturer

strModelName

Model

strDeviceVersion

Device version No.

strSerialNumber

Device serial No.

strUserDefinedName

Custom name

bDeviceOnline

Device status: "true"-online, "false"-offline

bMainCamera

Whether it is the main camera

nReserved

Reserved

A.1.11 MVLGS_XML_CFG_CAM_INFO_LIST

Structure about list of camera information in XML configuration file

Structure Definition

```
public struct{
    public UInt32                                     nXmlCfgCamNum;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 256)]
    public IntPtr[] MVLGS_XML_CFG_CAM_INFO_LIST      pstXmlCamInfo;
}MVLGS_XML_CFG_CAM_INFO_LIST;
```

Members

nXmlCfgCamNum

Number of cameras in configuration file

pstXmlCamInfo

Camera information, see the structure *MVLGS_XML_CFG_CAM_INFO* for details.

A.2 Enumeration

A.2.1 MVLGS_CODE_TYPE

Barcode Enumeration Definition

Enumeration Type	Macro Definition Value	Description
MVLGS_CODE_NONE	0	No barcode
MVLGS_CODE_TDCR_DM	1	DM barcode
MVLGS_CODE_TDCR_QR	2	QR barcode
MVLGS_CODE_BCR_EAN8	8	EAN8 barcode
MVLGS_CODE_BCR_UPCE	9	UPCE barcode
MVLGS_CODE_BCR_UPCA	12	UPCA barcode
MVLGS_CODE_BCR_EAN13	13	EAN13 barcode
MVLGS_CODE_BCR_ISBN13	14	ISBN13 barcode
MVLGS_CODE_BCR_CODABAR	20	Codebar
MVLGS_CODE_BCR_ITF25	25	Interleaved 2 of 5 (ITF25)
MVLGS_CODE_BCR_CODE39	39	Code 39
MVLGS_CODE_BCR_CODE93	93	Code 93
MVLGS_CODE_BCR_CODE128	128	Code 128

A.2.2 MVLGS_IMAGE_TYPE

Image Enumeration Definition

Enumeration Type	Macro Definition Value	Description
MVLGS_IMAGE_Undefined	0	Undefined type
MVLGS_IMAGE_MONO8	1	Mono8
MVLGS_IMAGE_JPEG	2	JPEG
MVLGS_IMAGE_BMP	3	BMP

Enumeration Type	Macro Definition Value	Description
MVLGS_IMAGE_RGB24	4	RGB24
MVLGS_IMAGE_BGR24	5	BGR

A.2.3 MVLGS_DEVICE_TYPE

Camera Enumeration Definition

Enumeration Type	Macro Definition Value	Description
MVLGS_IDCAM	0	Industrial camera
MVLGS_CODEREADER	1	Code reader
MVLGS_LINESCAN	2	Line scan camera
MVLGS_PANORAMIC	3	Panoramic camera
MVLGS_VOLUME	4	Volume camera
MVLGS_WEIGHT	5	Weighing module. Now it is not supported

A.3 XML Message

The XML message contains parameters to be configured in the manual are listed here for reference.

A.3.1 XML_FusionCfg

Fusion module parameters in XML format

```
<?xml version="1.0" encoding="UTF-8"?>
<CtrlConfig>
  <OutputMode help="1: by barcode, 2: end by package, 3: start by package"
hide="0" value="2" type="4" valuelist="1,2,3" index="1" name="output mode"/>
  <MinWaitTime help="output immediately when the number of read barcodes
reached the configured maximum number and the time reached" hide="0" value="0"
type="3" valuelist="1" name="the minimum waiting time"/>
  <MaxWaitTime help="output when the number of read barcodes does not reach the
configured maximum number, while the time reached" hide="0" value="500"
type="3" valuelist="1" name="the maximum waiting time"/>
  <MaxProcWaitTime help="The maximum waiting time for matching, ranges from 0
```

```
to 5000ms" hide="0" value="1500" type="3" valuelist="1" name="The maximum
waiting time for weight matching"/>
  <FilterNum help="the number of filtered barcodes, in the condition of
outputted barcodes are valid, it ranges from 0 to 100. The software save the
read barcodes in inside list, if a duplicated barcode is detected, it will be
filtered" hide="0" value="2" type="3" valuelist="1" name="the number of
filtered duplicated barcodes"/>
  <DelSameCodeEnable help="Enable deleting duplicated barcode" hide="0"
value="1" type="2" name="Enable deleting duplicated barcode"/>
  <CustomFilterRule>
    <RuleEnable help="enable custom rule" hide="0" value="0" type="2"
name="enable custom rule"/>
    <FilterName help="generate rule name" hide="0" value="default.rule"
type="3" valuelist="3" name="rule name"/>
  </CustomFilterRule>
  <MaxLabelCodeNum help="the maximum number of label barcodes" hide="0"
value="2" type="3" valuelist="1" name="the maximum of barcodes"/>
  <MatchVolumeEnable help="enable volume matching output" hide="0" value="0"
type="2" name="matched volume"/>
  <MatchWeightEnable help="enable weight matching output" hide="0" value="0"
type="2" name="matched weight"/>
</CtrlConfig>
```

A.3.2 XML_MvLogisticsSDK

Message for setting basic parameters of logistics application based on machine vision cameras, and it is in XML format.

```
<?xml version="1.0" encoding="UTF-8"?>
<MvLogisticsRoot>
  <String Name="MvLogisticsSDKVersion">
    <Description>MvLogistics SDK version number</Description>
    <Value>01010000</Value>
  </String>
  <!--Machine vision camera configuration-->
  <Category Name="IndustrialCamera">
    <Integer Name="IDCameraNum">
      <Description>The number of cameras, up to 256 cameras are allowed. Value
range: [0,256], the default value is 0</Description>
      <Value>0</Value>
    </Integer>
    <!--When the inputted number of cameras is larger than 0, the corresponding
camera information is required-->
    <String Name="IDCamera1">
      <Description>Camera 1 serial No.</Description>
      <Value>00800876677</Value>
    </String>
    <!--The number of cameras in one thread rolling-->
    <Integer Name="IDCameraNumInOneThread">
      <Description>The number of cameras in one thread rolling. Value range:
```

```
[1,256], the default value is 1.</Description>
    <Value>1</Value>
  </Integer>
</Category>

<!--Code reading camera configuration-->
<Category Name="CodeReadCamera">
  <Integer Name="CRCameraNum">
    <Description>The number of cameras, up to 256 cameras are allowed. Value
range: [0,256], the default value is 0</Description>
    <Value>1</Value>
  </Integer>
  <!--When the inputted number of cameras is larger than 0, the corresponding
camera information is required-->
  <String Name="CRCamera1">
    <Description>Camera 1 serial No.</Description>
    <Value>217872108</Value>
  </String>
  <!--The number of cameras in one thread rolling-->
  <Integer Name="CRCameraNumInOneThread">
    <Description>The number of cameras in one thread rolling, not support
now. Value range: [1,256], the default value is 1</Description>
    <Value>1</Value>
  </Integer>
</Category>

<!--Panoramic camera, up to one camera is supported, if no panoramic camera,
input 0-->
<Category Name="PanoramicCamera">
  <Integer Name="PRMCameraNum">
    <Description>The number of cameras, value range: [0,1], the default value
is 0</Description>
    <Value>0</Value>
  </Integer>
  <!--When the inputted number of cameras is larger than 0, the corresponding
camera information is required-->
  <String Name="PRMCamera1">
    <Description>Camera 1 serial No.</Description>
    <Value>670094111</Value>
  </String>
</Category>

<!--Line scan camera, up to one camera is supported, if no line scan camera,
input 0-->
<Category Name="LineScanCamera">
  <Integer Name="LSCameraNum">
    <Description>The number of cameras, value range: [0,1], the default value
is 0</Description>
    <Value>0</Value>
  </Integer>
  <!--When the inputted number of cameras is larger than 0, the corresponding
camera information is required-->
```

```
<String Name="LSCameral">
  <Description>Camera 1 serial No.</Description>
  <Value>670094111</Value>
</String>
</Category>

<!--Volume camera, up to one camera is supported, if no volume camera, input 0-->
<Category Name="VolumeCamera">
  <Integer Name="VOLCameraNum">
    <Description>The number of cameras, the default value is 0</Description>
    <Value>0</Value>
  </Integer>
  <!--When the inputted number of cameras is larger than 0, the corresponding camera information is required-->
  <String Name="VOLCameral">
    <Description>When the working mode is 13, it is the serial number; for other working mode, it is Mac address</Description>
    <Value>c42f90ff1992</Value>
  </String>
  <Integer Name="VOLAlgorithmType">
    <Description>The camera working mode, range: 5 and [7,13], the default value is 5</Description>
    <Value>5</Value>
  </Integer>
</Category>

<!--1D barcode parameters configuration (not for code reader)-->
<Category Name="BarcodeParam">
  <Integer Name="BCR_Enable">
    <Description>Enable barcode or not: 0-disable, 1-enable</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="BCR_Ability">
    <Description>Capability set, range: [1,63]; including Code39[1], Code128[2], CodeBar[4], EAN[8], ITF25[16], CODE93[32]</Description>
    <Value>3</Value>
  </Integer>
  <Integer Name="BCR_PositionXROI">
    <Description>Image ROI X-offset, range: [0,65535], default value: 0</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="BCR_PositionYROI">
    <Description>Image ROI Y-offset, range: [0,65535], default value: 0</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="BCR_WidthROI">
    <Description>Image ROI width, range: [100,65535], default value: 65535</Description>
    <Value>65535</Value>
  </Integer>
</Category>
```

```
</Integer>
<Integer Name="BCR_HeightROI">
  <Description>Image ROI height, range: [40,65535], default value: 65535</
Description>
  <Value>65535</Value>
</Integer>
<Integer Name="BCR_MaxWidth">
  <Description>The max. width, range: [0,65535], default value: 3840; this
node is invalid</Description>
  <Value>3840</Value>
</Integer>
<Integer Name="BCR_MaxHeight">
  <Description>The max. height, range: [0,65535], default value: 2748; this
node is invalid</Description>
  <Value>2748</Value>
</Integer>
<Integer Name="BCR_LocBarNum">
  <Description>The number of locating barcodes, value range: [1,200], the
default value is 4</Description>
  <Value>4</Value>
</Integer>
<Integer Name="BCR_LocWinSize">
  <Description>Locating module window size of barcode region, value range:
[4,65], the default value is 4</Description>
  <Value>4</Value>
</Integer>
<Integer Name="BCR_WaitingTime">
  <Description>The max. running time of process, value range: [0,5000], the
default value is 500, unit; ms, when exceeding the limit, it will be forced to
return</Description>
  <Value>500</Value>
</Integer>
<Integer Name="BCR_SegQuietW">
  <Description>Quiet zone width, value range: [0,200], the default value is
30</Description>
  <Value>30</Value>
</Integer>
<Integer Name="BCR_DfkSizeLowerLimit">
  <Description>The lower limit of filtering fake size (delete the barcode
with width lower than the limit), value range: [0,4000], the default value is
30</Description>
  <Value>30</Value>
</Integer>
<Integer Name="BCR_DfkSizeUpperLimit">
  <Description>The upper limit of filtering fake size (delete the barcode
with width larger than the limit), value range: [0,4000], the default value is
2400</Description>
  <Value>2400</Value>
</Integer>
<Integer Name="BCR_SaveImageLevel">
  <Description>The sensitivity of saving image, value range: [1,3], the
default value is 1</Description>
```

```
<Value>1</Value>
</Integer>
<Integer Name="BCR_AppMode">
  <Description>Running mode (Expert/Normal), value range: [1,21477483646],
the default value is 0</Description>
  <Value>0</Value>
</Integer>
<Integer Name="BCR_Distortion">
  <Description>Switch of perspective distortion in expert mode, value
range: [1,21477483646], the default value is 0</Description>
  <Value>0</Value>
</Integer>
<Integer Name="BCR_WhiteGap">
  <Description>Switch of printing quality in expert mode, value range:
[1,21477483646], the default value is 0</Description>
  <Value>0</Value>
</Integer>
<Integer Name="BCR_Spot">
  <Description>Switch of mirror reflection in expert mode, value range:
[1,21477483646], the default value is 0</Description>
  <Value>0</Value>
</Integer>
<Integer Name="BCR_SampleLevel">
  <Description>Sampling level, value range: [1,8], the default value is 1</
Description>
  <Value>1</Value>
</Integer>
<Integer Name="BCR_ImageMorph">
  <Description>Image morph, value range: [0,2], the default value is 0</
Description>
  <Value>0</Value>
</Integer>
<Integer Name="BCR_DelErrFlag">
  <Description>Deleting error flag, value range: [0,1], the default value
is 1</Description>
  <Value>1</Value>
</Integer>
</Category>

<!--2D barcode parameters configuration (not for code reader)-->
<Category Name="2DCodeParam">
  <Integer Name="TDCR_Enable">
    <Description>Enable or not: 0-disable, 1-enable</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="TDCR_Ability">
    <Description>Capability sets</Description>
    <Value>1</Value>
  </Integer>
  <Integer Name="TDCR_PositionXROI">
    <Description>Image ROI X-offset, range: [0,65535], default value: 0</
Description>
```

```
<Value>0</Value>
</Integer>
<Integer Name="TDCR_PositionYROI">
  <Description>Image ROI Y-offset, range: [0,65535], default value: 0</
Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_WidthROI">
  <Description>Image ROI width, range: [128,65535], default value: 65535</
Description>
  <Value>65535</Value>
</Integer>
<Integer Name="TDCR_HeightROI">
  <Description>Image ROI height, range: [128,65535], default value: 65535</
Description>
  <Value>65535</Value>
</Integer>
<Integer Name="TDCR_MaxWidth">
  <Description>The max. width, range: [0,65535], default value: 3840</
Description>
  <Value>3840</Value>
</Integer>
<Integer Name="TDCR_MaxHeight">
  <Description>The max. height, range: [0,65535], default value: 2748</
Description>
  <Value>2748</Value>
</Integer>
<Integer Name="TDCR_LocCodeNum">
  <Description>The number of RIO outputted by detection module, value
range: [1,1000], the default value is 5.</Description>
  <Value>5</Value>
</Integer>
<Integer Name="TDCR_MinBarSize">
  <Description>The min. width and height for blob filtering, value range:
[20,1000], the default value is 40.</Description>
  <Value>40</Value>
</Integer>
<Integer Name="TDCR_MaxBarSize">
  <Description>The max. width and height for blob filtering, value range:
[20,1000], the default value is 300.</Description>
  <Value>300</Value>
</Integer>
<Integer Name="TDCR_MirrorMode">
  <Description>Enable mirror mode or not: 0-disable, 1-enable, 2-compatible
mode</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_SampleLevel">
  <Description>Decimation ratio, value range: [1,8], the default value is
1</Description>
  <Value>1</Value>
</Integer>
```

```
<Integer Name="TDCR_CodeColor">
  <Description>Barcode color: 0-white background and black bar, 1-black
background and white bar, 2-compatible mode</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_DiscreteFlag">
  <Description>Barcode symbology type: 0-continuous, 1-discrete, 2-
compatible mode</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_DistortionFlag">
  <Description>QR distortion configuration: 0-disable, 1-enable</
Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_AdvanceParam">
  <Description>Advanced parameter 1, value range: [0,2147483640], the
default value is 0.</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_WaitingTime">
  <Description>Timeout (ms), when waiting time reaches the timeout, it will
exit. Value range: [0,5000], the default value is 1000.</Description>
  <Value>1000</Value>
</Integer>
<Integer Name="TDCR_DebugFlag">
  <Description>Enable bug information or not: 0-disable, 1-enable</
Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_AdvanceParam2">
  <Description>Advanced parameter 2, value range: [0,2147483640], the
default value is 0.</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_Rectangle">
  <Description>dm square or rectangle barcode: 0-square, 1-tectangle, 2-
compatible mode</Description>
  <Value>0</Value>
</Integer>
<Integer Name="TDCR_AppMode">
  <Description>Algorithm running mode: 0-normal mode, 1-expert mode, 2-
speed mode</Description>
  <Value>0</Value>
</Integer>
</Category>

<!--Matting parameters configuration-->
<Category Name="WayBillParam">
  <Integer Name="WAYBILL_Enable">
    <Description>Enable or not: 0-disable, 1-enable</Description>
    <Value>1</Value>
```

```
</Integer>
<Integer Name="WAYBILL_Ability">
  <Description>Capability sets</Description>
  <Value>7</Value>
</Integer>
<Integer Name="WAYBILL_Max_Width">
  <Description>The max. width supported by algorithm, range: [0,65535],
default value: 3840</Description>
  <Value>3840</Value>
</Integer>
<Integer Name="WAYBILL_Max_Height">
  <Description>The max. height supported by algorithm, range: [0,65535],
default value: 2748</Description>
  <Value>2748</Value>
</Integer>
<Integer Name="WAYBILL_OutputImageType">
  <Description>Outputted image format of waybill matting: 1-Mono8, 2-JPEG</
Description>
  <Value>2</Value>
</Integer>
<Integer Name="WAYBILL_JpgQuality">
  <Description>Encoding quality, range: [1,100], default value: 80</
Description>
  <Value>80</Value>
</Integer>
<Integer Name="WAYBILL_MinWidth">
  <Description>The min. width of waybill. Width is the longer side, and
height is the shorter side. Value range: [15,2592], the default value is 100</
Description>
  <Value>100</Value>
</Integer>
<Integer Name="WAYBILL_MinHeight">
  <Description>The min. height of waybill. Width is the longer side, and
height is the shorter side. Value range: [10,2048], the default value is 100</
Description>
  <Value>100</Value>
</Integer>
<Integer Name="WAYBILL_MaxWidth">
  <Description>The max. width of waybill, value range: [15,3072], the
default value is 3072</Description>
  <Value>3072</Value>
</Integer>
<Integer Name="WAYBILL_MaxHeight">
  <Description>The max. height of waybill, value range: [15,2048], the
default value is 2048</Description>
  <Value>2048</Value>
</Integer>
<Integer Name="WAYBILL_MorphTimes">
  <Description>Morph times, value range: [0,10], the default value is 0.</
Description>
  <Value>0</Value>
</Integer>
```

```
<Integer Name="WAYBILL_GrayLow">
  <Description>The min. gray value of barcode and characters on waybill,
value range: [0,255], the default value is 0.</Description>
  <Value>0</Value>
</Integer>
<Integer Name="WAYBILL_GrayMid">
  <Description>The medium gray value, value range: [0,255], the default
value is 70.</Description>
  <Value>70</Value>
</Integer>
<Integer Name="WAYBILL_GrayHigh">
  <Description>The max. gray value of waybill background, value range:
[0,255], the default value is 130.</Description>
  <Value>130</Value>
</Integer>
<Integer Name="WAYBILL_BinaryAdaptive">
  <Description>Self-adaptive binaryzation, value range: [0,1], the default
value is 1.</Description>
  <Value>1</Value>
</Integer>
<Integer Name="WAYBILL_MaxBillBarHeightRatio">
  <Description>The max. height ratio of waybill and barcode, value range:
[1,100], the default value is 20.</Description>
  <Value>20</Value>
</Integer>
<Integer Name="WAYBILL_MaxBillBarWidthRatio">
  <Description>The maximum width ratio of bill bar, value range: [1,100],
the default value is 5.</Description>
  <Value>5</Value>
</Integer>
<Integer Name="WAYBILL_MinBillBarHeightRatio">
  <Description>The min. height ratio of waybill and barcode, value range:
[1,100], the default value is 5.</Description>
  <Value>5</Value>
</Integer>
<Integer Name="WAYBILL_MinBillBarWidthRatio">
  <Description>The min. width ratio of waybill and barcode, value range:
[1,100], the default value is 2.</Description>
  <Value>2</Value>
</Integer>
<Integer Name="WAYBILL_EnhanceMethod">
  <Description>Enhancement method, value range: [1,4], the default value is
2.</Description>
  <Value>2</Value>
</Integer>
<Integer Name="WAYBILL_ClipRatioLow">
  <Description>Enhancement low threshold ratio, value range: [0,100], the
default value is 1.</Description>
  <Value>1</Value>
</Integer>
<Integer Name="WAYBILL_ClipRatioHigh">
  <Description>Enhancement high threshold ratio, value range: [0,100], the
```

```
default value is 99.</Description>
    <Value>99</Value>
  </Integer>
  <Integer Name="WAYBILL_ContrastFactor">
    <Description>Contrast coefficient, value range: [1,10000], the default
value is 100.</Description>
    <Value>100</Value>
  </Integer>
  <Integer Name="WAYBILL_SharpenFactor">
    <Description>Sharpness factor, value range: [0,10000], the default value
is 0.</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="WAYBILL_KernelSize">
    <Description>Size of sharpening and filter kernel, value range: [3,15],
the default value is 3.</Description>
    <Value>3</Value>
  </Integer>
  <Integer Name="WAYBILL_CodeBoundaryRow">
    <Description>Code boundary row, value range: [0,2000], the default value
is 0.</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="WAYBILL_CodeBoundaryCol">
    <Description>Code boundary column, value range: [0,2000], the default
value is 0.</Description>
    <Value>0</Value>
  </Integer>
</Category>

<!--Weighting parameters configuration-->
<Category Name="WeightParam">
  <Integer Name="WEIGHT_Enable">
    <Description>Enable weighing or not: 0-disable, 1-enable</Description>
    <Value>0</Value>
  </Integer>
  <Integer Name="WEIGHT_DataSource">
    <Description>Set weighting data source: 1-physical serial port, 2-serial
drier</Description>
    <Value>1</Value>
  </Integer>
  <!--COM port configuration-->
  <Integer Name="WEIGHT_ComIndex">
    <Description>Serial port No., ranges from 1 to 65535</Description>
    <Value>1</Value>
  </Integer>
  <Integer Name="WEIGHT_Baudrate">
    <Description>Baudrate, ranges from 0 to 0xffffffff</Description>
    <Value>9600</Value>
  </Integer>
  <Integer Name="WEIGHT_DataBits">
    <Description>Data bits, from 5 to 8</Description>
```

```
<Value>8</Value>
</Integer>
<Integer Name="WEIGHT_Parity">
  <Description>No-0, Odd-1, Even-2, Mark-3, Space-4</Description>
  <Value>0</Value>
</Integer>
<Integer Name="WEIGHT_StopBits">
  <Description>Stop bits, values "0" or "1"</Description>
  <Value>0</Value>
</Integer>
<Integer Name="WEIGHT_Event">
  <Description>Whether enables weighting by event: 0-disable, 1-enable</
Description>
  <Value>0</Value>
</Integer>
<Integer Name="WEIGHT_DtrControl">
  <Description>Enable DTR control or not: 0-disable, 1-enable</Description>
  <Value>0</Value>
</Integer>
<Integer Name="WEIGHT_RtsControl">
  <Description>Enable RTS control or not: 0-disable, 1-enable</Description>
  <Value>0</Value>
</Integer>

<!--Weight parsing precondition-->
<Integer Name="WEIGHT_StableCount">
  <Description>Counting range when weighing, ranges form 0 to 1000, the
default value is 5.</Description>
  <Value>5</Value>
</Integer>
<Integer Name="WEIGHT_StablePrecision">
  <Description>Comparison error range, unit: g, ranges from 0 to 1000000</
Description>
  <Value>20</Value>
</Integer>
<Integer Name="WEIGHT_StableFormat">
  <Description>Enable configuring format according to precision: 0-disable,
1-enable</Description>
  <Value>0</Value>
</Integer>
<!--The extracted structure, which describes the process of parsing weight
value via character string-->
<Integer Name="WEIGHT_WeighType">
  <Description>Weighing type: 0-read only, 1-echo</Description>
  <Value>0</Value>
</Integer>
<String Name="WEIGHT_InString">
  <Description>Inputted string in echo mode</Description>
  <Value>a</Value>
</String>
<Integer Name="WEIGHT_SampleRate">
  <Description>Sampling rate in echo mode, the weight reading interval time
```

```
= 1000/sampling rate</Description>
  <Value>20</Value>
</Integer>
<Integer Name="WEIGHT_Strlen">
  <Description>Weight data length, it values 8 by default and ranges from 1
to 32</Description>
  <Value>8</Value>
</Integer>
<String Name="WEIGHT_IDentifier">
  <Description>Weight data initial identifier</Description>
  <Value>=</Value>
</String>
<Integer Name="WEIGHT_IDentifierPos">
  <Description>The starting position of identifier in the string, ranges
from 0 to 32</Description>
  <Value>0</Value>
</Integer>
<Integer Name="WEIGHT_IntegerBegin">
  <Description>The starting position of weight integer part in the string,
ranges from 0 to 32</Description>
  <Value>4</Value>
</Integer>
<Integer Name="WEIGHT_IntegerEnd">
  <Description>The end position of weight integer part in the string,
ranges from 0 to 32</Description>
  <Value>7</Value>
</Integer>
<Integer Name="WEIGHT_DecimalBegin">
  <Description>The starting position of weight decimal part in the string,
ranges from 0 to 32</Description>
  <Value>1</Value>
</Integer>
<Integer Name="WEIGHT_DecimalEnd">
  <Description>The end position of weight decimal part in the string,
ranges from 0 to 32</Description>
  <Value>2</Value>
</Integer>
<Integer Name="WEIGHT_Reversal">
  <Description>Whether the weighting result needs reversal: 0-no, 1-yes</
Description>
  <Value>1</Value>
</Integer>
</Category>

</MvLogisticsRoot>
```

A.4 Macro Definition

Maximum Value

Macro Definition	Description
MVLGS_MAX_CODECHARATERLEN	The maximum length of code characters, the default value is 4096.
MVLGS_MAX_CODENUM	The maximum number of codes, the default value is 256.
MVLGS_MAX_CODELISTNUM	The maximum number of code lists, the default value is 24.

Exception Message

Macro Definition	Value	Description
MV_LGS_EXCEPTION_DEV_DISCONNECT	0x00008001	The device is disconnected.
MV_LGS_EXCEPTION_SOFTDOG_DISCONNECT	0x00008002	The softdog is disconnected.
MV_LGS_BEGIN_TRIGGER	1	Start triggering
MV_LGS_STOP_TRIGGER	0	Stop triggering

A.5 Error Code

The errors may occurred during the MvLogisticsSDK integration are listed here for reference. You can search for the detailed error descriptions according to returned error codes or error names.

Error Code

Error Code	Error Name	Description
0x00000000	MV_LGS_OK	Succeeded
0x80110000	MV_LGS_E_HANDLE	Incorrect or invalid handle
0x80110001	MV_LGS_E_SUPPORT	The function is not supported
0x80110002	MV_LGS_E_BUFOVER	Buffer is full
0x80110003	MV_LGS_E_CALLORDER	Incorrect calling sequence
0x80110004	MV_LGS_E_PARAMETER	Incorrect parameter
0x80110005	MV_LGS_E_RESOURCE	Resource request failed
0x80110006	MV_LGS_E_NODATA	No data

Error Code	Error Name	Description
0x80110007	MV_LGS_E_PRECONDITION	Incorrect precondition, or running environment has changed
0x80110008	MV_LGS_E_ENCRYPT	Certificate error. No Dongle recognized, or the Dongle has expired
0x8011000a	MV_LGS_E_RULE	Filter rule error
0x80110012	MV_LGS_E_JPGENC	PG encoding error
0x80110013	MV_LGS_E_IMAGE	Image data loss, or invalid image format
0x80110014	MV_LGS_E_CONFIG	Incorrect configuration file
0x801100FF	MV_LGS_E_UNKNOW	Unknown error
0x80112100	MV_LGS_E_CAMERA	Camera error
0x80112200	MV_LGS_E_BCR	One dimensional code error
0x80112300	MV_LGS_E_TDCR	Bar code error
0x80112400	MV_LGS_E_WAYBILL	Image matting error
0x80112500	MV_LGS_E_SCRIPT	Script rule error
0x80110100	MV_LGS_E_GC_GENERIC	Generic error
0x80110101	MV_LGS_E_GC_ARGUMENT	Invalid parameter
0x80110102	MV_LGS_E_GC_RANGE	The value is out of range
0x80110103	MV_LGS_E_GC_PROPERTY	Parameter attribute mismatched
0x80110104	MV_LGS_E_GC_RUNTIME	Running environment error
0x80110105	MV_LGS_E_GC_LOGICAL	Incorrect logic
0x80110106	MV_LGS_E_GC_ACCESS	Incorrect condition of accessing node
0x80110107	MV_LGS_E_GC_TIMEOUT	Timed out
0x80110108	MV_LGS_E_GC_DYNAMICCAST	Cast exception
0x801101FF	MV_LGS_E_GC_UNKNOW	GenICam unknown error
0x80110200	MV_LGS_E_NOT_IMPLEMENTED	Command is not supported
0x80110201	MV_LGS_E_INVALID_ADDRESS	Target address does not exist

Error Code	Error Name	Description
0x80110202	MV_LGS_E_WRITE_PROTECT	Target address is not writable
0x80110203	MV_LGS_E_ACCESS_DENIED	No permission for access
0x80110204	MV_LGS_E_BUSY	Device is busy, or network is disconnected
0x80110205	MV_LGS_E_PACKET	Network packet error
0x80110206	MV_LGS_E_NETER	Network error
0x80110221	MV_LGS_E_IP_CONFLICT	IP address conflicted
0x80110300	MV_LGS_E_USB_READ	USB read error
0x80110301	MV_LGS_E_USB_WRITE	USB write error
0x80110302	MV_LGS_E_USB_DEVICE	Device exception
0x80110303	MV_LGS_E_USB_GENICAM	GenICam error
0x80110304	MV_LGS_E_USB_BANDWIDTH	Insufficient bandwidth
0x80110305	MV_LGS_E_USB_DRIVER	Driver is mismatched, or driver is not installed
0x801103FF	MV_LGS_E_USB_UNKNOW	USB unknown error
0x80112600	MV_LGS_E_FUSION_PARAM	Incorrect parameter(s) of fusion module
0x80112601	MV_LGS_E_FUSION_MALLOC	Memory allocation of fusion module failed
0x80112602	MV_LGS_E_FUSION_CALLORDER	Fusion module calling order error
0x80112603	MV_LGS_E_FUSION_CFGFILE	Configuration file of fusion module error
0x80112604	MV_LGS_E_FUSION_UNKNOWN	Unknown error of fusion module
0x80112605	MV_LGS_E_FUSION_LACKBUF	Insufficient buffer of fusion module
0x80112606	MV_LGS_E_FUSION_SUPPORT	Fusion module is not supported
0x80112700	MV_LGS_E_VOLMEASURE_PARAM	Incorrect parameter(s) of volume measurement module
0x80112701	MV_LGS_E_VOLMEASURE_MALLOC	Memory allocation of volume measurement module failed

Error Code	Error Name	Description
0x80112702	MV_LGS_E_VOLMEASURE_CALLORDER	Calling order of volume measurement module error
0x80112703	MV_LGS_E_VOLMEASURE_NODATA	No data in volume measurement module
0x80112704	MV_LGS_E_VOLMEASURE_CFGFILE	Configuration file of volume measurement module error
0x80112705	MV_LGS_E_VOLMEASURE_NOPKG	No packet detected
0x80112706	MV_LGS_E_VOLMEASURE_UNKNOWN	Unknown error in volume measurement module
0x80112707	MV_LGS_E_VOLMEASURE_LACKBUF	Insufficient buffer of volume measurement module
0x80112708	MV_LGS_E_VOLMEASURE_SUPPORT	Volume measurement module is not supported
0x80112800	MV_LGS_E_WGHT_OPEN	Failed to start device
0x80112801	MV_LGS_E_WGHT_ENC	Weighing module encryption error
0x80112802	MV_LGS_E_WGHT_RESOURCE	Weighing module resource initialization failed
0x80112803	MV_LGS_E_WGHT_CALLORDER	Calling order of weighing module error
0x80112804	MV_LGS_E_WGHT_NULL	The pointer type parameter of weighing module is empty
0x80112805	MV_LGS_E_WGHT_RANGE	Incorrect value type range of weighing module
0x80112806	MV_LGS_E_WGHT_ENABLE	Incorrect capability set of weighing module
0x80112807	MV_LGS_E_WGHT_UNKNOW	Unknown error of weighing module

A.6 Sample Code

The following sample code is for reference only.

```
using System;
using System.Collections.Generic;
using System.Linq;
using System.Text;
```

```
using MvLogisticsSDKNet;
using System.Runtime.InteropServices;
using System.Threading;

namespace MvLogisticsSDKDemo_CS
{
    class Program
    {
        static MvLogistics MyLogistics = new MvLogistics();
        static MvLogistics.cbOutputdelegate ResultCallback;
        static MvLogistics.cbExceptiondelegate ExceptionCallback;
        static MvLogistics.MVLGS_PACKAGE_INFO pstPkgInfo = new
MvLogistics.MVLGS_PACKAGE_INFO();

        static public void ResultCallbackFunc(IntPtr pstOutput, IntPtr pUser)
        {
            pstPkgInfo =
(MvLogistics.MVLGS_PACKAGE_INFO)Marshal.PtrToStructure(pstOutput,
typeof(MvLogistics.MVLGS_PACKAGE_INFO));

Console.WriteLine("*****
*****");

            for (int i = 0; i < pstPkgInfo.nCodeListNum; i++)
            {
                Console.WriteLine("Package:" +
pstPkgInfo.stCodeList[i].stImage.nTriggerIndex.ToString());

                if (true == pstPkgInfo.bCodeEnable)
                {
                    //Display barcode information
                    if (0 == pstPkgInfo.stCodeList[i].nCodeNum)
                    {
                        Console.WriteLine("NoRead");
                    }
                    else
                    {
                        for (int j = 0; j < pstPkgInfo.stCodeList[i].nCodeNum; j
+++)
                        {
Console.WriteLine("CodeInfo:"+pstPkgInfo.stCodeList[i].stCodeInfo[j].strCode);
                        }
                    }
                }

                //Display volume information
                if (true == pstPkgInfo.bVolumeEnable)
                {
Console.WriteLine("Length:"+pstPkgInfo.stVolumeInfo.fLength.ToString());
```

```
Console.WriteLine("Width:"+pstPkgInfo.stVolumeInfo.fWidth.ToString());

Console.WriteLine("Height:"+pstPkgInfo.stVolumeInfo.fHeight.ToString());

Console.WriteLine("Volume:"+pstPkgInfo.stVolumeInfo.fVolume.ToString());
    }

    //Display weight information
    if (true == pstPkgInfo.bWeightEnable)
    {
        Console.WriteLine("Weight:"+pstPkgInfo.fWeight.ToString()
+"KG");
    }
}

Console.WriteLine("*****");
}

static public void ExceptionCallbackFunc(ref
MvLogistics.MVLGS_EXCEPTION_INFO pstEcptInfo, IntPtr pUser)
{
    if (MvLogistics.MV_LGS_OK != pstEcptInfo.nExceptionID)
    {
        Console.WriteLine("Exception ID:" + pstEcptInfo.nExceptionID);
        Console.WriteLine("Exception Device Type:" +
pstEcptInfo.enCamType);
        Console.WriteLine("Exception Device SerialNum:" +
pstEcptInfo.strCamSerialNum);
        Console.WriteLine("Exception Description:" +
pstEcptInfo.strExceptionDes);
    }
    else
    {
        Console.WriteLine("Exception Info is Null!");
    }
}

static void Main(string[] args)
{
    int nRet = MvLogistics.MV_LGS_OK;

    //Get MvLogistics SDK version No.
    int nVersion = MvLogistics.MV_LGS_GetVersion_NET();
    string strVersion = String.Format("V{0}.{1}.{2}.{3}",
        (nVersion & 0xff000000) >> 24,
        (nVersion & 0x00ff0000) >> 16,
        (nVersion & 0x0000ff00) >> 8,
        (nVersion & 0x000000ff));
    Console.WriteLine(strVersion);
}
```

```
//Select the device and create a handle
nRet = MyLogistics.MV_LGS_CreateHandle_NET();
if (MvLogistics.MV_LGS_OK != nRet)
{
    string csMessage;
    csMessage = "MV_LGS_CreateHandle_NET failed: 0x" +
String.Format("{0:X}", nRet);
    Console.WriteLine(csMessage);
    return;
}
else
{
    string csMessage;
    csMessage = "MV_LGS_CreateHandle_NET success";
    Console.WriteLine(csMessage);
}

//Load configuration file
string strCfgPath = "MvLogisticsSDK.xml";
nRet = MyLogistics.MV_LGS_LoadDevCfg_NET(strCfgPath);
if (MvLogistics.MV_LGS_OK != nRet)
{
    string csMessage;
    csMessage = "MV_LGS_LoadDevCfg_NET failed: 0x" +
String.Format("{0:X}", nRet);
    Console.WriteLine(csMessage);
    return;
}
else
{
    string csMessage;
    csMessage = "MV_LGS_LoadDevCfg_NET success";
    Console.WriteLine(csMessage);
}

//Get package information in callback function
ResultCallback = new
MvLogistics.cbOutputdelegate(ResultCallbackFunc);
nRet = MyLogistics.MV_LGS_RegisterPackageCB_NET(ResultCallback,
IntPtr.Zero);
if (MvLogistics.MV_LGS_OK != nRet)
{
    string csMessage;
    csMessage = "MV_LGS_RegisterPackageCB_NET failed: 0x" +
String.Format("{0:X}", nRet);
    Console.WriteLine(csMessage);
    return;
}
else
{
    string csMessage;
```

```
        csMessage = "MV_LGS_RegisterPackageCB_NET success";
        Console.WriteLine(csMessage);
    }

    //Get exception information in callback function
    ExceptionCallback = new
MvLogistics.cbExceptiondelegate(ExceptionCallbackFunc);
    nRet =
MyLogistics.MV_LGS_RegisterExceptionCB_NET(ExceptionCallback, IntPtr.Zero);
    if (MvLogistics.MV_LGS_OK != nRet)
    {
        string csMessage;
        csMessage = "MV_LGS_RegisterExceptionCB_NET failed: 0x" +
String.Format("{0:X}", nRet);
        Console.WriteLine(csMessage);
        return;
    }
    else
    {
        string csMessage;
        csMessage = "MV_LGS_RegisterPackageCB_NET success";
        Console.WriteLine(csMessage);
    }

    //Start stream
    nRet = MyLogistics.MV_LGS_Start_NET();
    if (MvLogistics.MV_LGS_OK != nRet)
    {
        string csMessage;
        csMessage = "MV_LGS_Start_NET failed: 0x" +
String.Format("{0:X}", nRet);
        Console.WriteLine(csMessage);
        return;
    }
    else
    {
        string csMessage;
        csMessage = "MV_LGS_Start_NET success";
        Console.WriteLine(csMessage);
    }

    while (true)
    {
        ConsoleKeyInfo result = Console.ReadKey();
        if ((result.KeyChar == 'Y') || (result.KeyChar == 'y'))
        {
            Console.WriteLine("STOP WORK");
            break;
        }
    }

    //Stop stream
```

```
nRet = MyLogistics.MV_LGS_Stop_NET();
if (MvLogistics.MV_LGS_OK != nRet)
{
    string csMessage;
    csMessage = "stop process failed: 0x" + String.Format("{0:X}",
nRet);
    Console.WriteLine(csMessage);
}
else
{
    string csMessage;
    csMessage = "stop process success";
    Console.WriteLine(csMessage);
}

//Destroy the handle
nRet = MyLogistics.MV_LGS_DestroyHandle_NET();
if (MvLogistics.MV_LGS_OK != nRet)
{
    string csMessage;
    csMessage = "Deinit failed: 0x" + String.Format("{0:X}", nRet);
    Console.WriteLine(csMessage);
}
else
{
    string csMessage;
    csMessage = "Deinit success";
    Console.WriteLine(csMessage);
}
}
```

