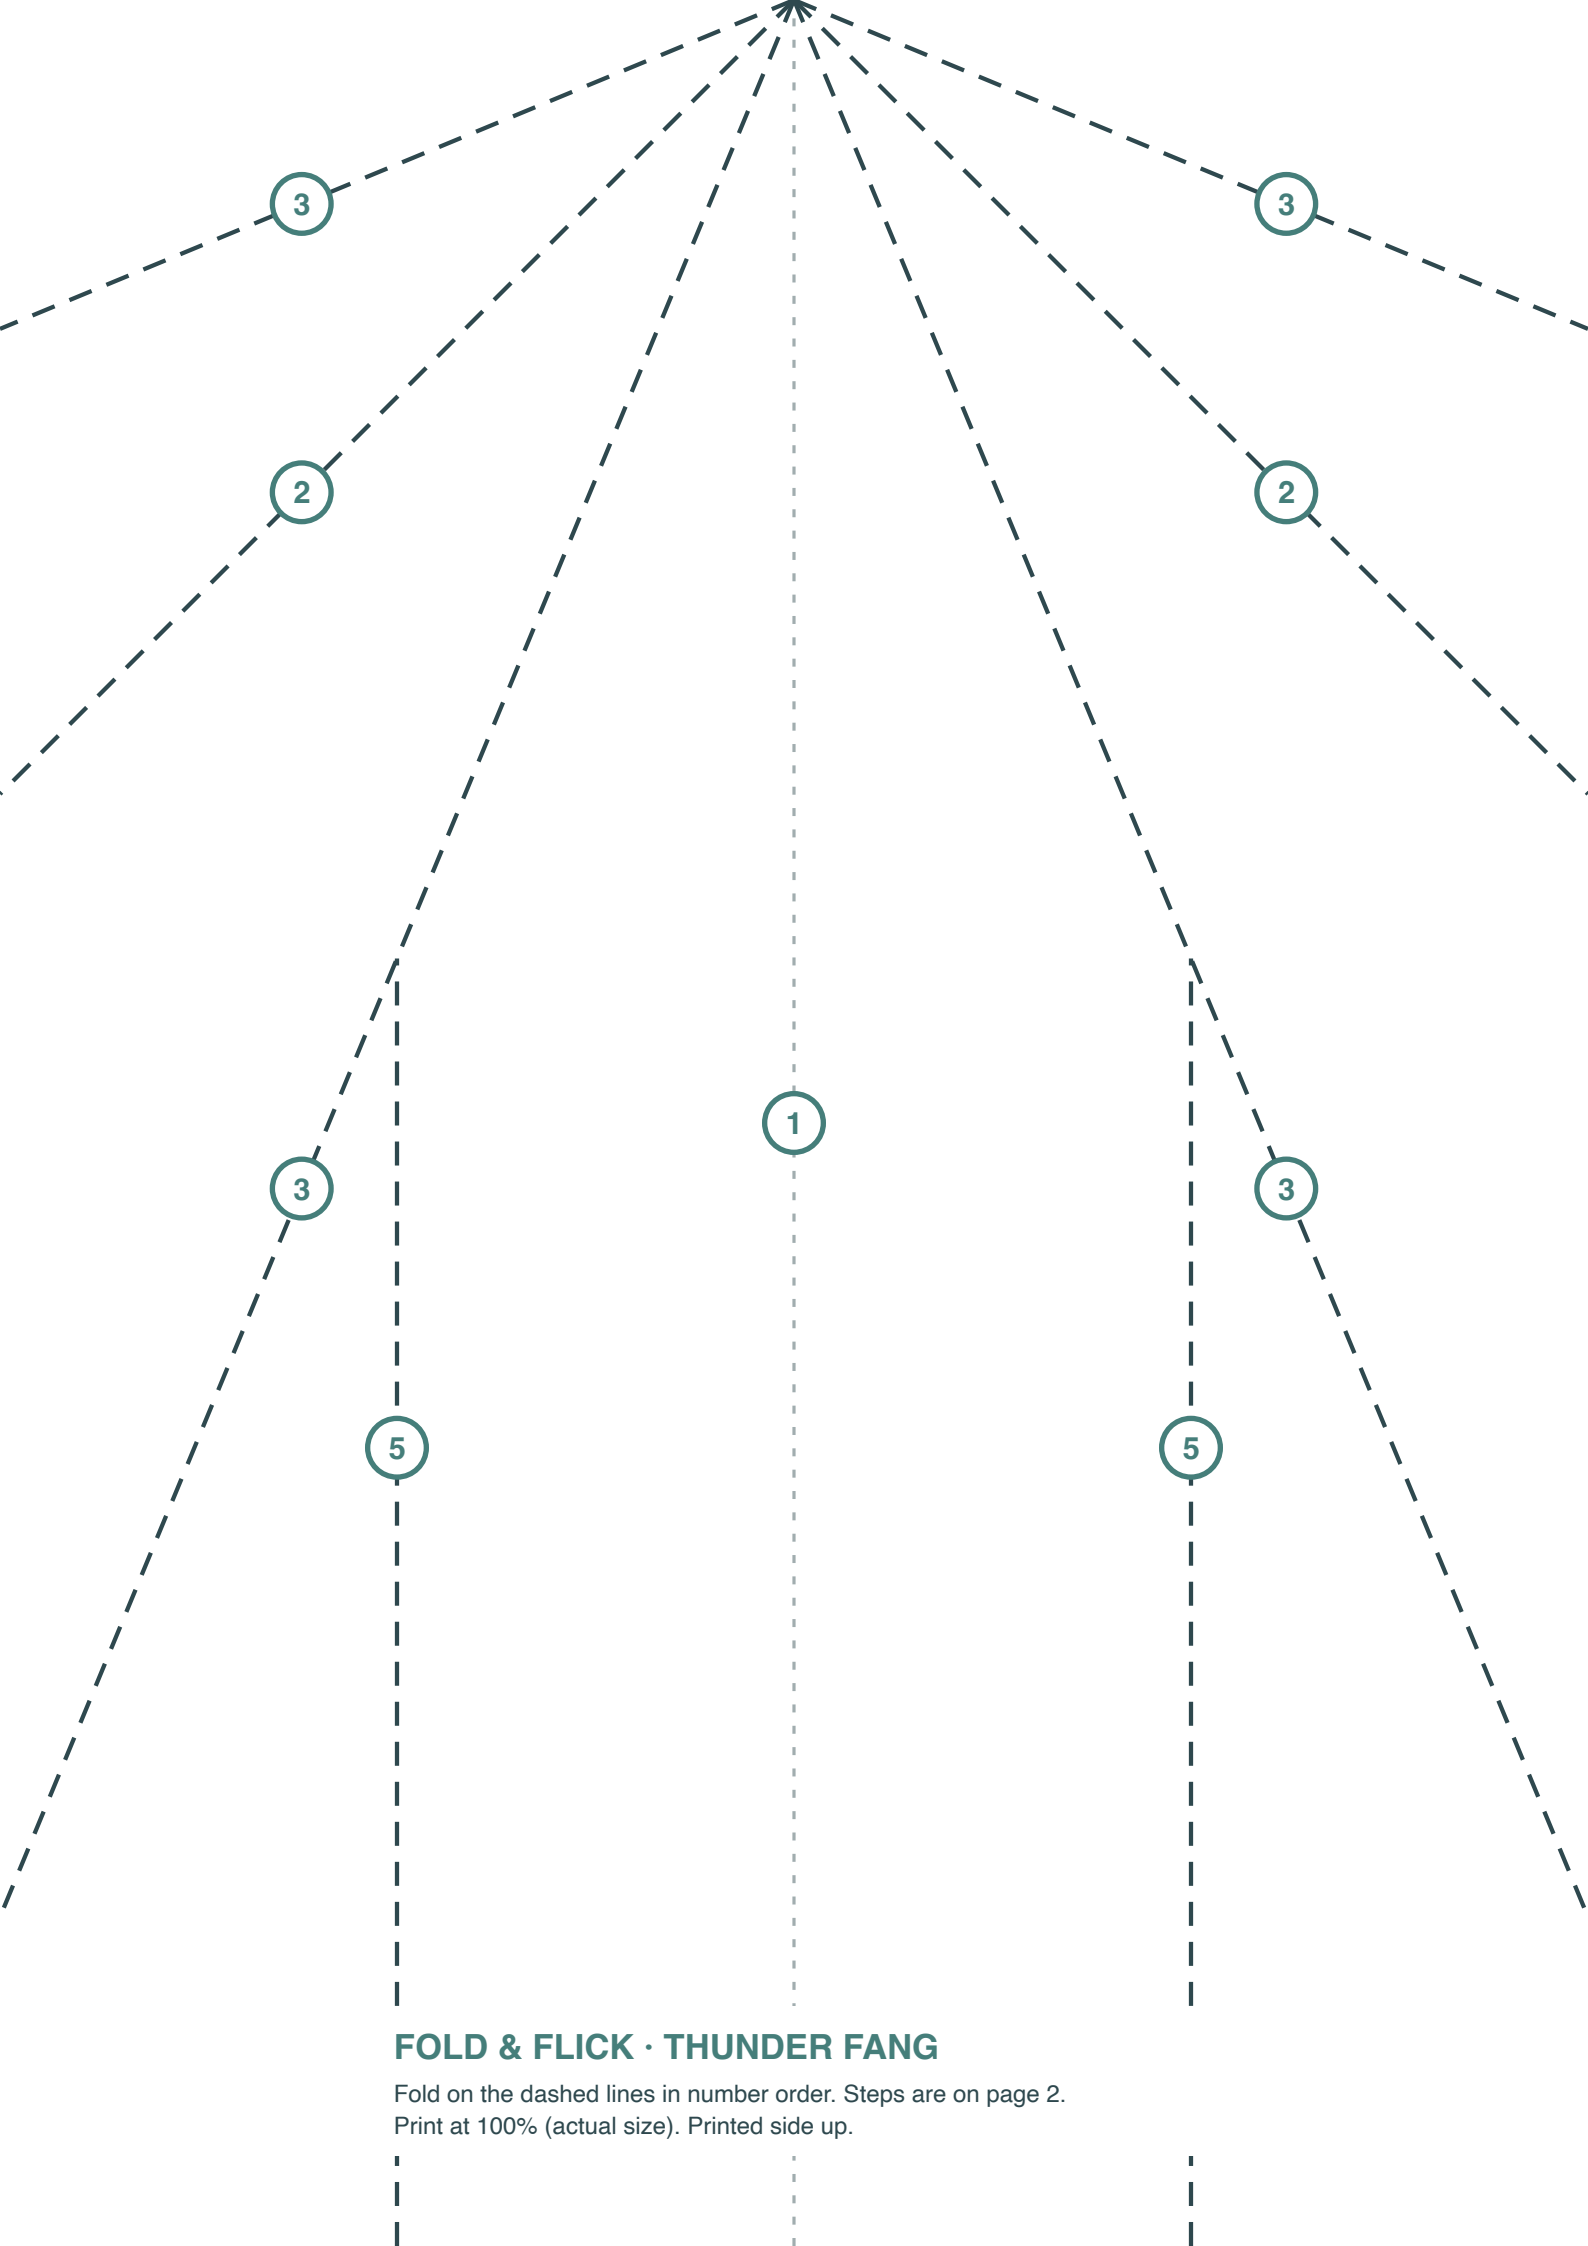

FOLD & FLICK · THUNDER FANG

Fold on the dashed lines in number order. Steps are on page 2.
Print at 100% (actual size). Printed side up.

Fold the Thunder Fang for real

Fold it. Flick it. Fly it.

1. Take a sheet of printer paper, long side up. Fold it in half the long way, crease it hard and unfold it.
2. Fold both top corners down so their edges meet on the center crease. You get a pointed nose.
3. Fold the new slanted edges to the center crease again. The nose gets slimmer and sharper.
4. Fold the whole thing in half along the center crease, with the folds on the outside.
5. Fold each wing down so its top edge lines up with the bottom of the body. Narrow wings, deep body.
6. Jet bit (ask a grown-up for scissors): cut a small notch into the back of each wing, 3 cm from the body, to make tail planes behind the main wing.
7. Snip a 3 cm slit up the back of the body and fold that flap up for the fin.
8. Open the wings so they sit flat, a little higher at the tips. Hold it under the middle and throw it gently forward and a bit up.

The jet steps use scissors, so ask a grown-up to help.

- Crease every fold hard: run a fingernail along it.
- The numbers on page 1 match the steps. Line 1 is the center crease you fold first and use again later.
- Fly it in Fold & Flick too: it's the Thunder Fang in the hangar.