
PinVisual — single-servo test circuit

One pin, servo driven straight from the ESP32 (no PCA9685). Firmware: PV_SERVO_BOARDS 0 · PV_DIRECT_PIN 0 · PV_DIRECT_GPIO 18

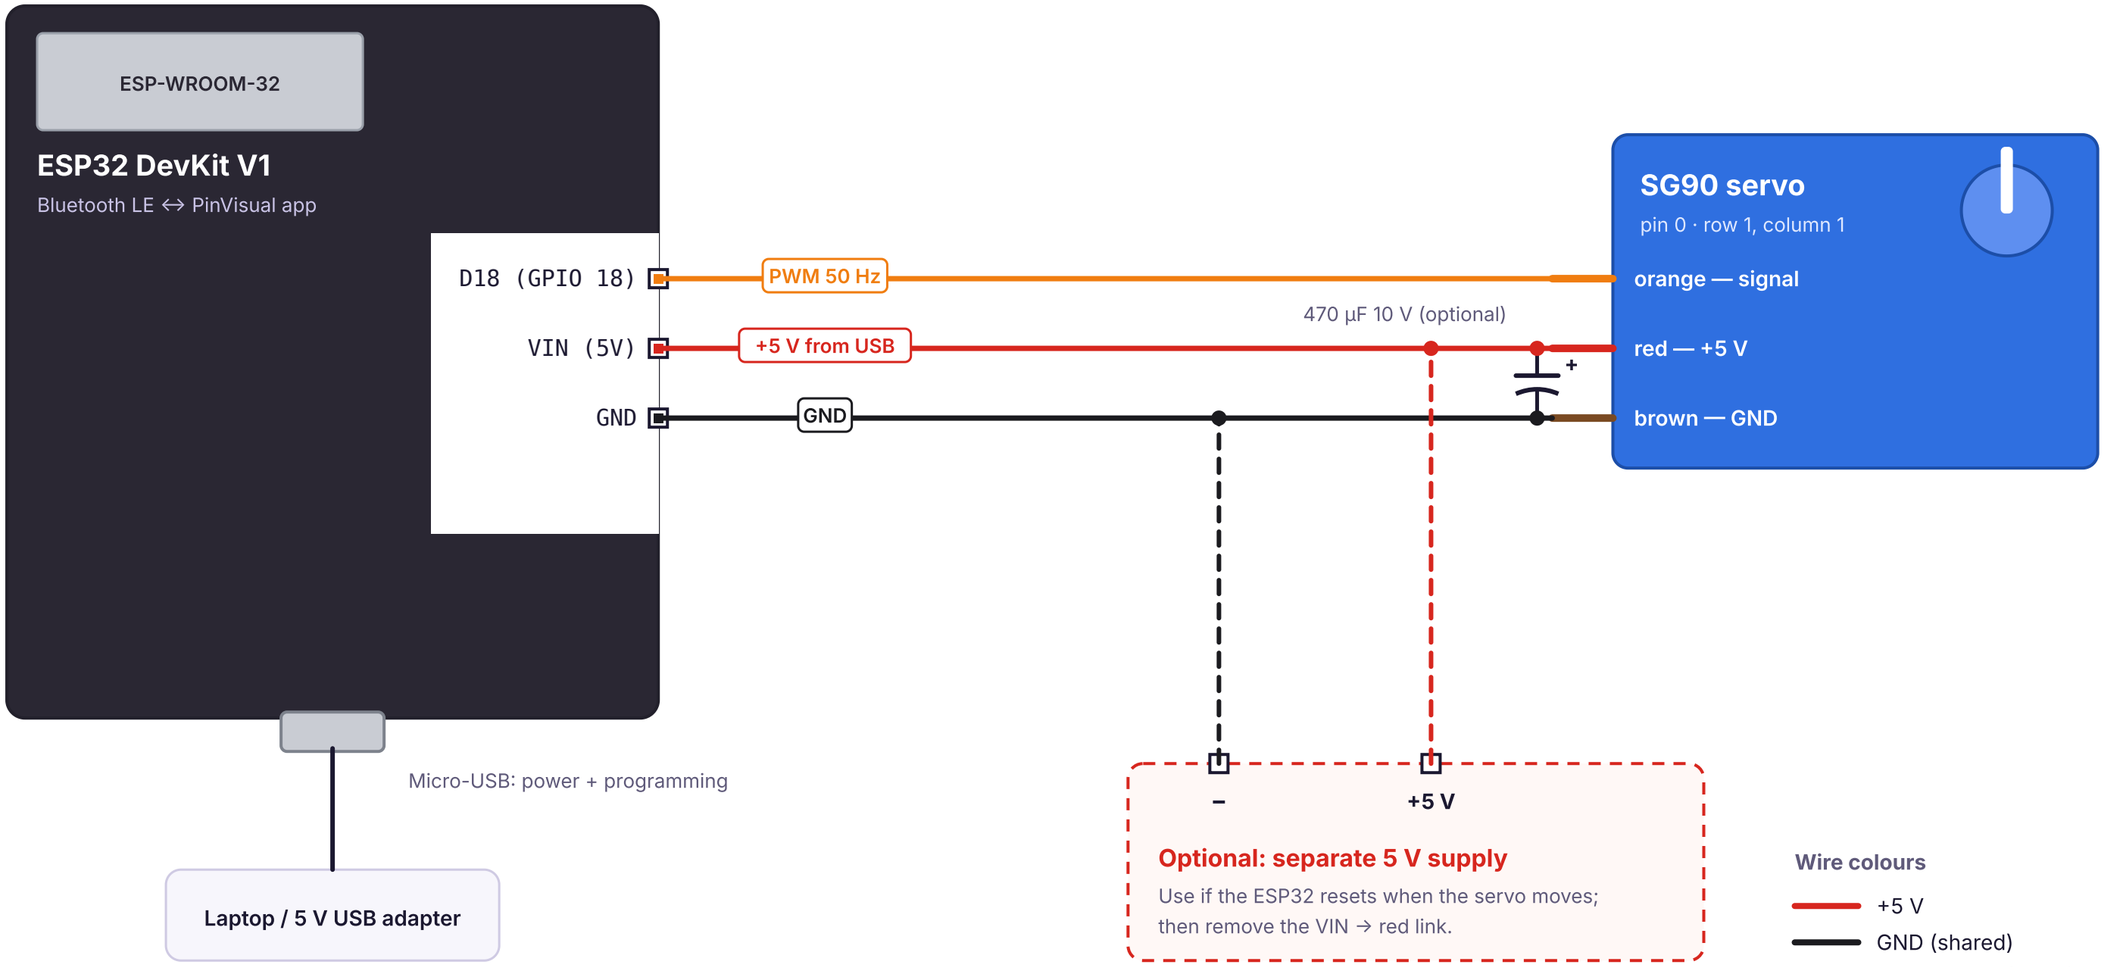

Rules

- Never power a servo from the ESP32's 3V3 pin.
- VIN carries the USB 5 V: fine for one SG90 at a time.
- With a separate supply, its – must join the ESP32 GND.

Matches firmware/README.md · Testing with one servo