
PinVisual — single-servo test wiring

ESP32 drives one SG90 directly from D18 (GPIO 18). Firmware: PV_SERVO_BOARDS 0 · PV_DIRECT_GPIO 18

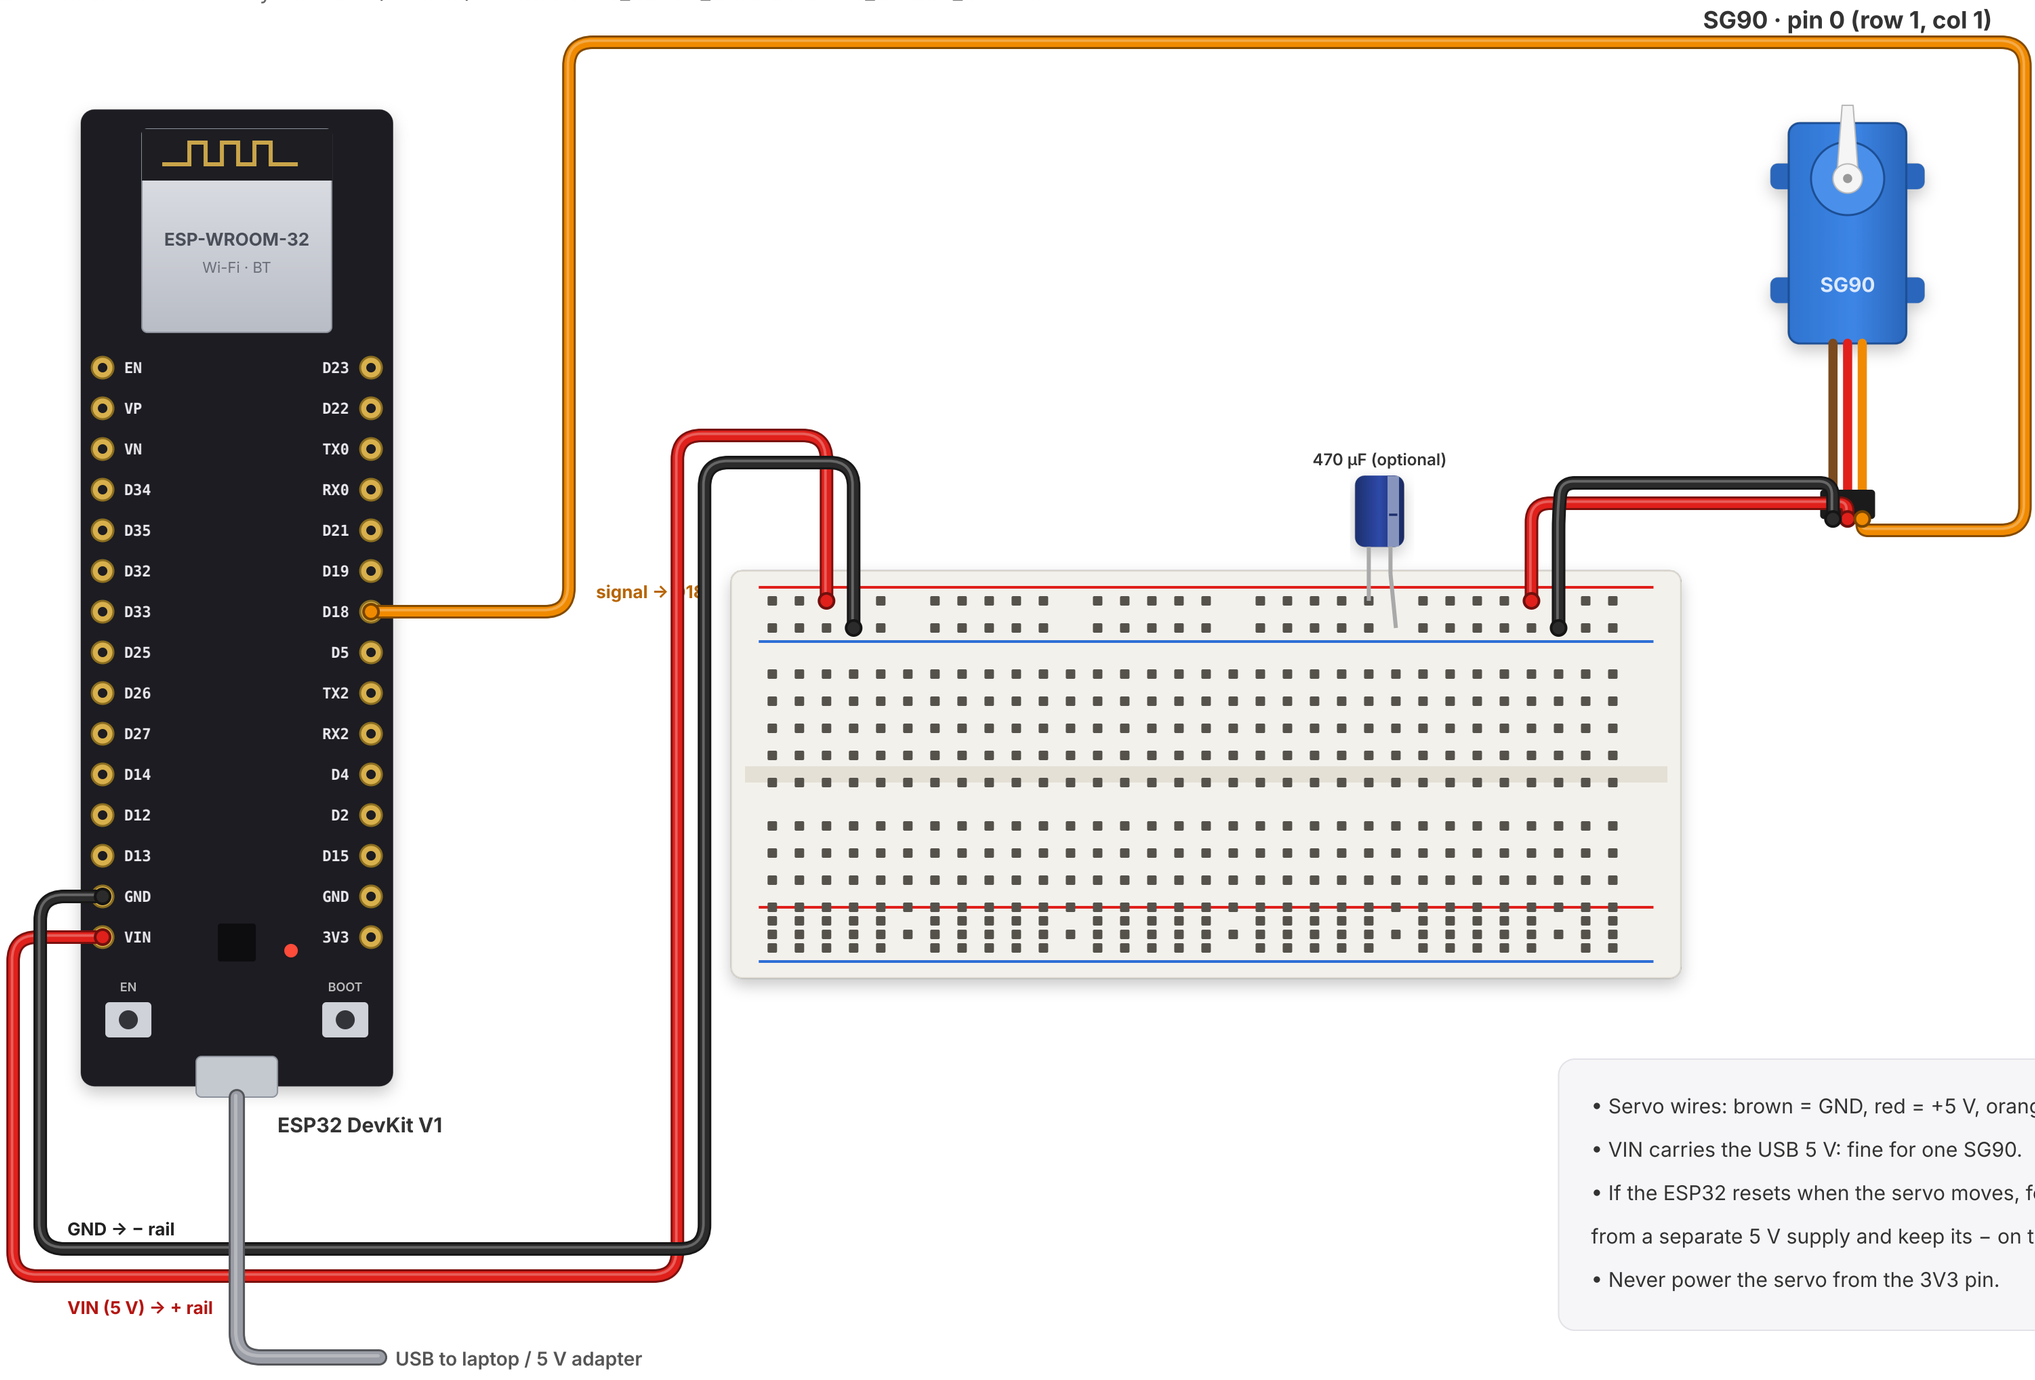

- Servo wires: brown = GND, red = +5 V, orange = signal.
- VIN carries the USB 5 V: fine for one SG90.
- If the ESP32 resets when the servo moves, feed the rails from a separate 5 V supply and keep its – on the – rail.
- Never power the servo from the 3V3 pin.