

# Creating ROV transects with Global Mapper

BLUE MARBLE GEOGRAPHICS


Manual composed by Jenny Neuhaus

May 2026



**BLUEMARBLEGEO.COM**

Copyright 1993-2026, Blue Marble Geographics, All Rights Reserved

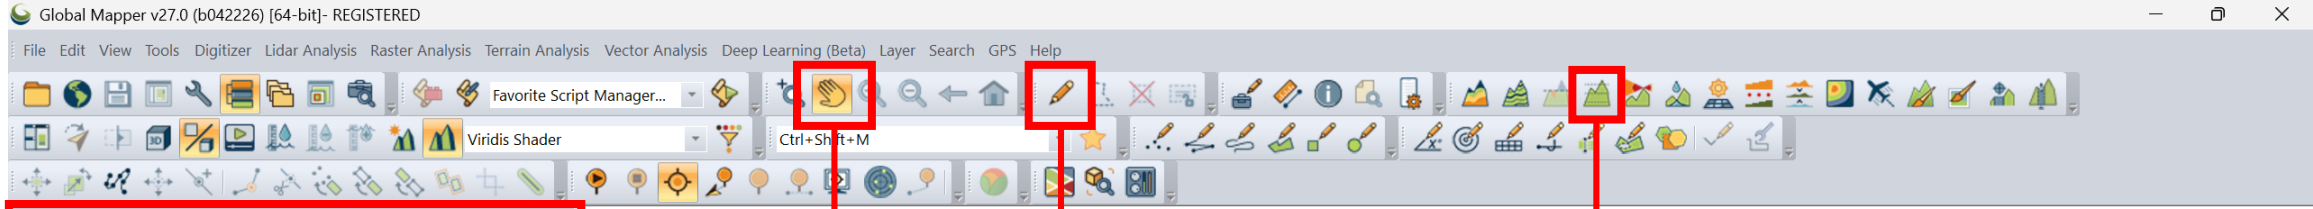

Panning,  
grab and drag


Digitizer tool

Profile tool

The **control center** is where all  
your layers will appear




- [Open data files](#)
- [Online sources](#)
- [Configuration](#)
- [Load default data](#)
- [Training](#)

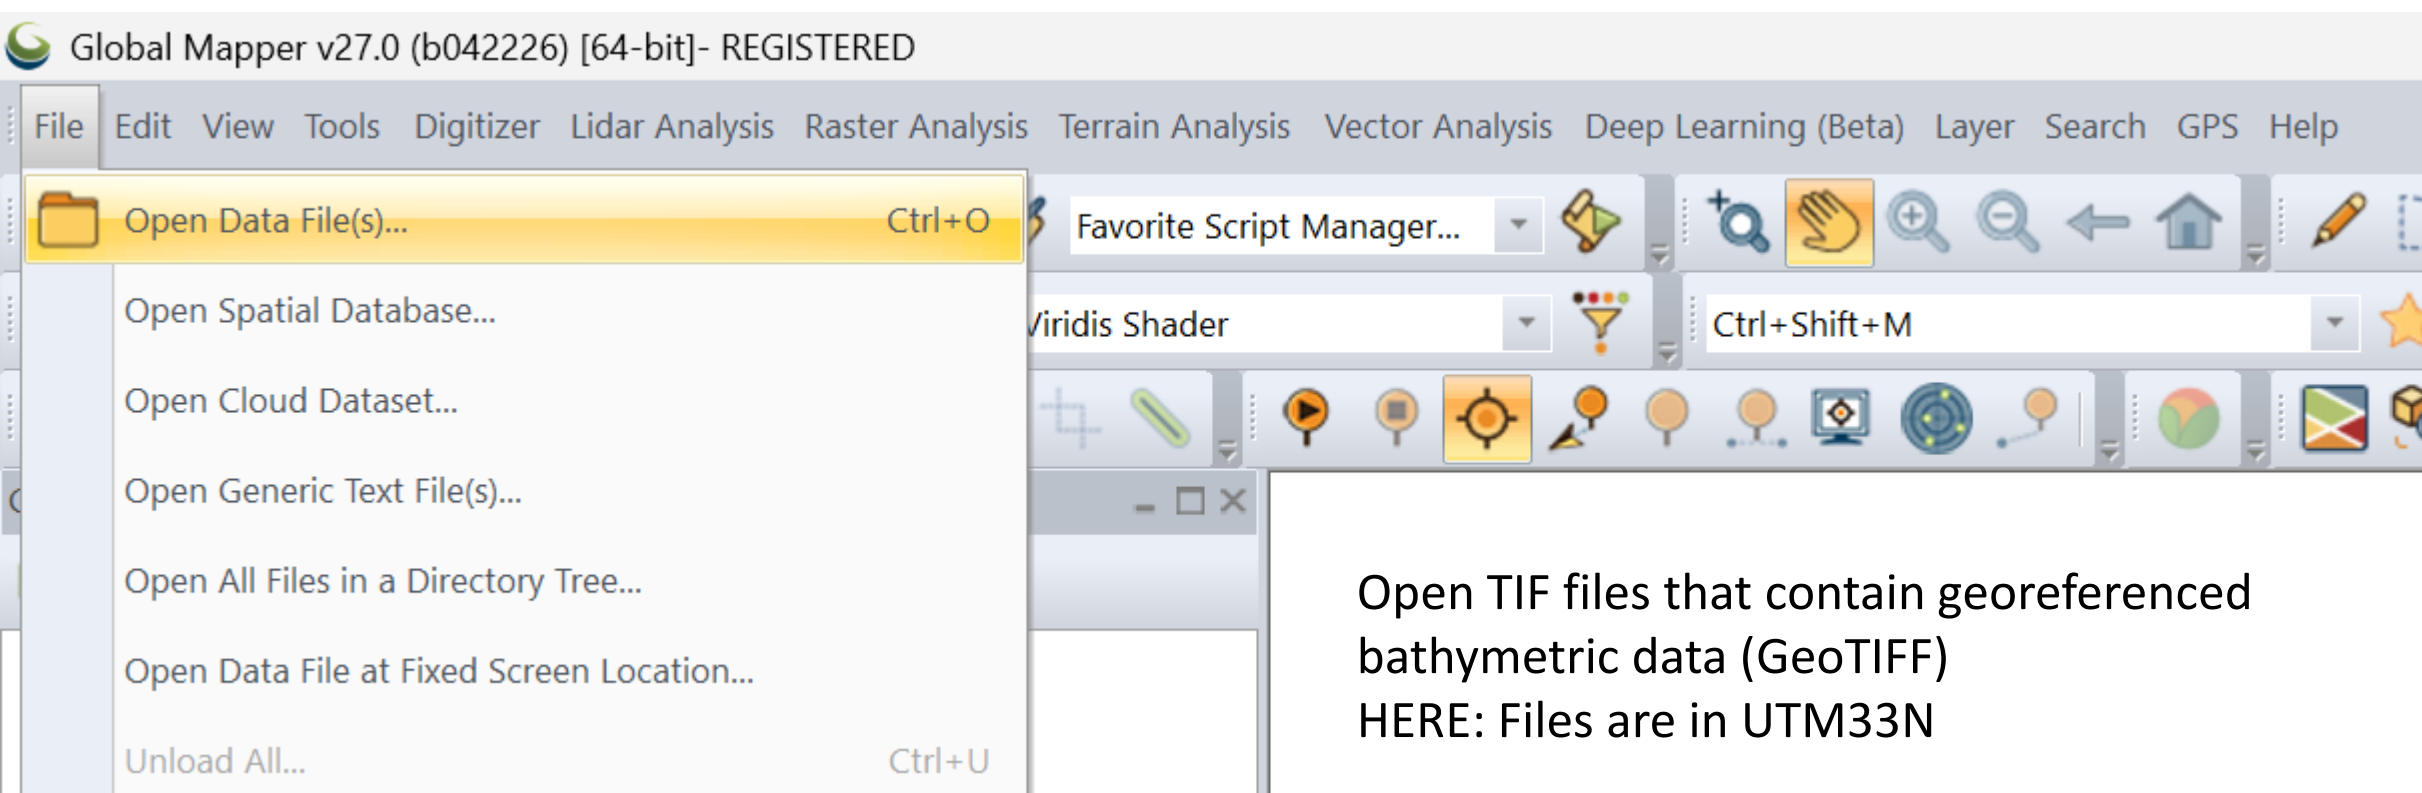

Open TIF files that contain georeferenced bathymetric data (GeoTIFF)  
HERE: Files are in UTM33N


| Name                                                                                                                     | Date             | Type     | Size      | Tags |
|--------------------------------------------------------------------------------------------------------------------------|------------------|----------|-----------|------|
|  Geonorge_CopperHill_50m_UTM33N         | 27/04/2026 07:11 | TIF File | 3,998 KB  |      |
|  Geonorge_CopperHill_50m_UTM33N_slope | 27/04/2026 07:11 | TIF File | 6,358 KB  |      |
|  GS21_EM302_Aegir_10m_UTM33N          | 27/04/2026 07:11 | TIF File | 32,293 KB |      |
|  GS21_EM302_Aegir_10m_UTM33N_slope    | 27/04/2026 07:11 | TIF File | 32,276 KB |      |
|  Mareanno_2019_Aegir_25m_UTM33N       | 27/04/2026 07:11 | TIF File | 8,817 KB  |      |
|  Mareanno_2019_Aegir_25m_UTM33N_slope | 27/04/2026 07:11 | TIF File | 31,840 KB |      |

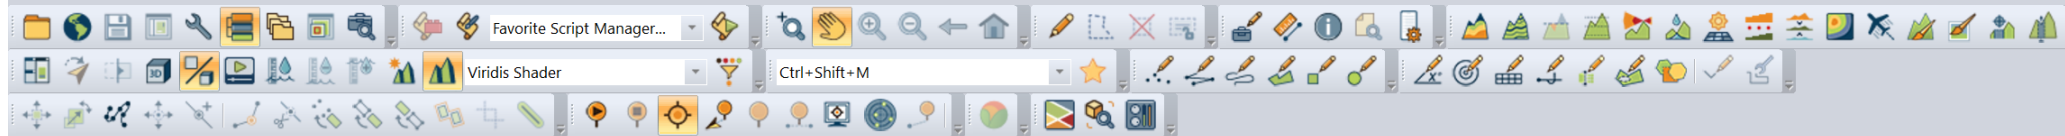


Control Center



Likely you will be seeing this window – select Yes

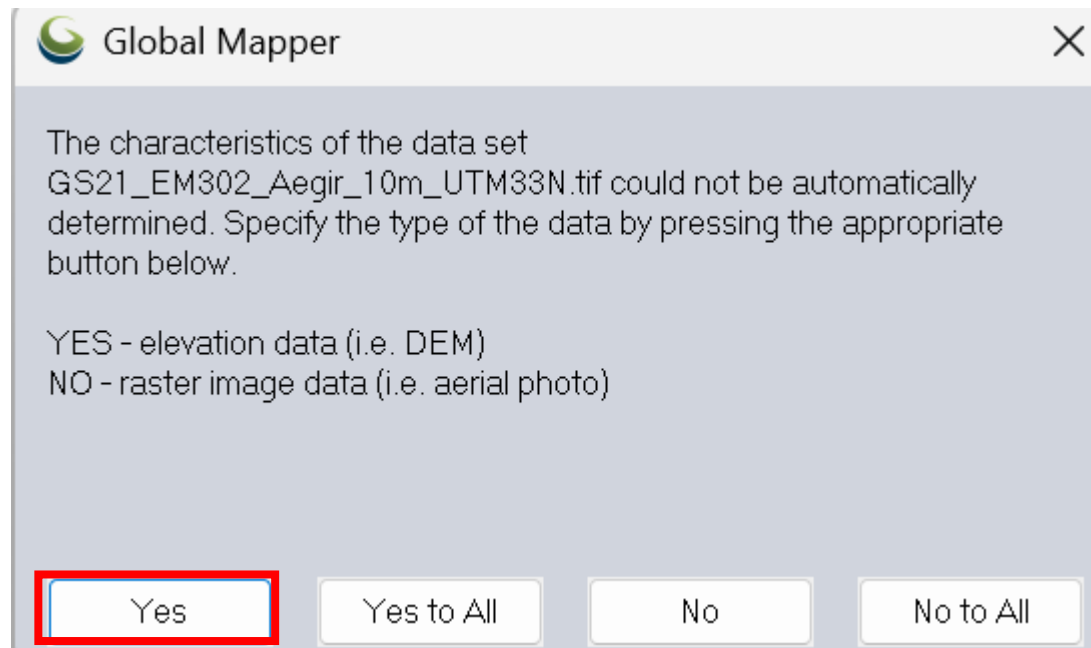


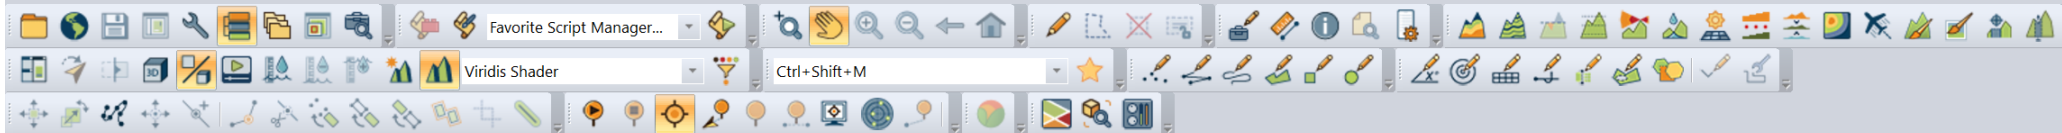


Control Center



Choose this for every GeoTIFF

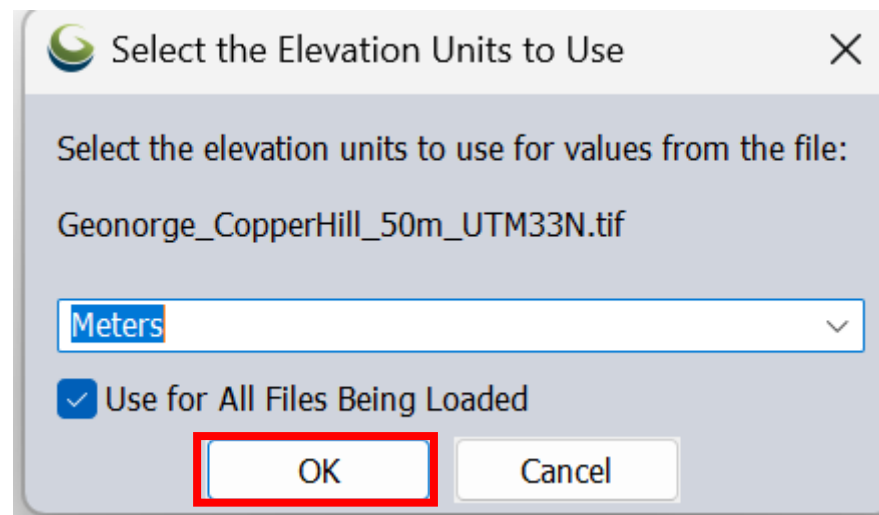



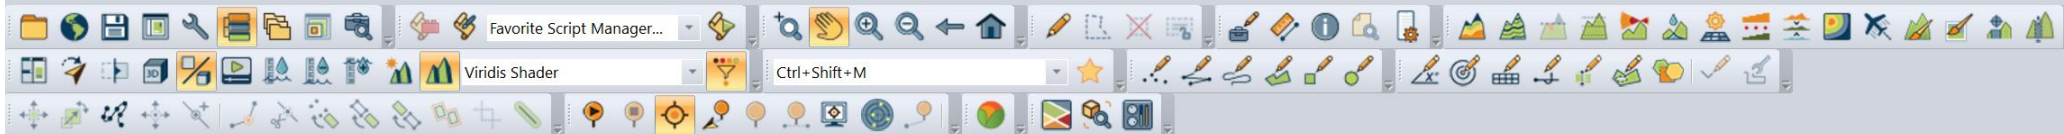

Control Center (3 Layers)



Unsaved Workspace

- Geonorge\_CopperHill\_50m\_UTM33N.tif
- GS21\_EM302\_Aegir\_10m\_UTM33N.tif
- Mareanno\_2019\_Aegir\_25m\_UTM33N.tif

**Control center with  
3 GeoTIFF files as  
single layers**

Lidar/Terrain Display Options

▼ Draw Mode




-2400  
Elevation (m) -1320

Color by RGB/Elev


Viridis Shader

☐ Enforce Layer/Draw Mode Compatibility

You can zoom in and out of the  
map using the mouse wheel

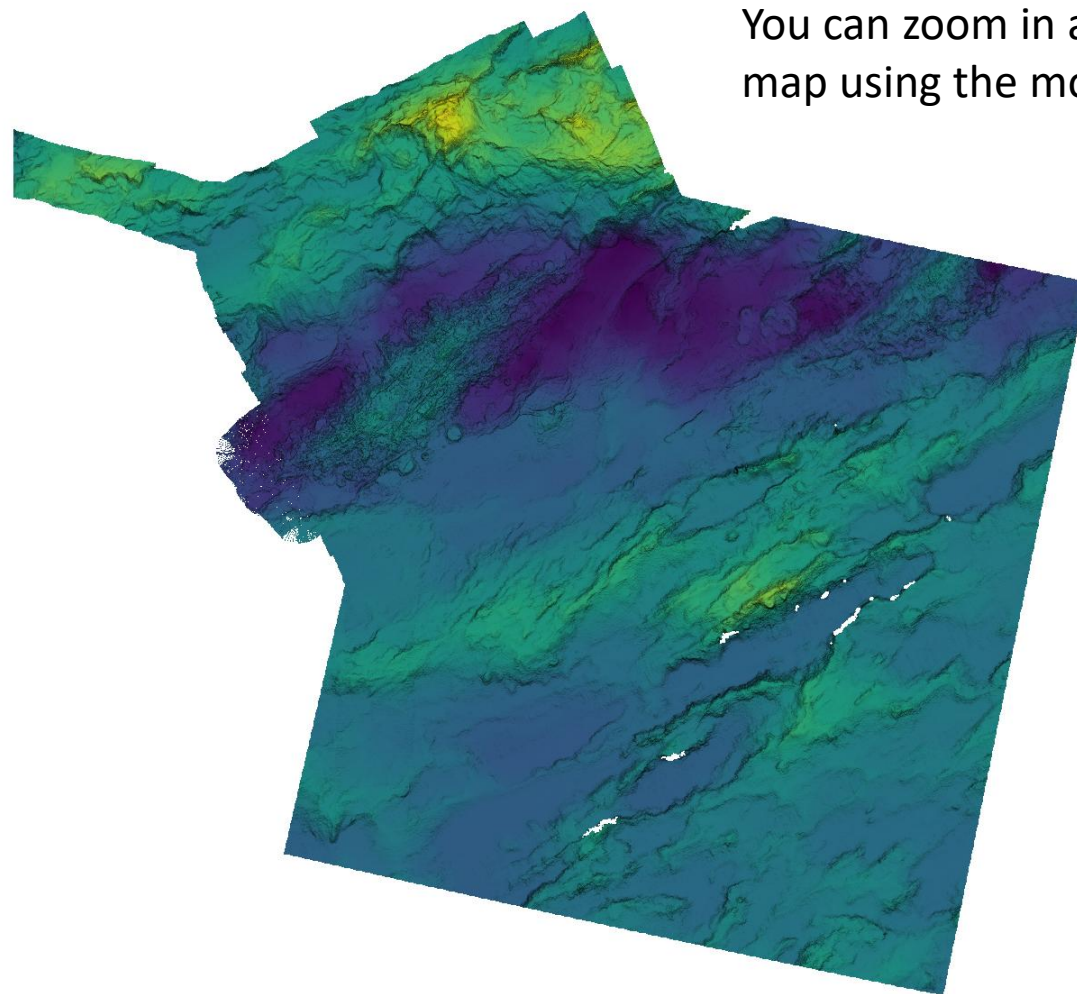

Coordinate system and coordinate display

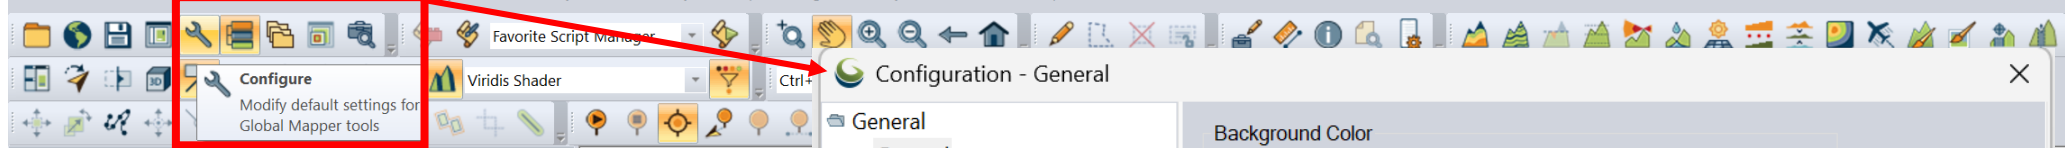**Configure**Modify default settings for  
Global Mapper tools

## Viridis Shader

## Configuration - General

## General

- General
- Export
- Measure/Units
- Vector Formats
- Raster Formats
- Advanced
- Vector Display
- Display Options
- Styles
- Coordinate Reference System
- 3D View Properties
- Deep Learning Models
- Vertical Options
- Shader Options
- Lidar
- Feature Templates
- GPS Options

## Background Color

Select...

## Map View Options

- ☒ Show pixel location in Status Bar
- ☒ Always display Lat/Lon in Status Bar/Info as WGS84
- ☒ Always display Lat/Lon with padding
- ☐ Add full path to Control Center descriptions
- ☒ Center on cursor when zooming with mouse wheel
- ☐ Swap zoom direction using mouse wheel or hot keys
- ☒ Display pan arrows on map edge
- ☒ Prompt when loading duplicate file names
- ☒ Automatically interpolate zoomed-out display

## Workspace Options

- ☐ Automatically create backup workspace files
  - Maximum auto-backup files to keep
- ☐ Lock active workspace file to prevent sharing

## Search Options

- ☒ Run default query when launching Search function

## Other Options

- ☒ Ask before opening multiple Attribute Editors in tabbed panes

Restore Default Settings

OK

Cancel

Apply

Help

Use the **Configure** tool  
to change settings of  
coordinate system or  
display format

## Lidar/Terrain Display Options

## ▼ Draw Mode



-3422.61

-979.52

-2400  
Elevation (m) -1320


Color by RGB/Elev

Viridis Shader

☐ Enforce Layer/Draw Mode Compatibility



## Change of display format

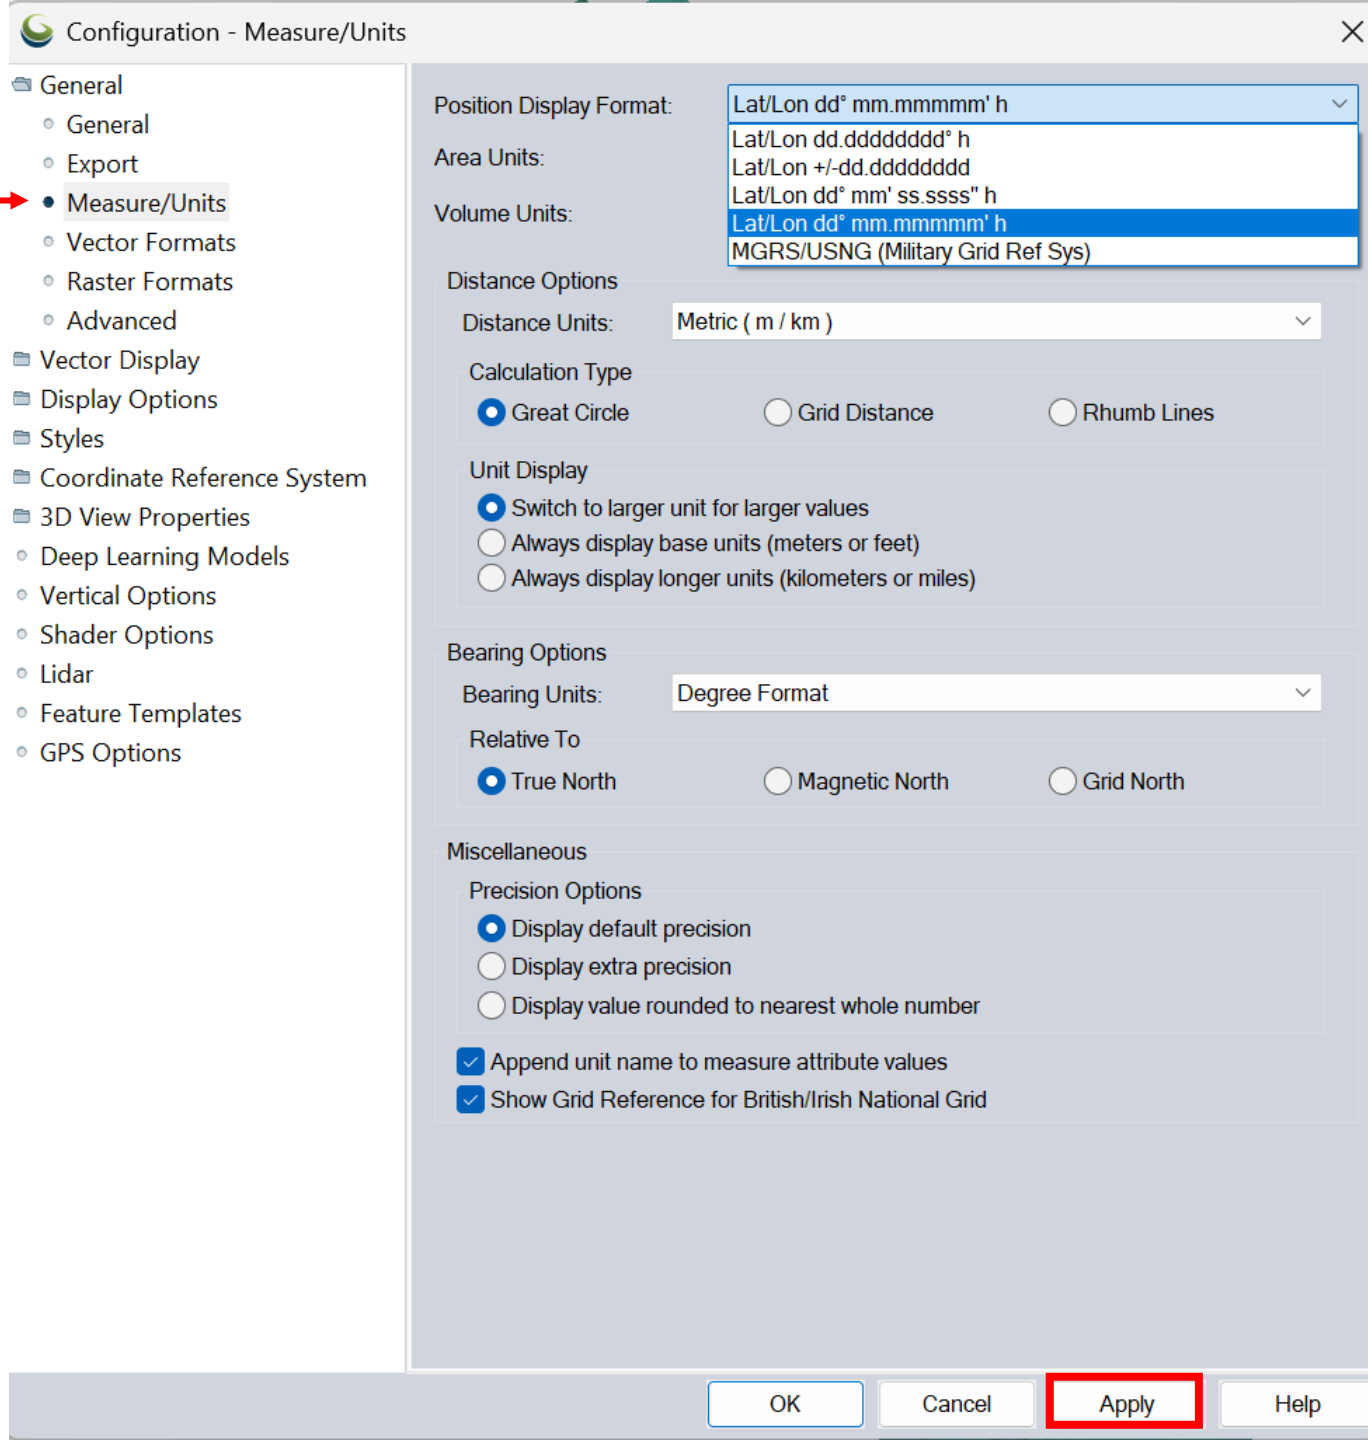

- General
- Vector Display
- Display Options
- Styles
- Coordinate Reference System
  - Select Coordinate System
  - Default Coordinate System
- 3D View Properties
  - Deep Learning Models
  - Vertical Options
  - Shader Options
  - Lidar
  - Feature Templates
  - GPS Options

Horizontal Coordinate Reference System:

EPSG: 25833

System: ETRS89 / UTM zone 33N

Datum: European Terrestrial Reference System 1989 ensemble

Units: Meter

Vertical Coordinate Reference System:

System: None

Units: None

Load From File...

Search by EPSG Cod

Geodetic Settings

Coordinate Transformations:

| Layer                      | System | Units |
|----------------------------|--------|-------|
| GS21_EM302_Aegir_10m_...   | ETR    |       |
| Mareanno_2019_Aegir_25...  | ETR    |       |
| Geonorge_CopperHill_50m... | ETR    |       |

Select Coordinate System from Datasource

Folder

- ETRS89
- ETRS89-ESP [REGENTE]
- ETRS89-NOR [EUREF89]
- Fahud
- Fort Marigot
- Garoua
- Grand Comoros
- Guadeloupe 1948
- Hito XVIII 1963
- Hjorsey 1955
- HTRS96
- ID74
- IGM95
- IGN Astro 1960
- IGN53 Mare
- IGN56 Lifou
- IGN72 Grande Terre
- IGN72 Nuku Hiva
- IGRS
- Indian 1954
- Indian 1960
- Indian 1975
- IRENET95
- JAD2001
- JGD2000
- Kallianpur 1937
- Kallianpur 1962
- Kallianpur 1975
- Karbala 1979
- Kortau

Search

Folder: ETRS89

Find:

Change of coordinate system

| Display Name                | Name               | Geodetic |
|-----------------------------|--------------------|----------|
| ETRS89 / UTM zone 28N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 29N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 29N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 30N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 30N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 34N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 34N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 35N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 35N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 36N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 36N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 37N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 37N (...) | ETRS89 / UTM zo... | ETRS89   |

OK

Cancel


Info...

OK

Cancel

Apply

Help

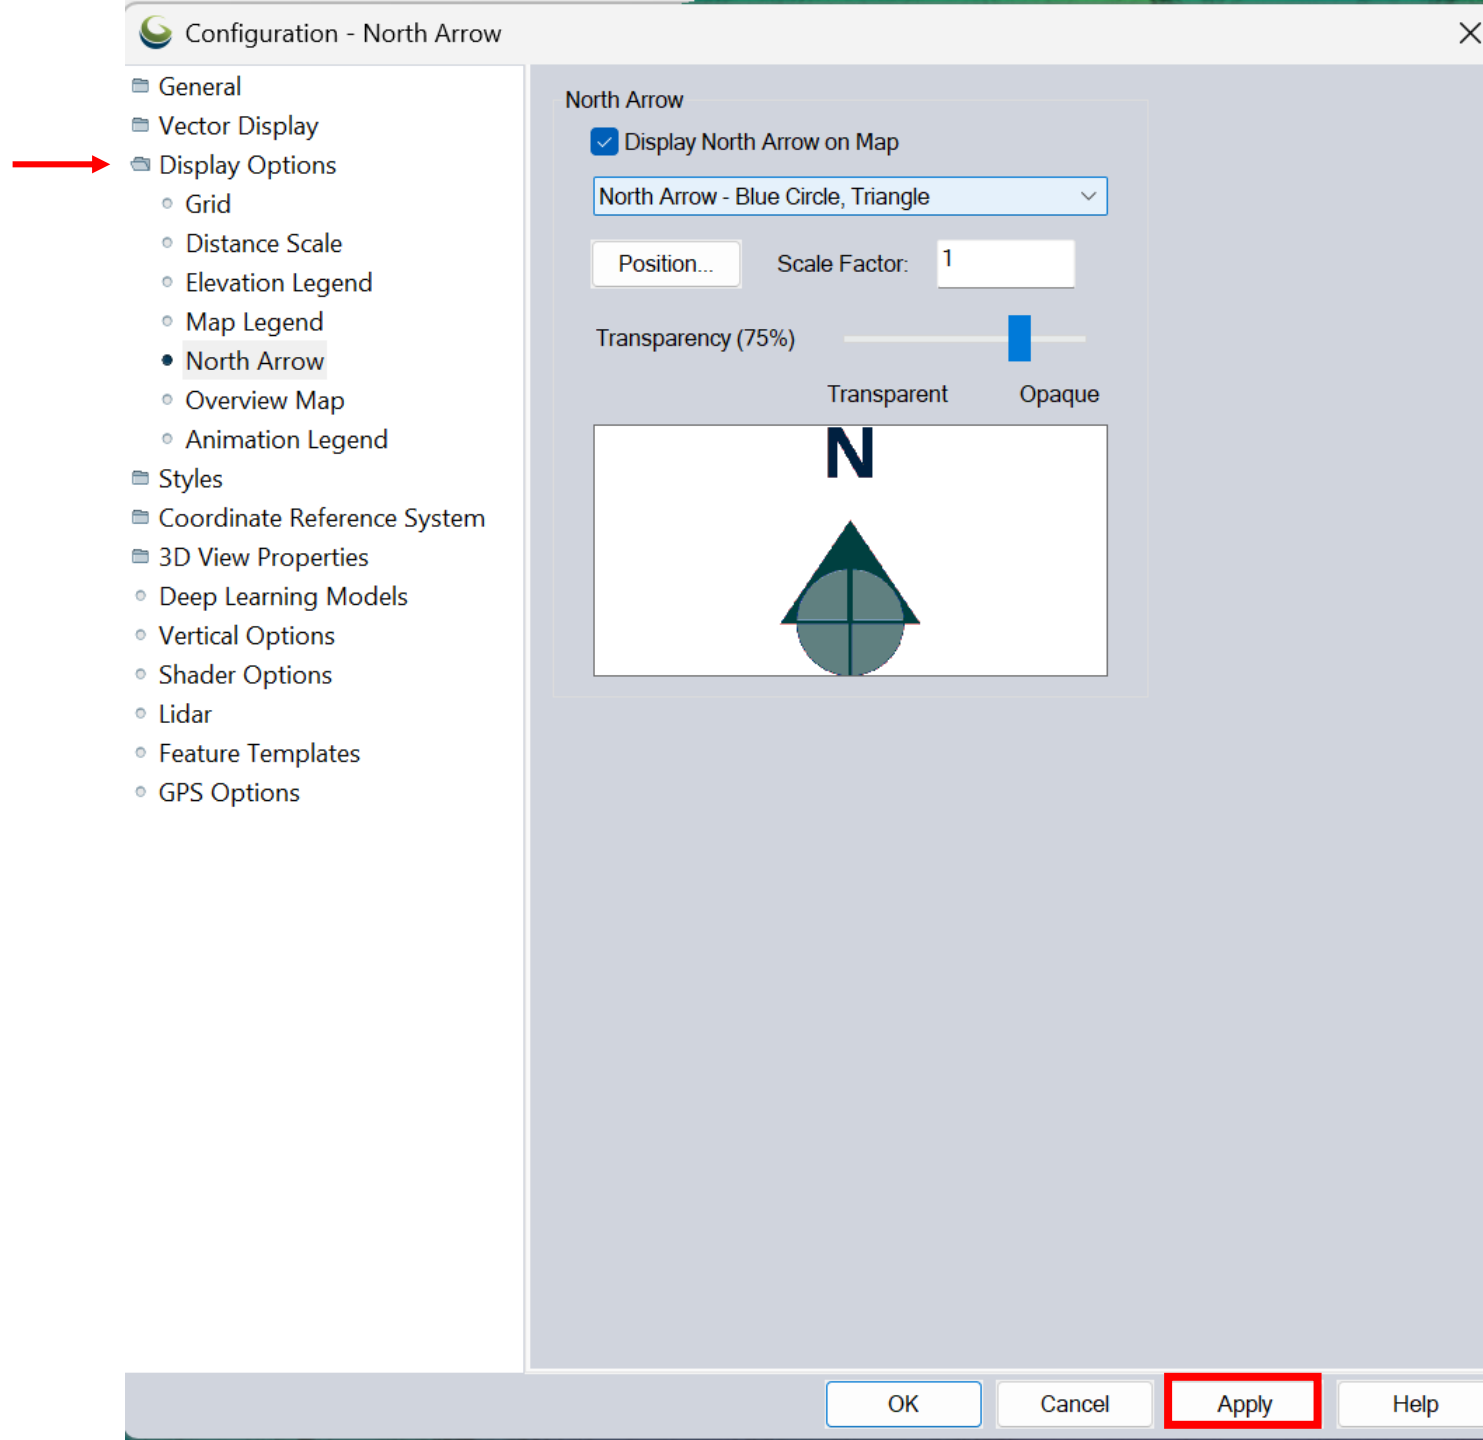


Within the Configuration there are several display options to choose, such as displaying a north arrow on your map

Always press “Apply” when you want something to be displayed



# Activate the Profile tool

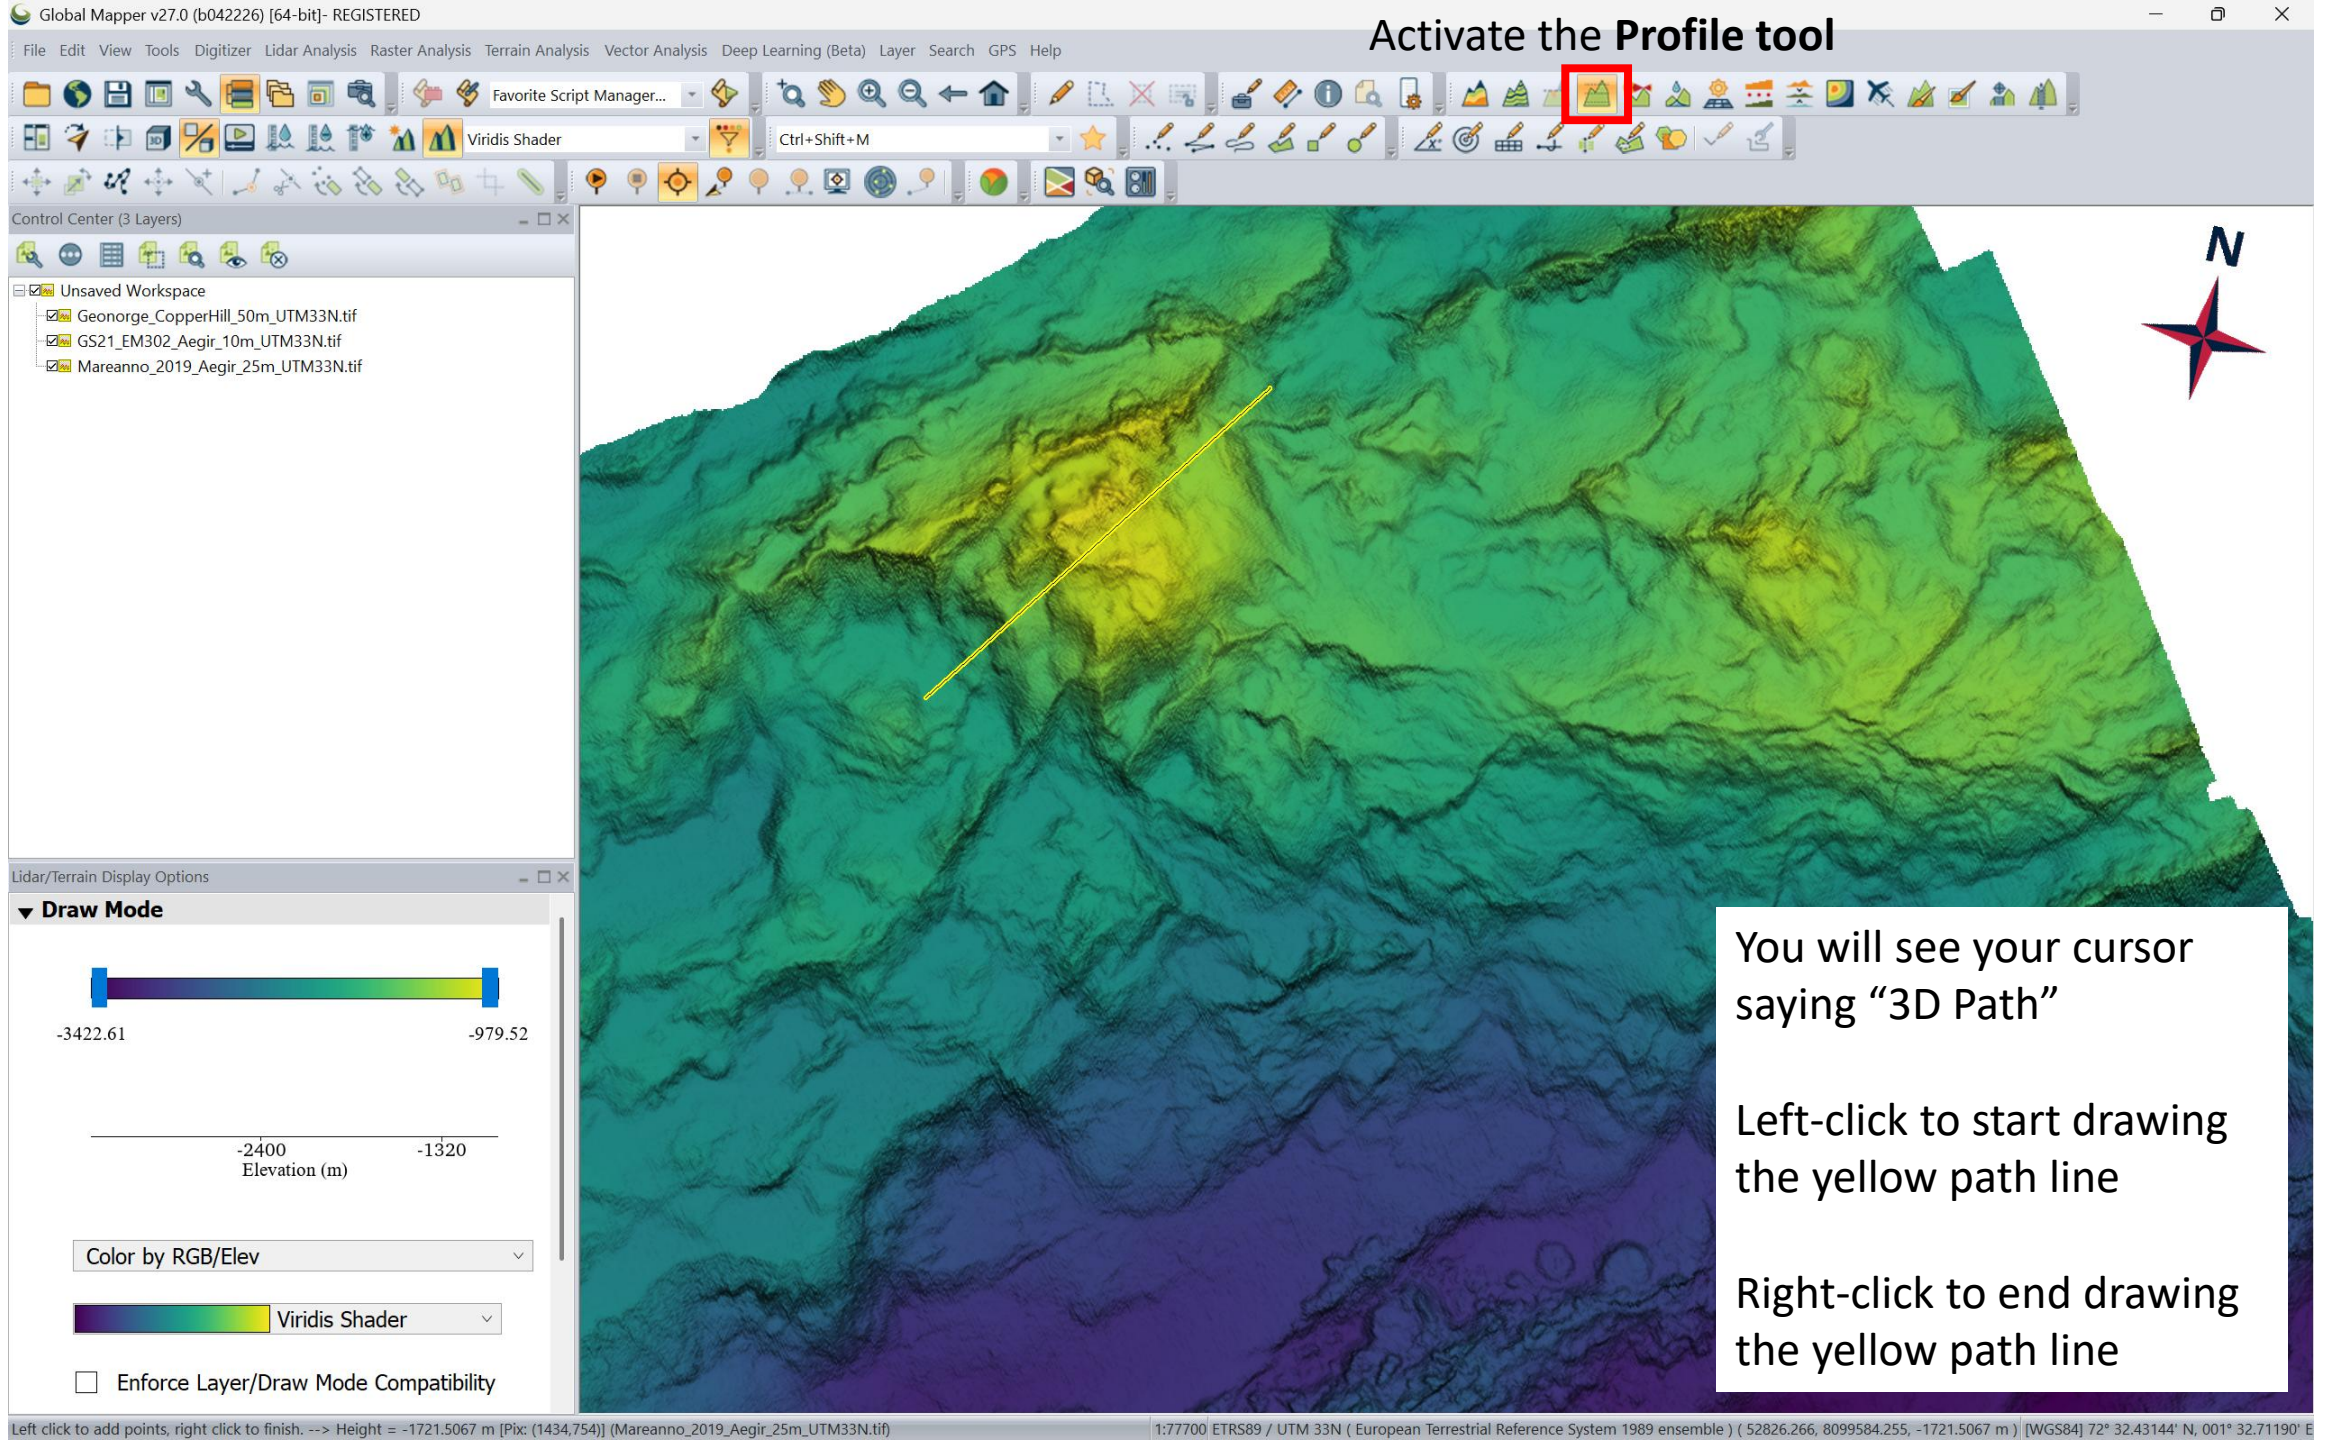


You will see your cursor saying “3D Path”

Left-click to start drawing the yellow path line

Right-click to end drawing the yellow path line



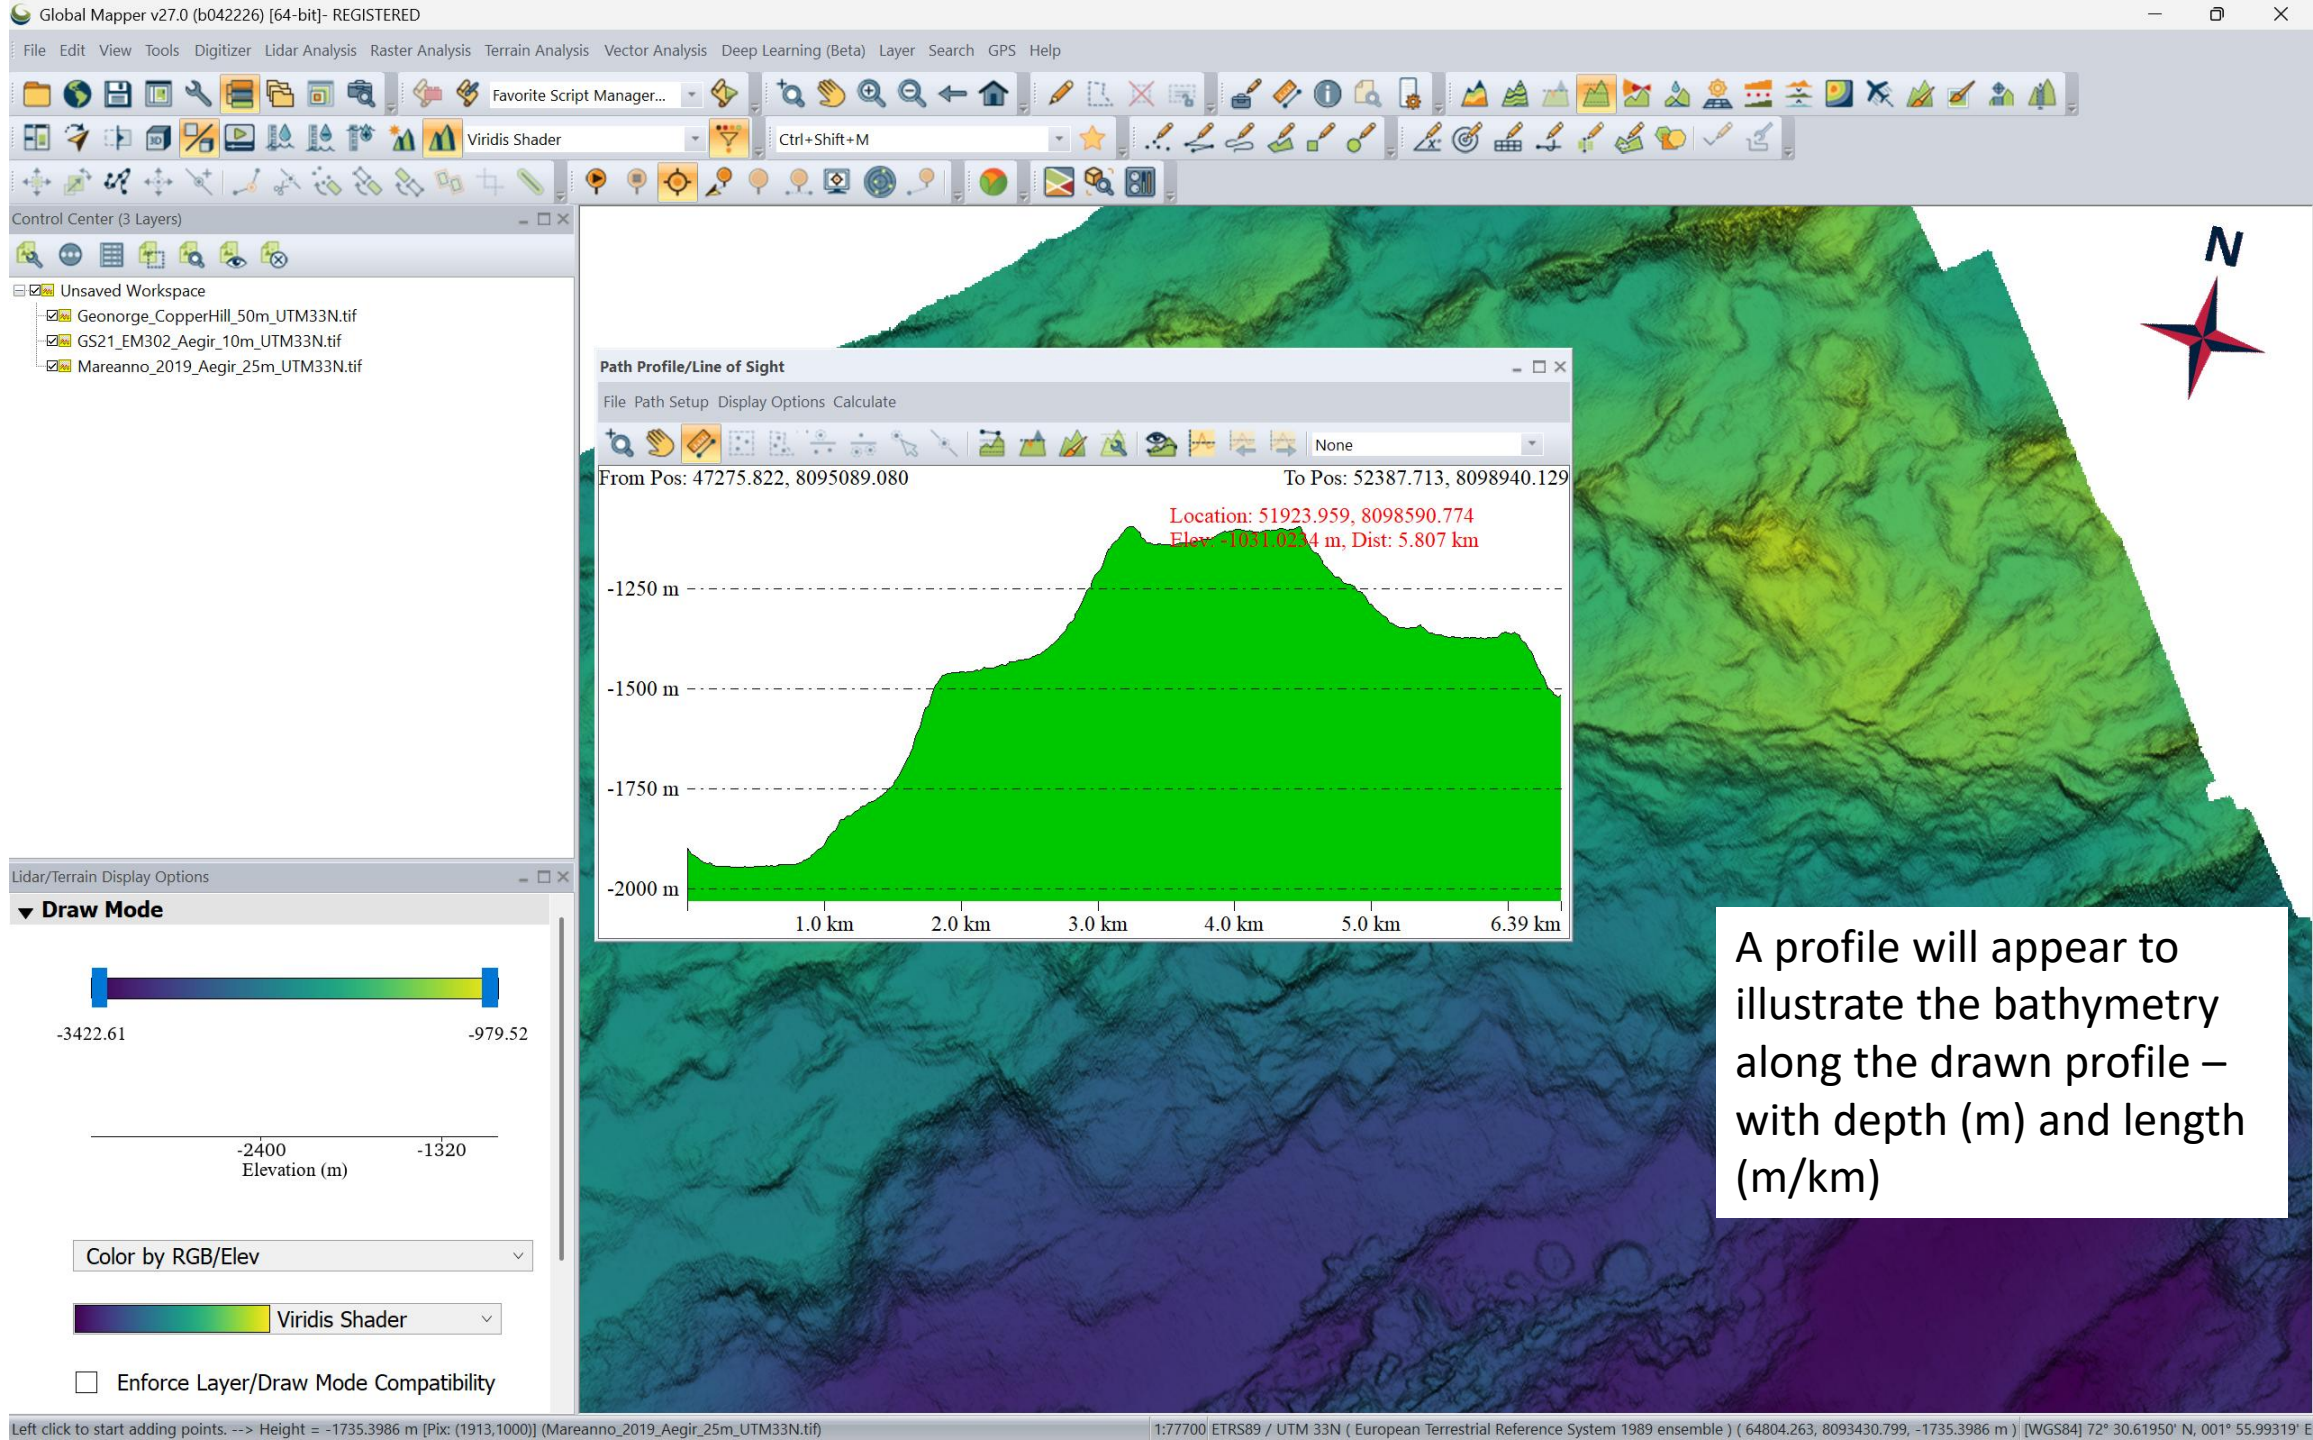



## Path Profile/Line of Sight

File Path Setup Display Options Calculate

Save Profile...

Save Profile to BMP and Display on Map...

Save Cross-Profile/Parallel-Profile Series...

Save LOS to KML...

Save Volume Cut Line to XYZ...

Save Path to New Layer...

Save Path to CSV File (XYZ, Distance, Slope)...

Save Path to Distance/Elevation...

Save Path to DXF...

Save Path to XYZ...

To Pos: 52387.713, 8098940.129

-1750 m

-2000 m

1.0 km

2.0 km

3.0 km

4.0 km

5.0 km

6.39 km

### Select Export Format

Select the format to export your loaded data to. See <https://www.blumablegeo.com/products/global-mapper-formats.php> for information on the available formats.

PNG

BMP

DWG

DXF

JPG

MapInfo MIF/MID

PDF

PNG

Simple ASCII (XYZ) Text File

Shapefile

SVG

You may choose any of these formats  
to save the displayed profile

## Path Profile/Line of Sight

File Path Setup Display Options Calculate

Save Profile...

Save Profile to BMP and Display on Map...

Save Cross-Profile/Parallel-Profile Series...

Save LOS to KML...

Save Volume Cut Line to XYZ...

Save Path to New Layer...

Save Path to CSV File (XYZ, Distance, Slope)...

Save Path to Distance/Elevation...

Save Path to DXF...

Save Path to XYZ...



None

To Pos: 52387.713, 8098940.129

-1750 m

-2000 m

1.0 km


2.0 km


3.0 km

4.0 km

5.0 km


6.39 km


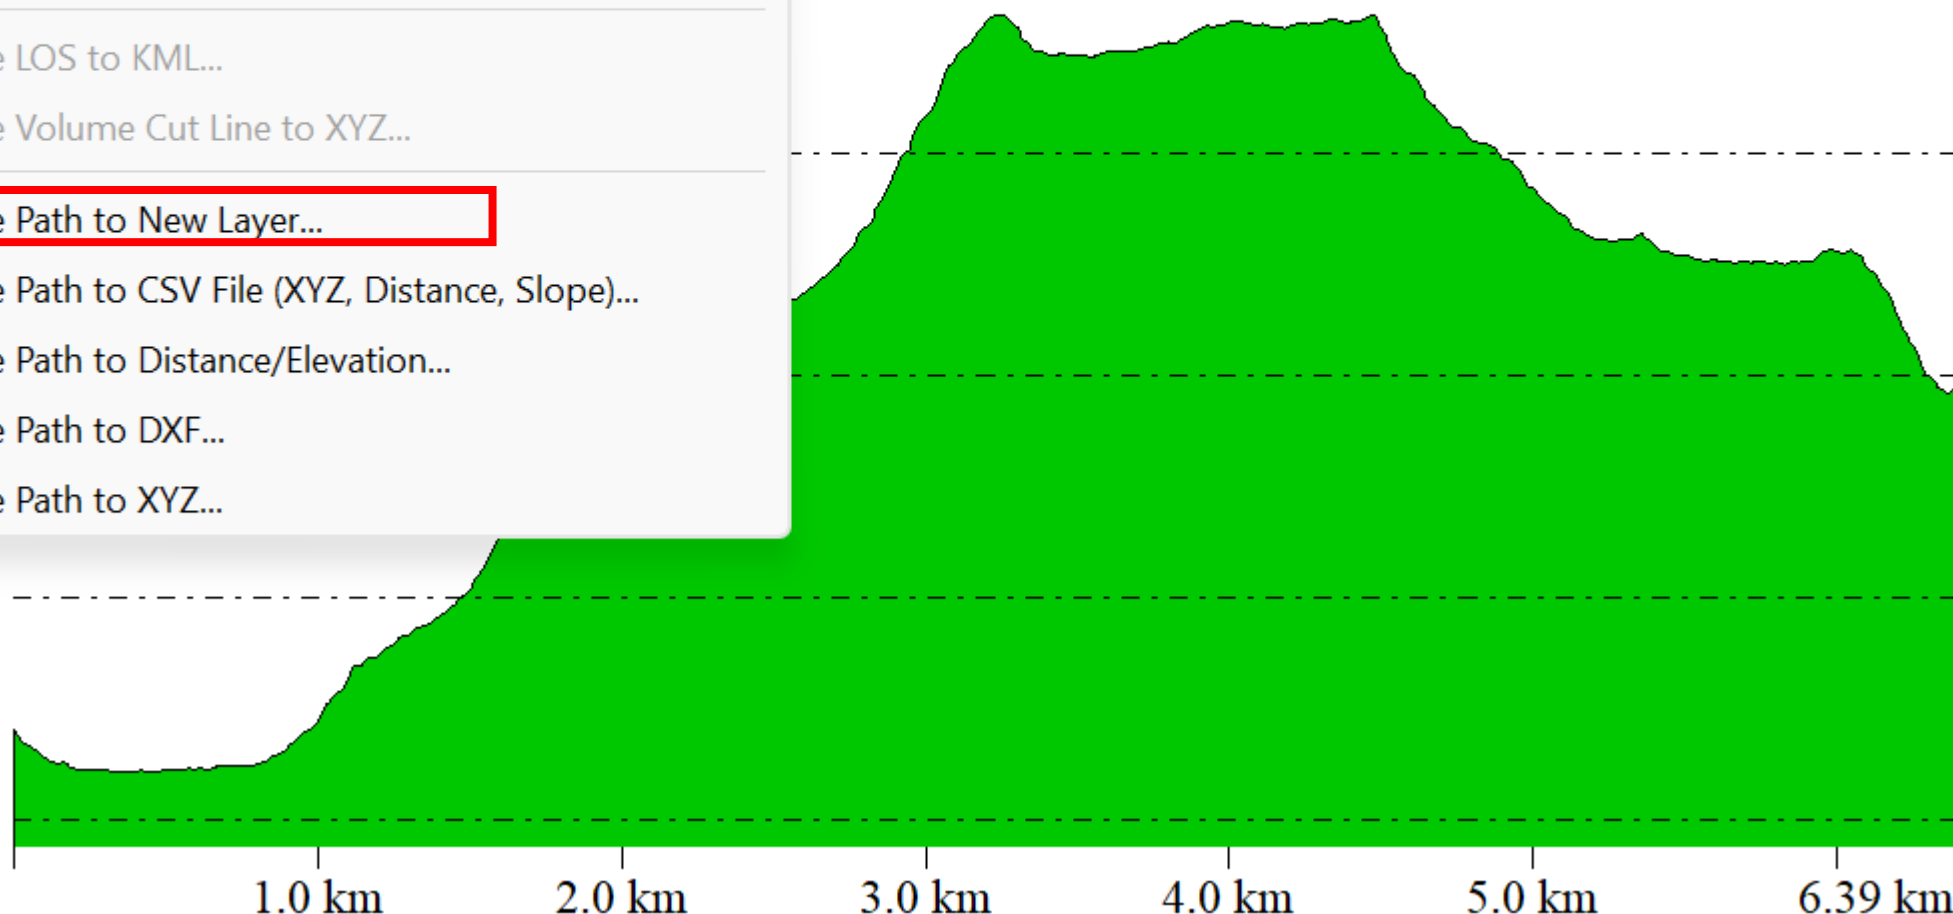


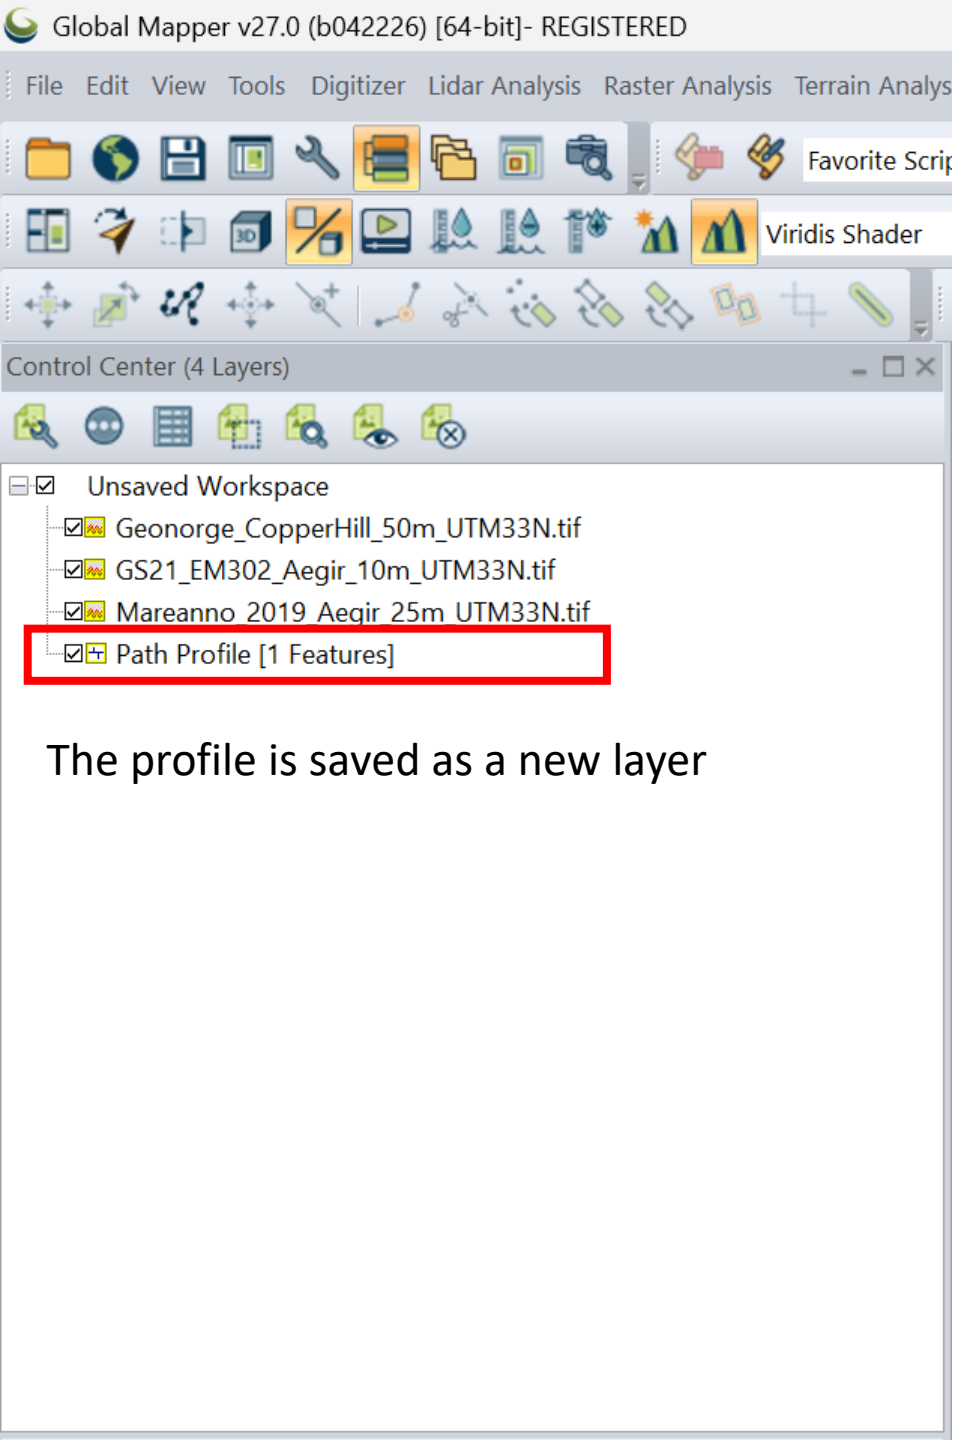

The profile is saved as a new layer

The profile now appears as a thin green line on your map. We can change this display (see next page)


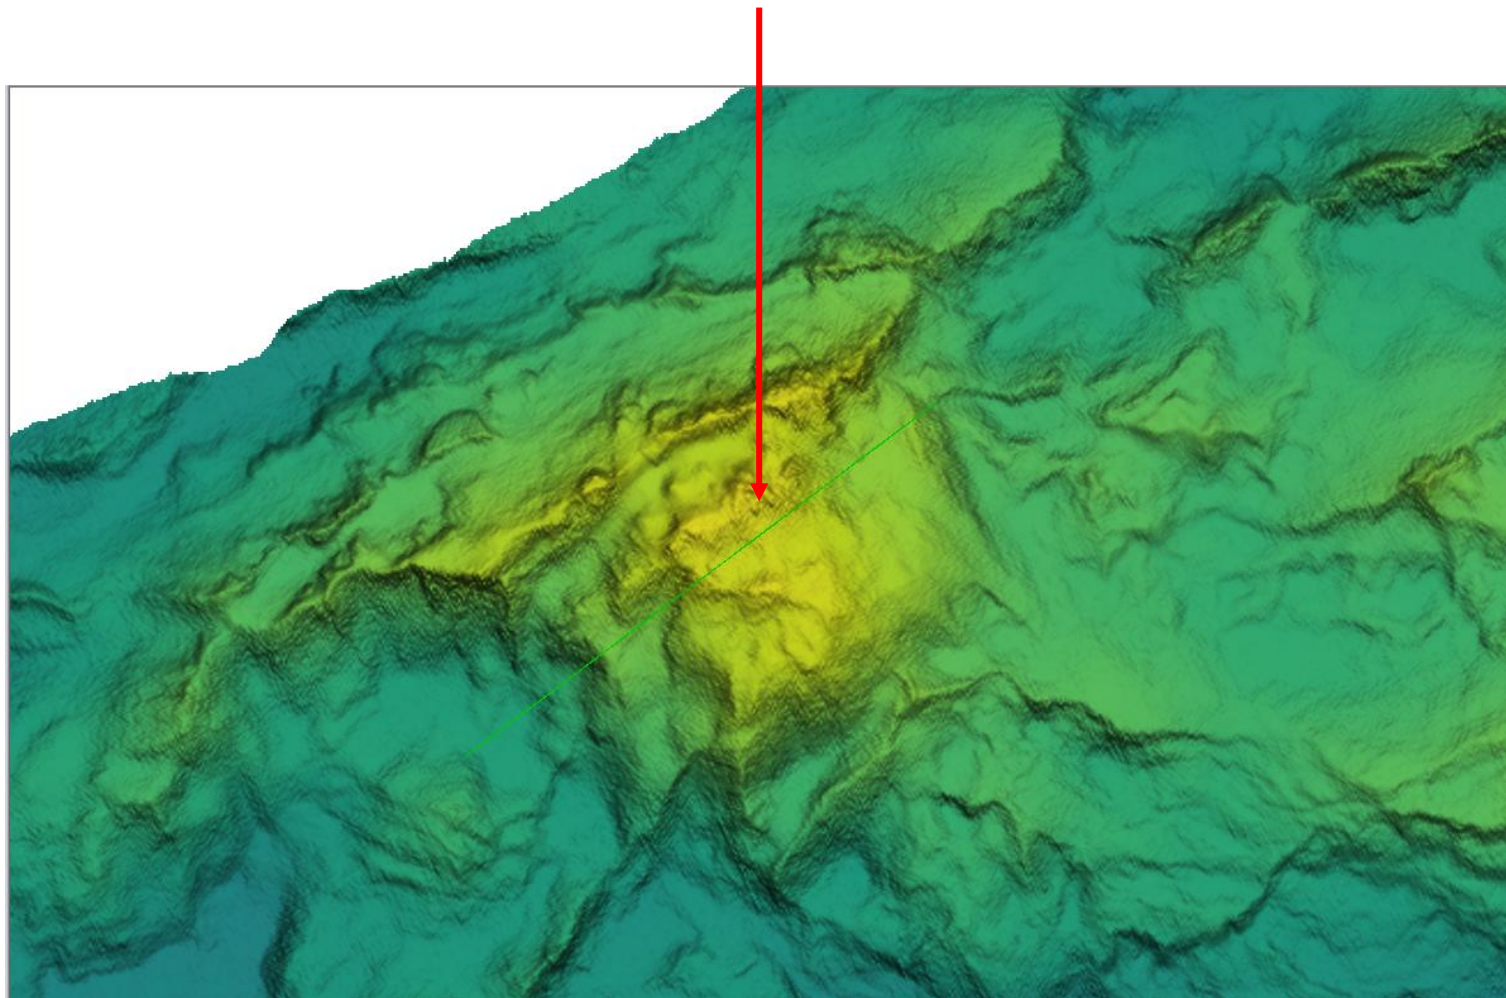


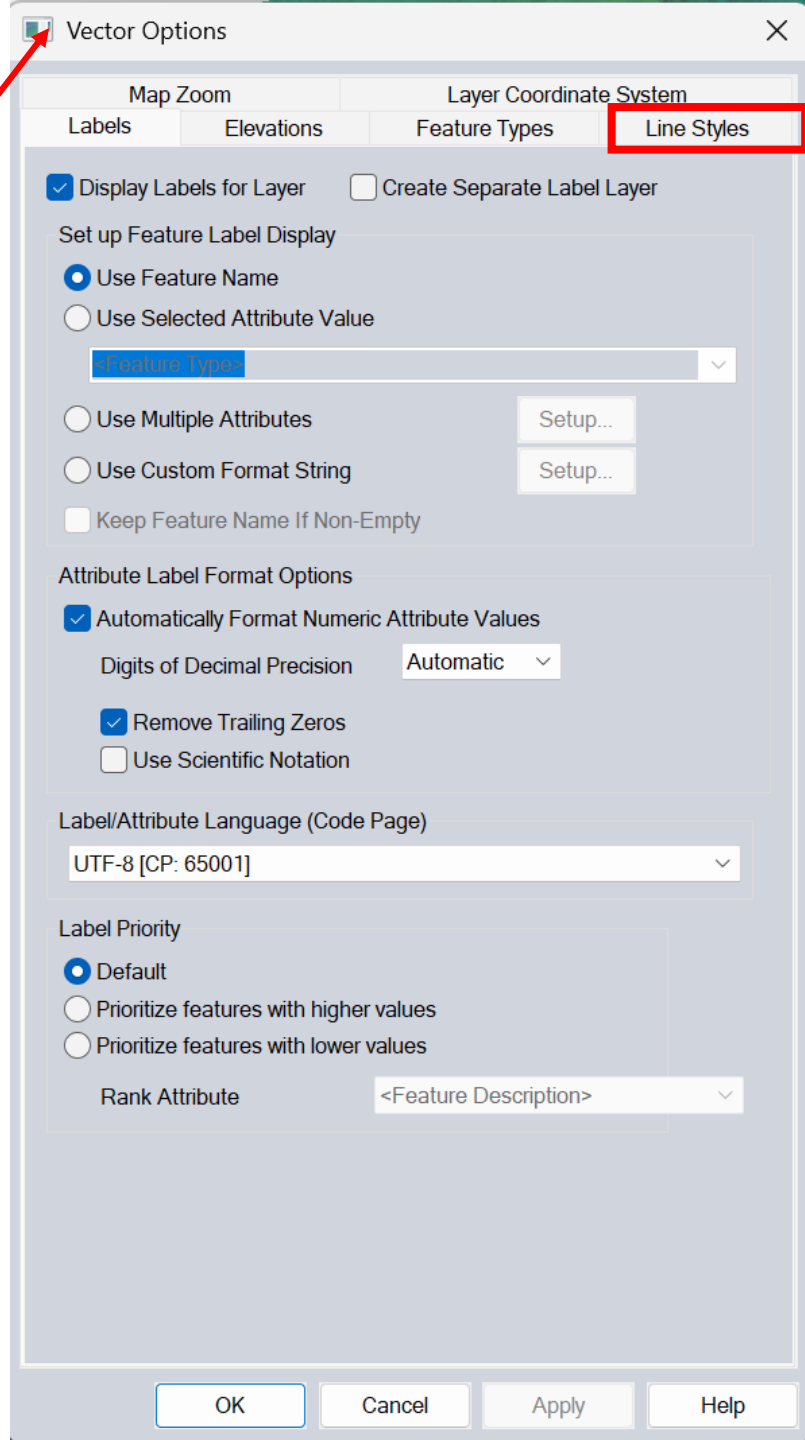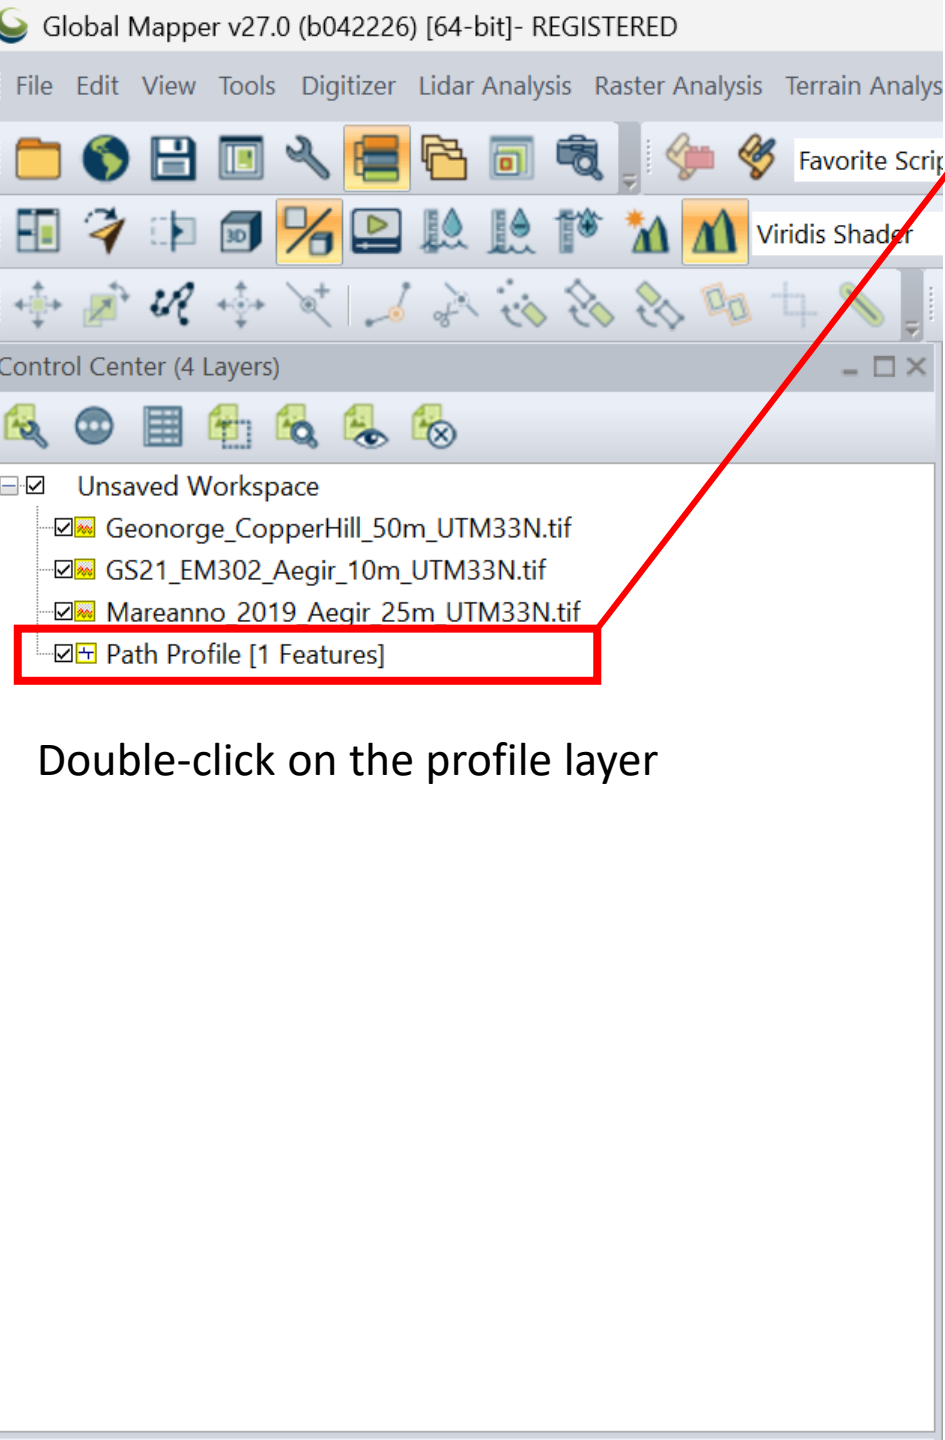





Now the profile appears as a yellow line on your map

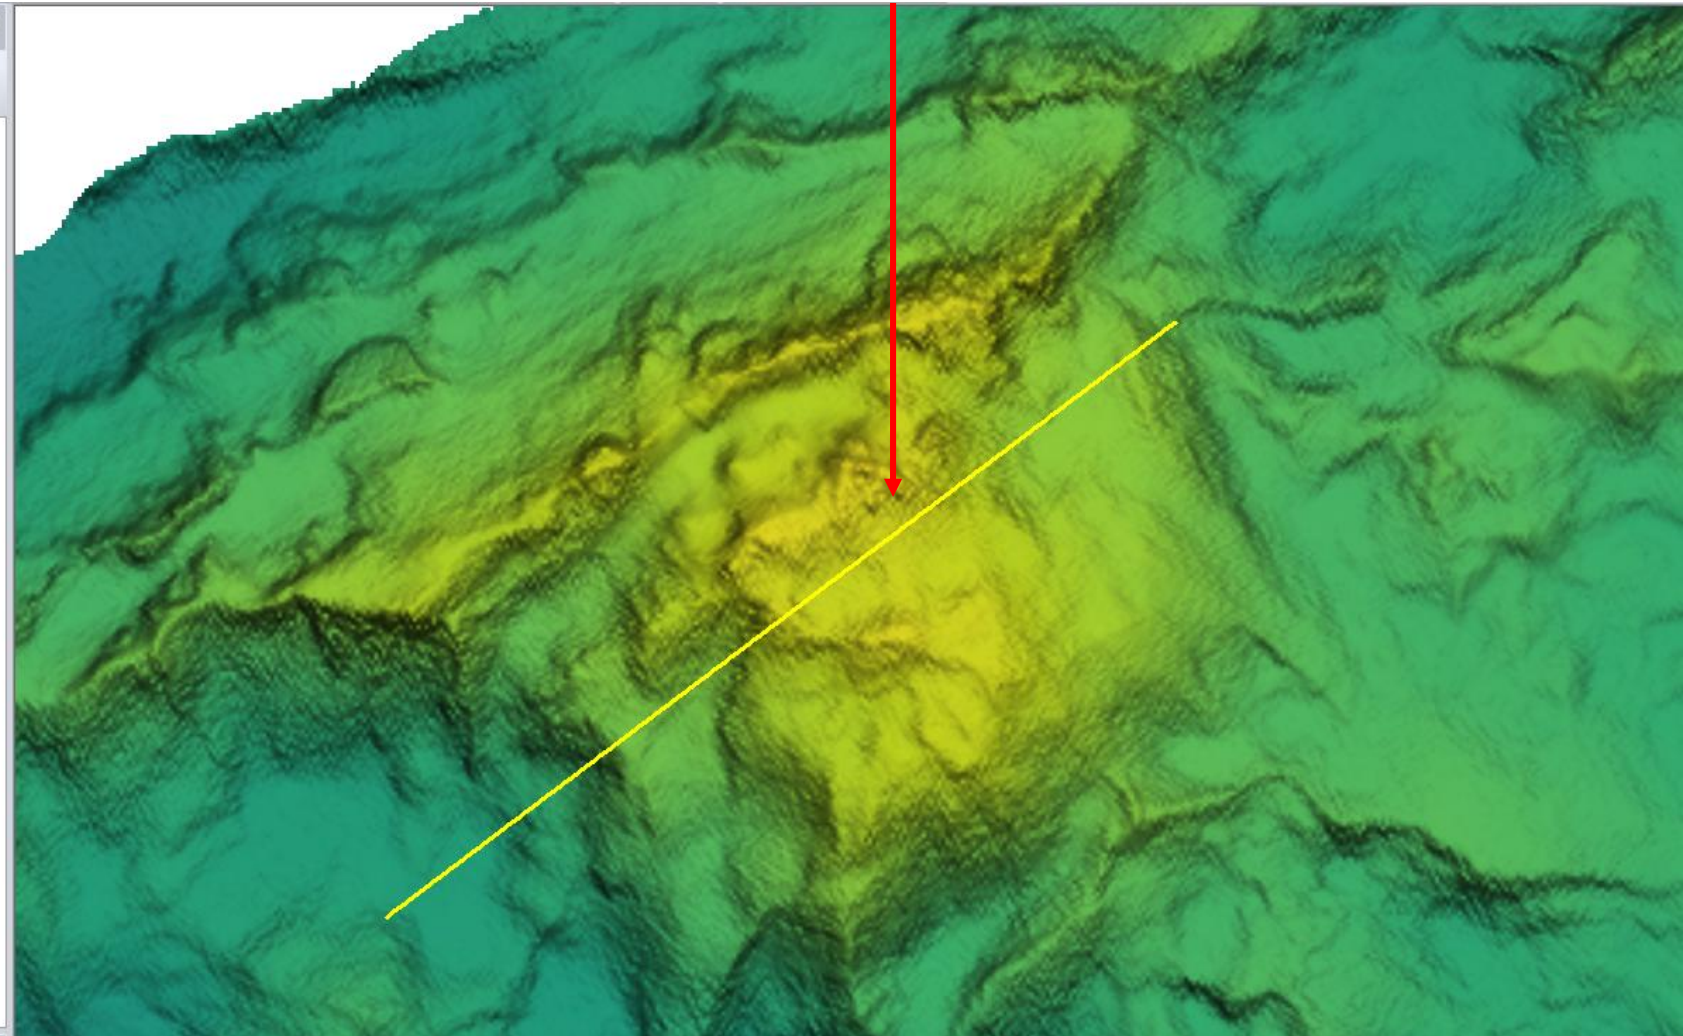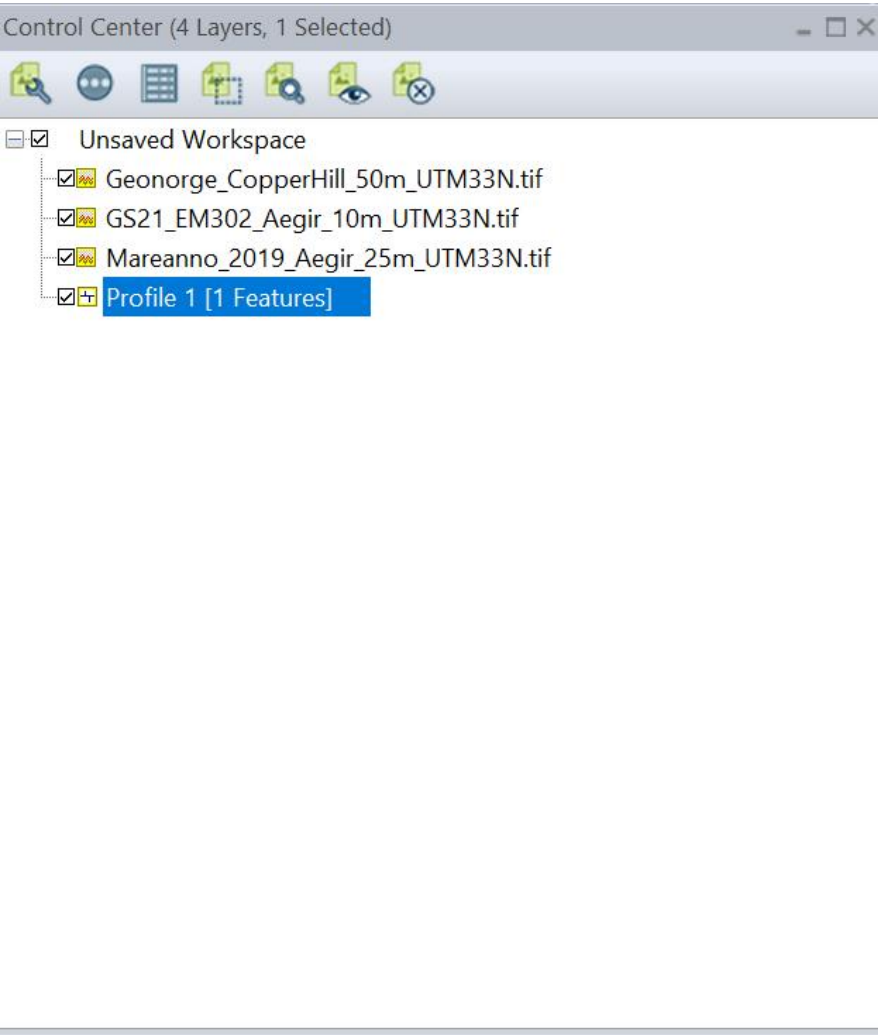

Control Center (4 Layers)

Unsaved Workspace

- Geonorge\_CopperHill\_50m\_UTM33N.tif
- GS21\_EM302\_Aegir\_10m\_UTM33N.tif
- Mareanno\_2019\_Aegir\_25m\_UTM33N.tif
- Path Profile [1 Features]**

Right-click on the profile layer

Options... (Double-Click)  
Metadata... (Double-Click + M)  
Close (Unload) Layer(s)... (DEL)  
Invert Selection  
Search Layer Descriptions (Ctrl + F)  
**Layer Attributes**  
Reload Selected Layers  
Automatically Refresh Selected Layer On Change  
ZOOM\_TO - Zoom to Selected Layer(s)  
GROUP - Set Group to Assign to Selected Layer(s)... [Ctrl+G]  
DESCRIPTION - Edit the Selected Layer's Description...  
SELECT - Select All Features in Selected Layer(s) with Digitizer Tool  
Allow Feature Selection/Search from Selected Layer(s)  
Allow Export From Selected Layer(s)  
Allow Editing of Selected Layer  
RECTIFY - Modify Layer Position/Coordinate System (Re-Rectify)  
SHIFT - Shift Selected Layer(s) a Fixed Distance or Transform Coordinates...  
Set Workspace Coordinate System to Selected Layer System  
Layer Order  
Analysis  
Layer


Attribute Editor (Path Profile)

Sort: Text

| <Feature Name> | <Feature Type>  | <Feature Description> | <Feature Layer Name> | <Index in Layer> | <Last ...> |
|----------------|-----------------|-----------------------|----------------------|------------------|------------|
| <UNNAMED FE... | Unknown Line... | CrossProfile          | Path Profile         | 0                |            |


Rows: 1

In this **attribute editor** you can edit additional settings

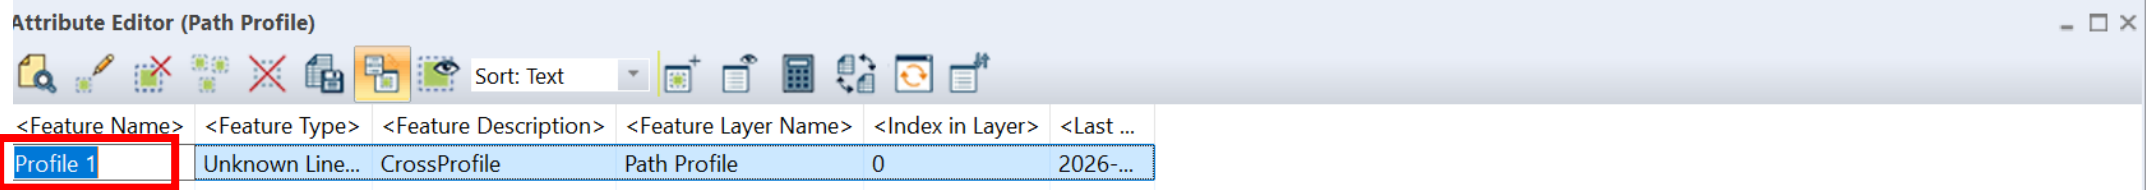

You can edit the name of the profile  
by clicking within the field

Select the profile you want to edit  
(there can be several profiles listed in  
this attribute table) and click on the  
pencil

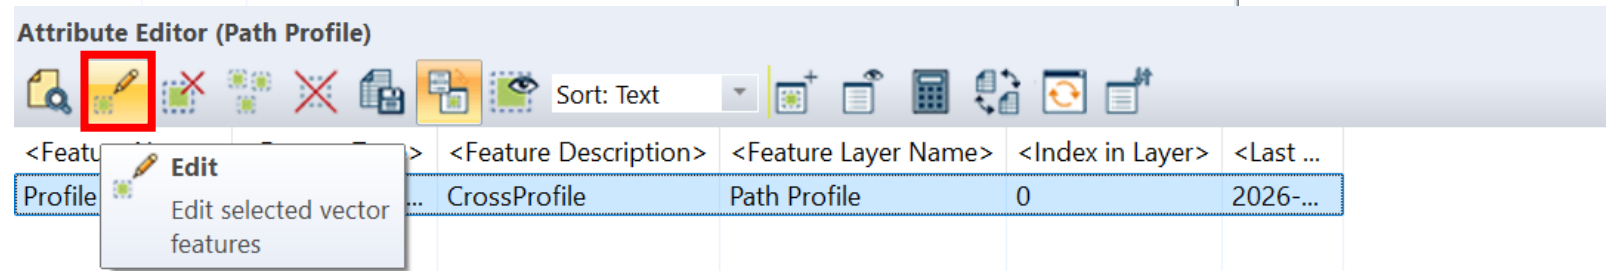



Modify Feature Info

Name: Profile 1 Vertices...

Feature Type  
Unknown Line Type Create New Type...

Feature Layer (\* Required)  
Path Profile  
<Create New Layer for Feature>  
F Geonorge\_CopperHill\_50m\_UTM33N.tif  
GS21\_EM302\_Aegir\_10m\_UTM33N.tif  
Mareanno\_2019\_Aegir\_25m\_UTM33N.tif  
Path Profile  
F <User Created Features>

☐ Use Default Style for Selected Feature Type  
☒ Specify Style to Use When Rendering Feature  
Customize Style... Sample Label

Feature Attributes

| Attribute Name | Attribute Value |
|----------------|-----------------|
|----------------|-----------------|

Add... Edit... Delete Add File Link(s)... Add Time Stamp  
Add/Edit Notation...

Altitude Mode: Use Layer Setting

Apply Settings from Selected Feature Apply Settings from Previous Feature  
Edit Fly-Through Path...

☐ Automatically apply these settings to new features of the same type

OK Cancel

I advise to select a new layer for this feature to keep track on the layers you produce

In addition I recommend to give the feature layer the same name as the profile

Modify Feature Info

Name: Profile 1 Vertices...

Feature Type  
Unknown Line Type Create New Type...

Feature Layer (\* Required)  
Profile 1

Feature Description  
☐ Use Custom Description: CrossProfile

Feature Style  
☐ Use Default Style for Selected Feature Type  
☒ Specify Style to Use When Rendering Feature  
Customize Style... Sample Label

Feature Attributes

| Attribute Name | Attribute Value |
|----------------|-----------------|
|----------------|-----------------|

Add... Edit... Delete Add File Link(s)... Add Time Stamp  
Add/Edit Notation...


Altitude Mode: Use Layer Setting

Apply Settings from Selected Feature Apply Settings from Previous Feature  
Edit Fly-Through Path...

☐ Automatically apply these settings to new features of the same type


OK Cancel

Now we activate the **digitizer tool** to create a point feature at the start of the profile, also known as **Start Of Line (SOL)**. Just left-click at the end of the line

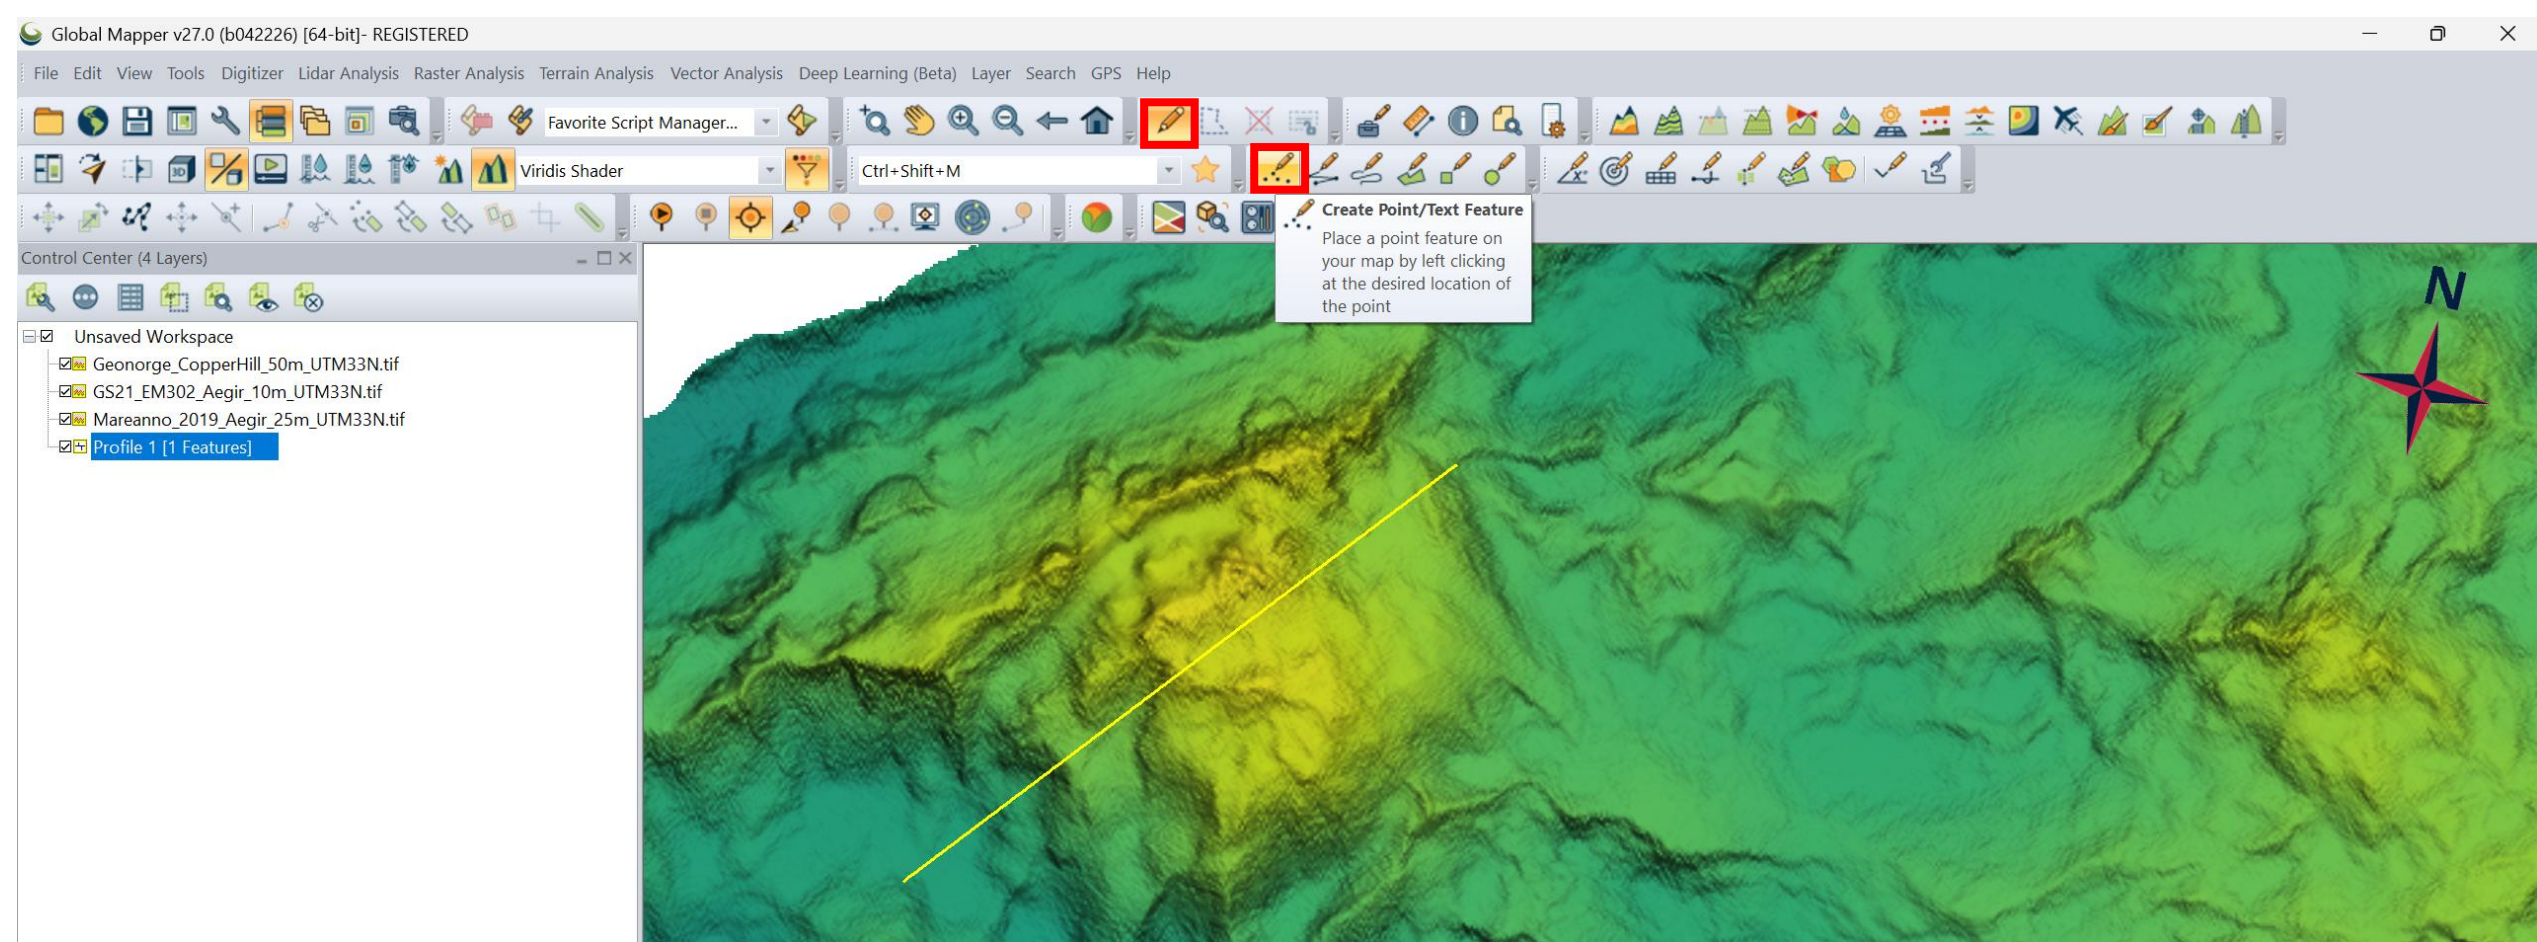



As soon as the point has been set on the line, this window appears

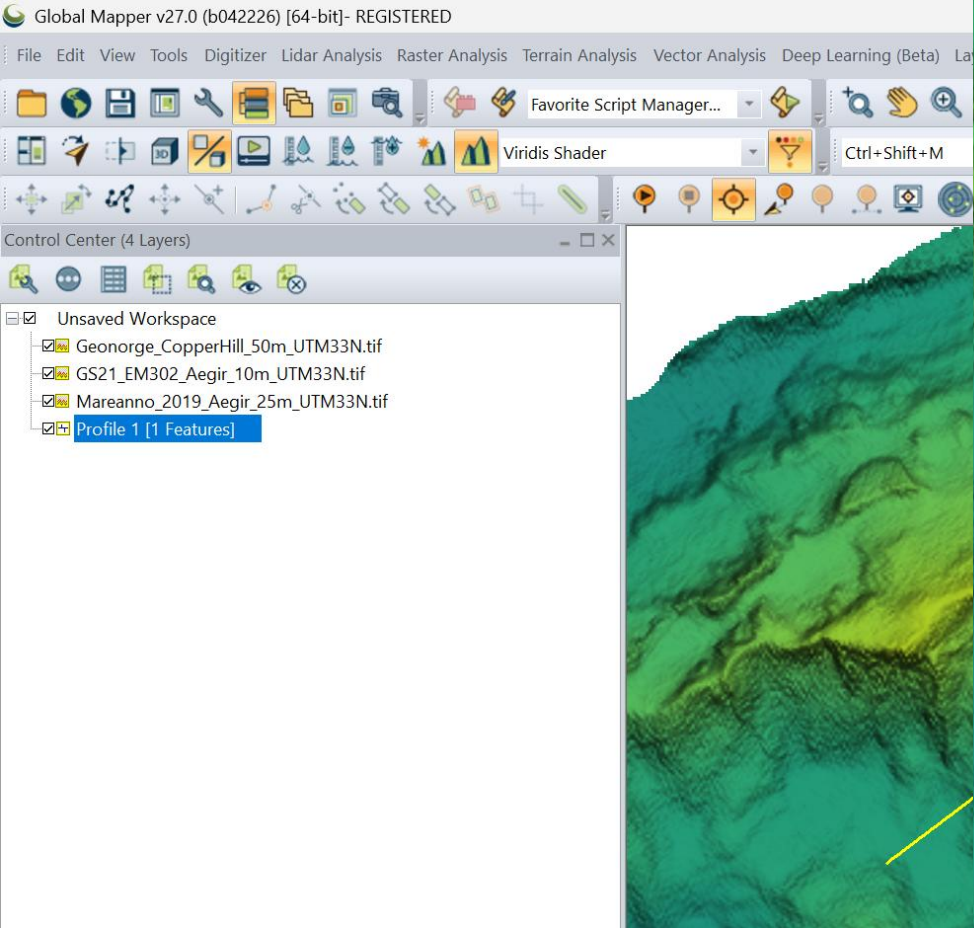

Modify Feature Info

Name:  Location...

Feature Type  
Unknown Point Feature

Feature Layer (\* Required)

Feature Description  
☐ Use Custom Description:

Feature Style  
☒ Use Default Style for Selected Feature Type  
☐ Specify Style to Use When Rendering Feature

Point Symbol

Rotation... Symbol Size... Name Font/Pos...

3D Model:


Feature Attributes


| Attribute Name | Attribute Value |
|----------------|-----------------|
| ELEVATION      | -1898.2213 m    |

Altitude Mode:


Model Placement:

☐ Automatically apply these settings to new features of the same type

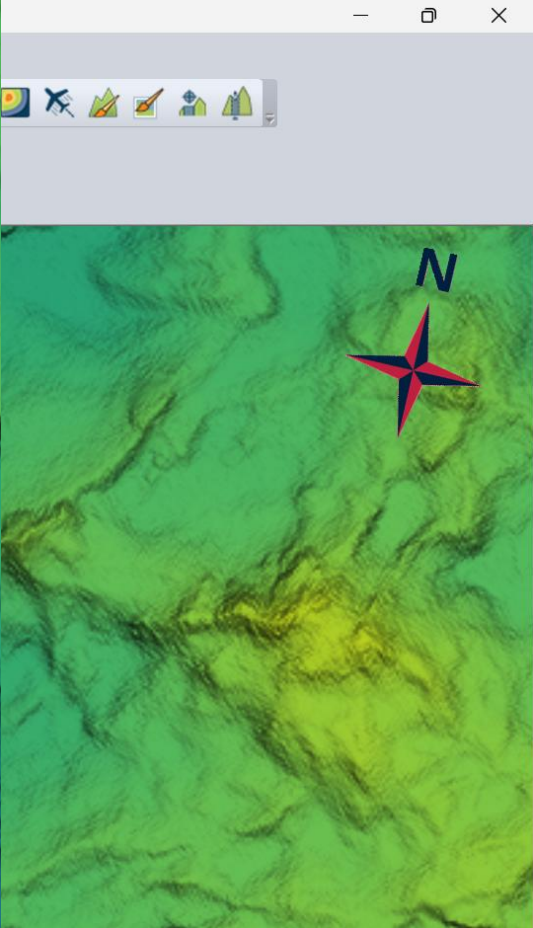

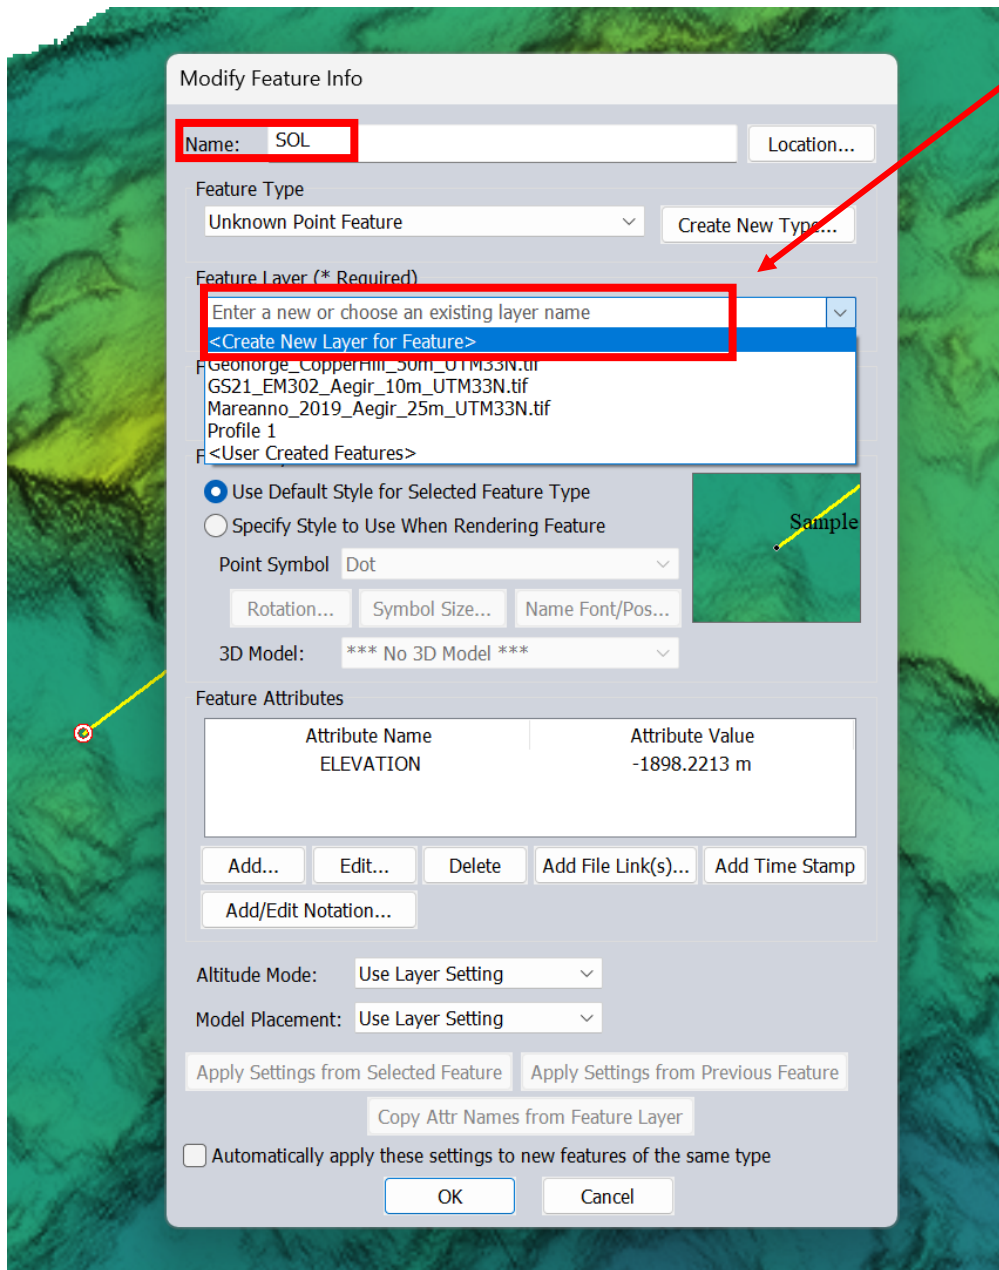


You want to name the point SOL and create a new layer which you also name SOL

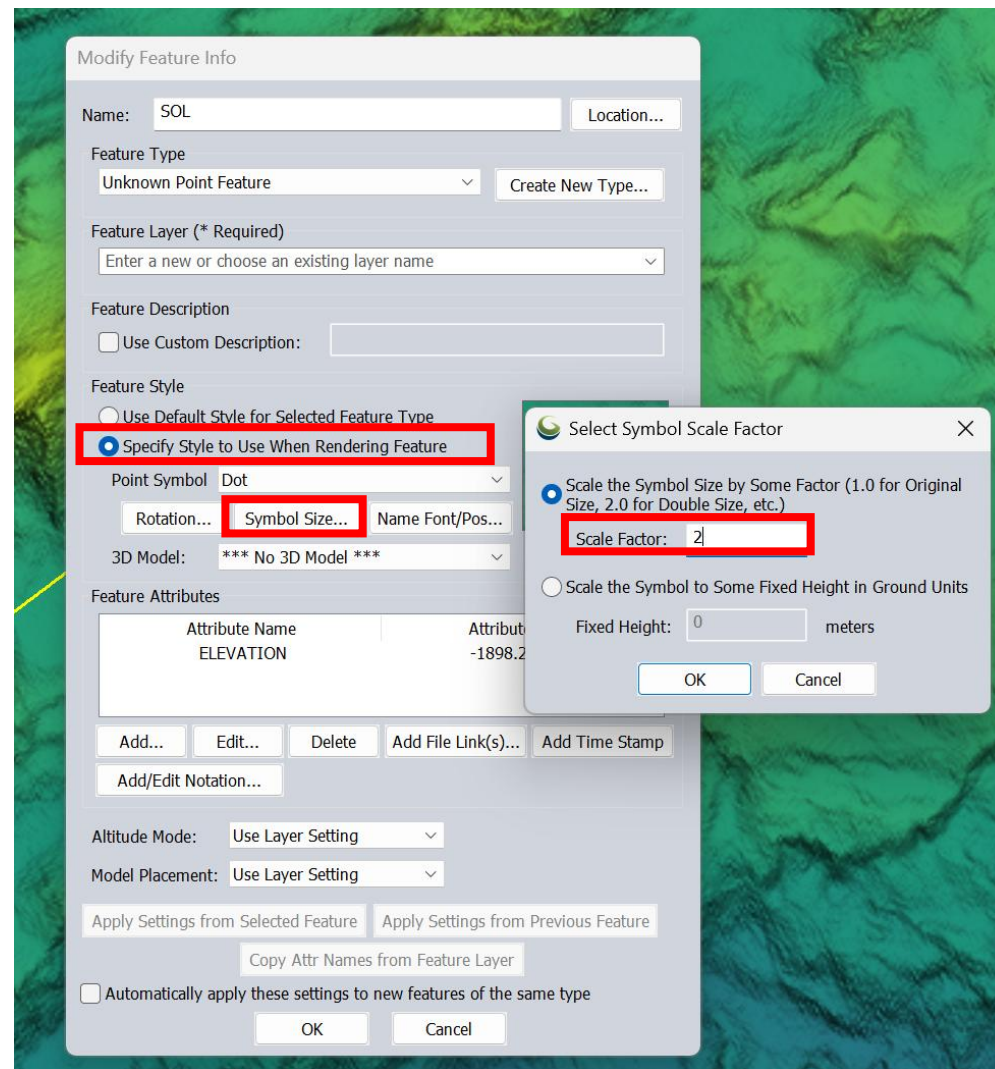

Other fun settings...



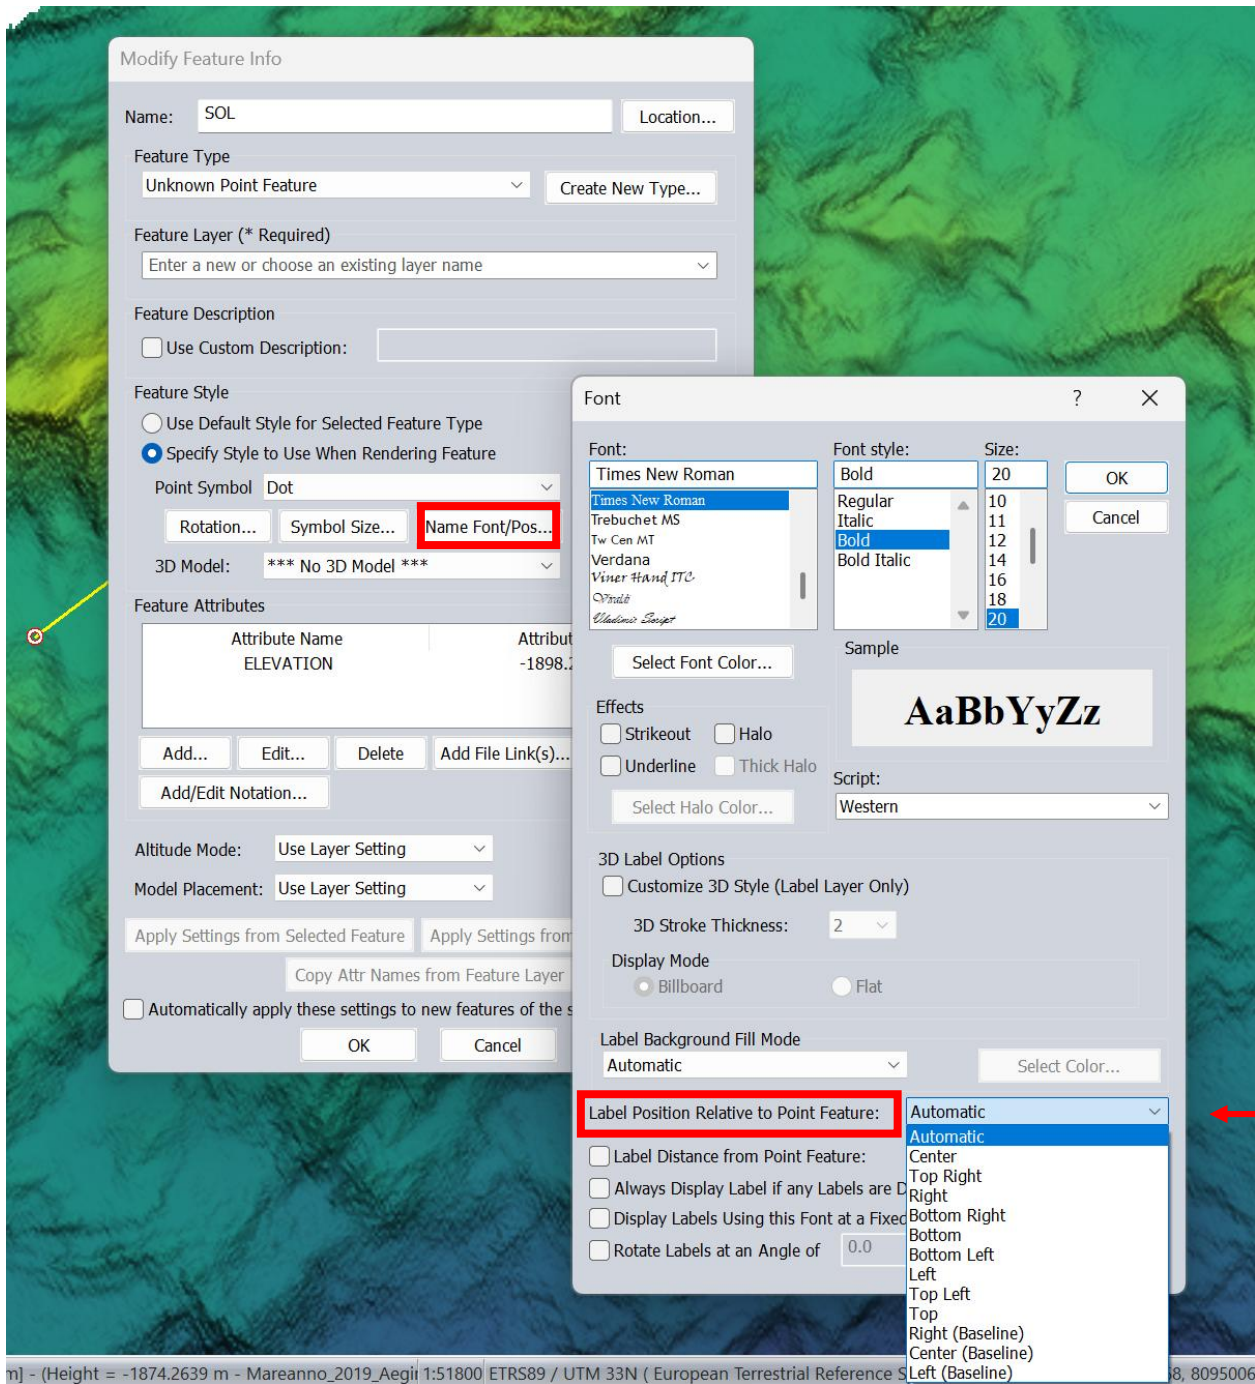

You may want to choose a rather big font size, select the font colour and adjust the label position relative to the point feature

More settings can again be found by a right-click to open the layer attribute table

Control Center (5 Layers)

Unsaved Workspace

Geonorge\_CopperHill\_50m\_UTM33N.tif

GS21\_EM302\_Aegir\_10m\_UTM33N.tif

Mareanno\_2019\_Aegir\_25m\_UTM33N.tif

Profile 1 [1 Features]

SOL [1 Features]

Options... (Double-Click)

Metadata... (Double-Click + M)

Close (Unload) Layer(s)... (DEL)

Invert Selection

Search Layer Descriptions (Ctrl + F)

Layer Attributes

Reload Selected Layers

Automatically Refresh Selected Layer On Change

ZOOM\_TO - Zoom to Selected Layer(s)

GROUP - Set Group to Assign to Selected Layer(s)... [Ctrl+G]

DESCRIPTION - Edit the Selected Layer's Description...

SELECT - Select All Features in Selected Layer(s) with Digitizer Tool

Allow Feature Selection/Search from Selected Layer(s)

Allow Export From Selected Layer(s)

Allow Editing of Selected Layer

RECTIFY - Modify Layer Position/Coordinate System (Re-Rectify)

SHIFT - Shift Selected Layer(s) a Fixed Distance or Transform Coordinates...

Set Workspace Coordinate System to Selected Layer System

Layer Order

Analysis

Layer

Attribute Editor (SOL)

Sort: Text

| <Feature Name> | <Feature Type> | ELEVATION   | <Feature Description> | <Feature Layer Name> | <Index in Layer> | <Last Modified Time> |
|----------------|----------------|-------------|-----------------------|----------------------|------------------|----------------------|
| SOL            | Unknown Poi... | -1898.22... | Unknown Point Feat... | SOL                  | 0                | 2026-05-13T22:58:42  |

Rows: 1

# Attribute Editor (SOL)

| <Feature Name> | <Feature Type> | ELEVATION   | <Feature Description> | <Feature Layer> |
|----------------|----------------|-------------|-----------------------|-----------------|
| SOL            | Unknown Poi... | -1898.22... | Unknown Point Feat... | SOL             |

## Modify Feature Info

Name:  Location...

Feature Type  
 Create New Type...

Feature Layer (\* Required)

Feature Description  
☐ Use Custom Description:

Feature Style  
☐ Use Default Style for Selected Feature Type  
☒ Specify Style to Use When Rendering Feature

Point Symbol

Rotation... Symbol Size... Name Font/Pos...

3D Model:

Feature Attributes

| Attribute Name | Attribute Value |
|----------------|-----------------|
| ELEVATION      | -1898.2213 m    |

Add... Edit... Delete Add File Link(s)... Add Time Stamp

Add/Edit Notation...

Altitude Mode:

Model Placement:

Apply Settings from Selected Feature Apply Settings from Previous Feature


☐ Automatically apply these settings to new features of the same type

OK Cancel




Now you want to repeat these steps for another point marking **End Of Line (EOL)**

Your map and layers should look like this:

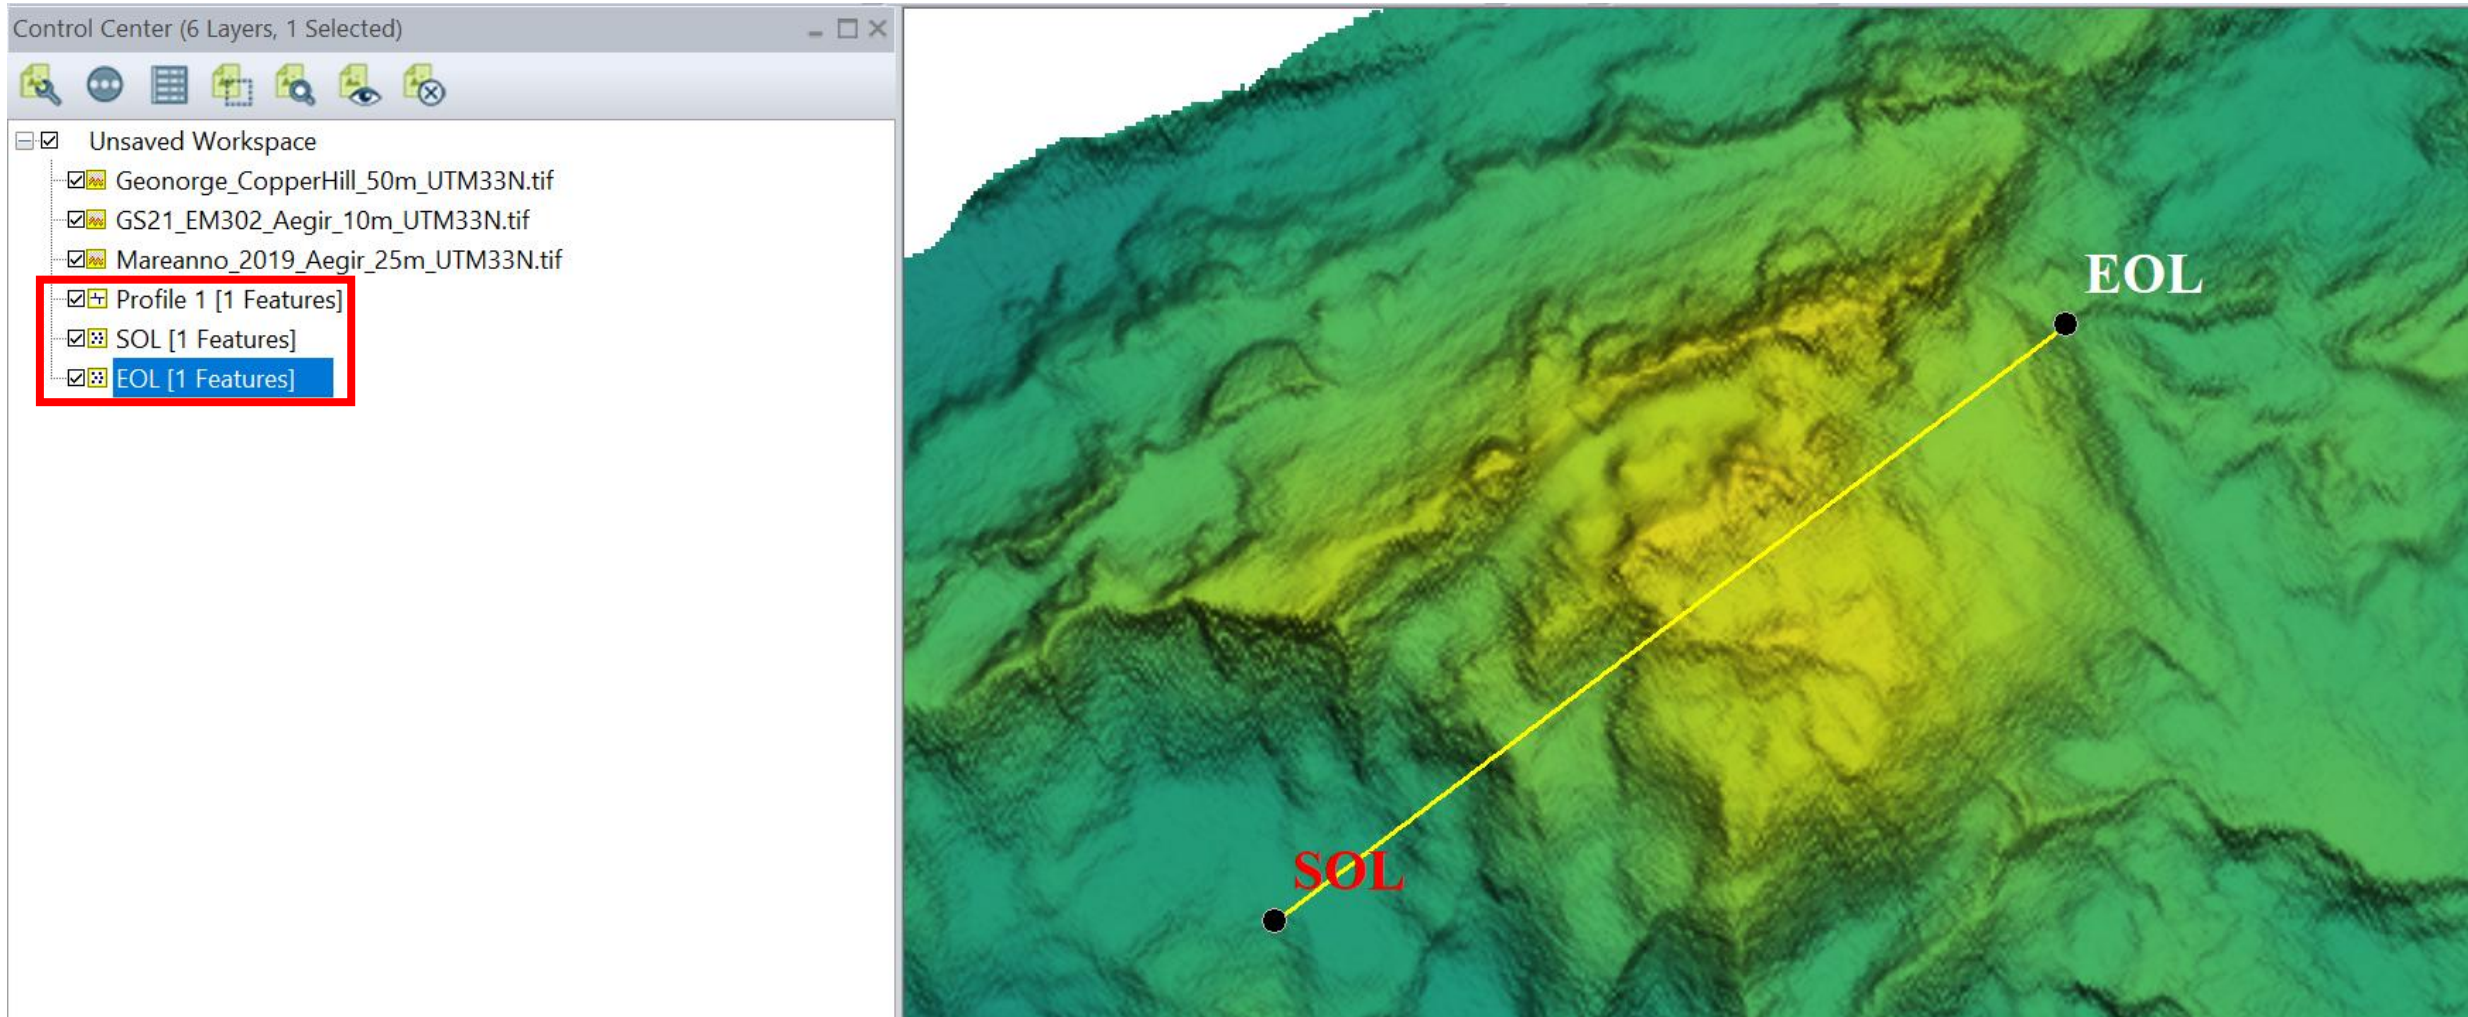




To check the profile of the transect again use the **digitizer tool** and left-click on the line

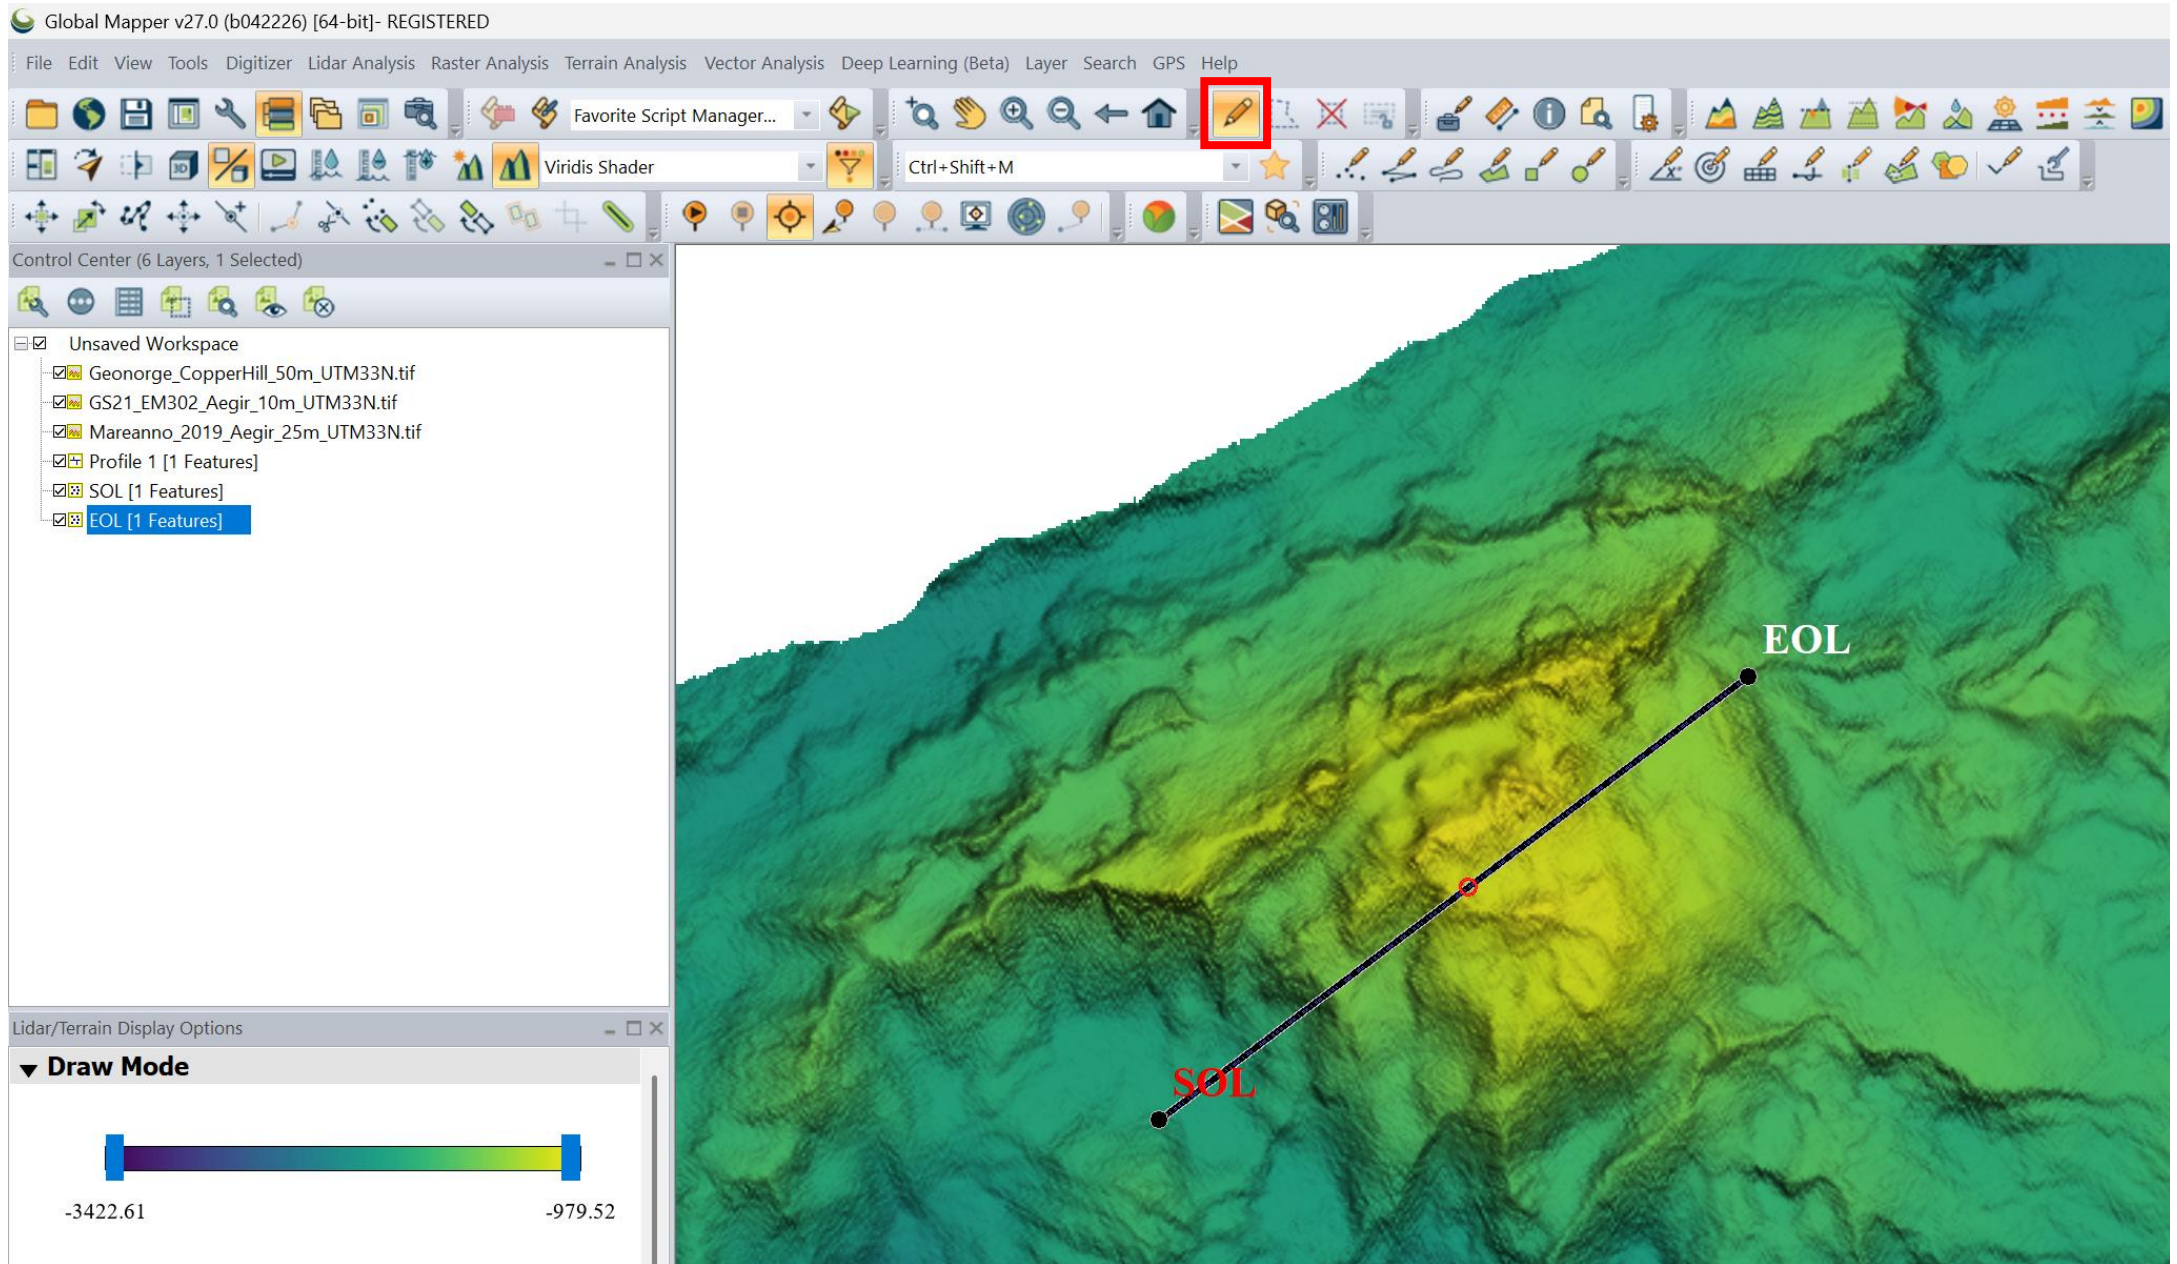





Right-click on the line and navigate as shown to path profile

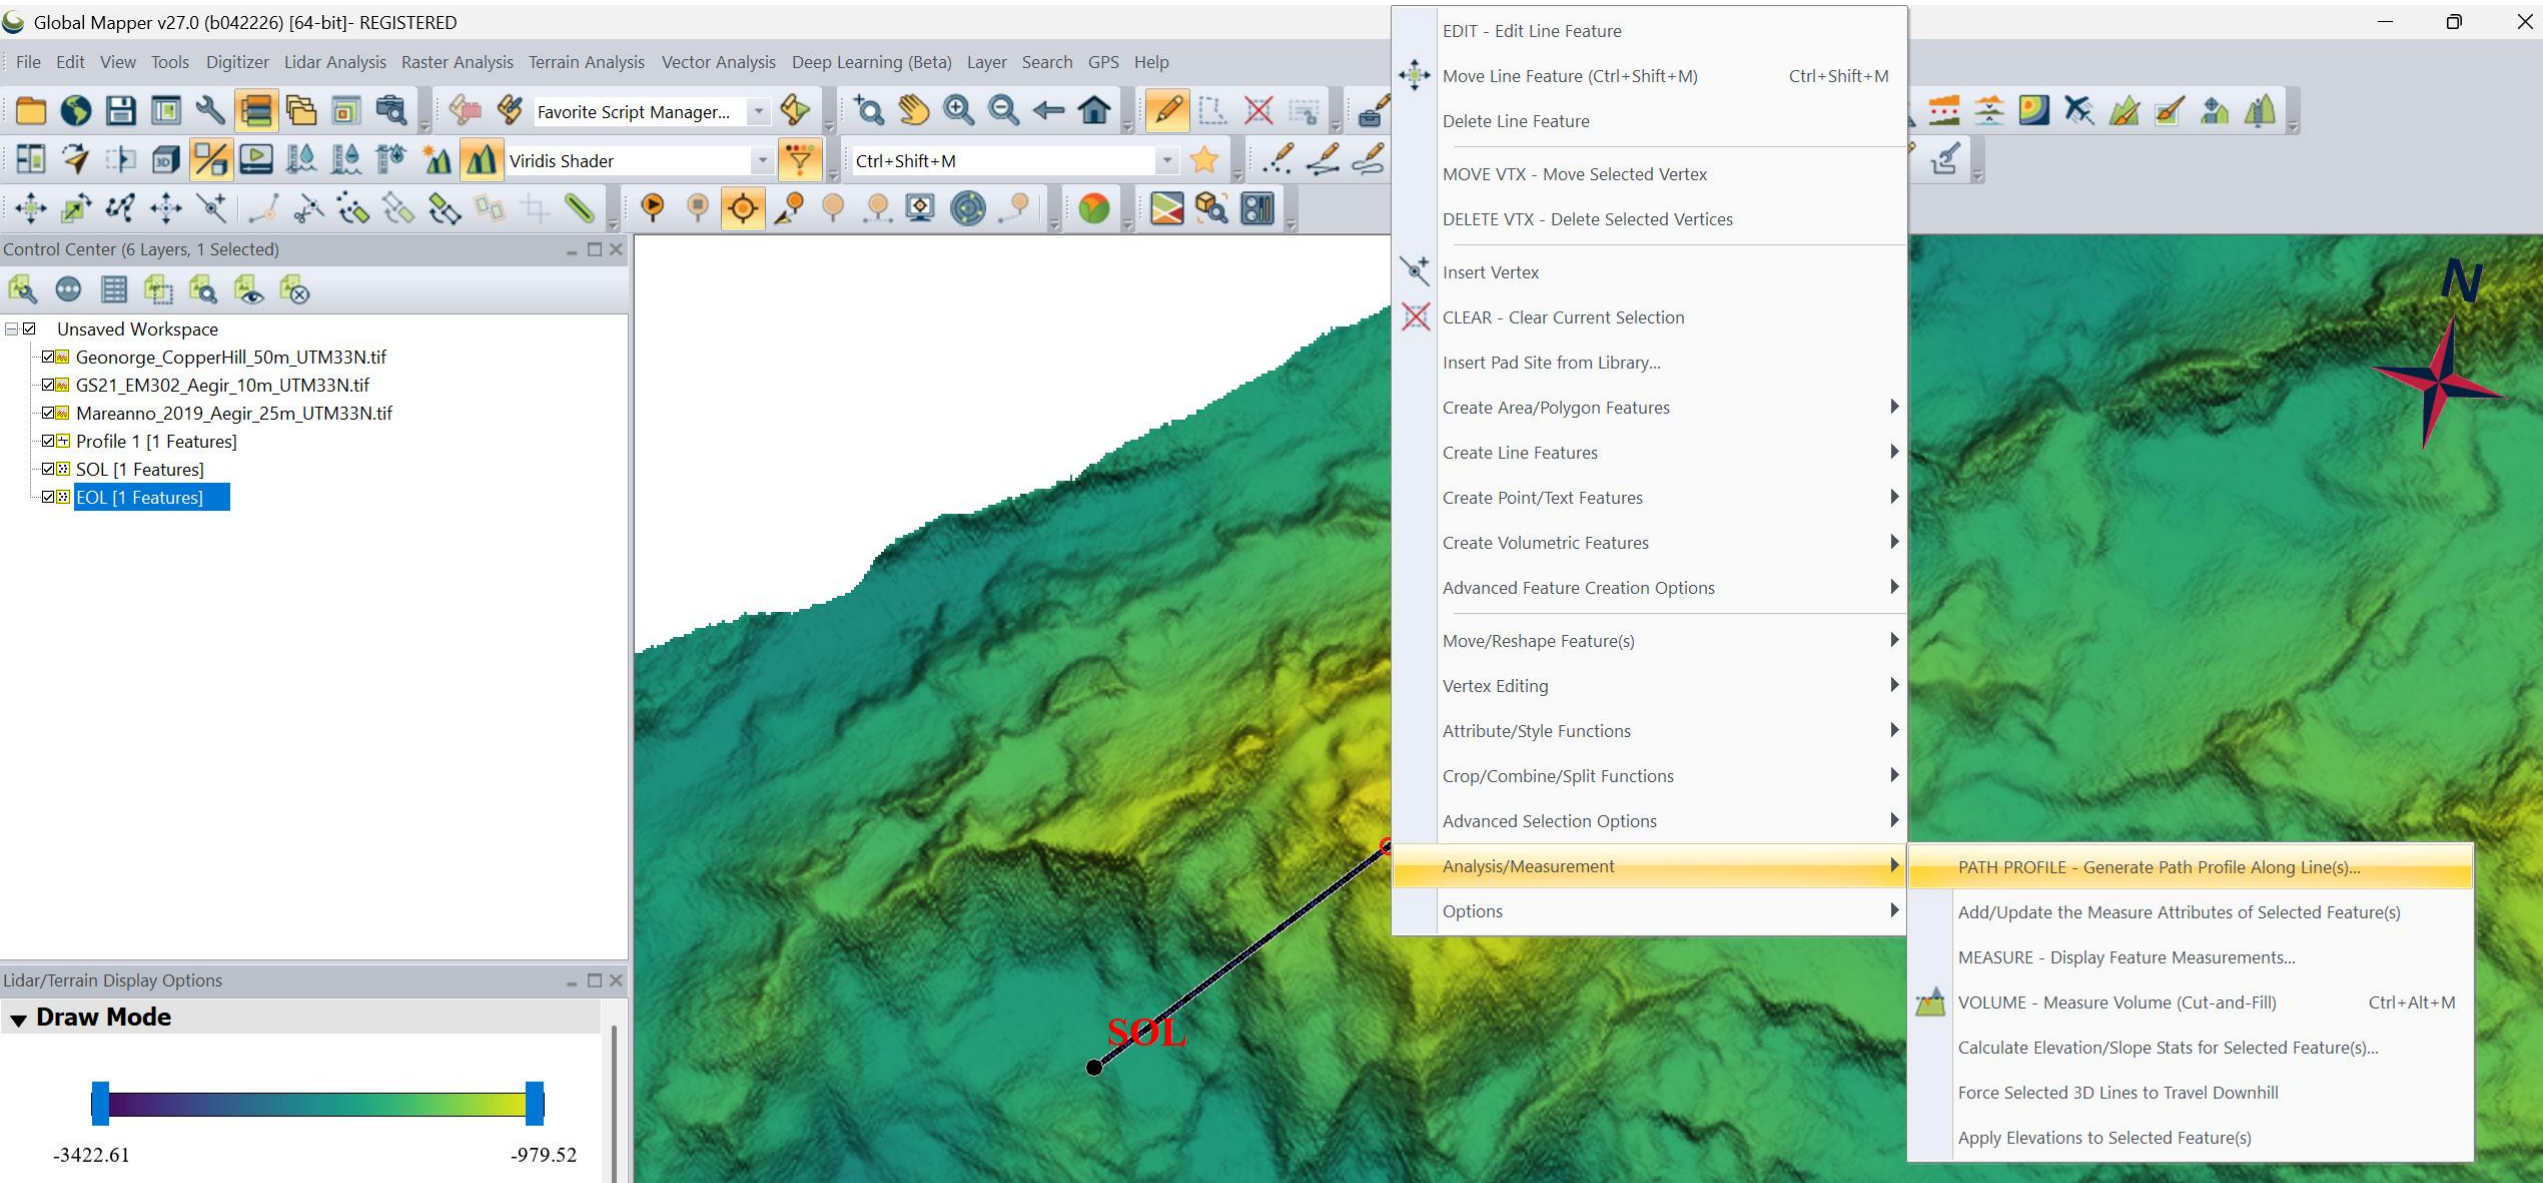



The path profile appears and can be drawn in any corner of the screen. If minimized, the transect line cannot be erased or deselected until the profile window has been closed again

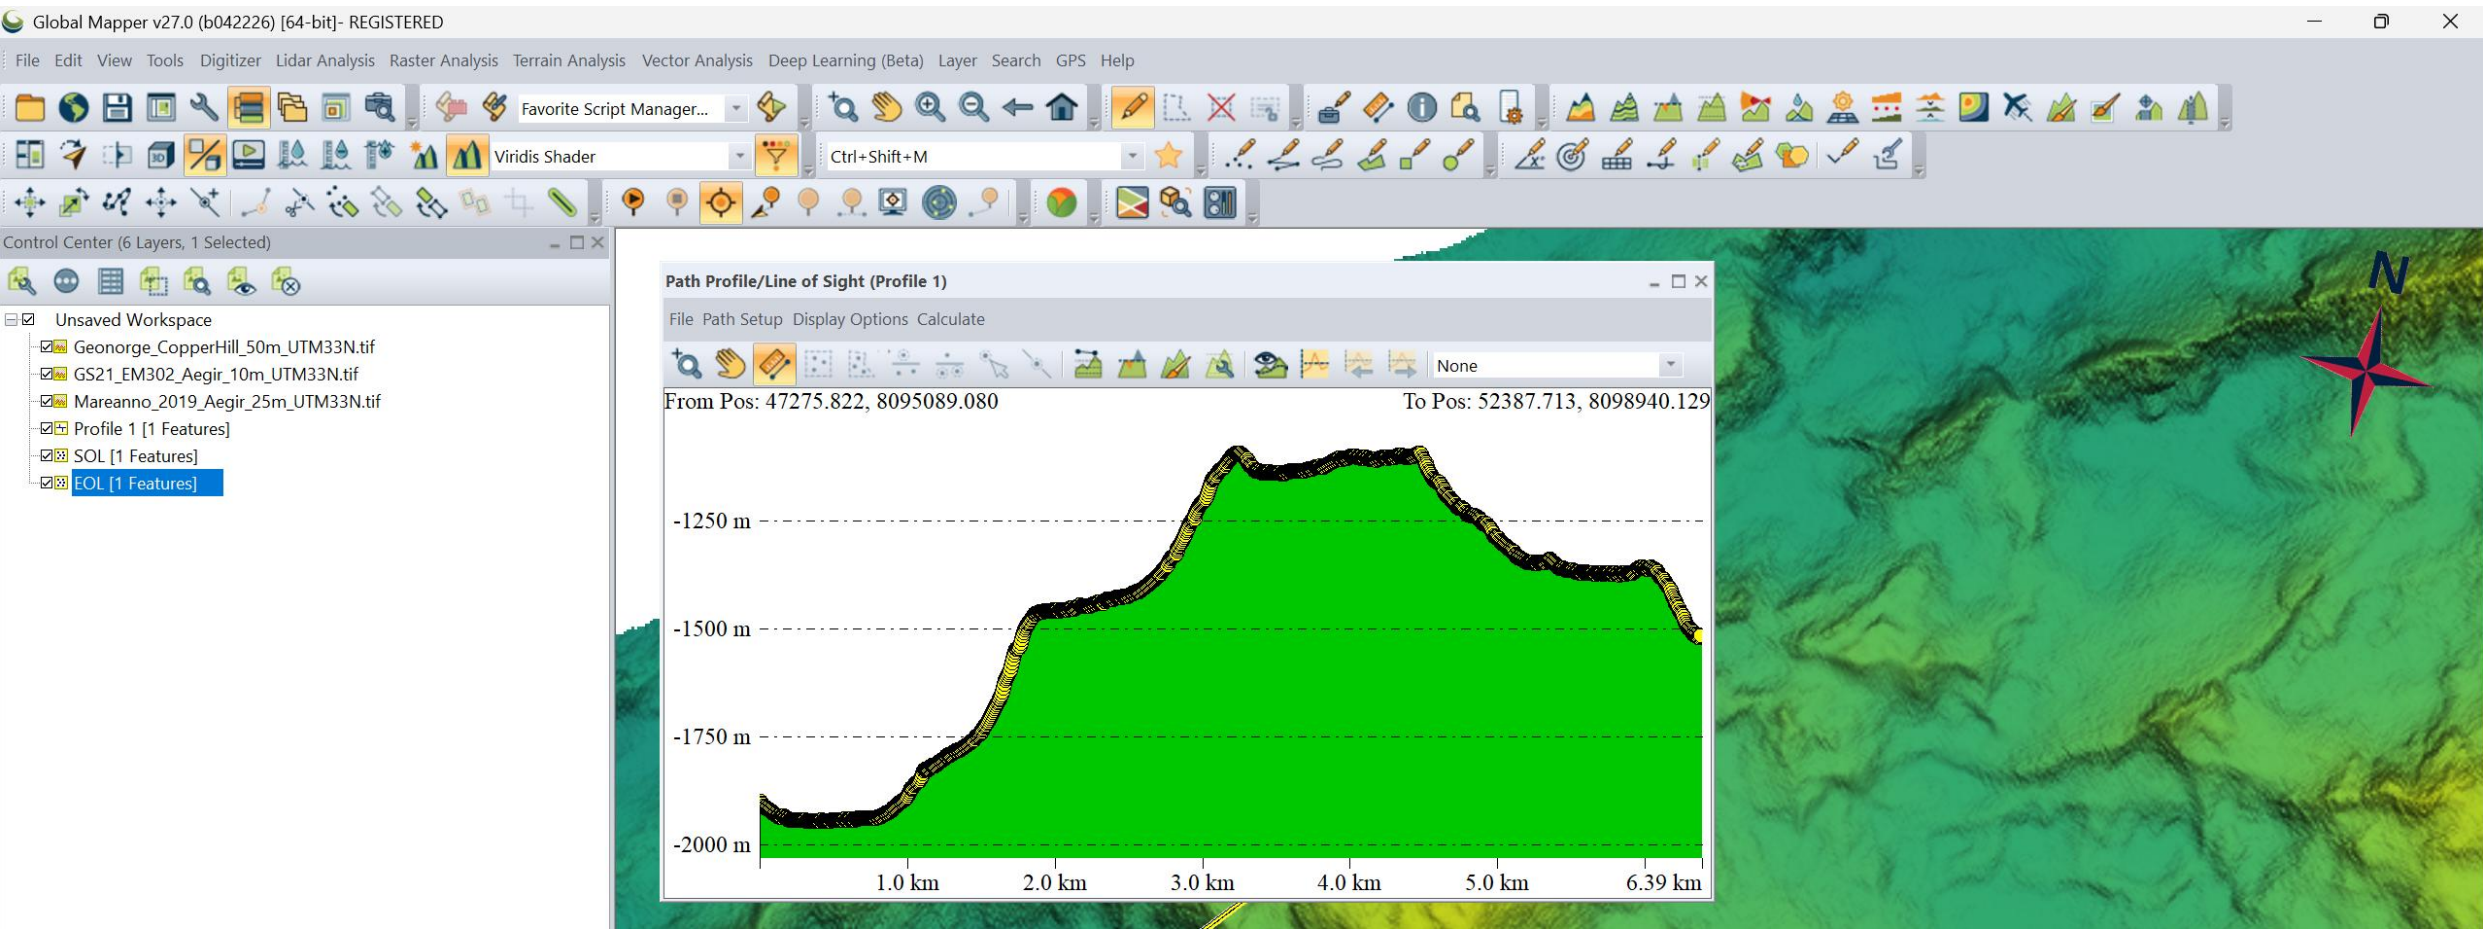

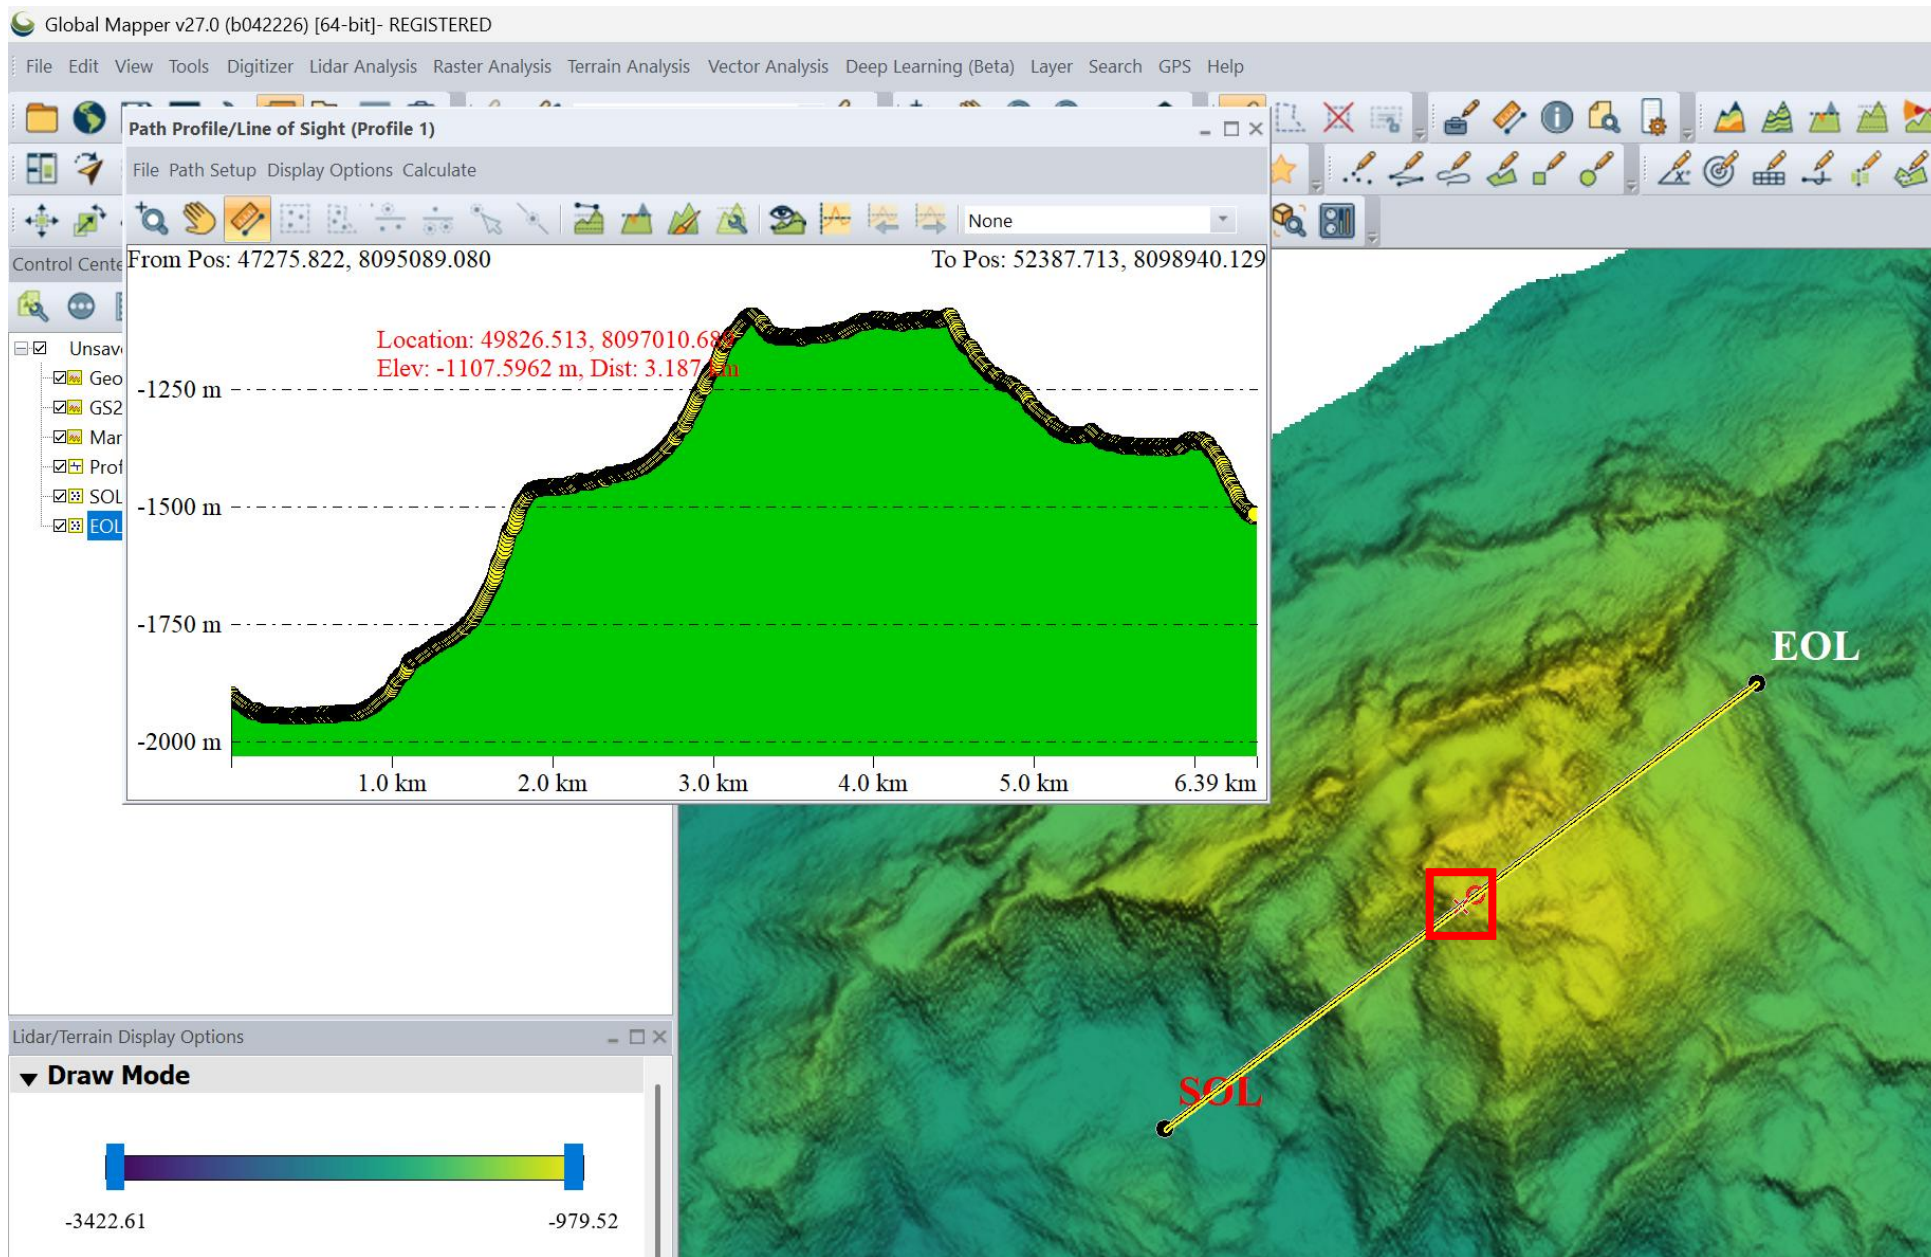


Use the cursor to move  
along the profile


You will see a red cross  
following the line on  
your map




## How to make a GeoTIFF file for the ROV shack

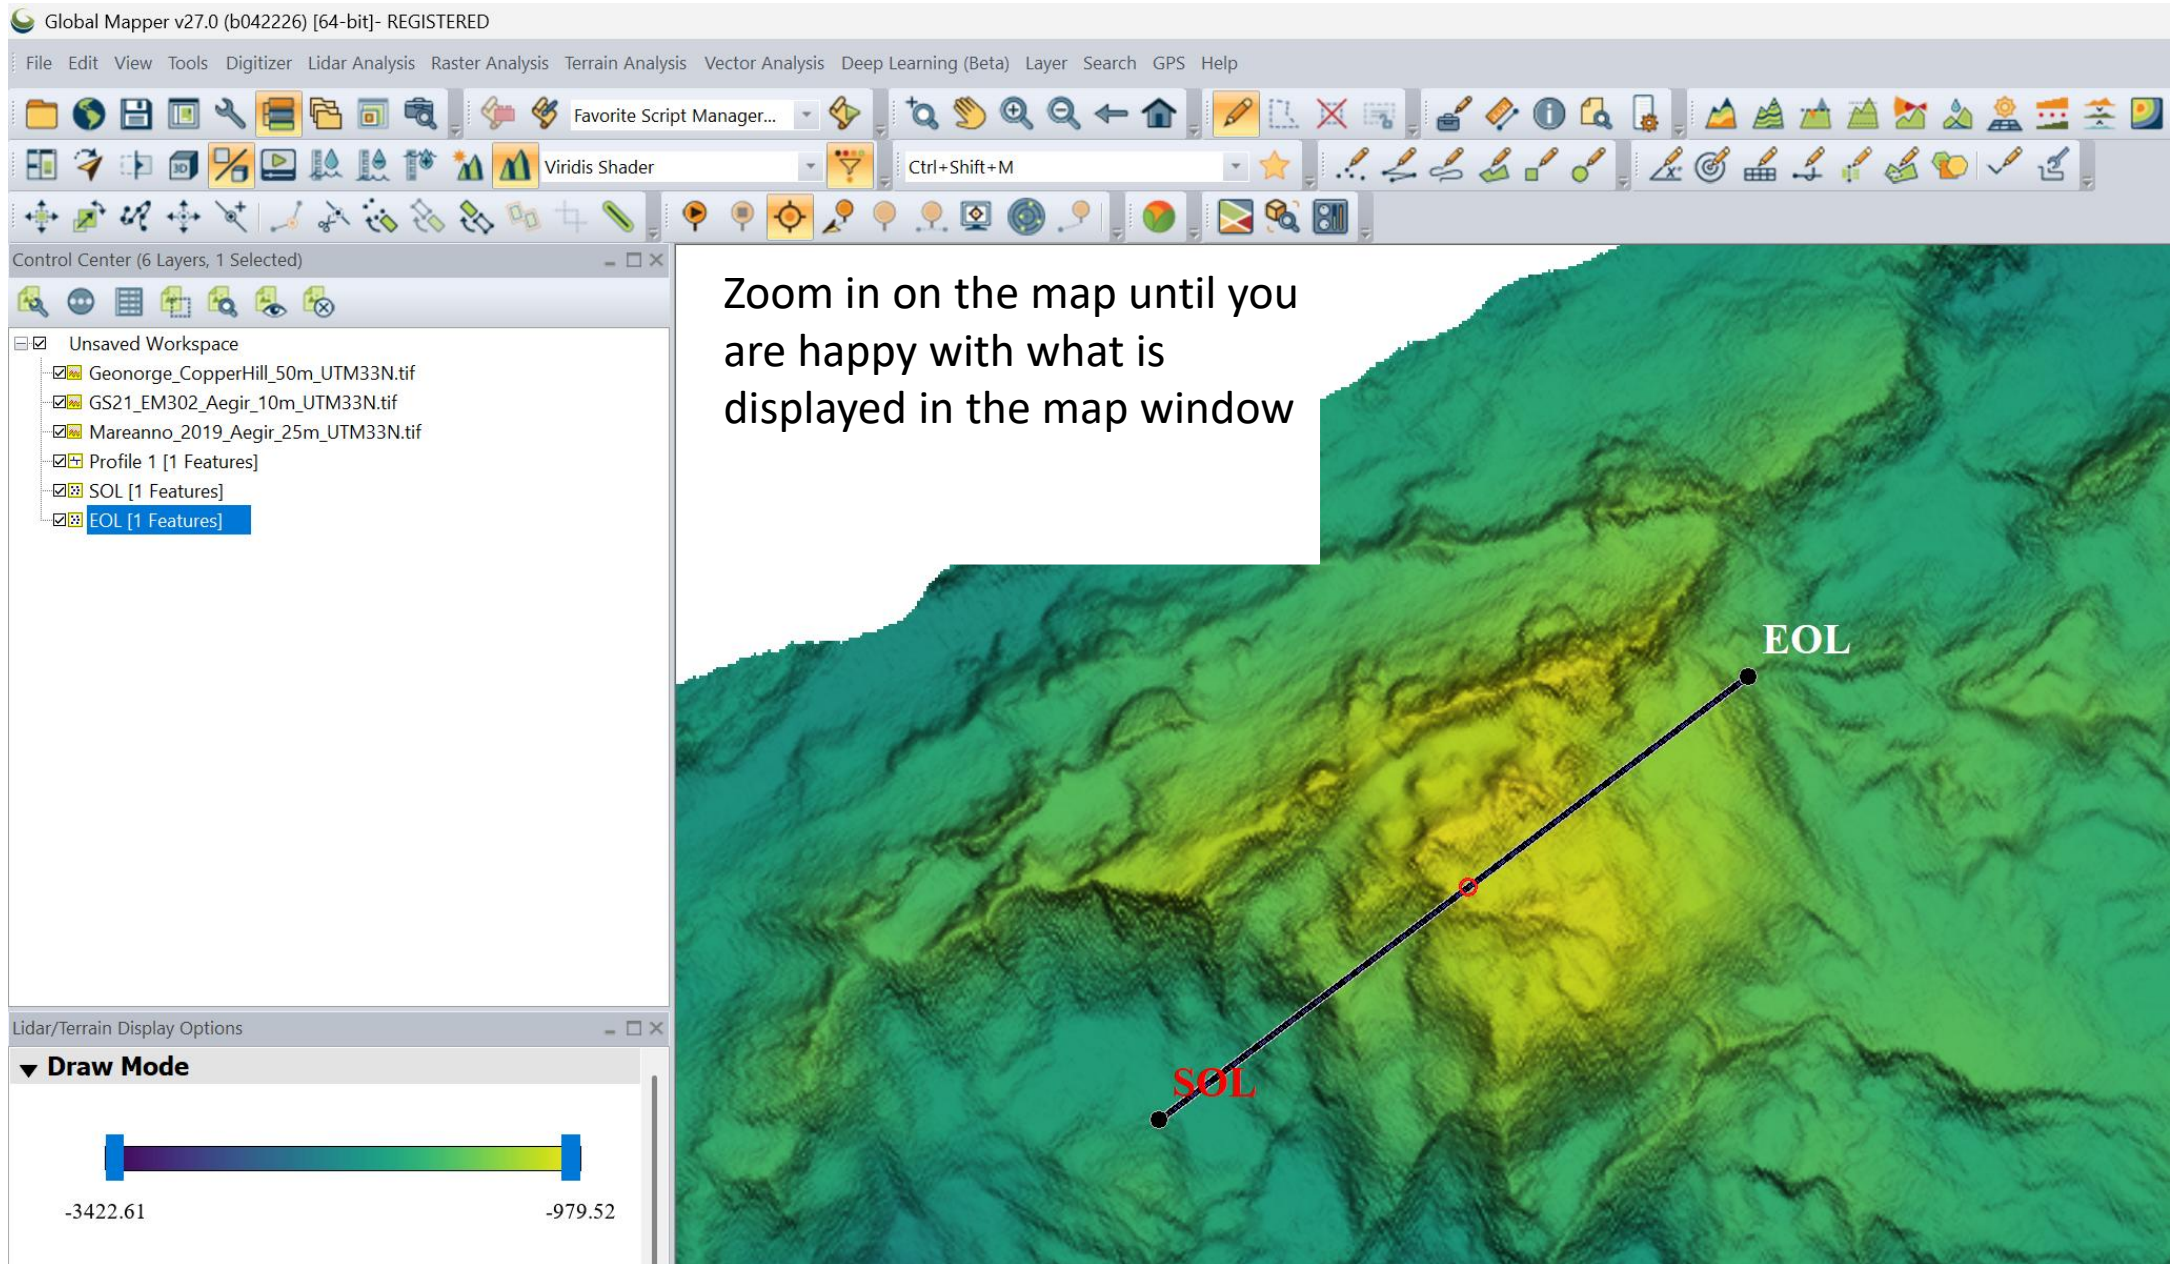




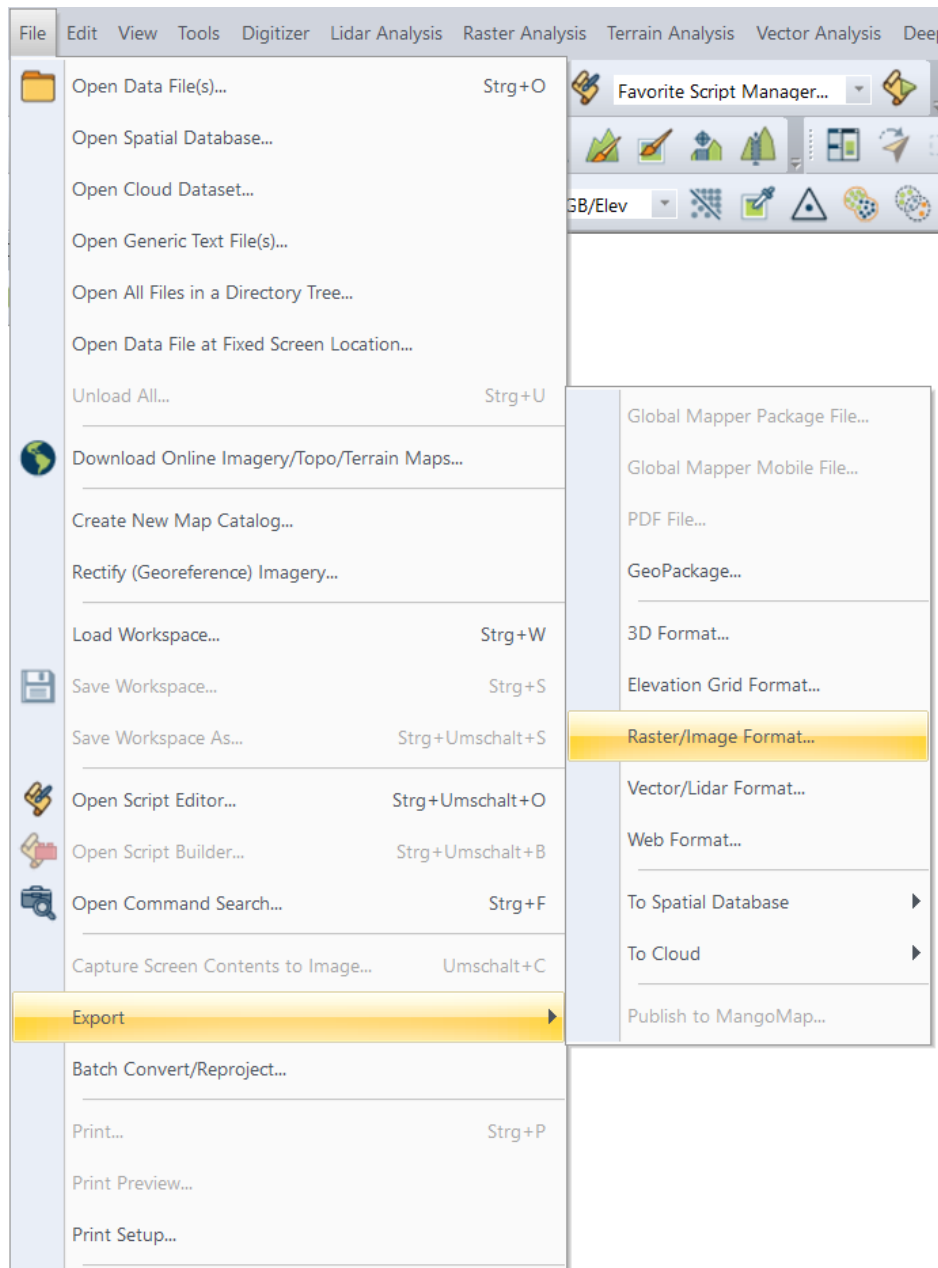

Select File – Export –  
Raster/Image Format... and  
select GeoTIFF

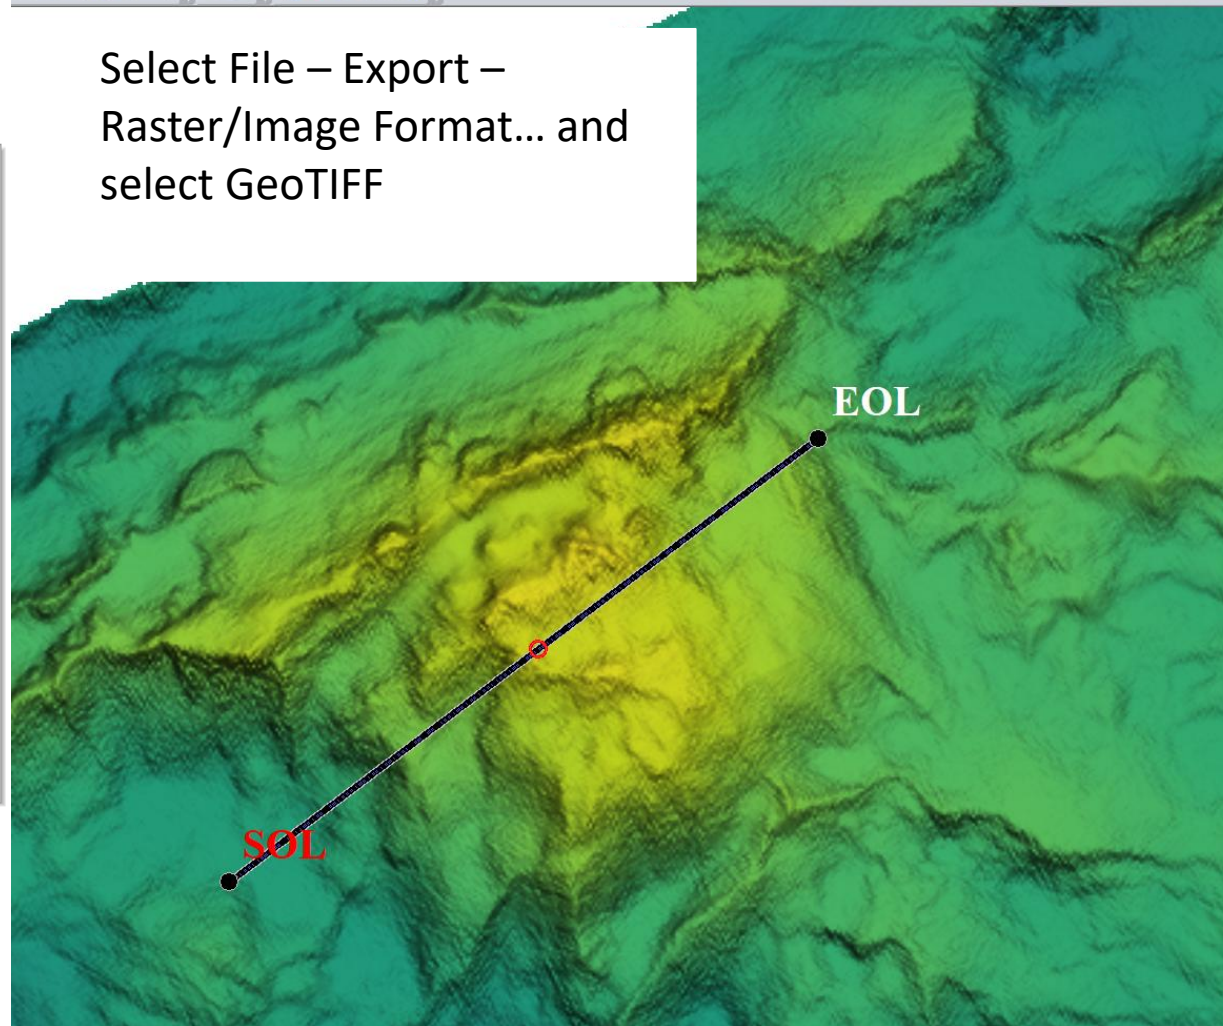

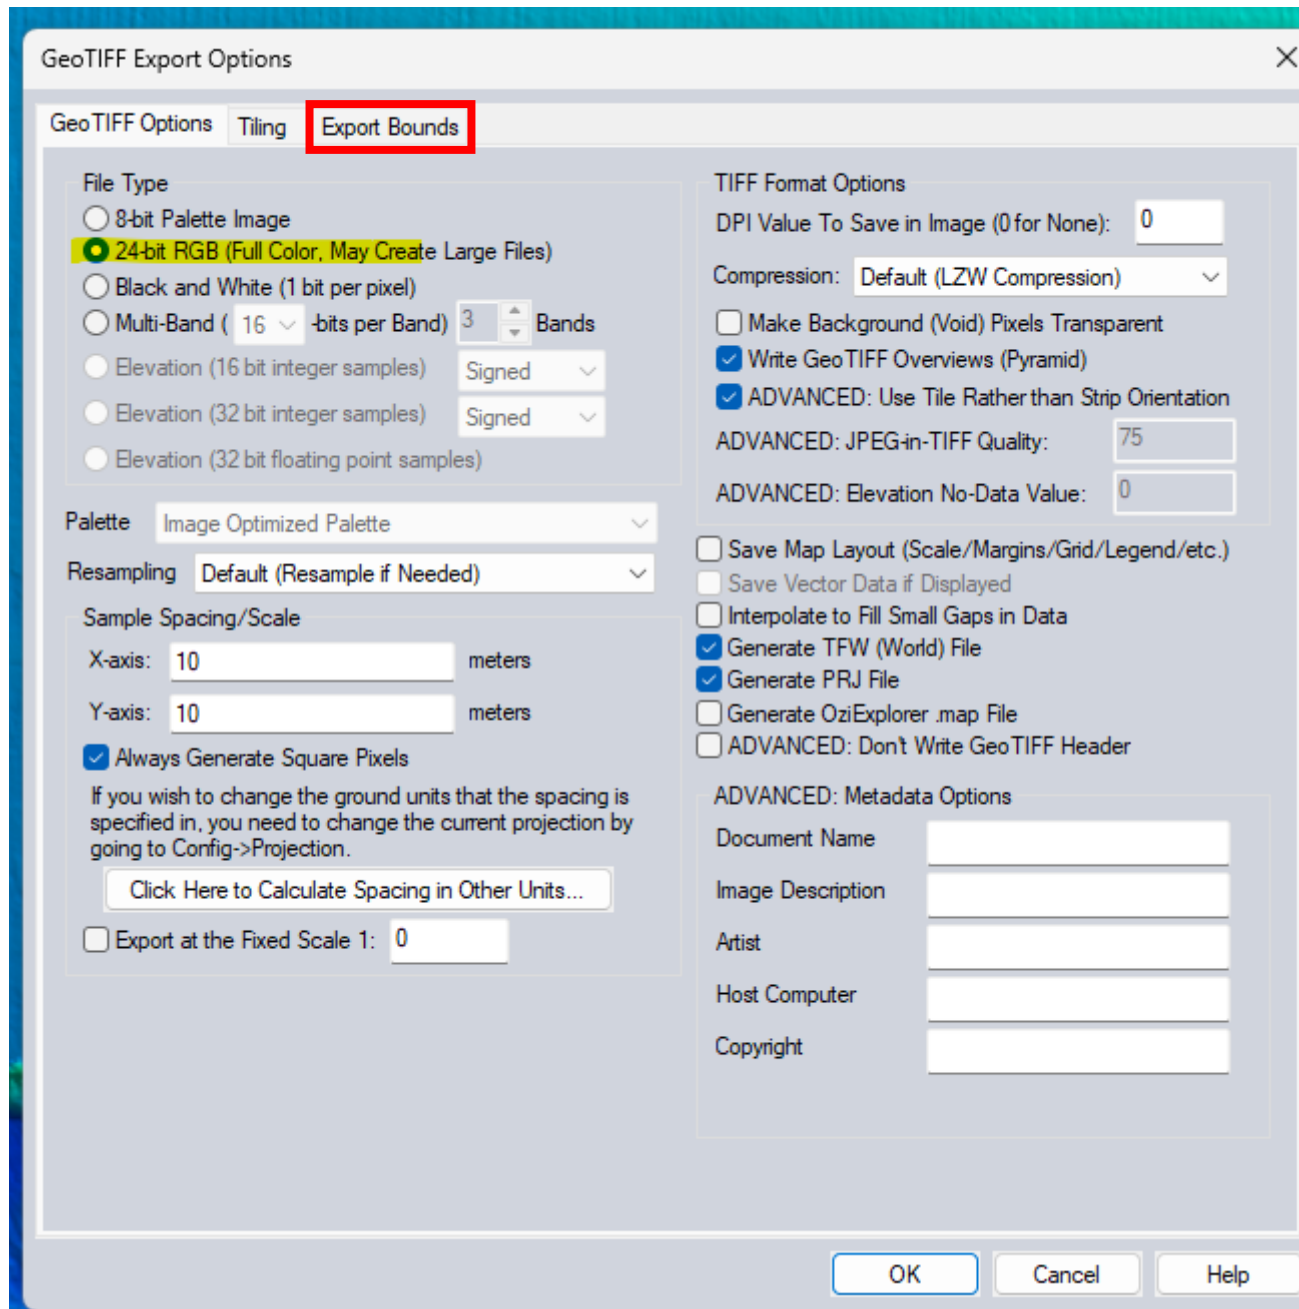

This window opens

Select 24-bit RGB

Click to calculate spacing (just accept that the numbers change and click ok)

Select the **Export Bounds** tab to define that you only want to export what is currently shown on your map (lacking screenshot from that window)

## How to export SOL and EOL coordinates

*This information is given as plain text since I no longer have a licensed version and was not able to finish this guide prior to the end of the expedition*

- NB! Our ROV pilots requested the coordinates to be given in dd° mm.mmmmm (decimal minutes). In order for the coordinates of the SOL and EOL to be displayed correctly (given that we work with data files in UTM33N/ETRS89), we need to **change the Coordinate Reference System** before the next steps. This will slightly reshape our displayed bathymetric maps. This is fine as we can change the CRS back to ETRS89 afterwards
- Choose the Configuration Tool to navigate to the CRS settings as shown on the next slide
- **Change the CRS to WGS84**



- General
- Vector Display
- Display Options
- Styles
- Coordinate Reference System
  - Select Coordinate System
  - Default Coordinate System
- 3D View Properties
  - Deep Learning Models
  - Vertical Options
  - Shader Options
  - Lidar
  - Feature Templates
  - GPS Options

Horizontal Coordinate Reference System:

EPSG: 25833

System: ETRS89 / UTM zone 33N

Datum: European Terrestrial Reference System 1989 ensemble

Units: Meter

Vertical Coordinate Reference System:

System: None

Units: None

Load From File...

Search by EPSG Cod

Geodetic Settings

Coordinate Transformations:

| Layer                      | System |
|----------------------------|--------|
| GS21_EM302_Aegir_10m_...   | ETR    |
| Mareanno_2019_Aegir_25...  | ETR    |
| Geonorge_CopperHill_50m... | ETR    |

Select Coordinate System from Datasource

Folder

- ETRS89
- ETRS89-ESP [REGENTE]
- ETRS89-NOR [EUREF89]
- Fahud
- Fort Marigot
- Garoua
- Grand Comoros
- Guadeloupe 1948
- Hito XVIII 1963
- Hjorsey 1955
- HTRS96
- ID74
- IGM95
- IGN Astro 1960
- IGN53 Mare
- IGN56 Lifou
- IGN72 Grande Terre
- IGN72 Nuku Hiva
- IGRS
- Indian 1954
- Indian 1960
- Indian 1975
- IRENET95
- JAD2001
- JGD2000
- Kallianpur 1937
- Kallianpur 1962
- Kallianpur 1975
- Karbala 1979
- Kortau

Search

Folder: ETRS89

Find:

Change of coordinate system

| Display Name                | Name               | Geodetic |
|-----------------------------|--------------------|----------|
| ETRS89 / UTM zone 28N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 29N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 29N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 30N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 30N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 31N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 32N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 33N (z... | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 34N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 34N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 35N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 35N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 36N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 36N (...) | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 37N       | ETRS89 / UTM zo... | ETRS89   |
| ETRS89 / UTM zone 37N (...) | ETRS89 / UTM zo... | ETRS89   |

OK

Cancel

Info...

OK

Cancel


Apply

Help

## How to export SOL and EOL coordinates


*This information is given as plain text since I no longer have a licensed version and was not able to finish this guide prior to the end of the expedition*

- Now that the CRS has been changed to WGS84, we will proceed with exporting our coordinates of the SOL and EOL in decimal minutes to provide our pilots with the start and end points of our dive
- The length of our transect can be retrieved from the profile that we have exported
- Activate the **digitizer tool** and select both the SOL and EOL points on your map. You will see a red square around each point that you have selected
- You might want to de-activate the layer that is showing your path profile (yellow line) to avoid the line being selected as well

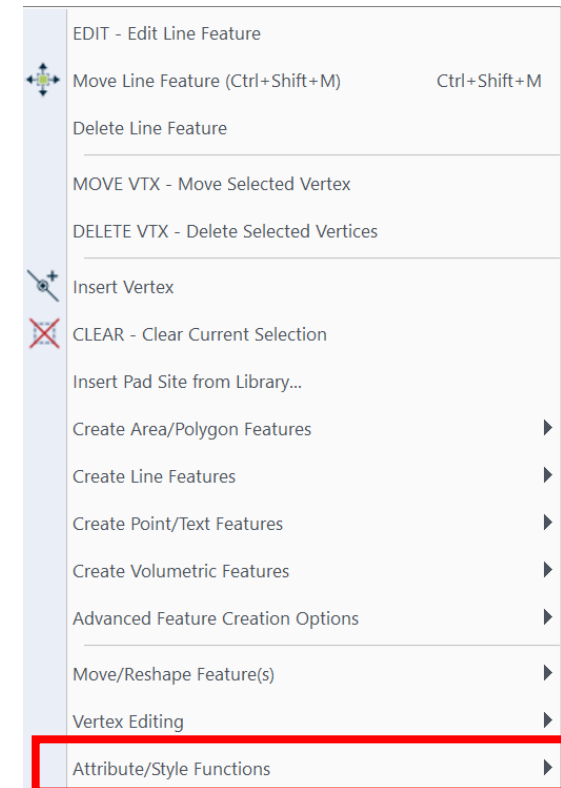

**Right-click** and navigate to „**Attribute/Style Functions**“

- You will now see the option to „**Add Coordinate Bounds**“ to both your attributes (SOL, EOL)
- Confirm that you would like to add coordinate bounds to each attribute
- You can also do the same step selecting „**Add Elevation**“ to include the depth at each point
- Select the SOL and EOL layer in the control center, right-click and open the layer attributes. You should now see that the SOL and EOL are displayed with their respective coordinates in the layer attribute table
- You can now export this table as a .csv file

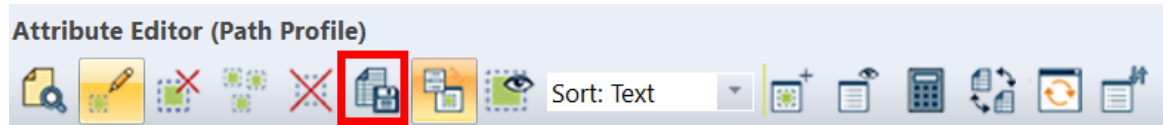

- When formatted, you have something like this prepared for the ROV pilots (in addition to the GeoTIFF file and the profile)

|   | A        | B          | C             | D             | E               | F             | G               | H             |
|---|----------|------------|---------------|---------------|-----------------|---------------|-----------------|---------------|
| 1 | Transect | Length (m) | Depth (m)_SOL | Depth (m)_EOL | LAT_SOL         | LONG_SOL      | LAT_EOL         | LONG_EOL      |
| 2 | T1       | 152        | 2370          | 2328          | 73° 33.91605' N | 8° 9.22710' E | 73° 33.99071' N | 8° 9.34132' E |
| 3 | T2       | 215        | 2326          | 2386          | 73° 33.98952' N | 8° 9.35206' E | 73° 33.92620' N | 8° 9.69104' E |
| 4 | T3       | 247        | 2386          | 2347          | 73° 33.92932' N | 8° 9.69978' E | 73° 34.06187' N | 8° 9.74045' E |
| 5 |          |            |               |               |                 |               |                 |               |

- Change your CRS back to ETRS89 to have the bathymetry displayed nicely again in Global Mapper
- The manual of Global Mapper is well-written but quite extensive

☺ Good luck!