
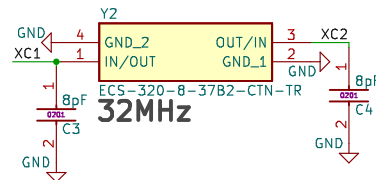
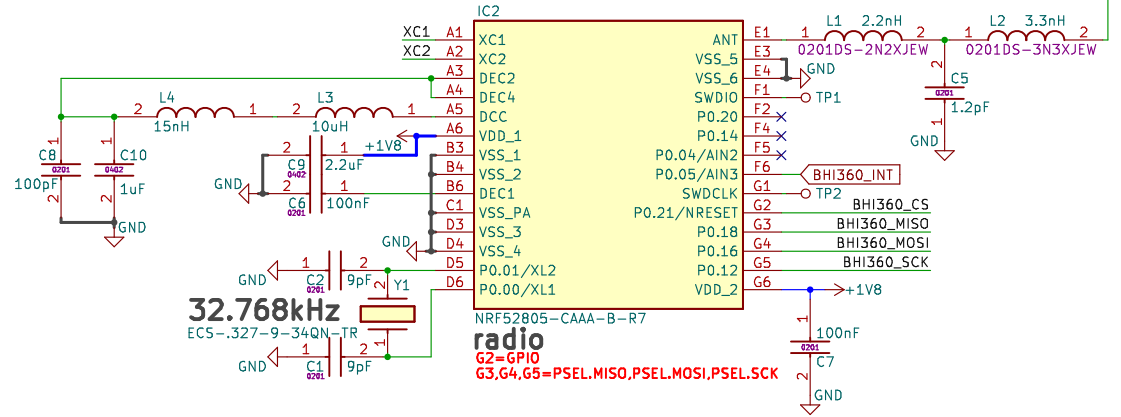
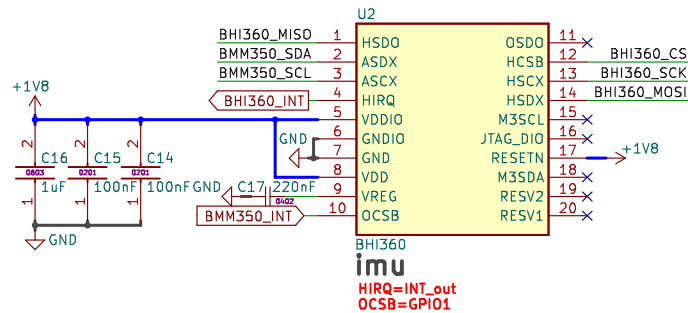
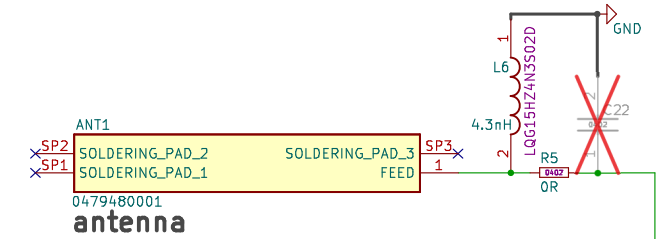
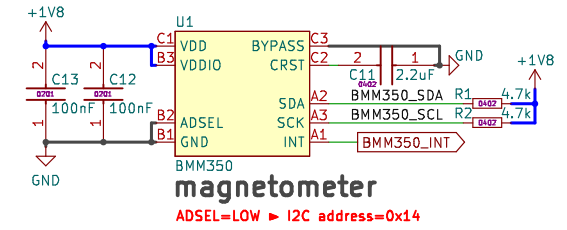


TODD:

- add 0ohm resistor in series with VDD to nrf52805
- add pin to power nrf52805 with different voltage for programming with DK
- add 2x TXB0101DBVR 1-channel voltage translators for SWDIO and SWDCLK
- add UART for easier debugging
- change BMM350_INT pin to be on JTAG_DIO, otherwise the firmware won't work
see <https://community.bosch-sensortec.com/t5/MEMS-sensors-forum/BHI360-BMM350-No-Mag-data-on-custom-board/td-p/90513/page/3>

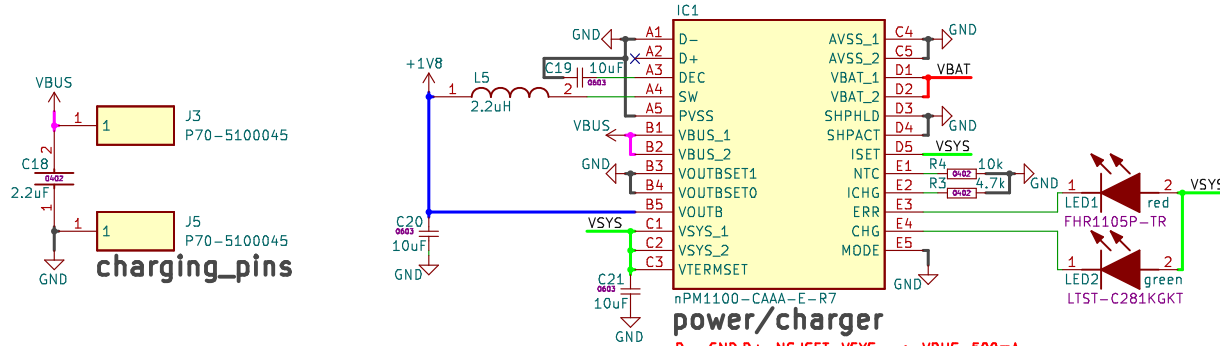

Sheet: /	
File: daemon_fbt_v1.kicad_sch	
Title:	
Size: A4	Date:
KiCad E.D.A. kicad 7.0.10-7.0.10-ubuntu22.04.1	
Rev:	
Id: 1/1	