

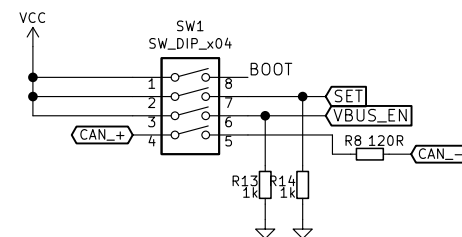
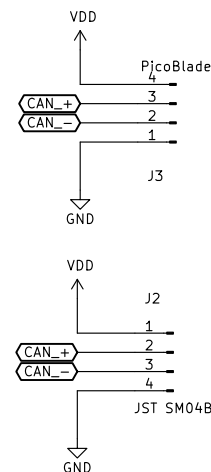
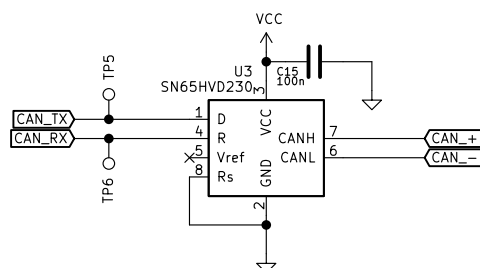


Switches:
1:6 Enable DFU
2:5 Enable CAN termination 120R
3:4 Enable setup CAN IDs
4:5 Enable VBUS -> VDD always

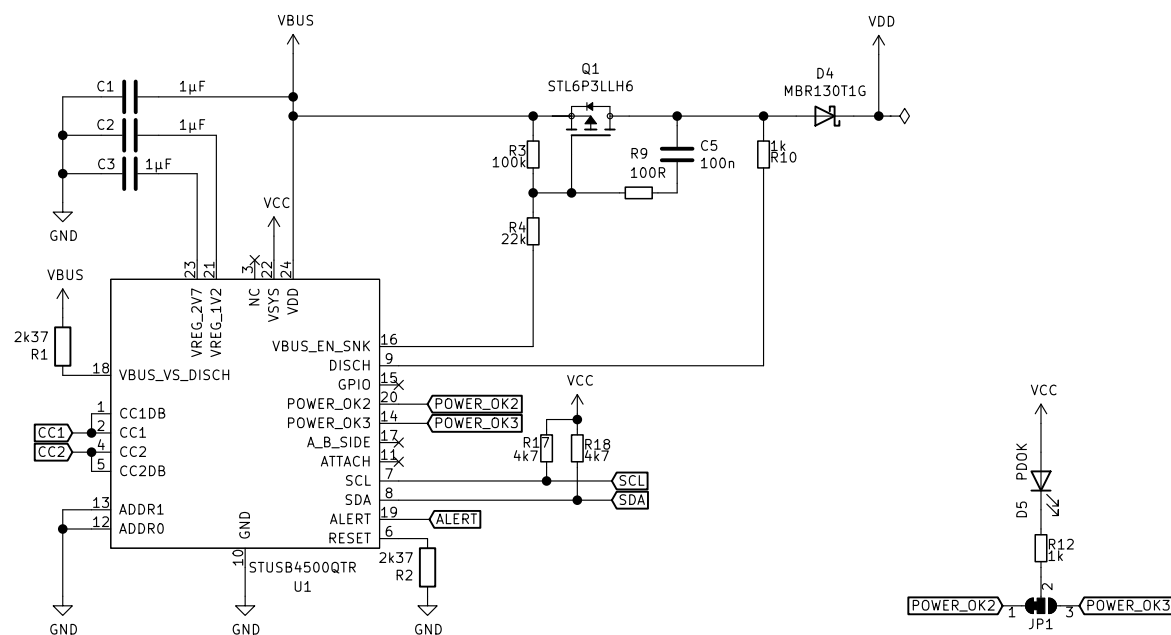

Labels and testpoints for SLCAN over UART although not used

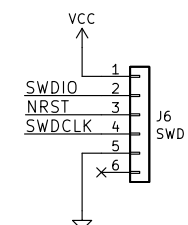

USB-C CAN Interface
John Whittington
JBR Engineering Research Ltd

Sheet: /
File: canape.sch

Title: Canapé

Size: A3 Date: 2020-12-07
KiCad E.D.A. kicad (5.1.8-0-10_14)

Rev: 0
Id: 1/1