




1. Put the file MCU007.FLM into folder Keil/ARM/Flash.

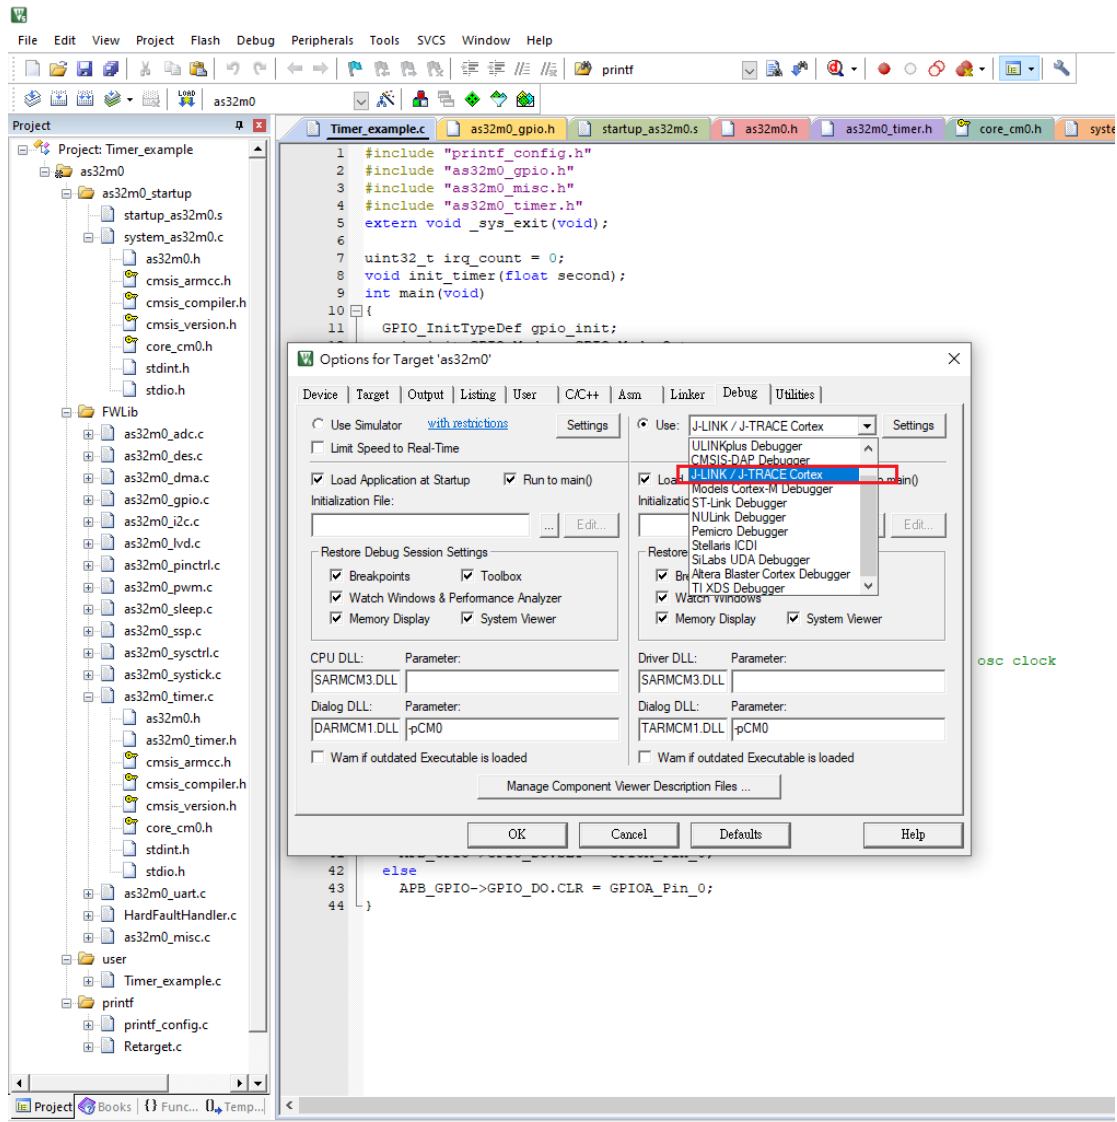


2. Click Option->Debug and use “J-Link/ J-TRACE Cortex” as debugger.

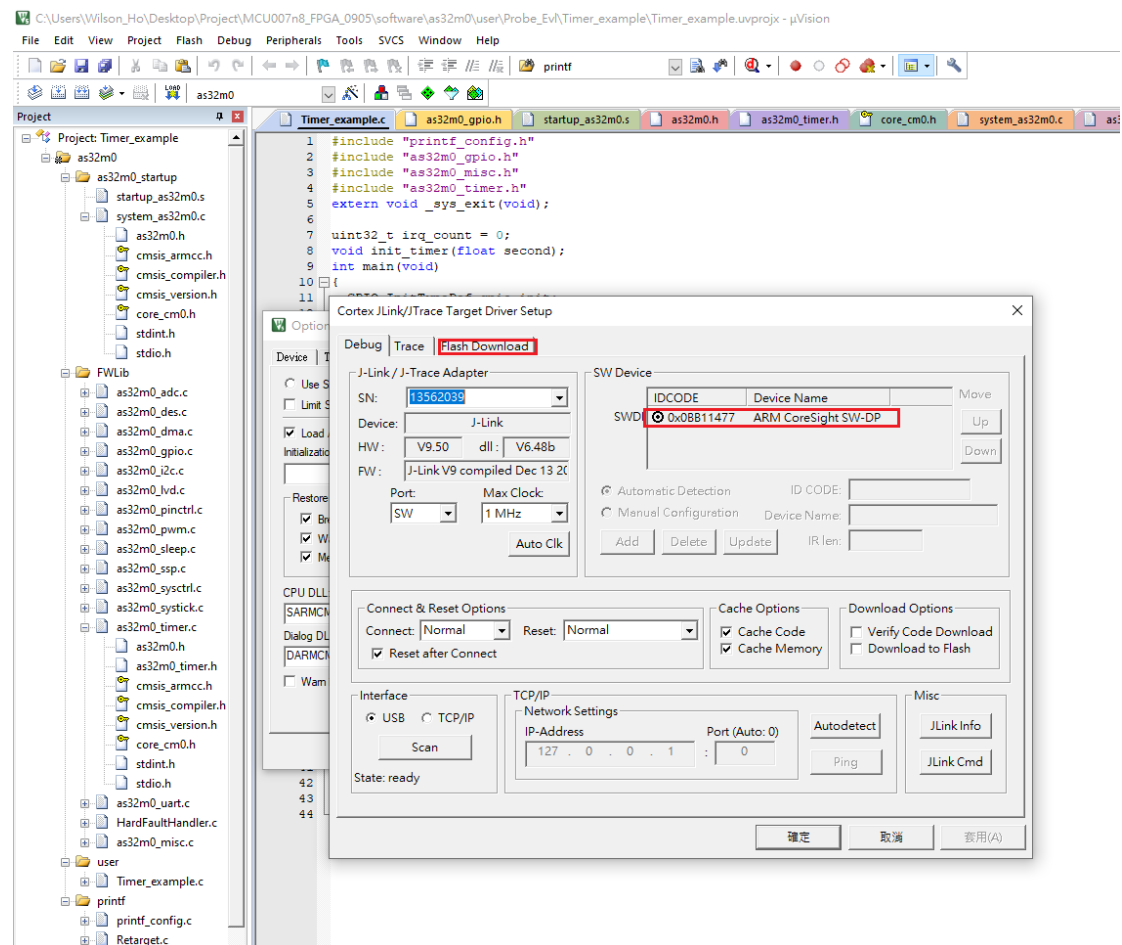


3. If Jlink is connected correctly, Jlink information is shown.
4. Set the frequency to be 1MHz and Click Flash Download.

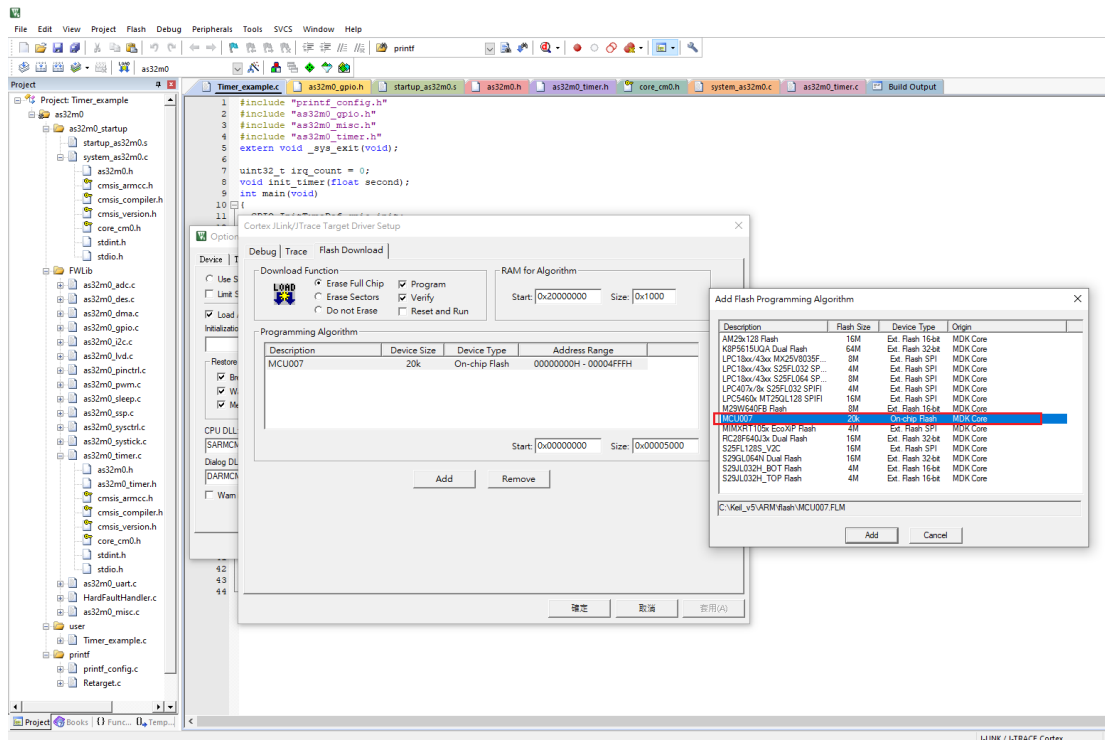


5. Click “Add” and Choose MCU007.FLM

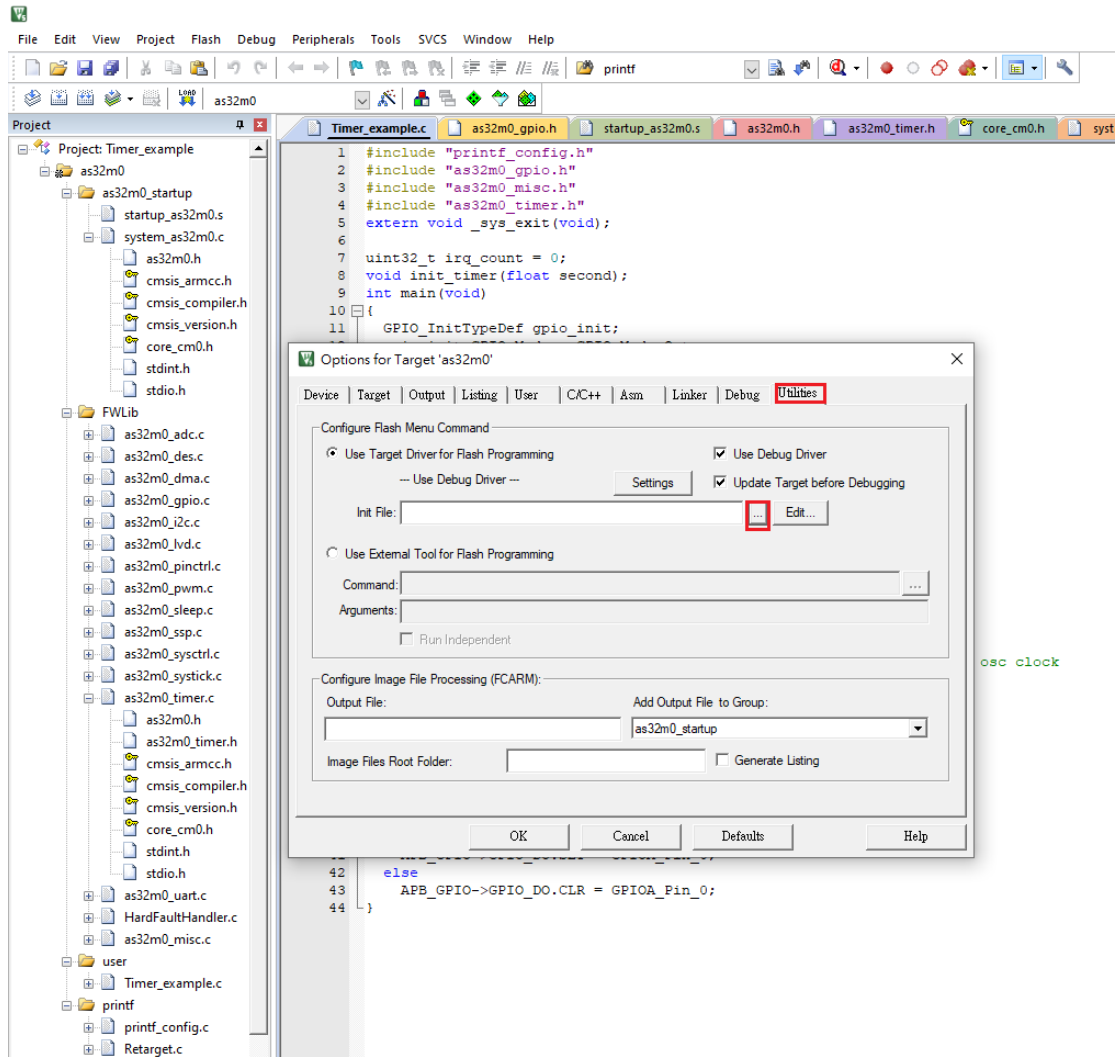


7. Click Option->Utilities.

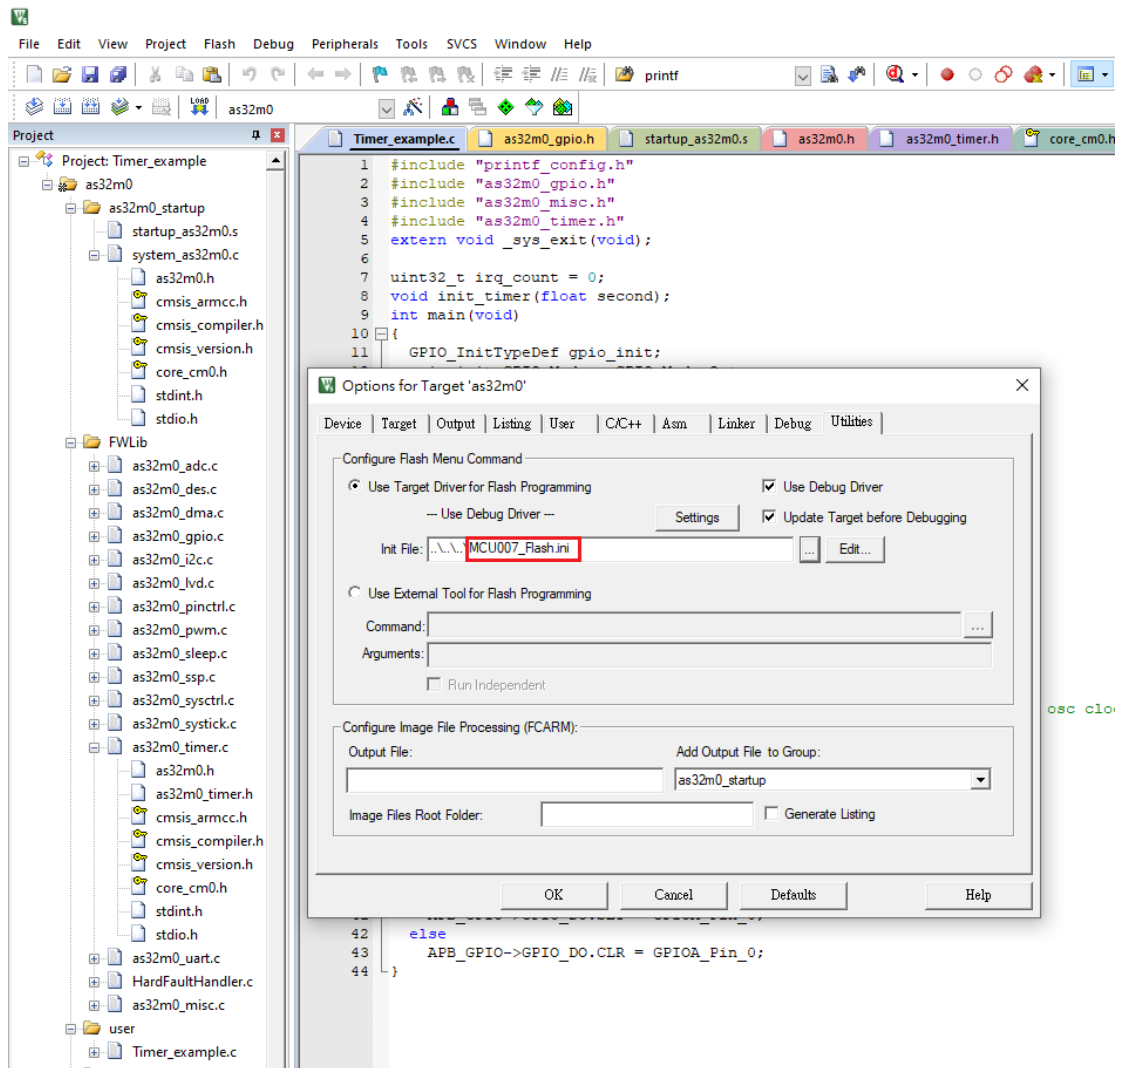

8. Add the file MCU007_flash.ini as Initial file.

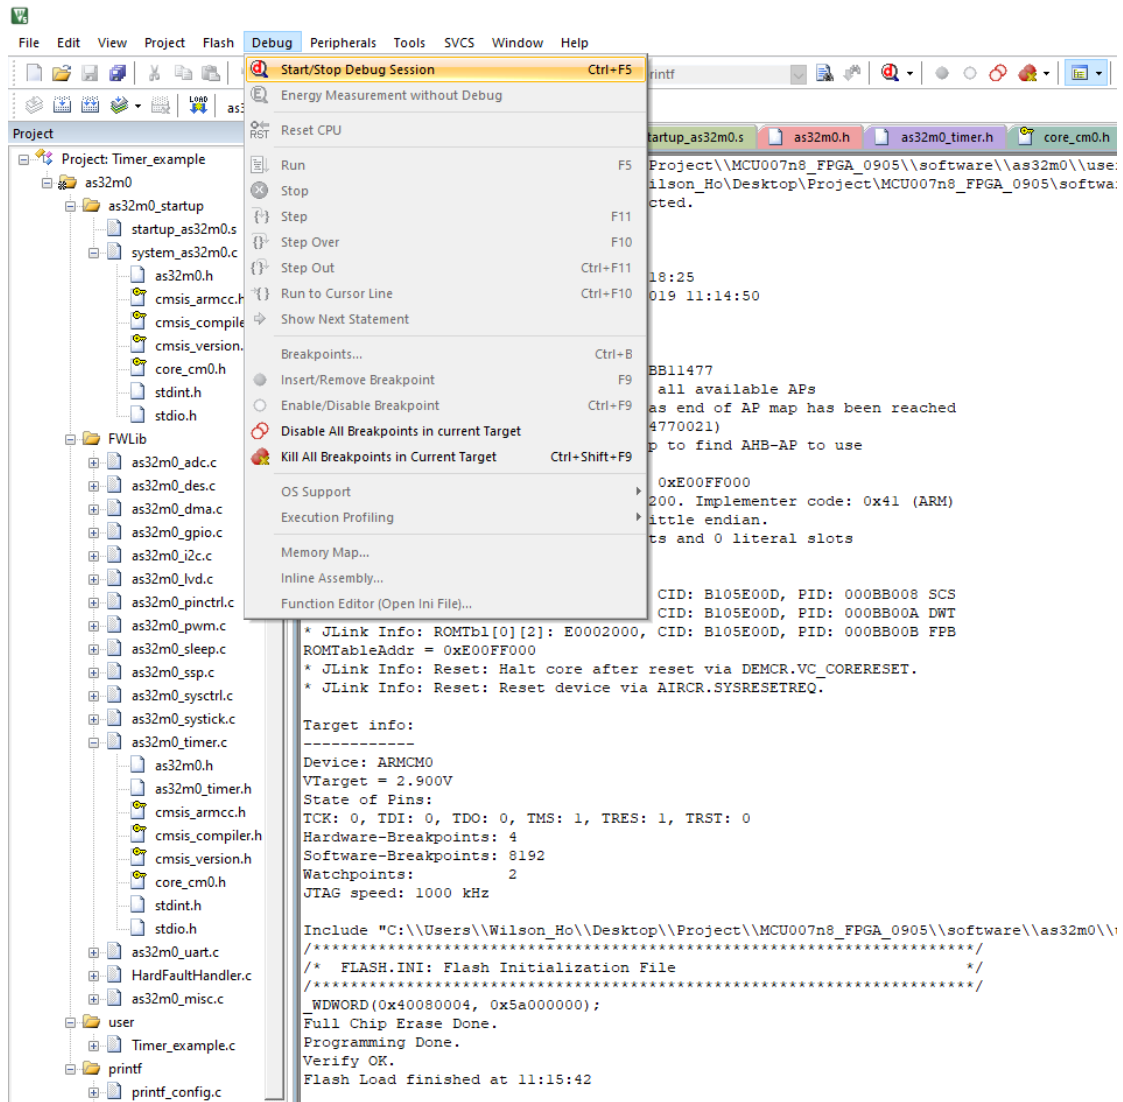

9. Click Debug-> Start/Stop Debug Session to start the debug.

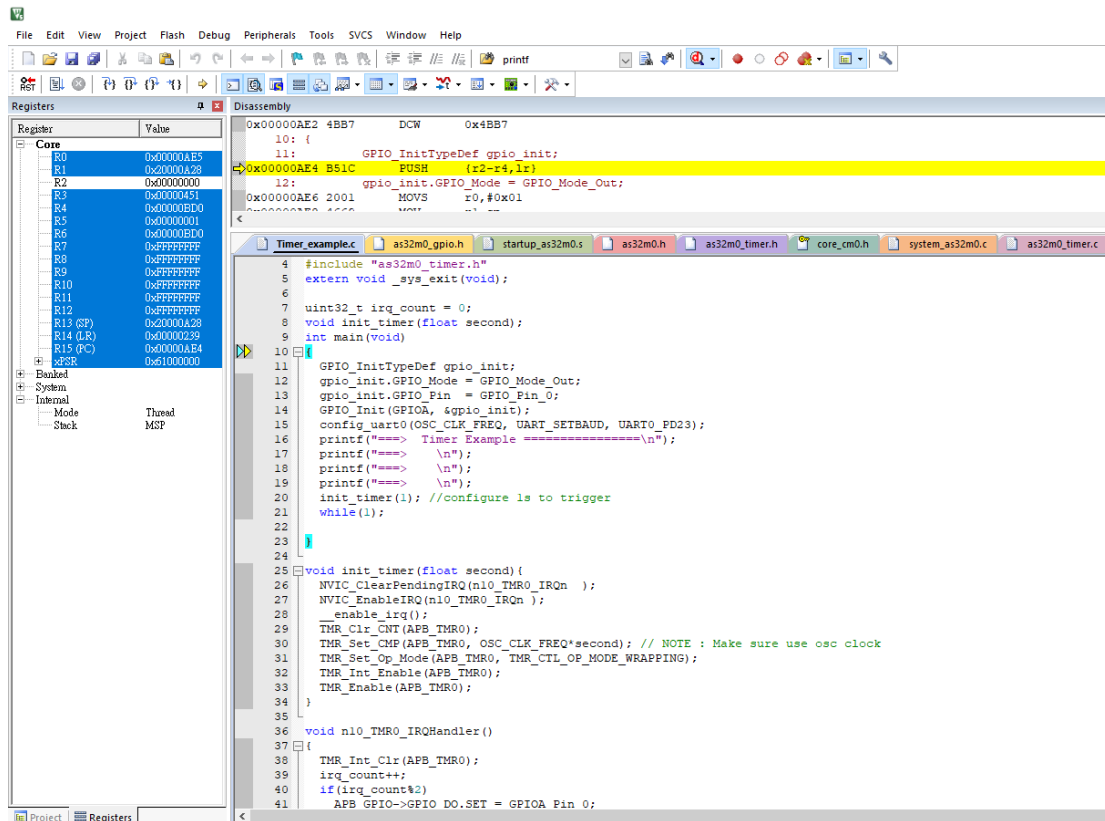

10. Enter into the debug mode.