



Use M3x12mm Screws
For the wing

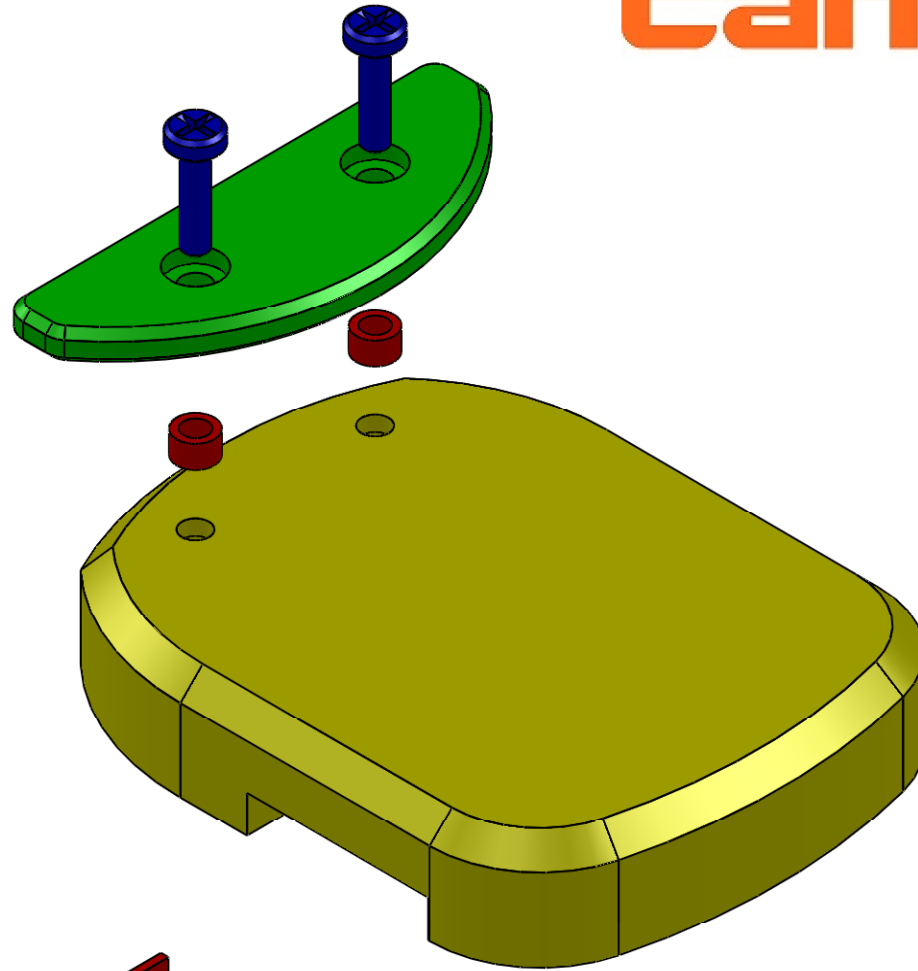

Use M2x6mm Screws
For clamping BlueBrain
Srew from top
(Nut from bottom)

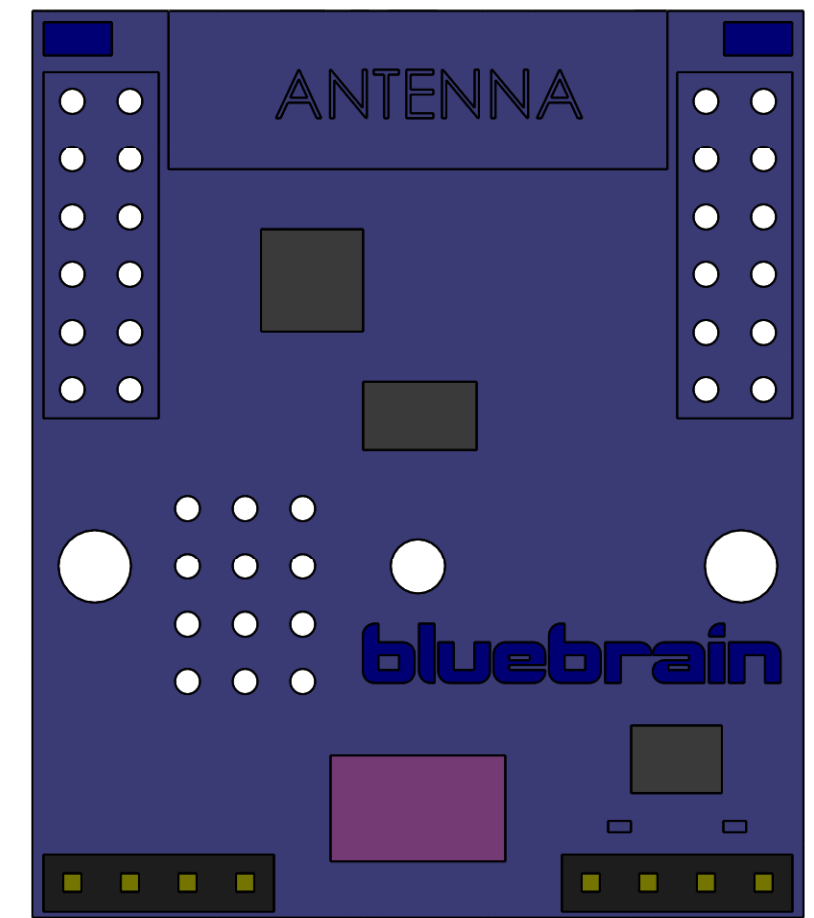


Power
[RED, BROWN]
[+Ve, -Ve]

Switch

Motor B
[BROWN, RED]
[-Ve, +Ve]


Motor A
[BROWN, RED]
[-Ve, +Ve]

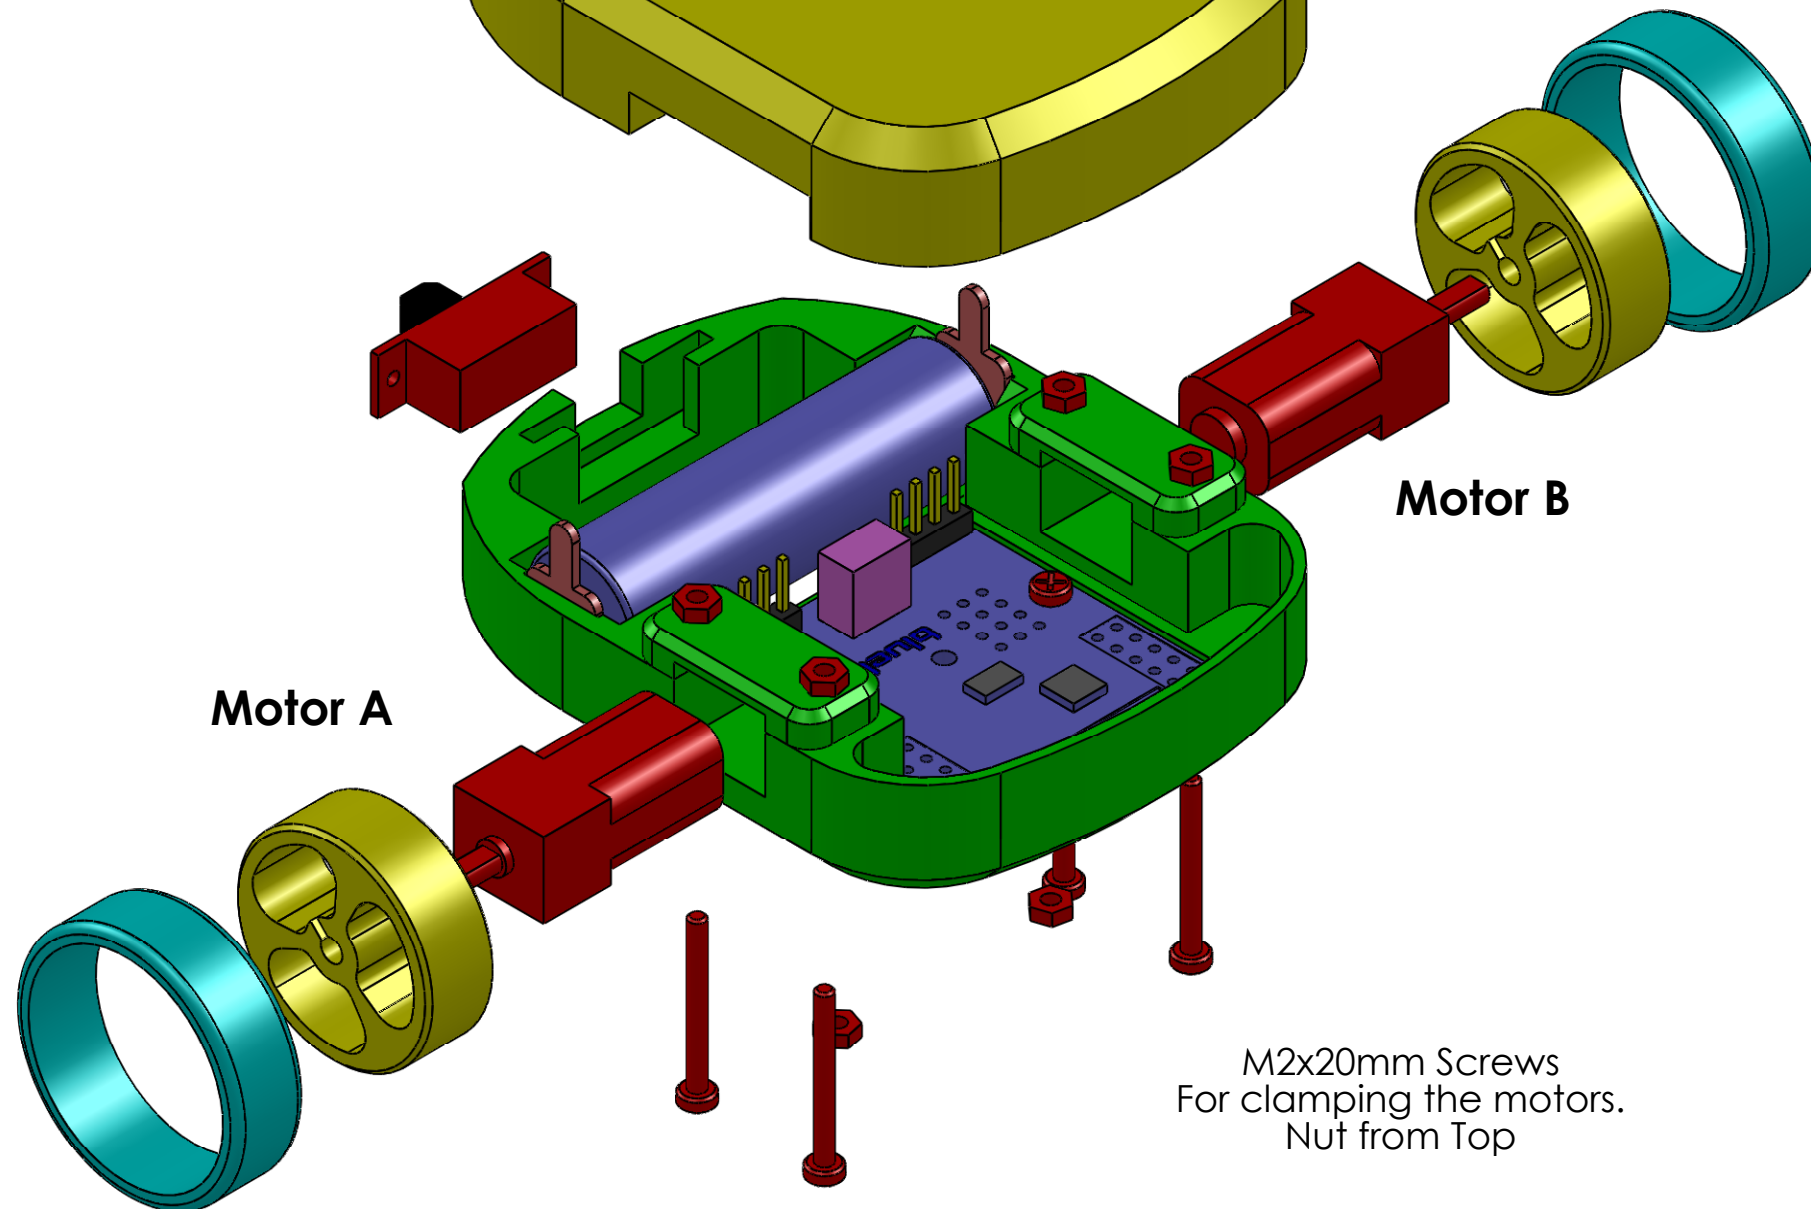

Motor B



Motor A

M2x20mm Screws
For clamping the motors.
Nut from Top

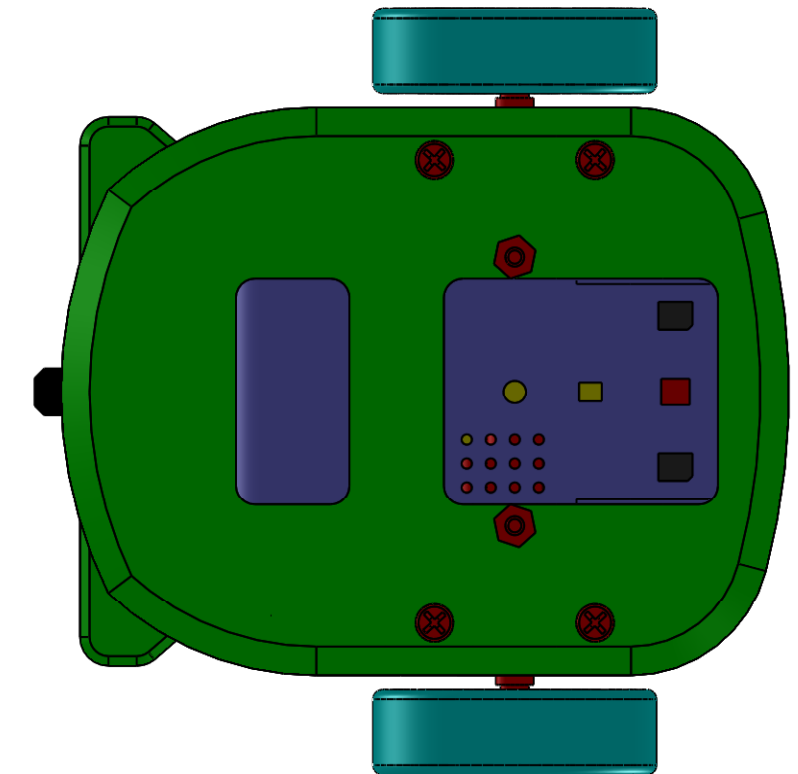



BOTTOM VIEW

SIDE VIEW

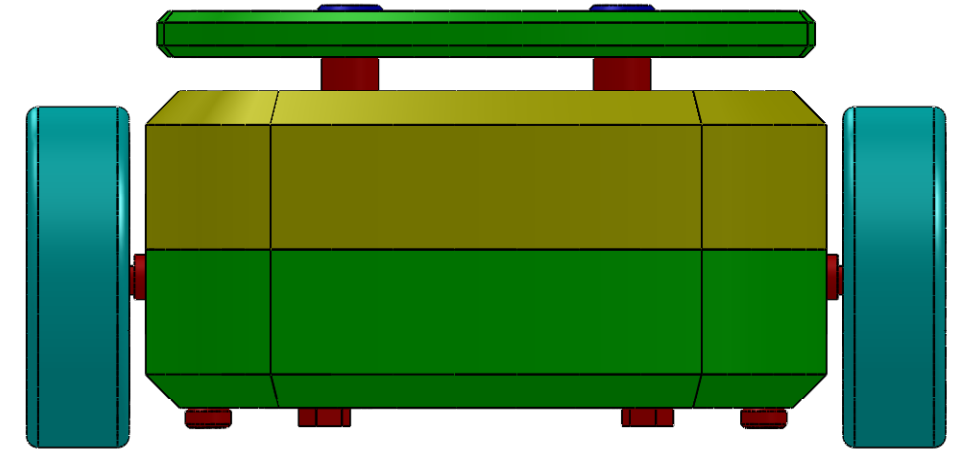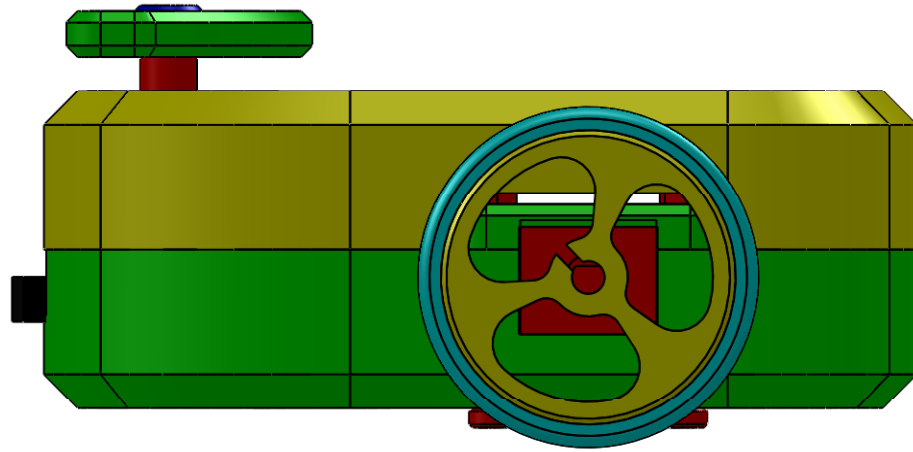

FRONT

TOP

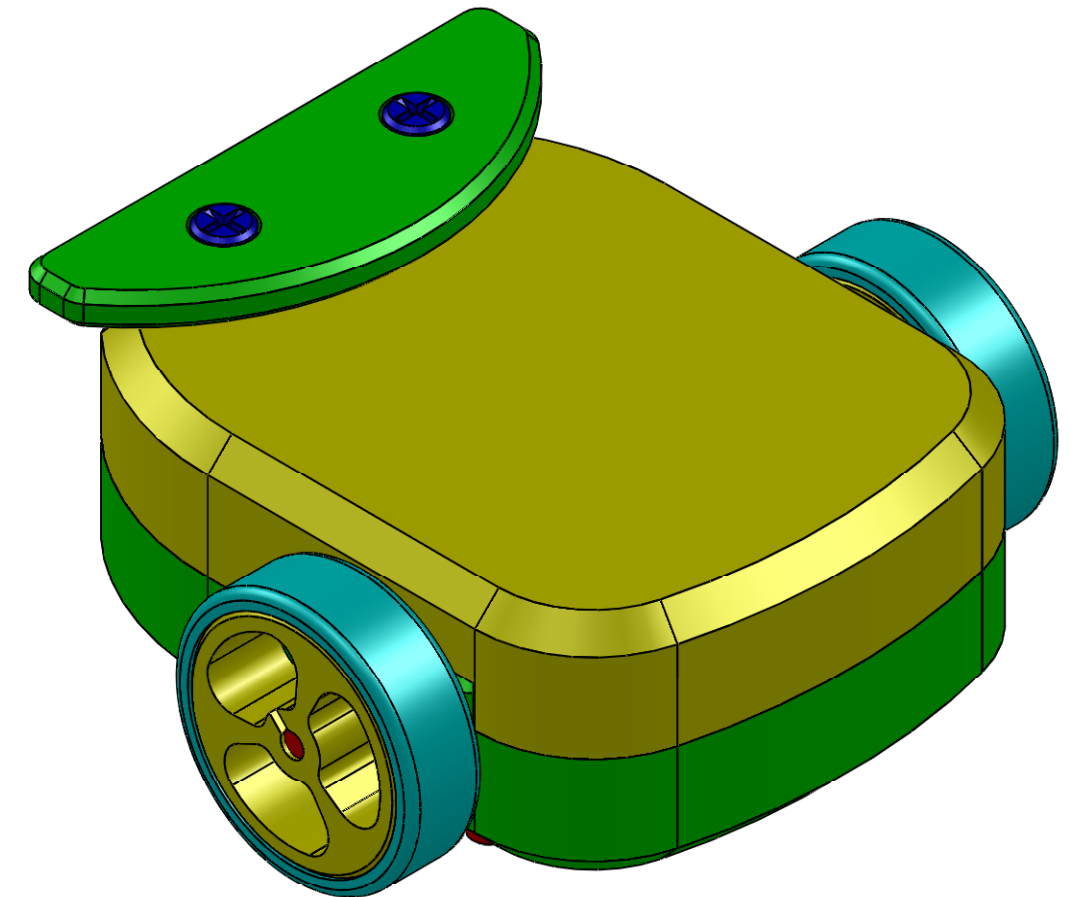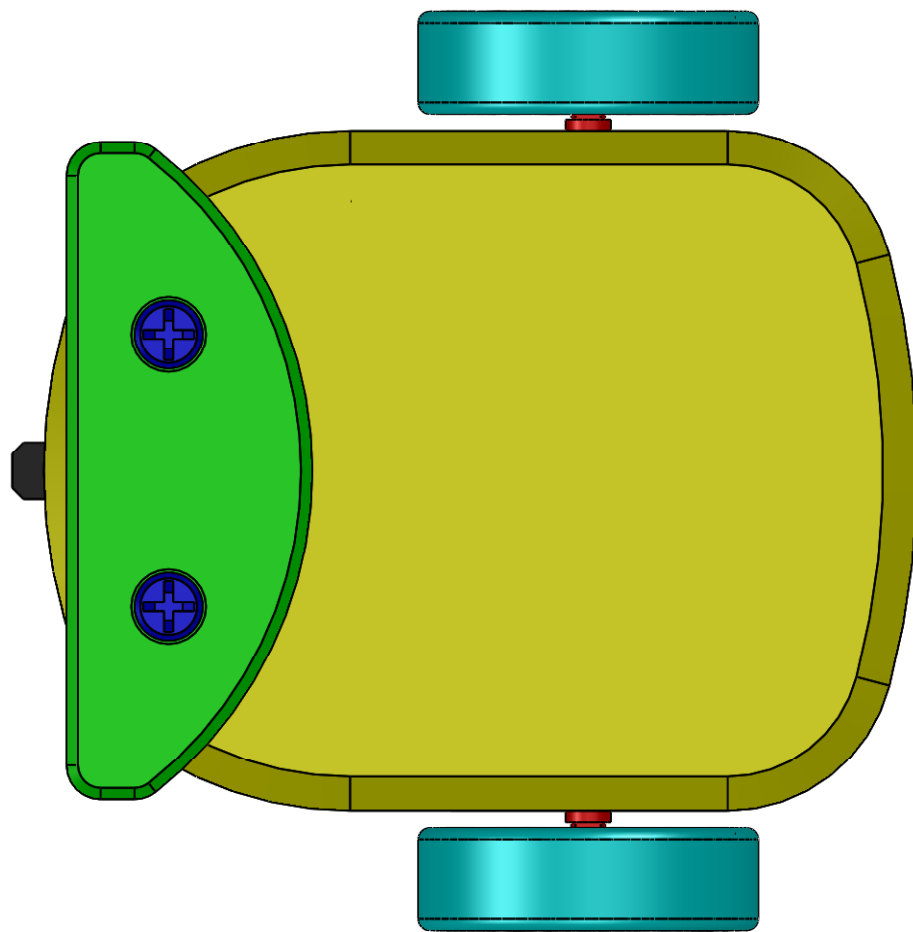

ISOMETRIC VIEW