


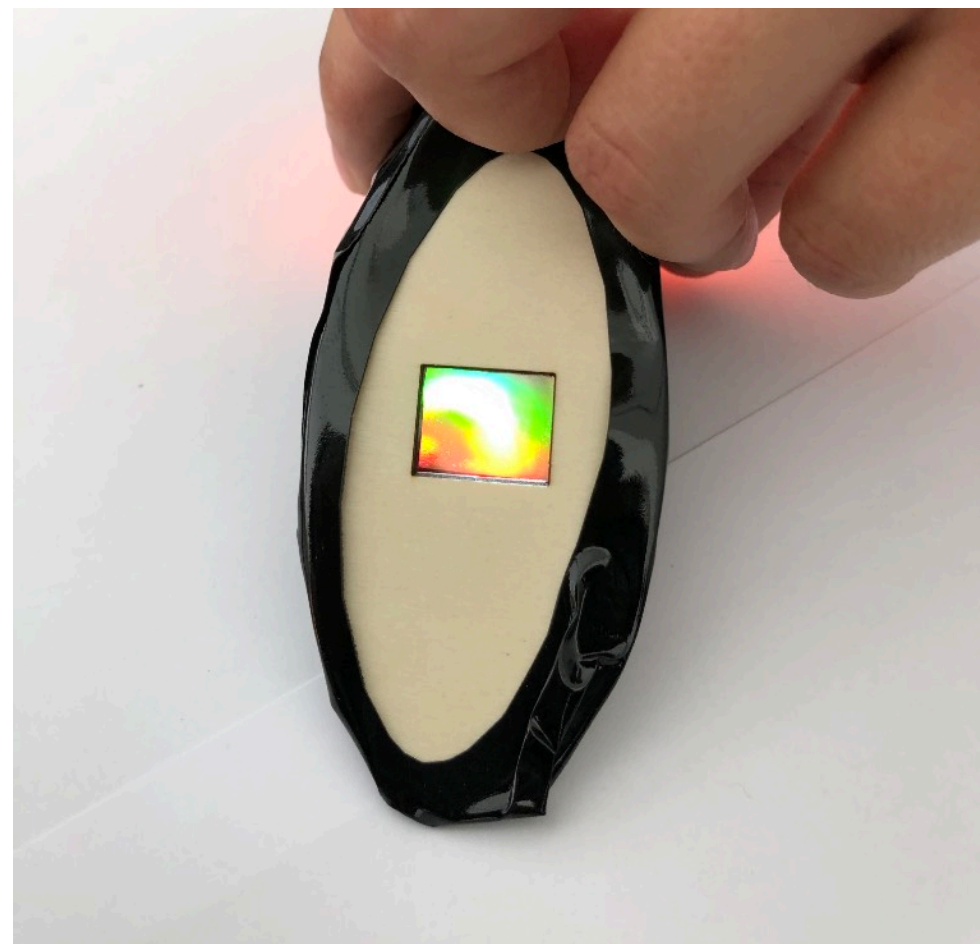


# SPECTRÖRÖLL

ASSEMBLY MANUAL v1



# MATERIALS



1. CD/DVD
2. Toilet Roll
3. Wood slit
4. Wood holder
5. Precut black tape
6. Scissors
7. Ruler

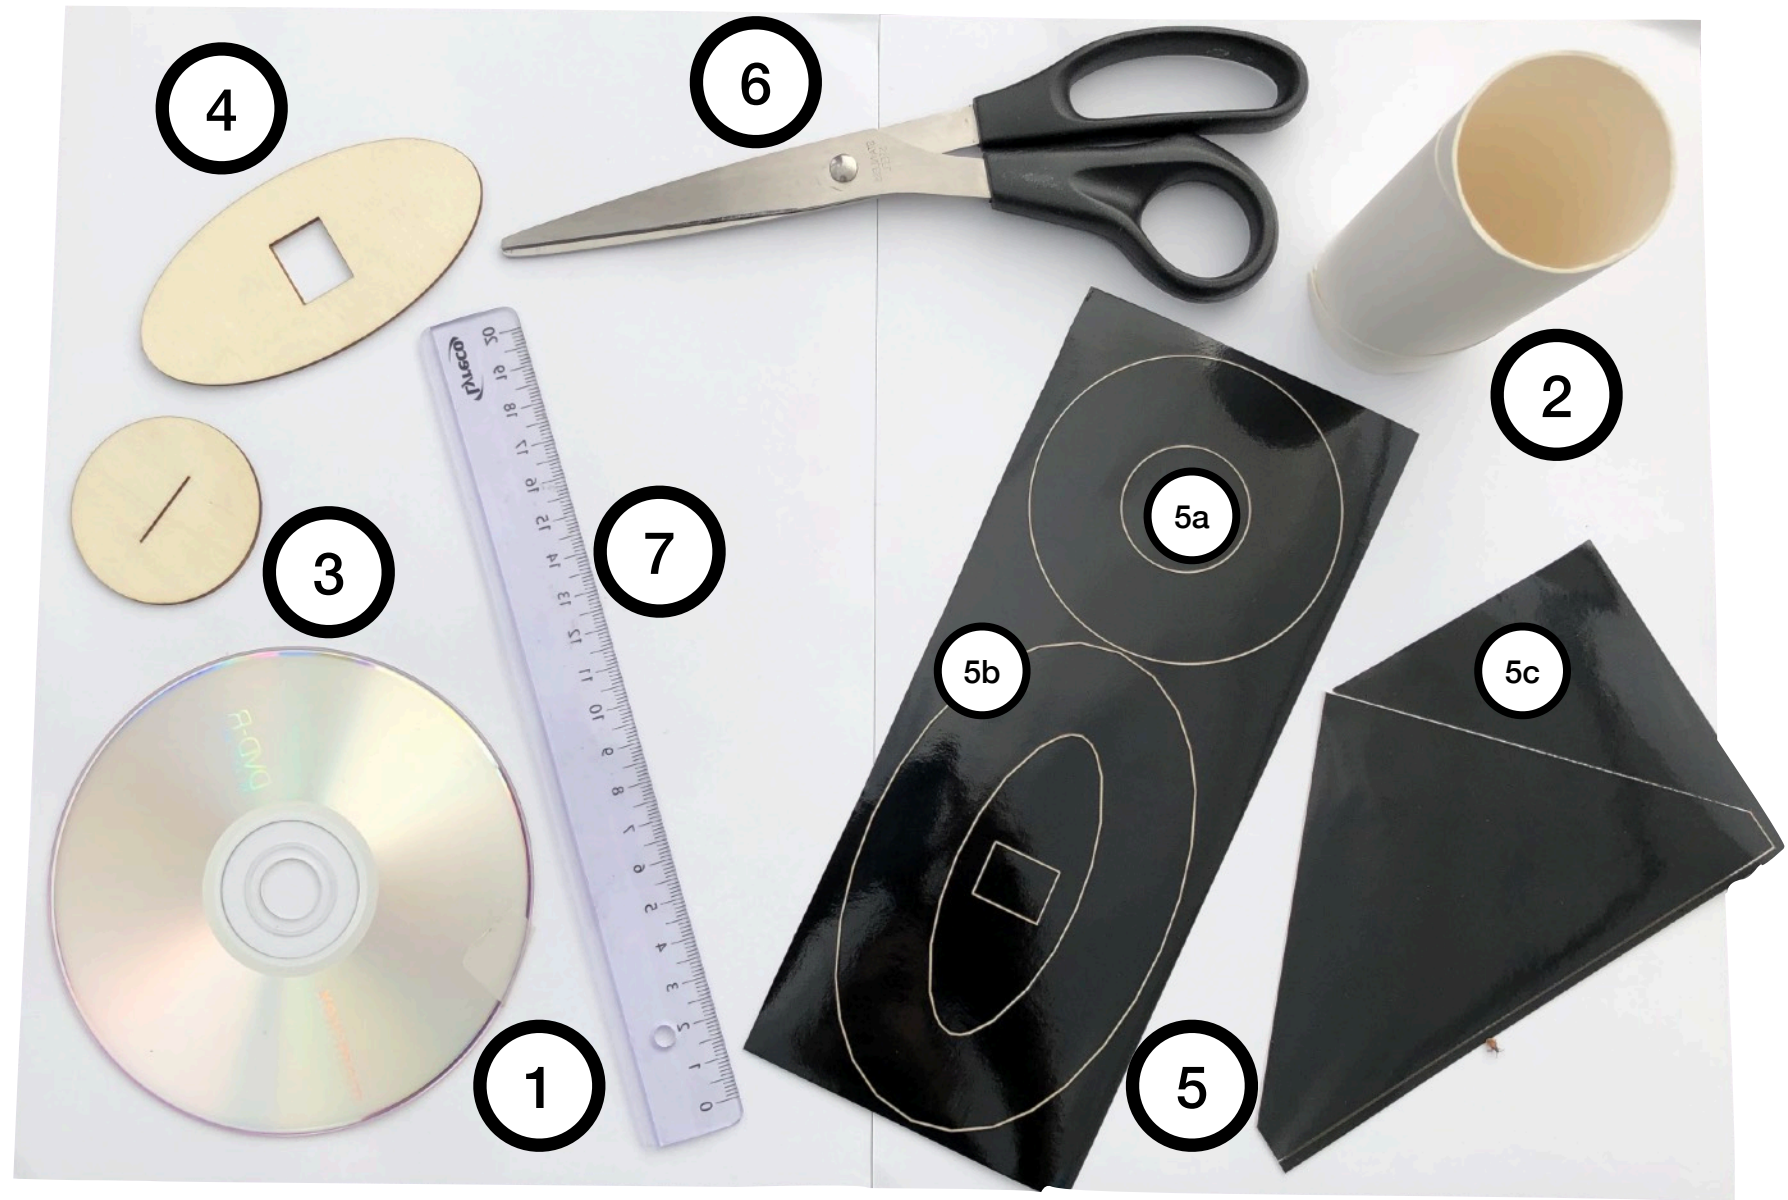

**Note:** The wood elements can be substituted by cardboard (e.g. cereal box) and the precept black tape by regular tape (ideally black)

# STEP 0




- If you do not have the wood elements or a cut tape slit and holder, cut them in cardboard (i.e. cereal box) approximately to the following dimensions:

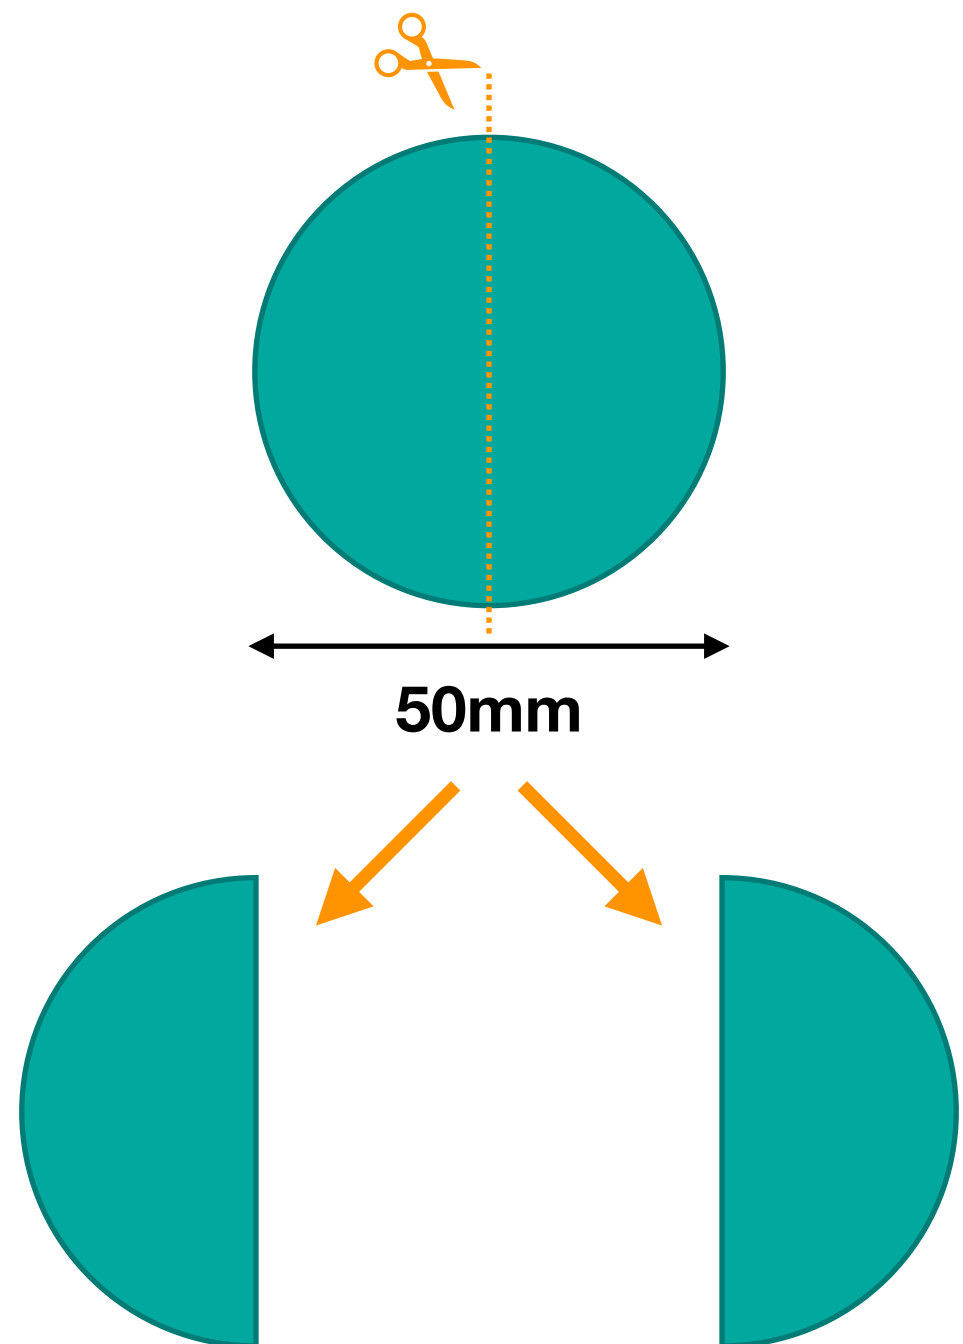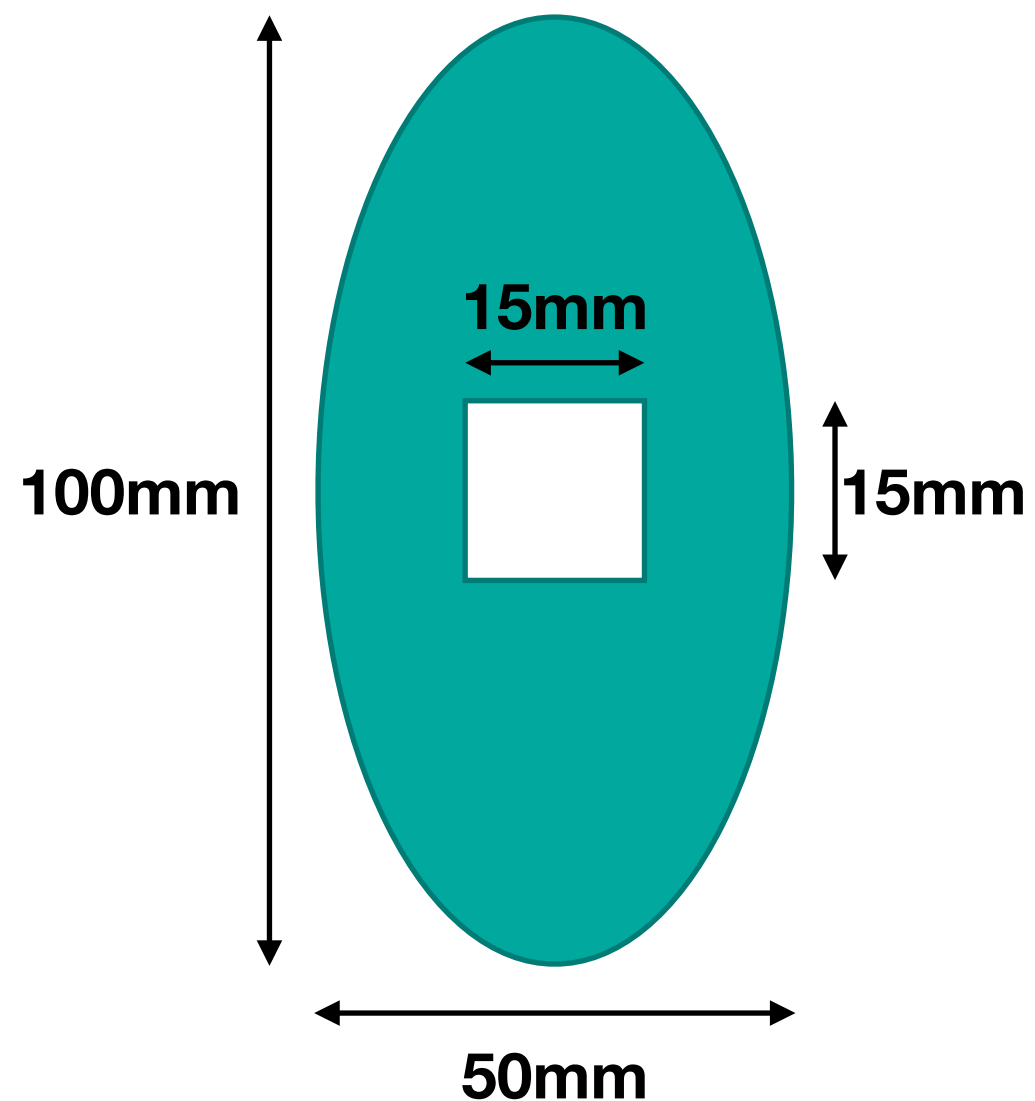



# STEP 1



- CUT THE CD/DVD

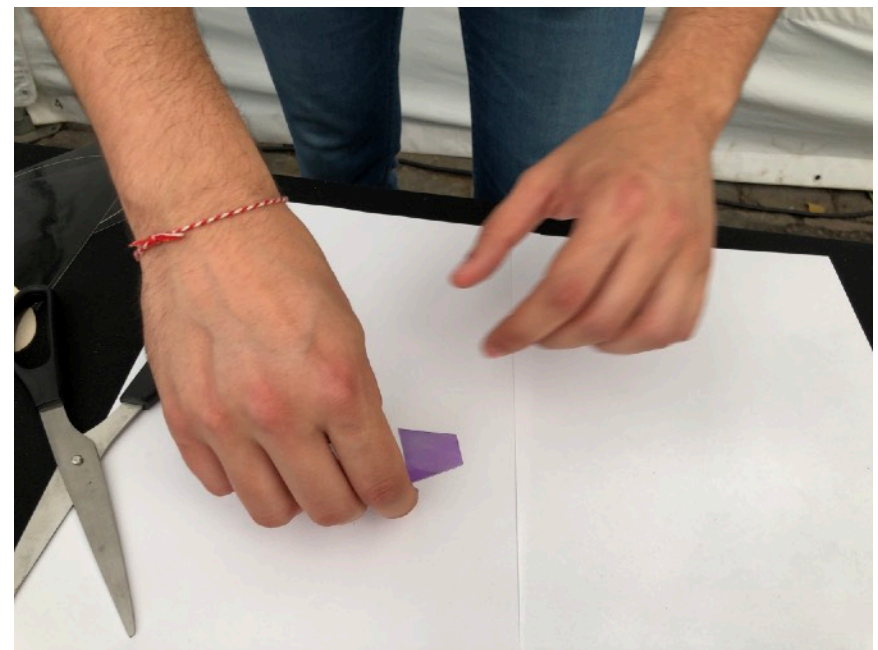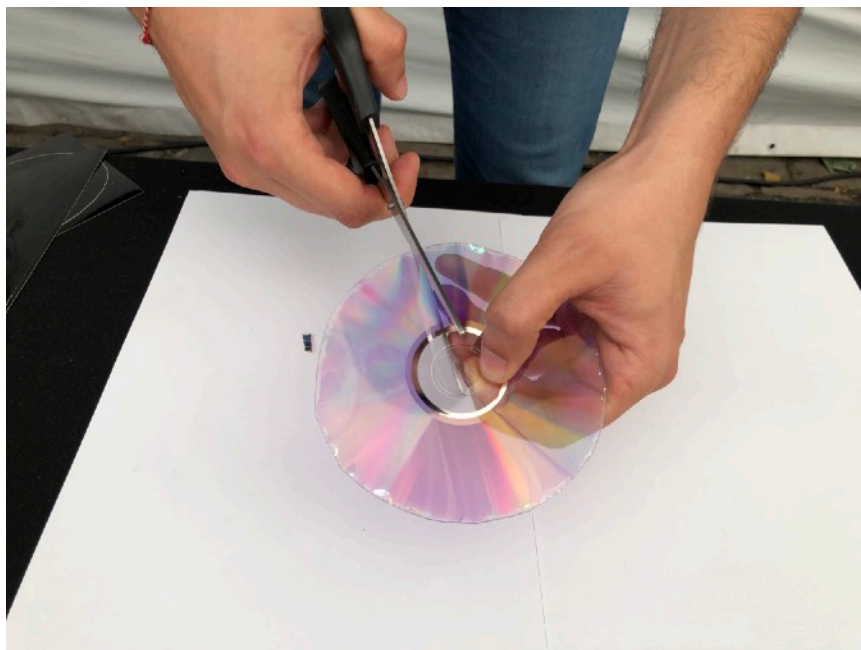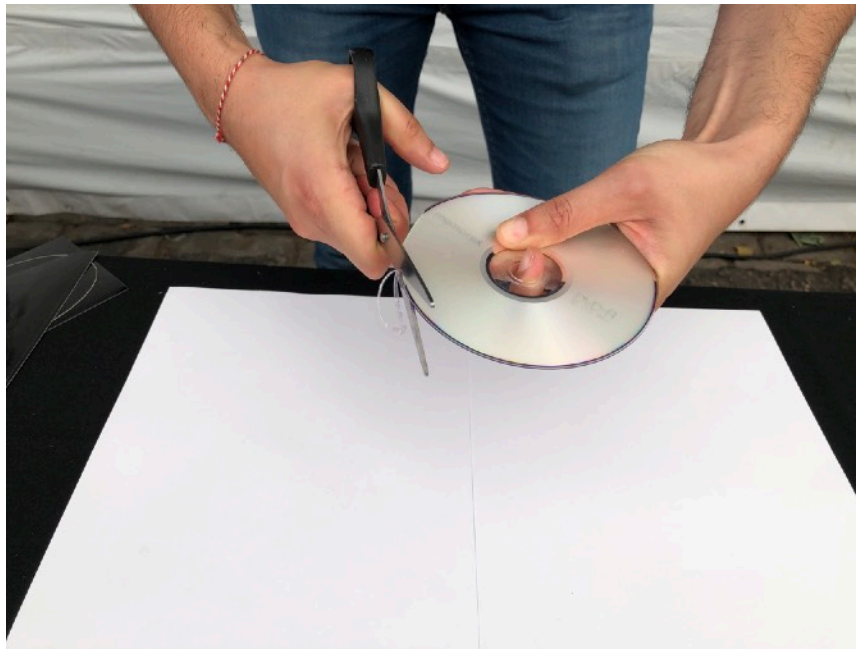





# STEP 2

- CUT THE TOILET PAPER ROLL DIAGONALLY LEAVING ~1cm IN EACH SIDE

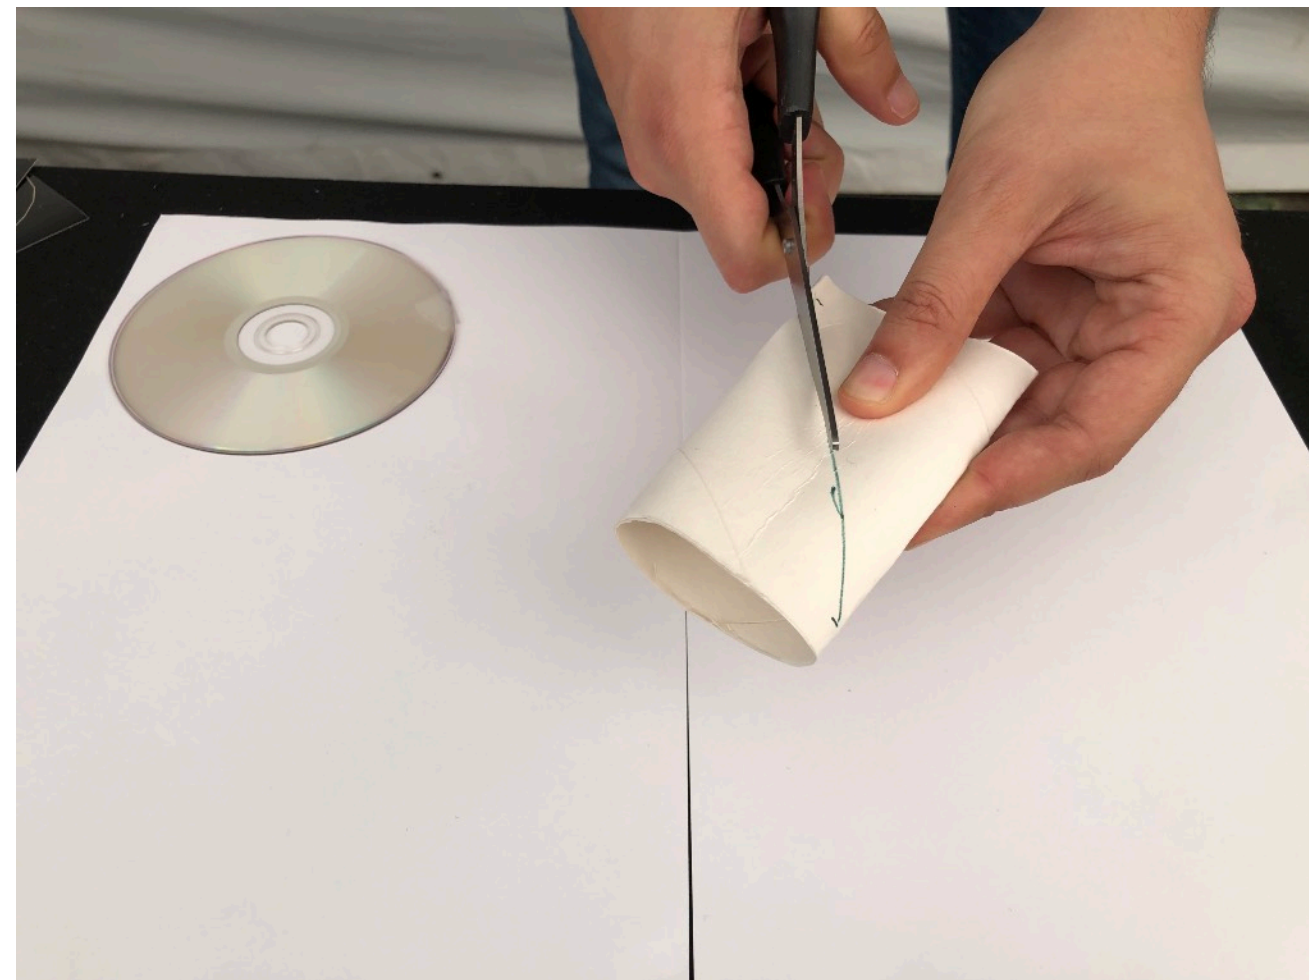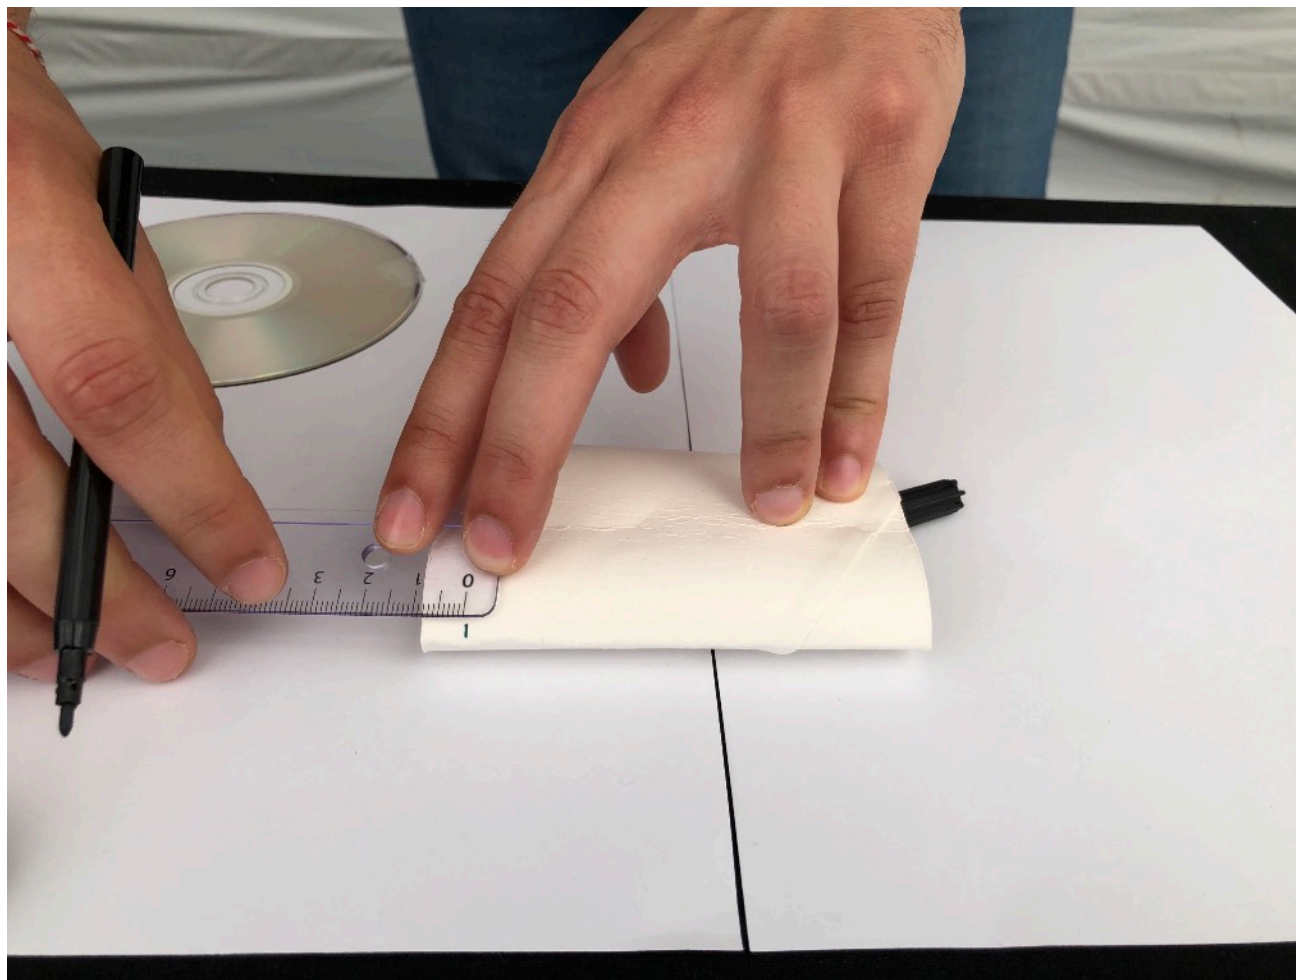

# STEP 3

- TAPE THE CUT CD/DVD PIECE TO THE WOOD HOLDER USING THE PRE-CUT BLACK TAPE

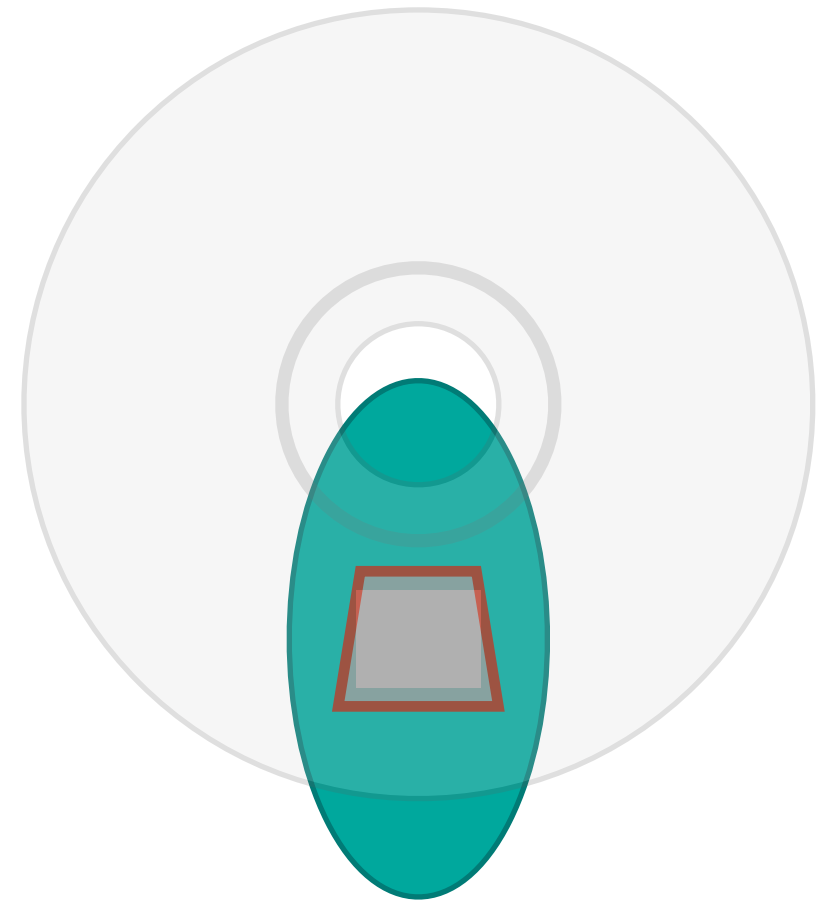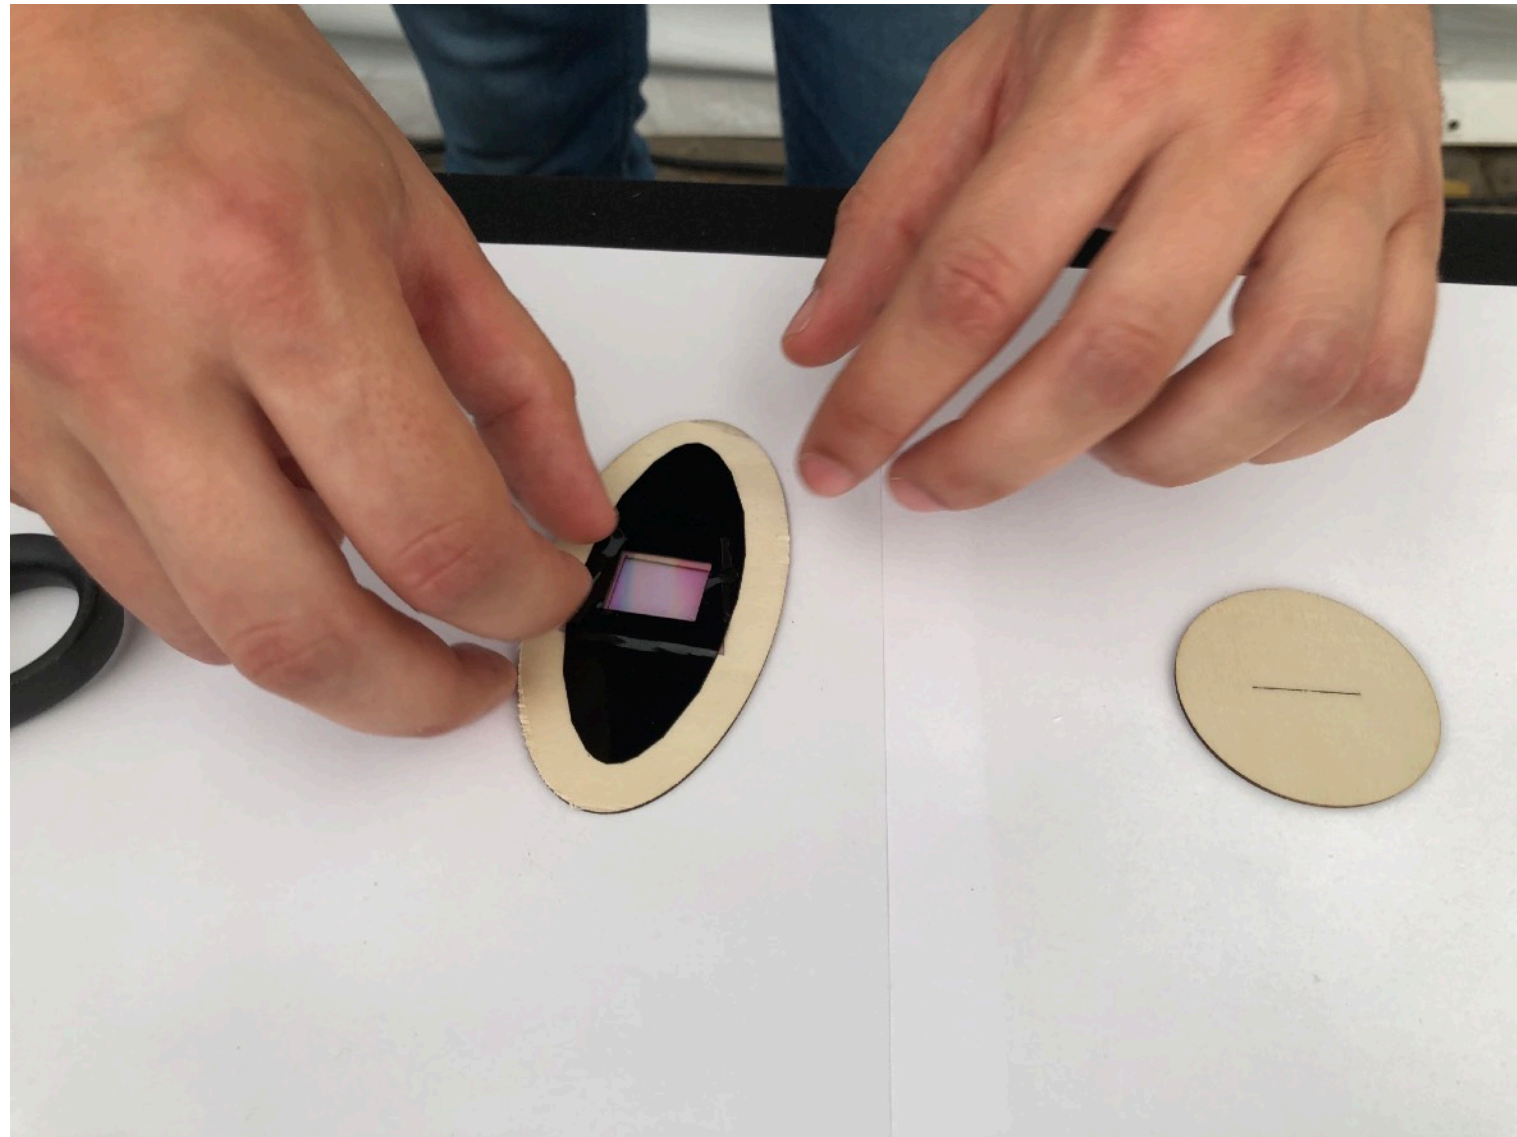




**Pro tip:** Orient the piece of the cut CD/DVD as shown in the schematic

**Note:** If you do not have a wood holder, you can use your cardboard from step 0. If you do not have pre-cut tape, use regular dark tape.



# STEP 4

- TAPE THE WOOD SLIT TO THE FLAT END END OF THE ROLL USING THE PRE-CUT TAPE (5a)

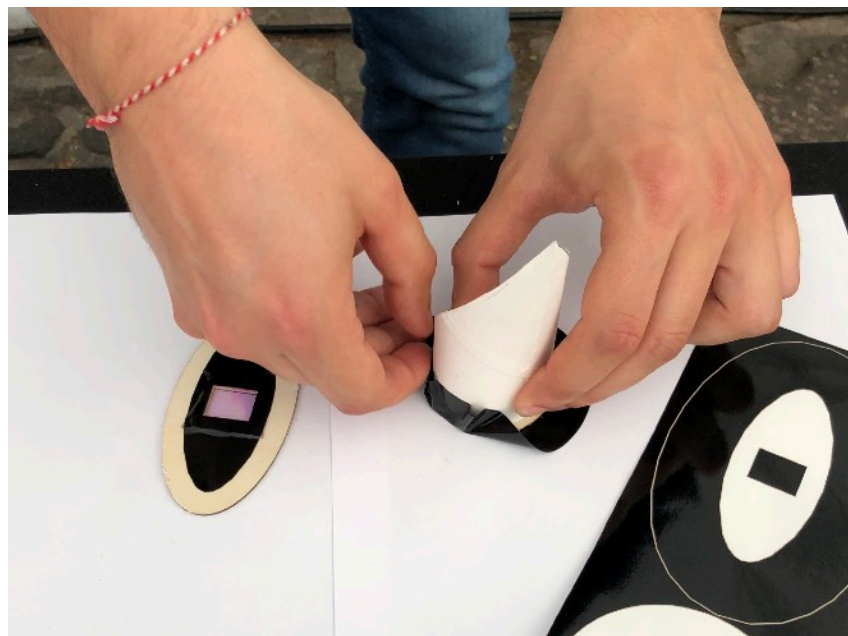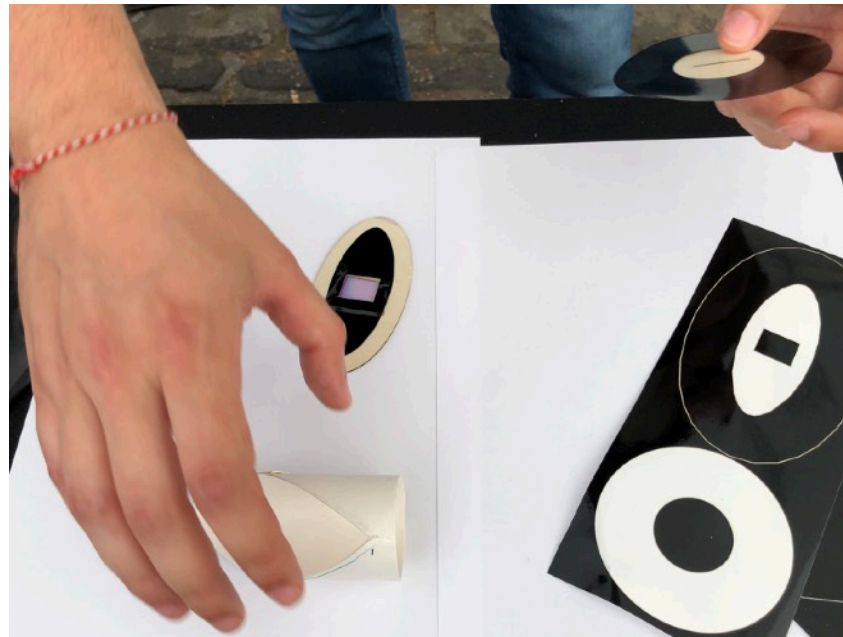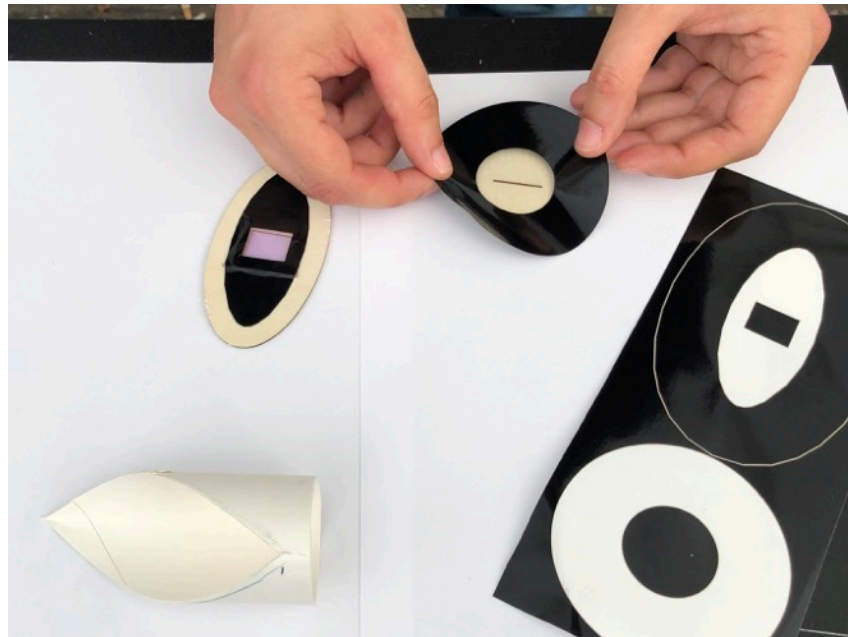

**Note:** If you do not have a wood slit, you can use the pre-cut slit tape or make your own using cardboard from step 0. To make the slit, use a paper to separate the two cardboard semicircles and tape them to the roll. If you do not have pre-cut tape, use regular dark tape.

# STEP 5

- TAPE THE WOOD HOLDER TO THE ANGLED END OF THE ROLL USING THE PRE-CUT TAPE (5b)



**Note:** If you do not have pre-cut tape, use regular dark tape.



# STEP 6


- COVER THE SPECTROROLL WITH THE PRE-CUT BLACK TAPE (5c)



**Note:** If you do not have pre-cut tape, use regular dark tape.

# STEP 7

- EXPERIMENT WITH YOUR **SPECTRÖRÖLL**

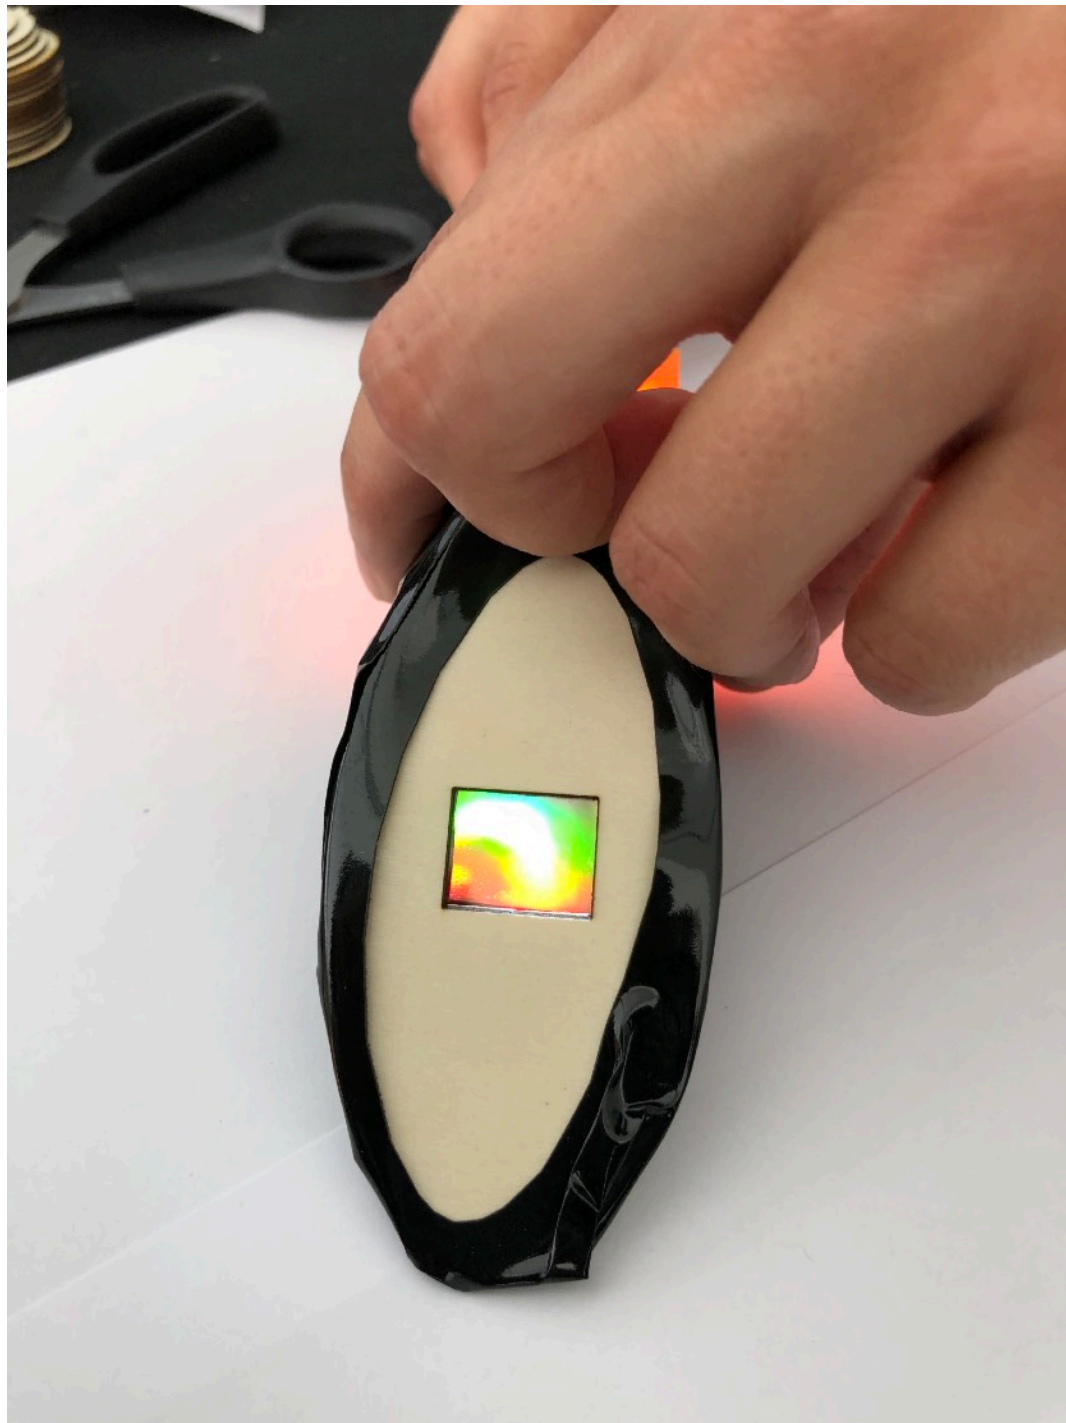

If you have any  
questions/comments,  
please email us at:

**spectroroll  
@gmail.com**

