




* Note

Mini-Din-6PR and Mini-Din-8PR are Standard Mini-Din Pins

To be mounted on back side of PCB.

So the footprints on front side are as same as FT-817's Mini-Din Jacks

PTT pin here function as PS_ON control, don't pull low externally.

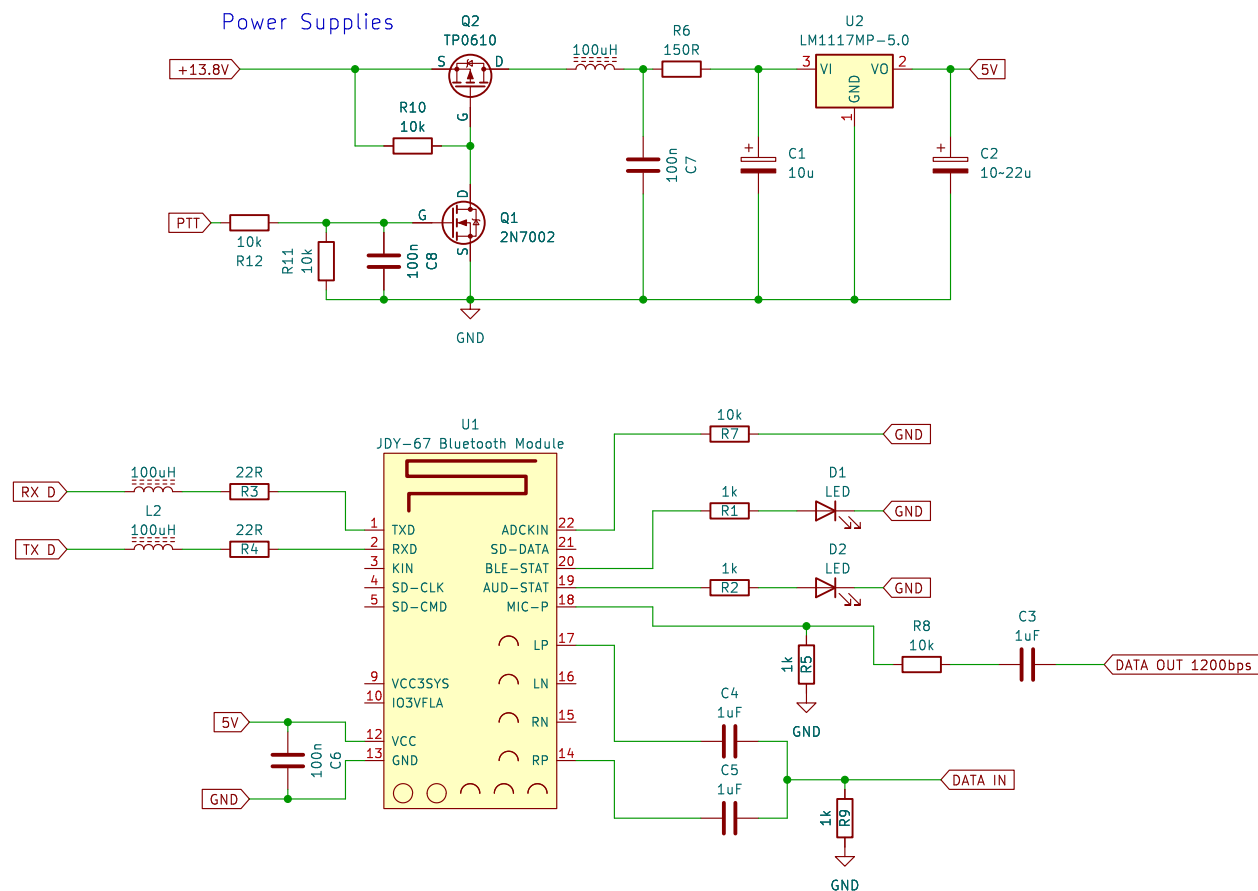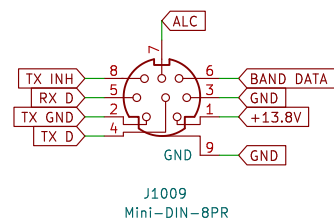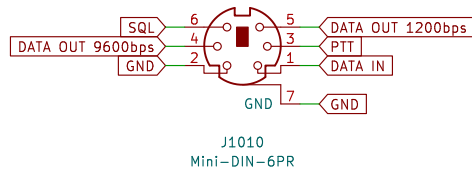

With special thanks to: BG6JJJ, BI1EIH
CC-BY-NC-SA 4.0
<https://github.com/BG6LH/FT-81x-BT-DIGI-Adaptor>

Sheet: /
File: FT817-BT-JDY67.kicad_sch

Title: FT-81x BT Digi Adaptor

Size: A4 Date: 2023-06-08

KiCad E.D.A. kicad 7.0.1-0

Rev: 20230608

Id: 1/1