



Dragonclaw v0.2 1.8V Load Switch Rework

<https://docs.google.com/drawings/d/1YhOUD-Qf69NUdugT6n0cX7o7CWvb5begcdmJwv7ch6l>

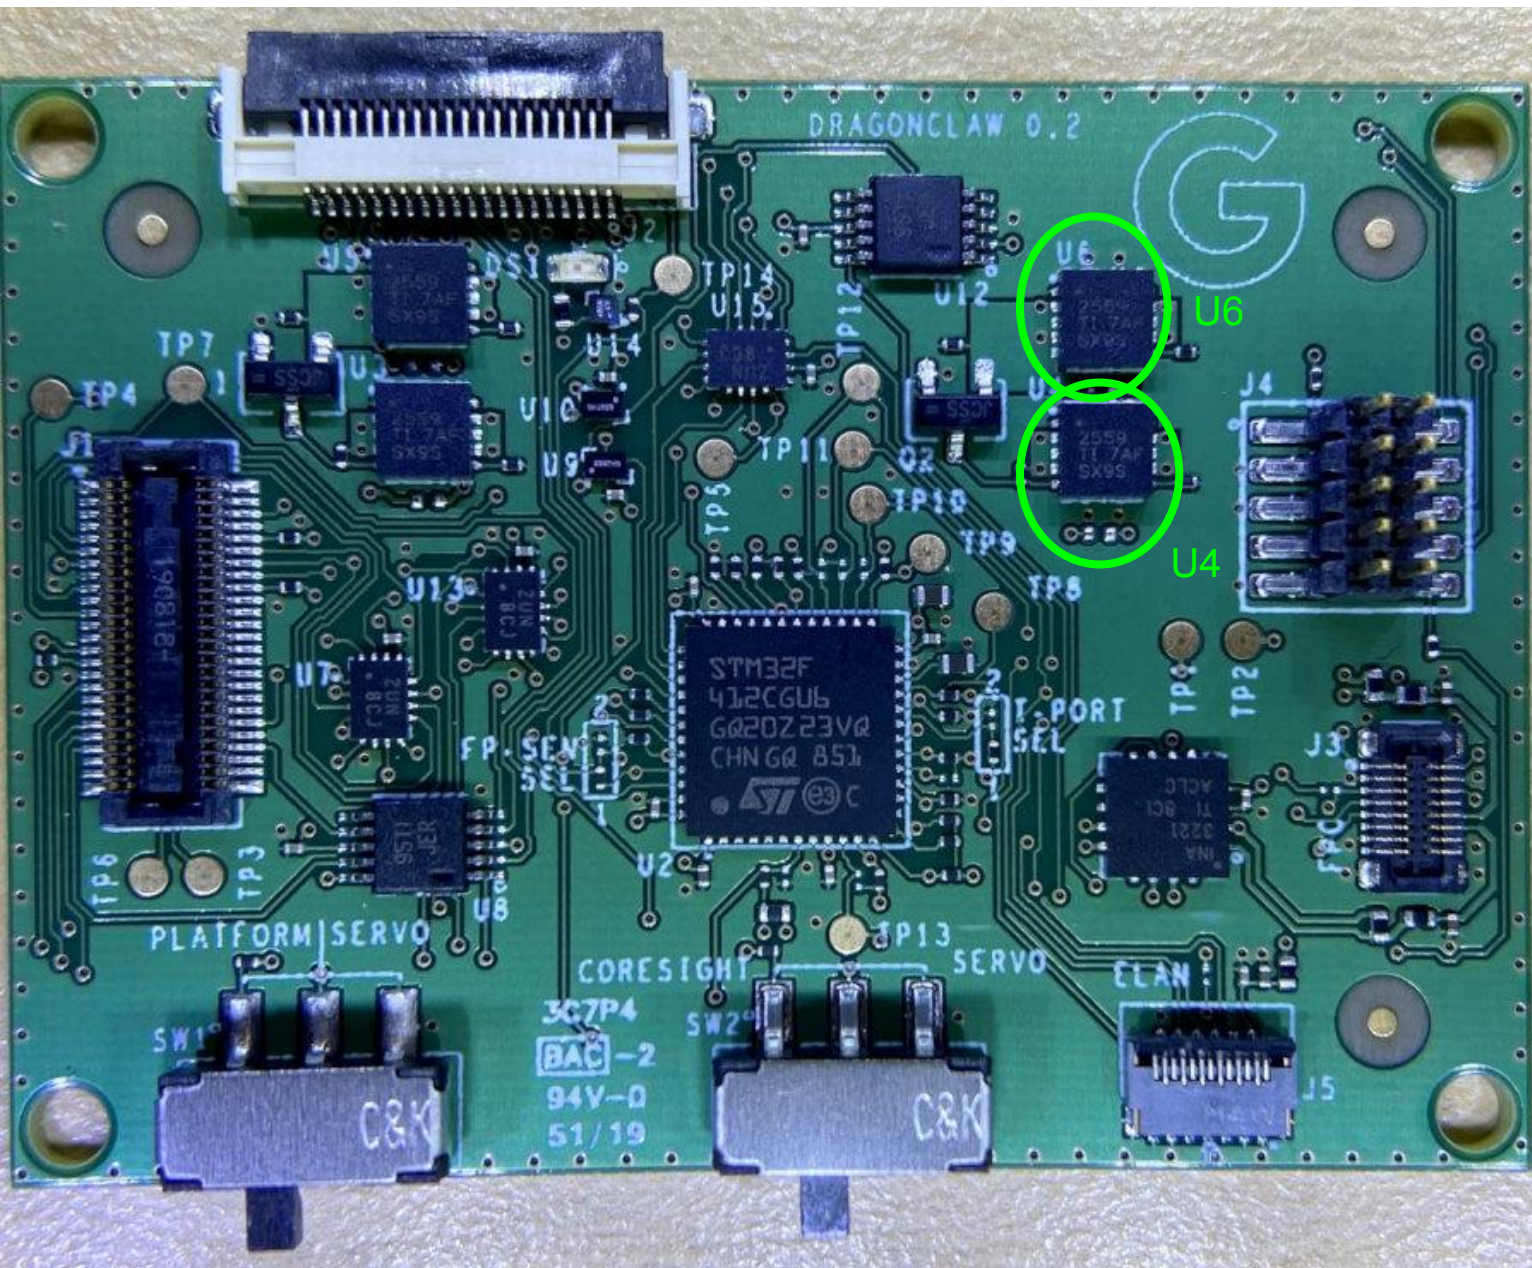

<https://www.digikey.com/product-detail/en/on-semiconductor/FPF2125/FPF2125CT-ND/1923109>

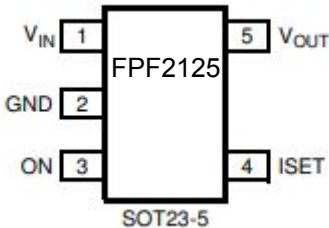

Remove U6 and U4. Replace with FPF2125.

Right-align FPF2125 with existing footprint.

Vout and Iset line up with the right side pads.

GND lines up with the center ground pad.

Lift up the Vin and ON legs and use small wire to connect it to the left pads.

