


Thread four middle holes for M6 screws.

Holes on corners should be centered 1 cm from edges of plate. Throughholes.

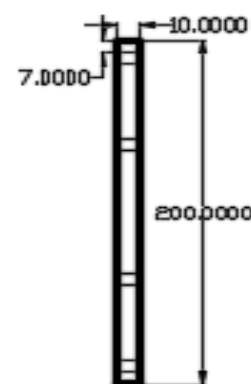

Wireless Laboratory Flange for UR3 Robot. Denoted in millimeters. Richard Candell.