



MAKE 2

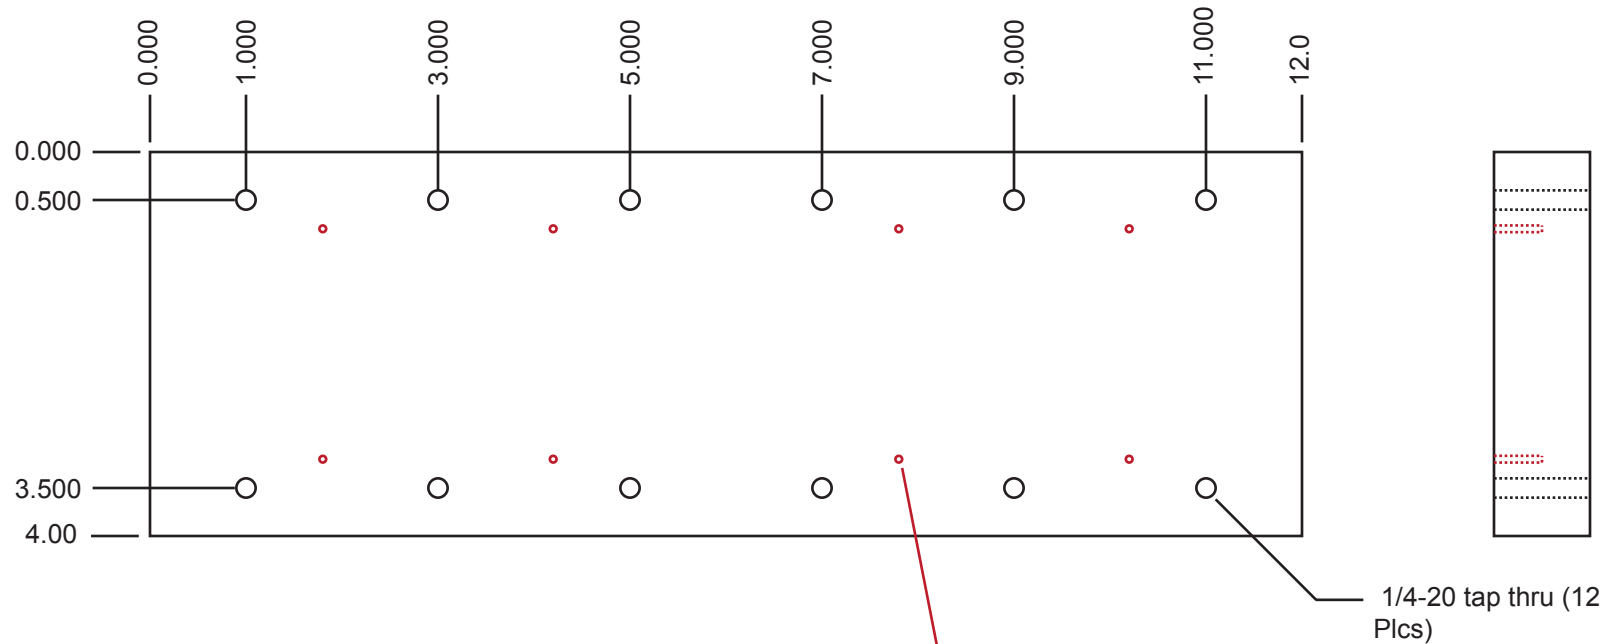

drill & tap 0.50 deep for screws appropriate for mounting water blocks.

NOTE: LOCATION OF SCREW HOLES IS NOT ACCURATE.

The actual location of red screw holes should align with the mounting areas on the CPU water blocks, such that the water blocks can be fastened over peltier devices

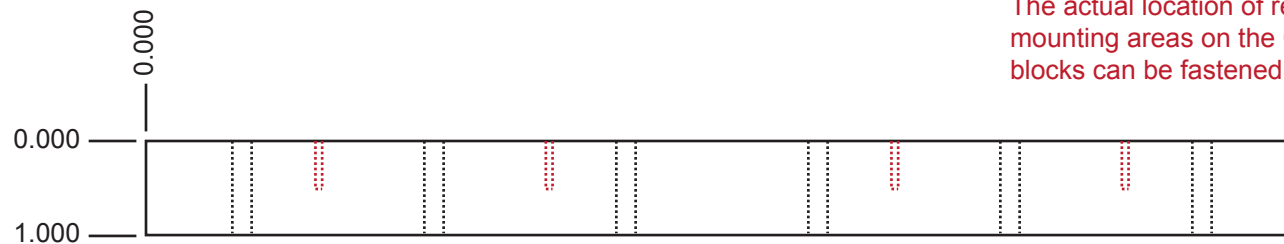

SCALE = 1:2

SPATIAL GRADIENT RESERVOIR BLOCKS
Make from Aluminum
Astra Bryant, UW
07/13/2023
astrab@uw.edu, 206-616-6118
units = inches