



Insert and tighten screws.

M3x35

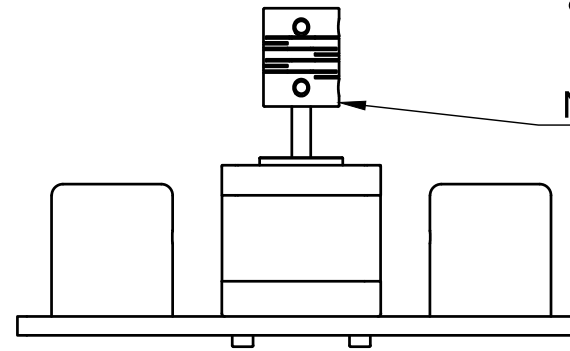


Insert coupler on stepper rod and secure it with a screw.

Nema 17 coupler

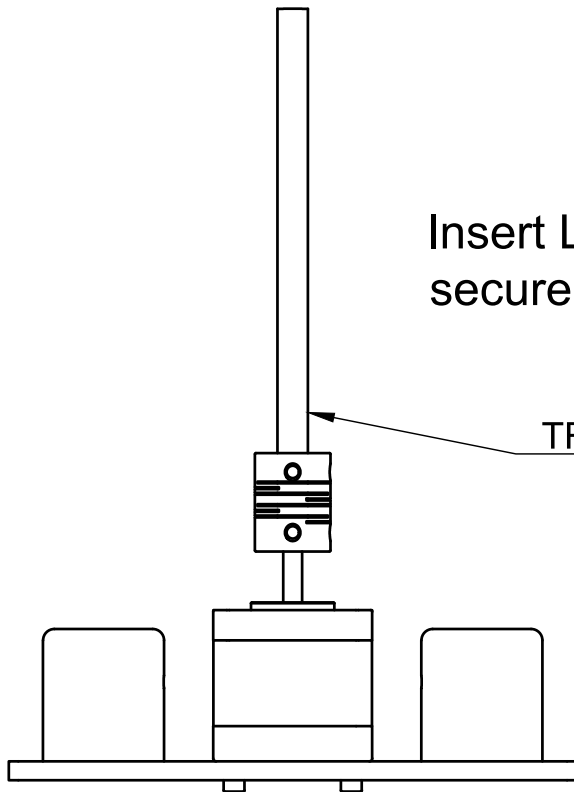





Insert Leadscrew and secure it with screw.


TR8 rod

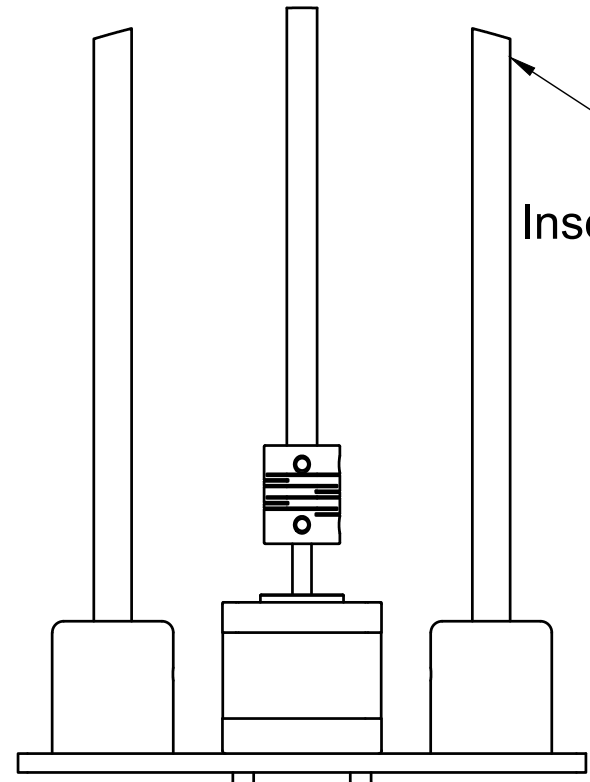

Insert 10mm rods


10MM rod

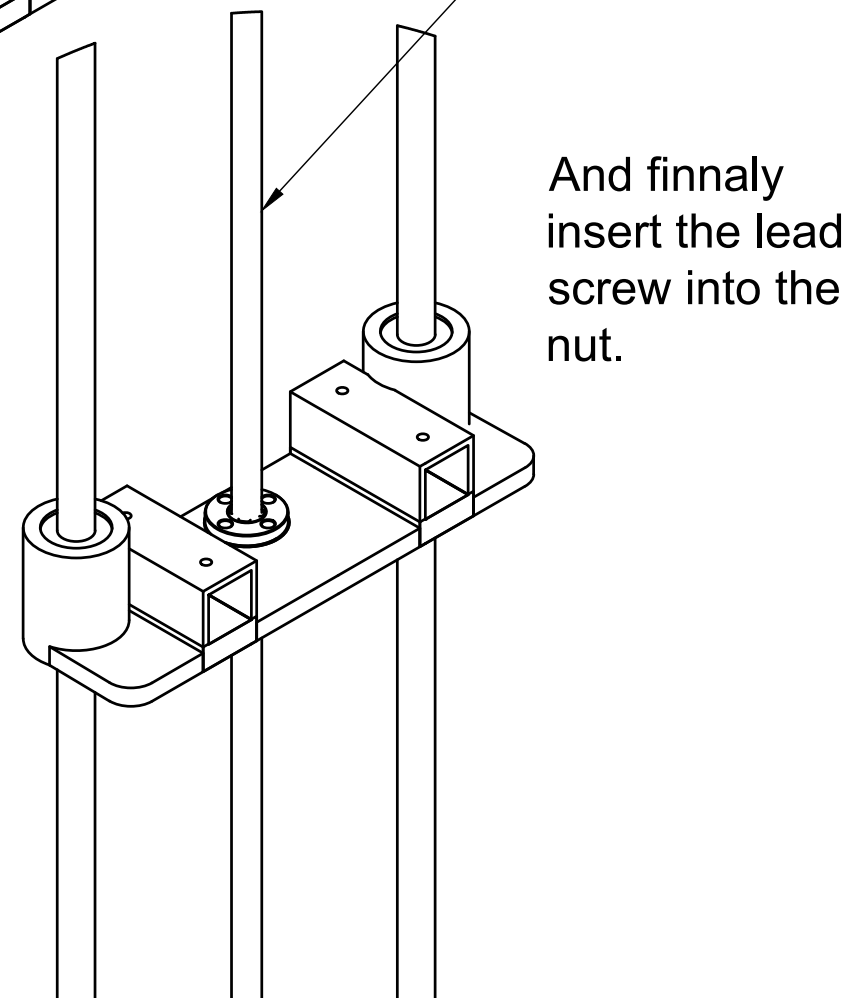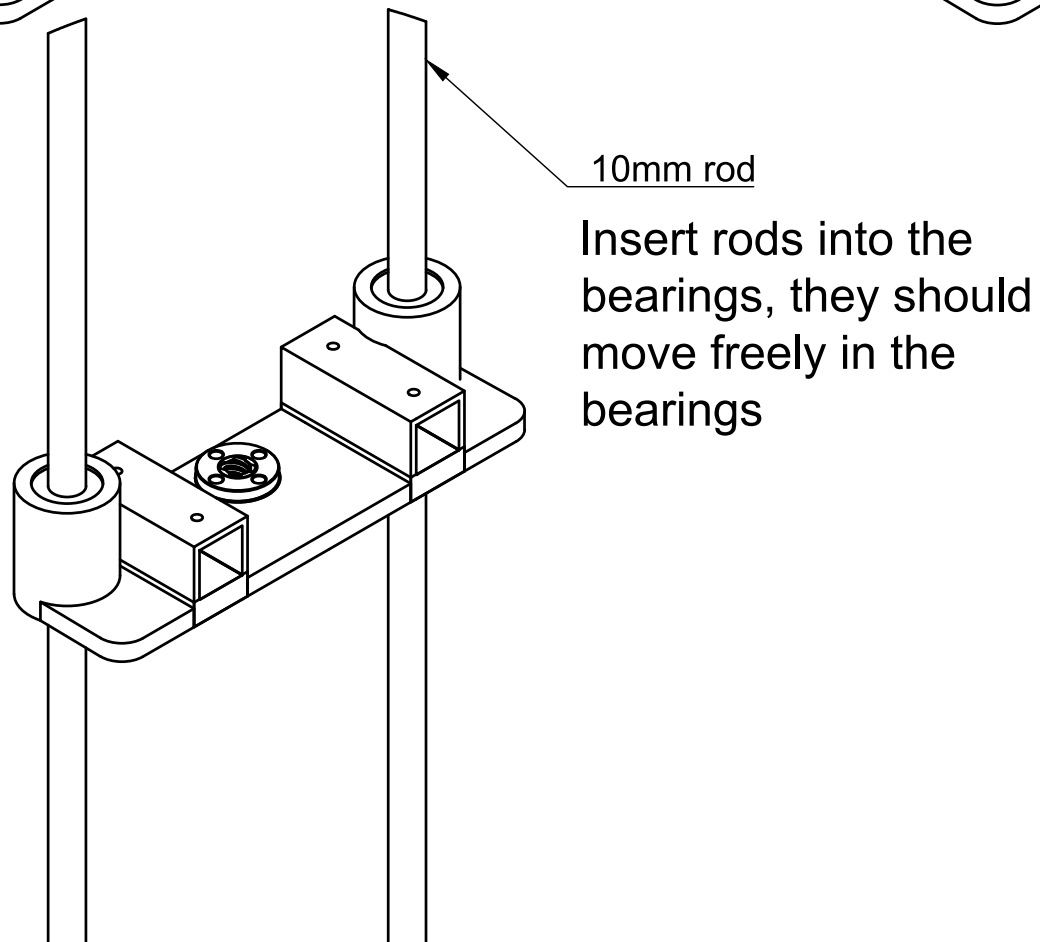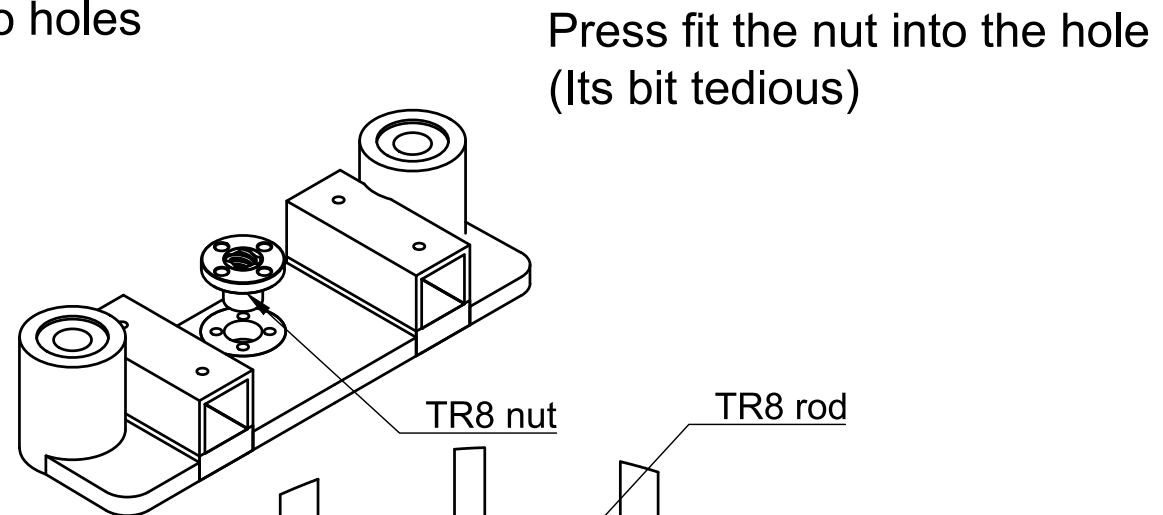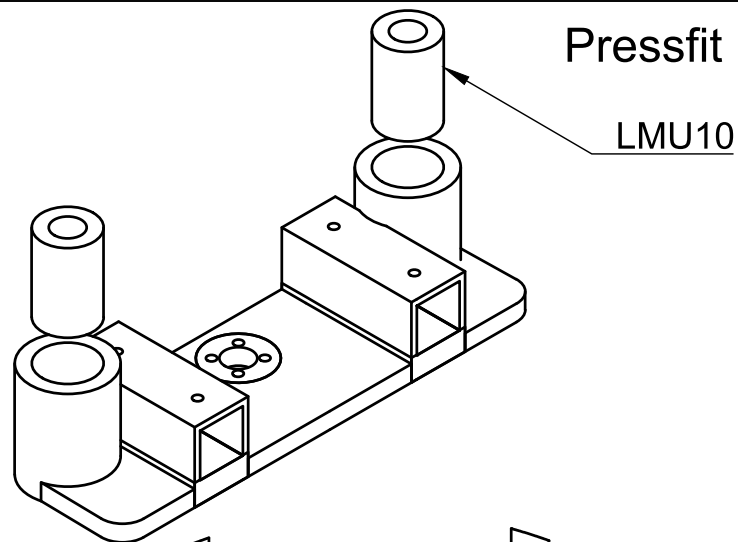

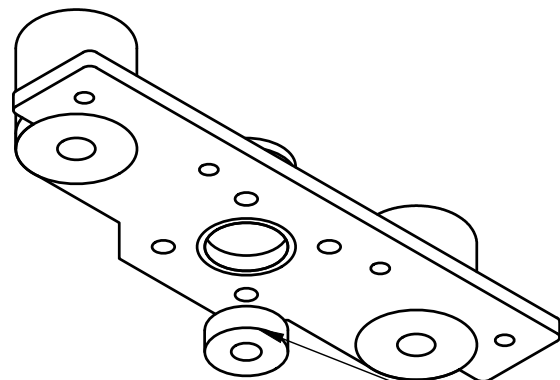


Push fit the bearing in the hole

22 out 8in bearing

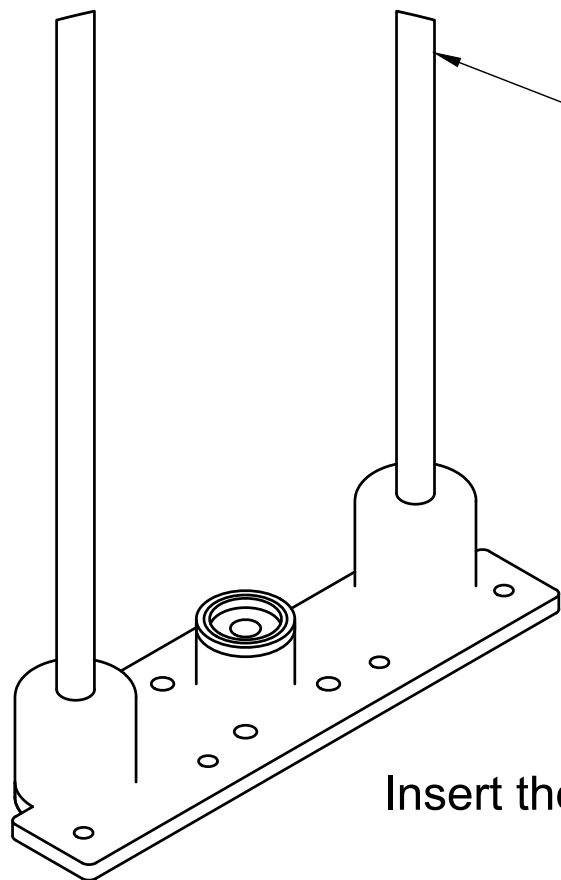

10mm rod

Insert the rods into the holes

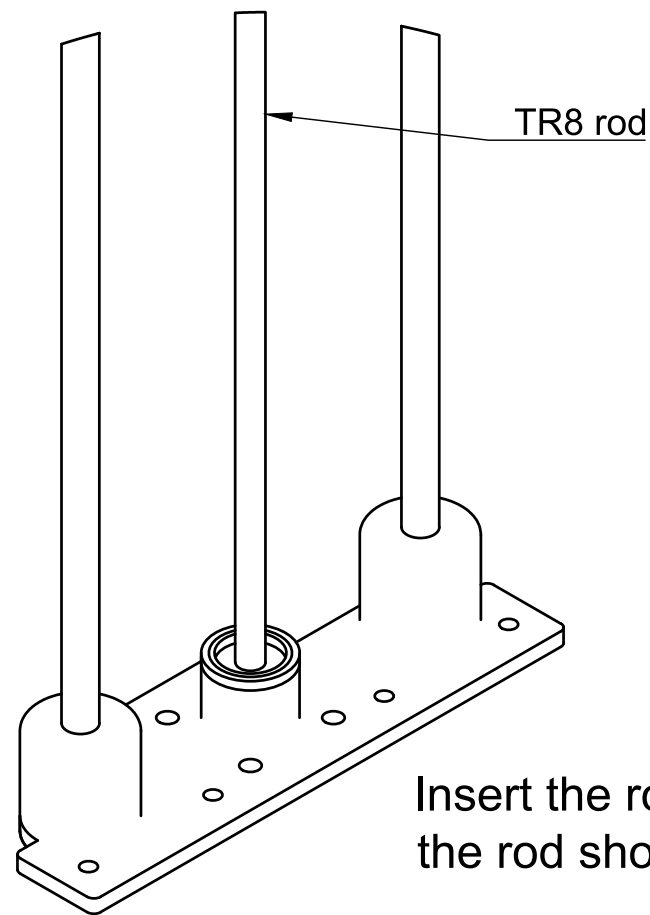

TR8 rod

Insert the rod into the bearing,  
the rod should freely spin