



HOWDOWEMAKE?


ASKETCHYTUTORIAL

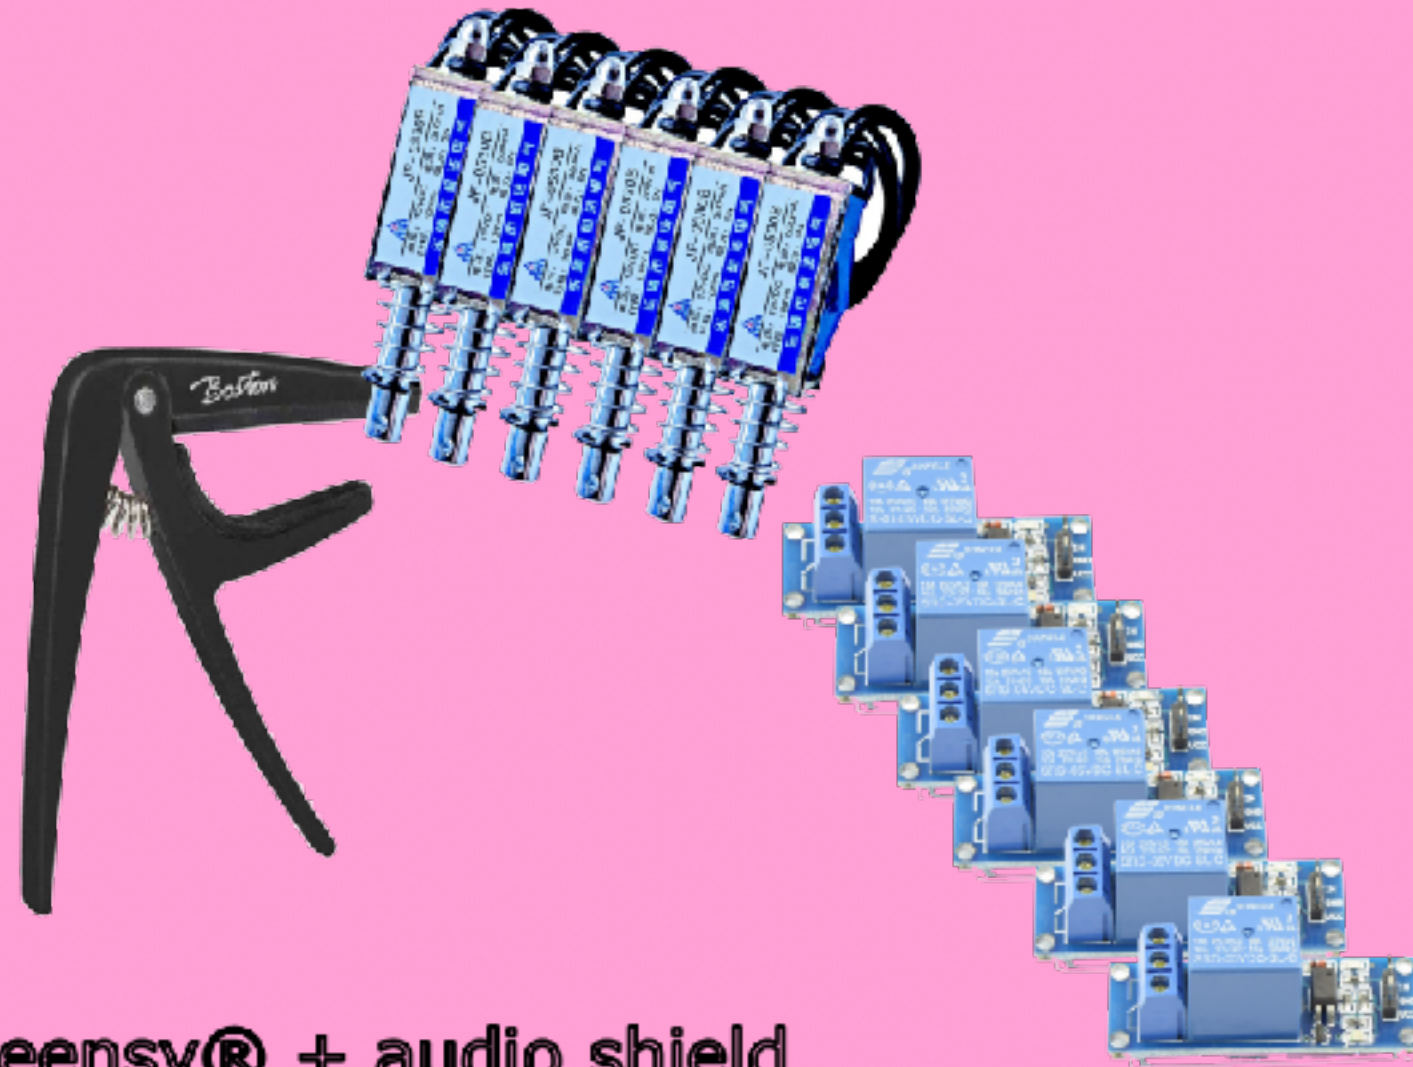

teensy® + audio shield


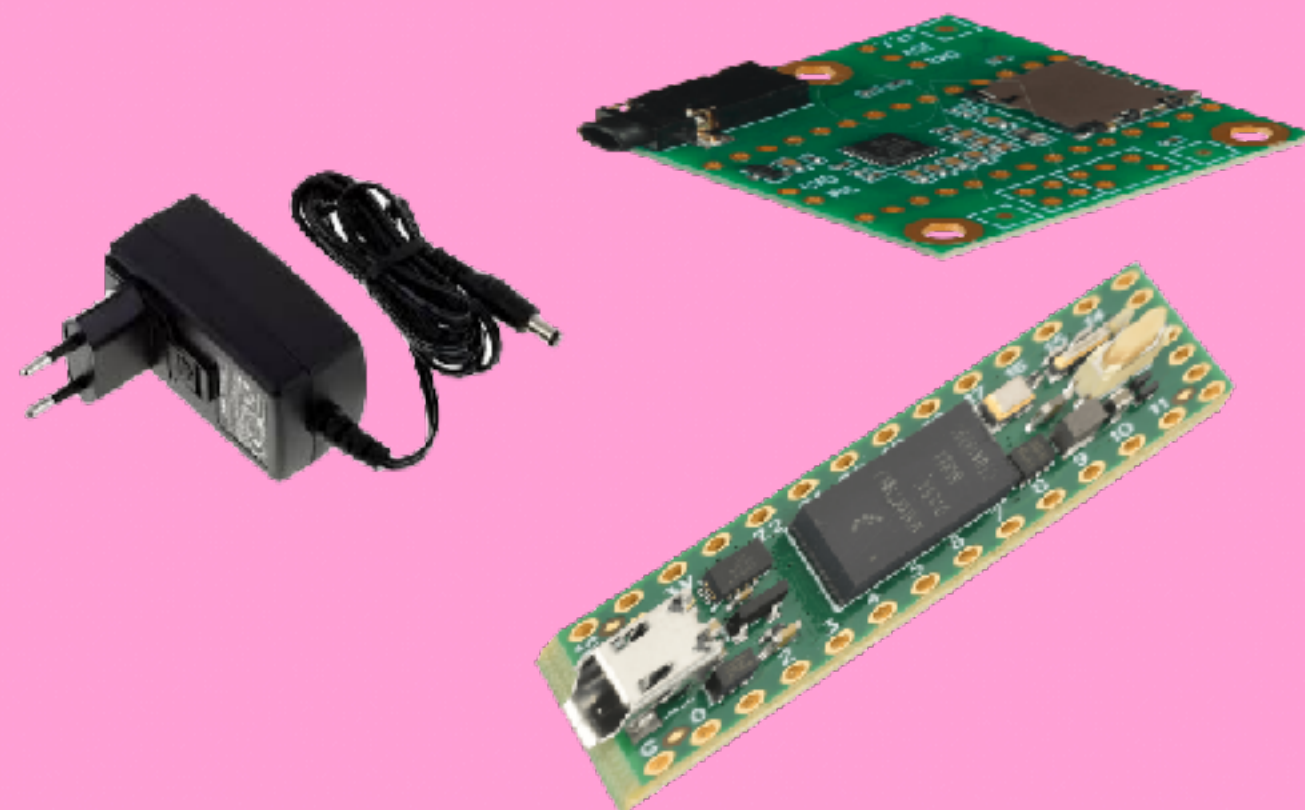


signāļ flōw

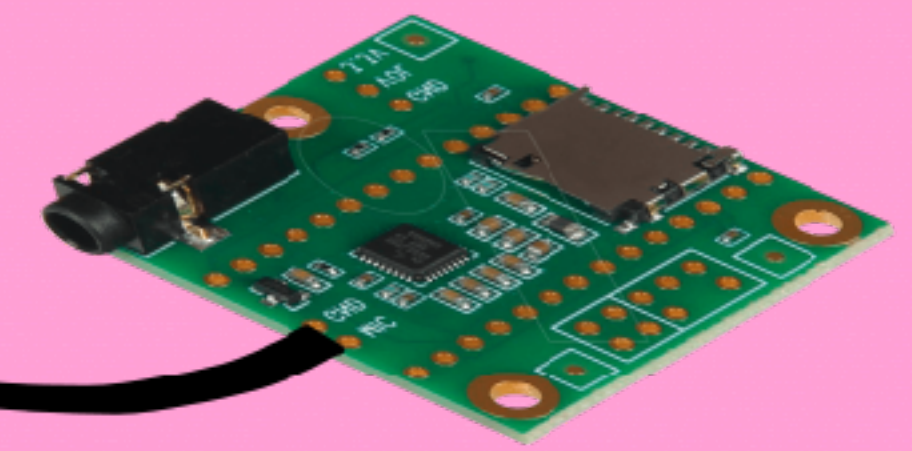


1010010001
0010101000
1010010101
0010101000
1010101000
100101?!?!?

pin 13, 14 and 15

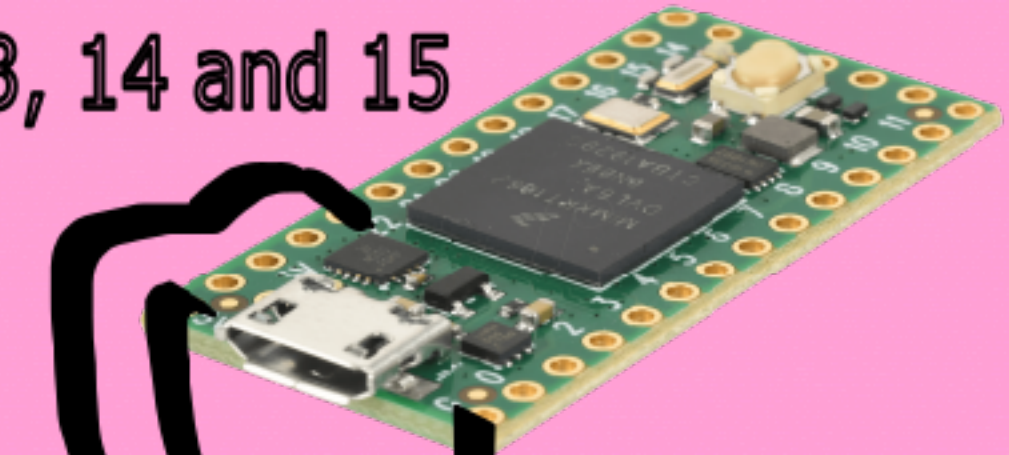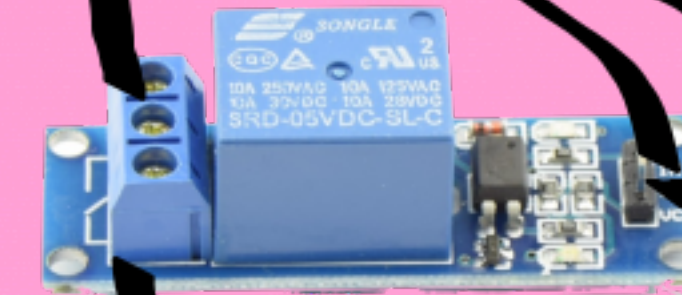


relays and
solanoid 3x


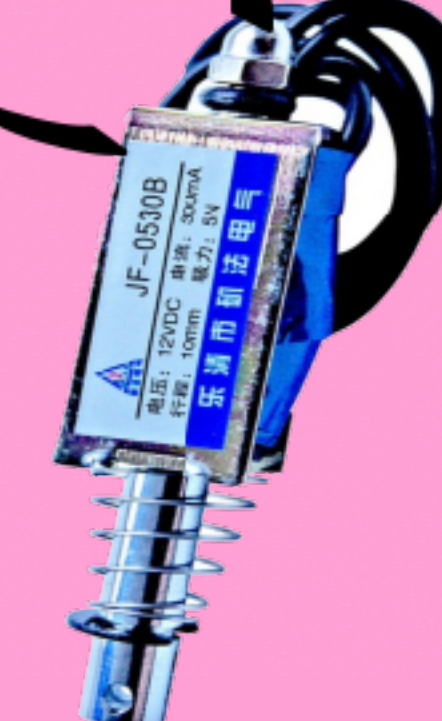


HOWDOWEMAKE?

ASKETCHYTUTORIAL

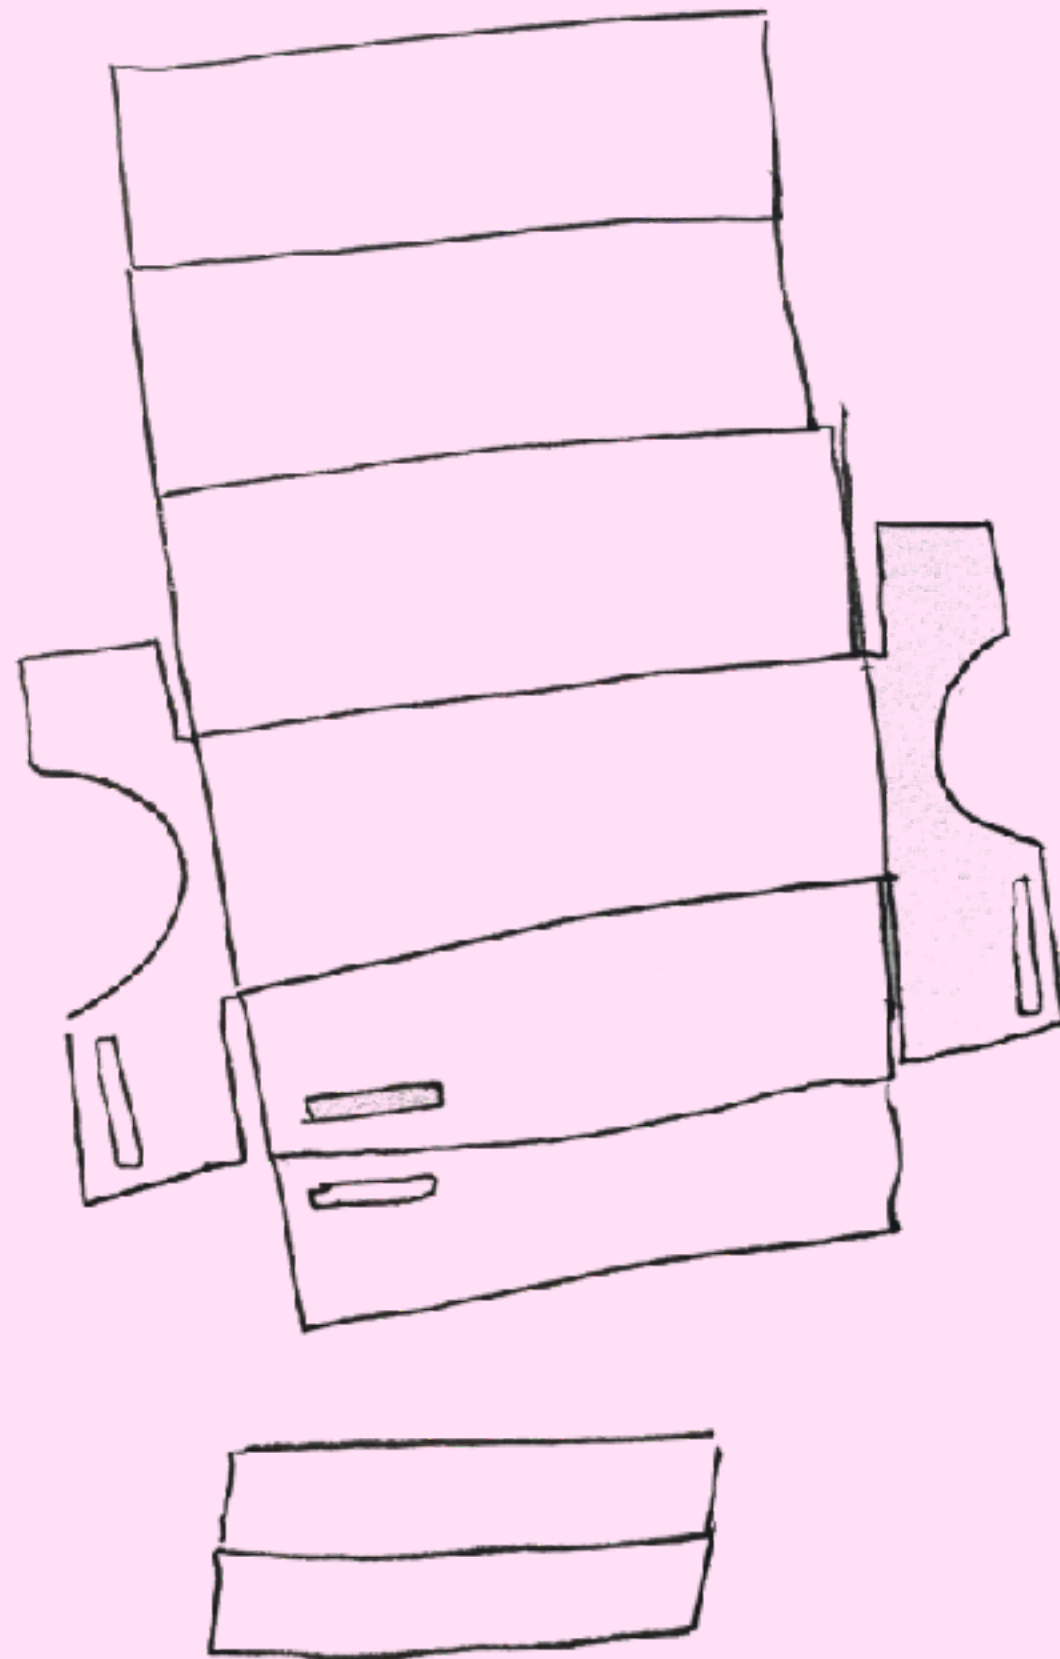

FOLD THE
CARDBOARD

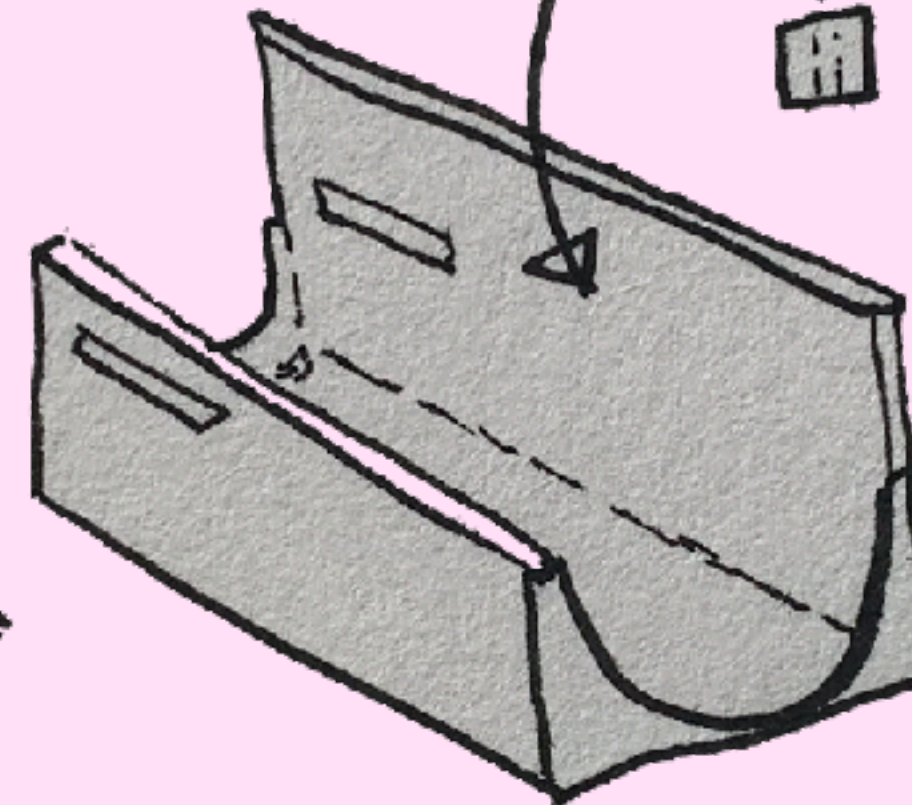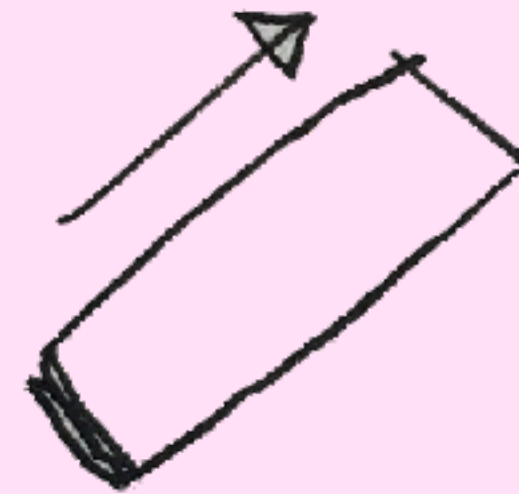

STICK THE SOLA-
NOID ON THE
CARDBOARD WITH
DOUBLE SIDED TAPE

PUT A PIECE OF
RUBBER TUBING
ON THE TIP OF THE
SOLA NOID

ON THE BACK THERE
IS ROOM FOR THE CIRCUIT

HOWDOWEMAKE?

ASKETCHYTUTORIAL

Teensy 4.0

Teensy audioshield

jack cable

breakout relais board

12v solenoid

little cardboard box

breadboard

stuff to solder

