

# CHAPTER 01

## PREPARATION


There are several OEM components of the skidsteer that will need to be removed before

installation, as well as other steps such as securing the boom and lifting the cab. All

necessary preparations will be detailed in this chapter.

### WARNING

Before beginning any work on the kit, be sure that the vehicle power has been shut off at the battery by toggling the kill switch.

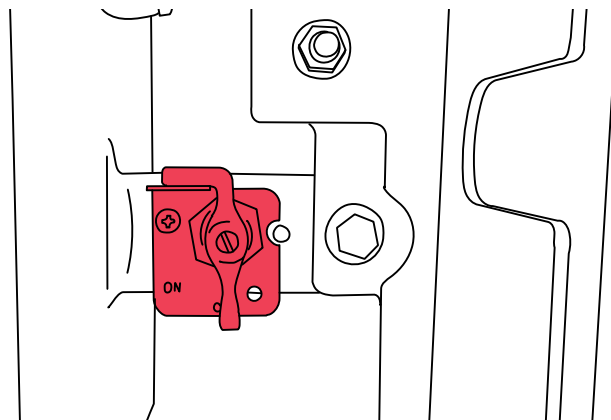

# 01 RAISE CAB


## STEP 01 RAISE BOOM

Before the cab can be moved to allow work to be done underneath it, the load boom needs to be raised all the way.




## STEP 02 SECURE BOOM

This handle to the left of the seat in the cab of the skidsteer will deploy the boom locking bolt.

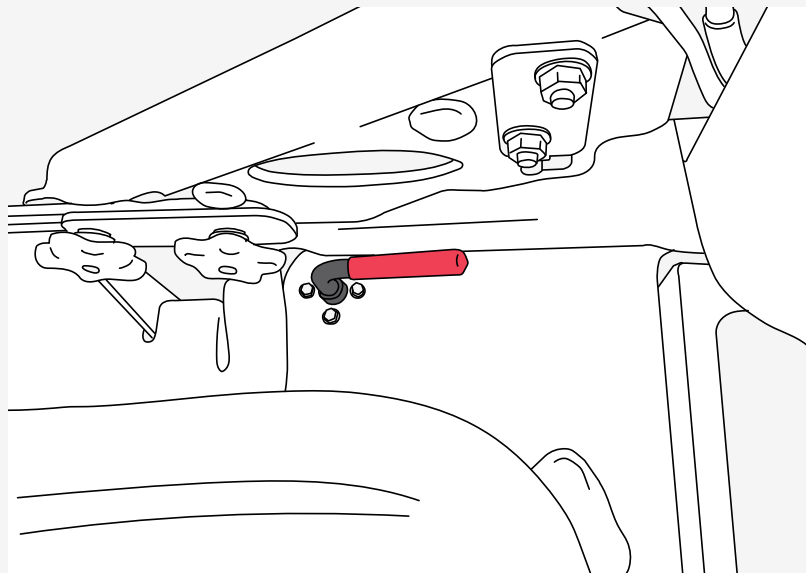

When the locking bolt is deployed, the boom will rest against it when the vehicle doesn't have power, instead of falling.

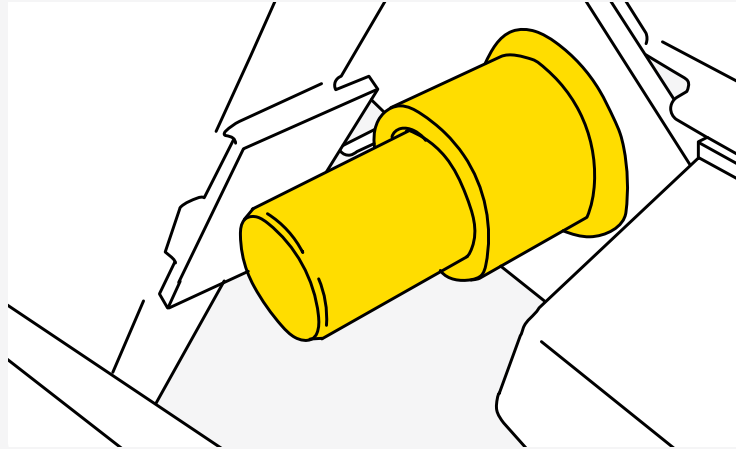

### STEP 03 RELEASE CAB

Undo the bolts to either side of and behind the cab. That will free the cab to be tilted.

