

# Mullet Melter Assembly

Required:

(3) 3010 Blower Fans ([DFH](#)) ([West3d](#))

LGX Lite

Revo Voron or Rapido


(5) m3x6

(4) m3x10

(2) m3x10 BHCS

(2) m3x12


(1) m3x8

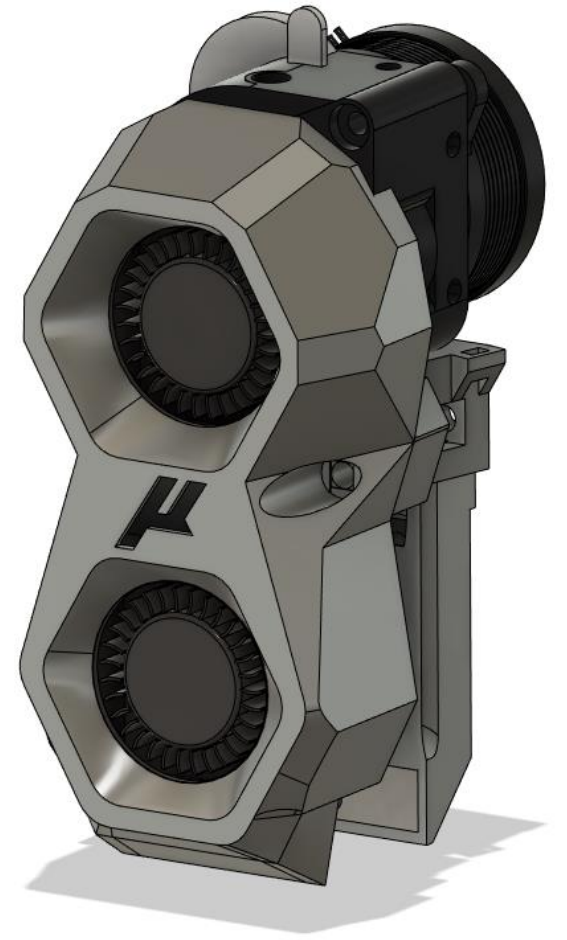


Shroud




Rail Mount

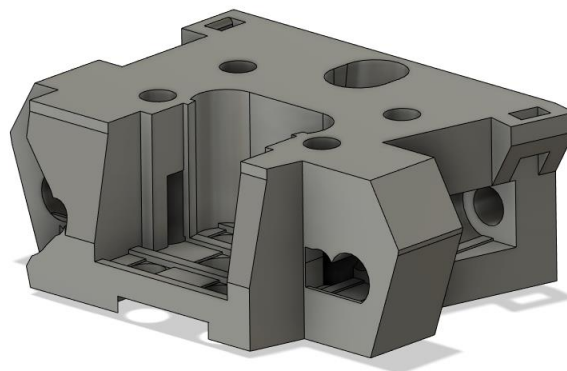

Rear Fan Mount

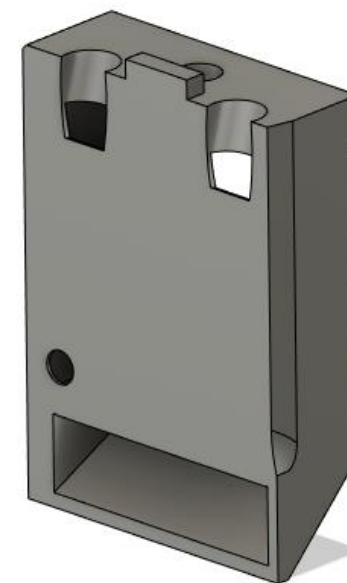


Route fan power cable  
on the side of the  
bottom fan.

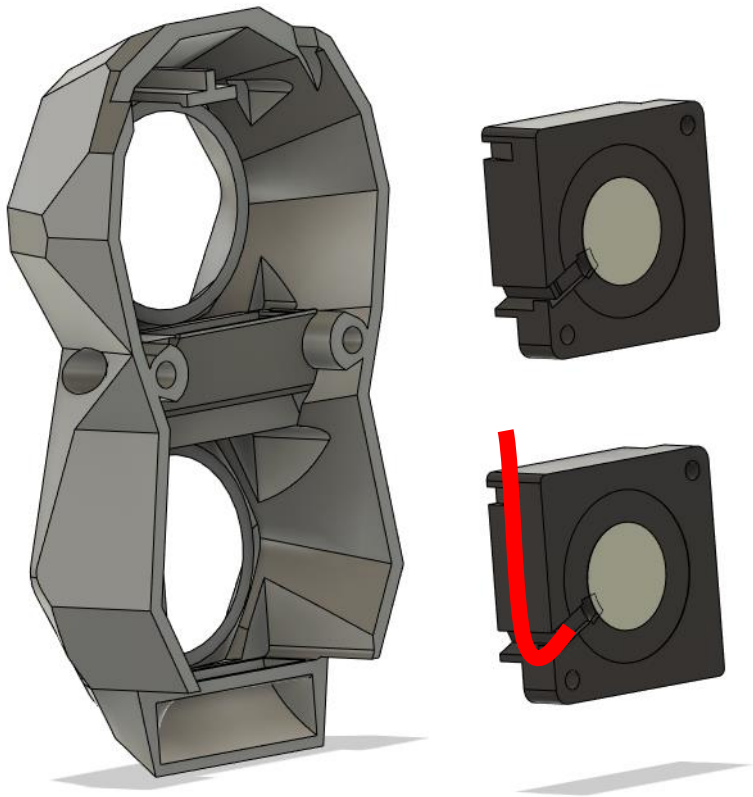


Install both fans.


The cable will run  
under the ledge and  
exit the shroud through  
a small notch like this.

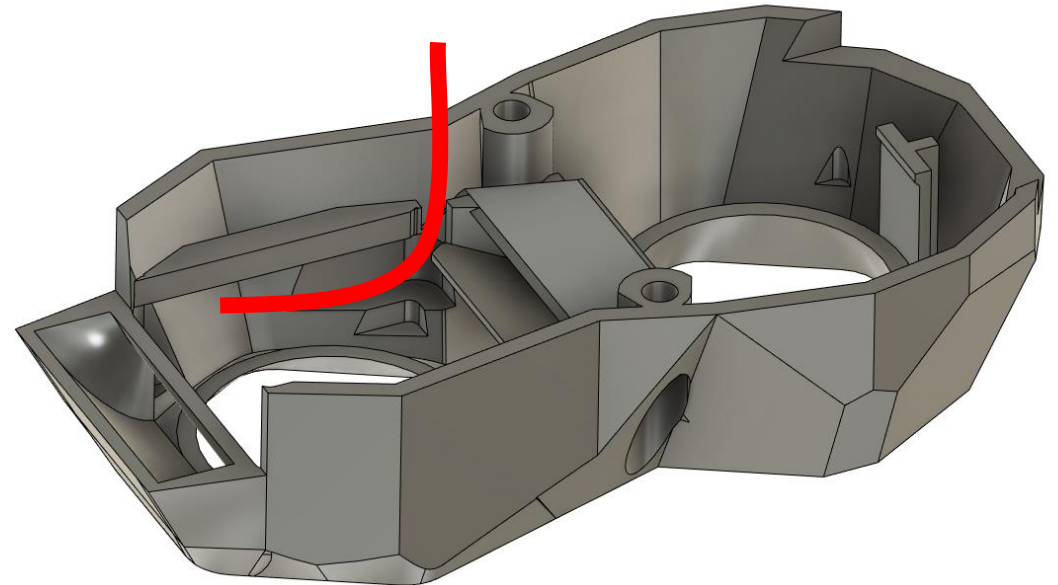


Use an m3x6 bolt to pre thread this hole in the 3010 blower.

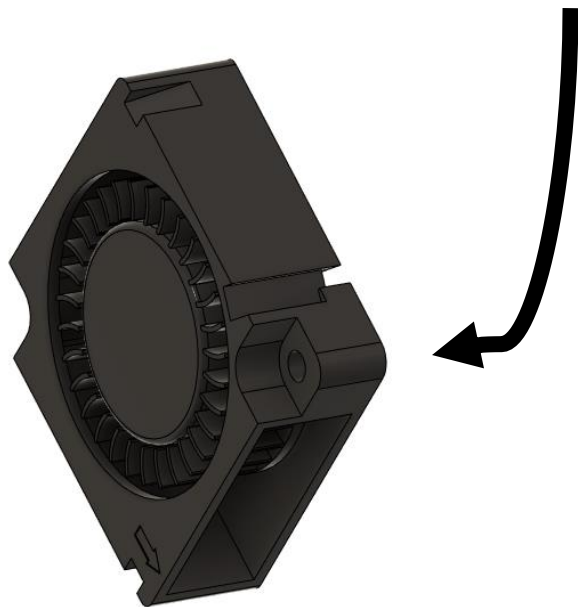


Remove bolt and re-install into the rear fan mount.

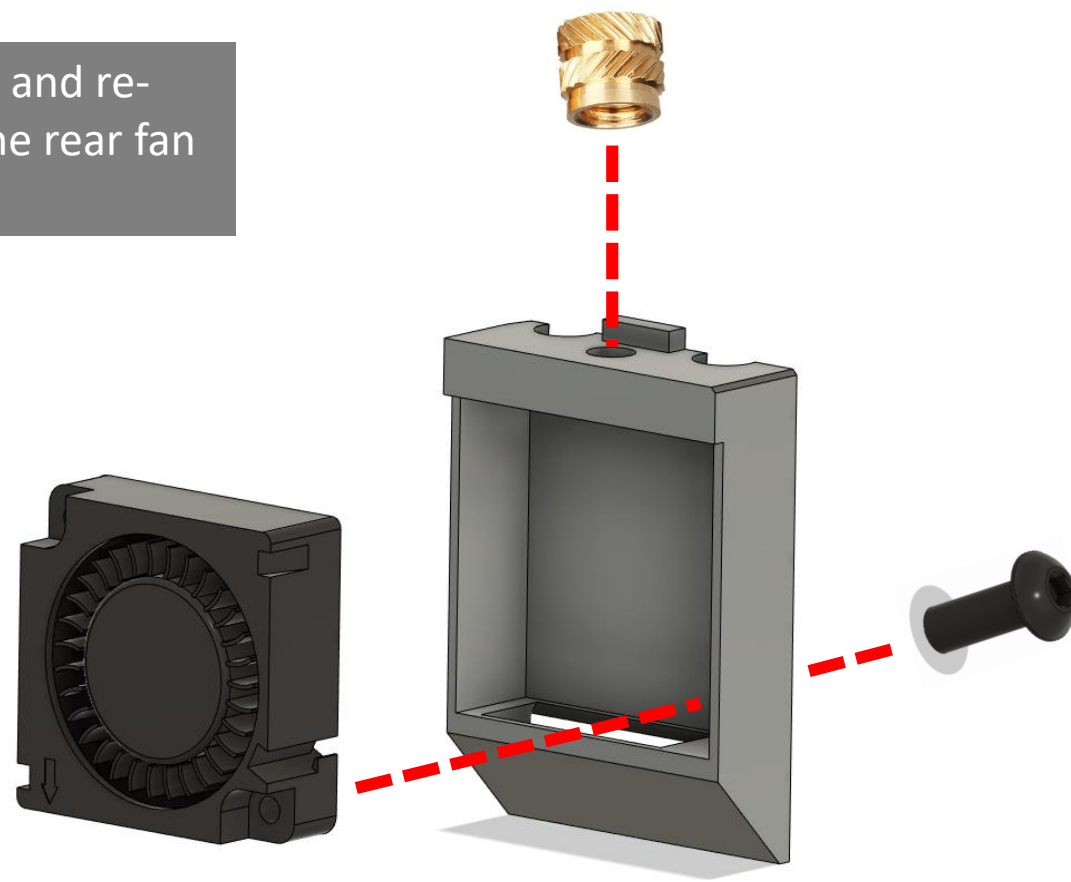


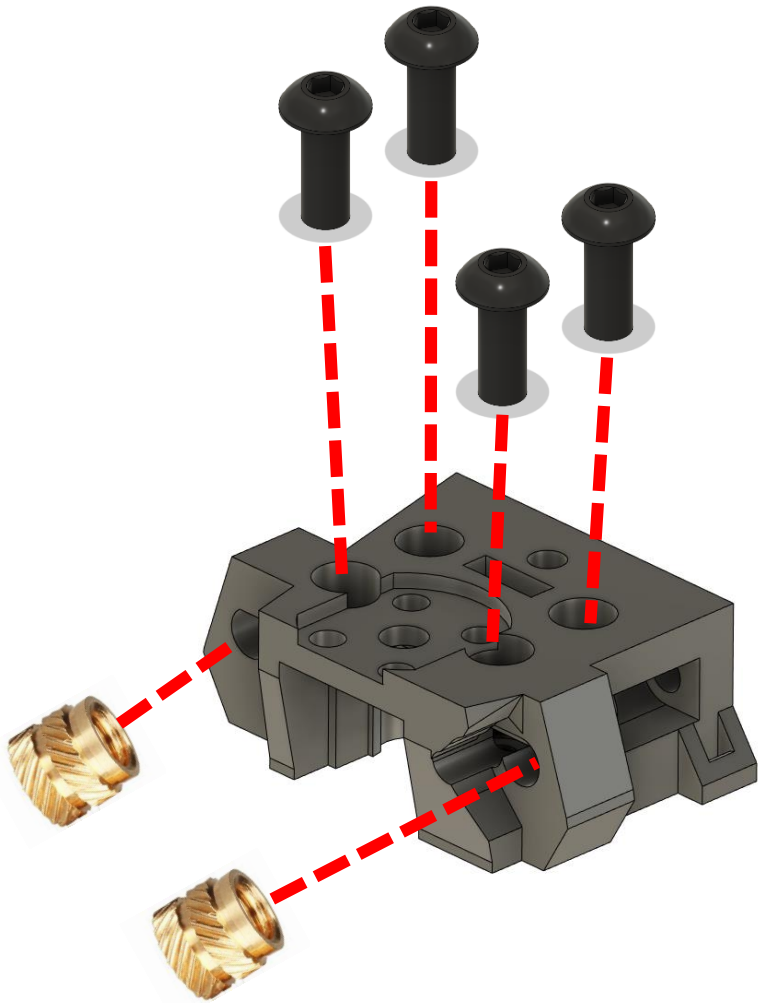


Insert m3x10 bolts into  
lgx lite holes. (they will  
be trapped soon)

Install m3x6 bolts into  
revo voron.

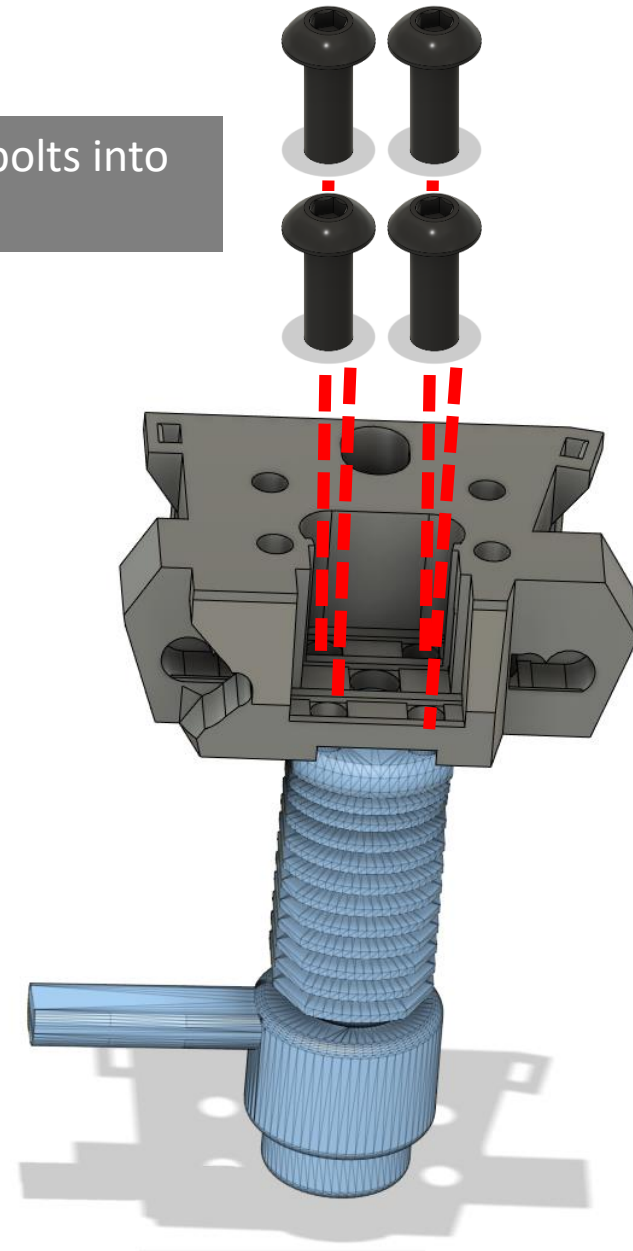

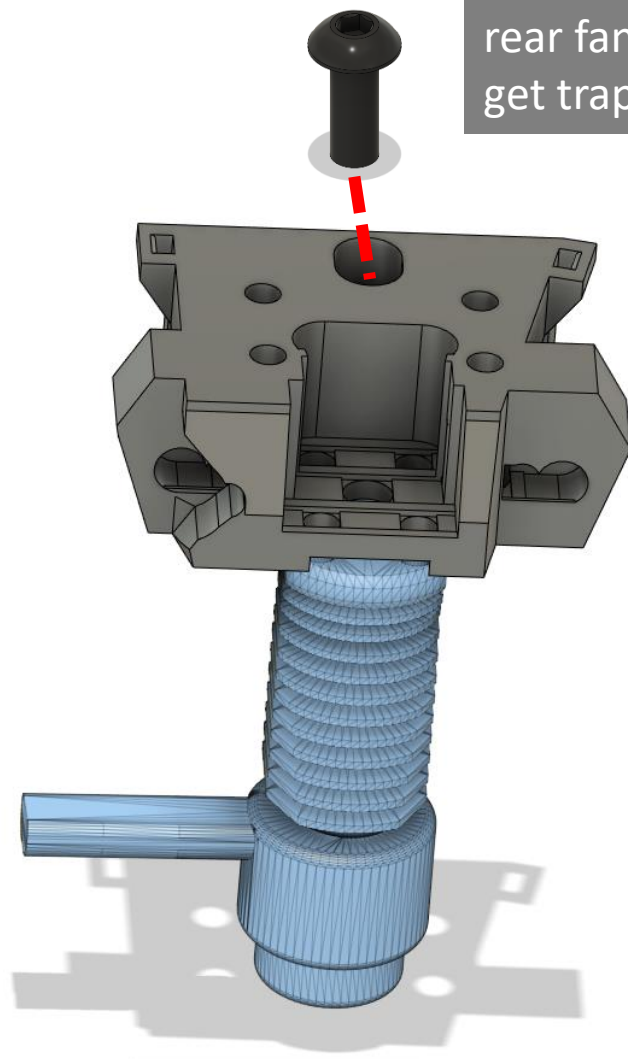



Insert an m3x8 bolt  
into the hole for the  
rear fan mount. (it will  
get trapped)

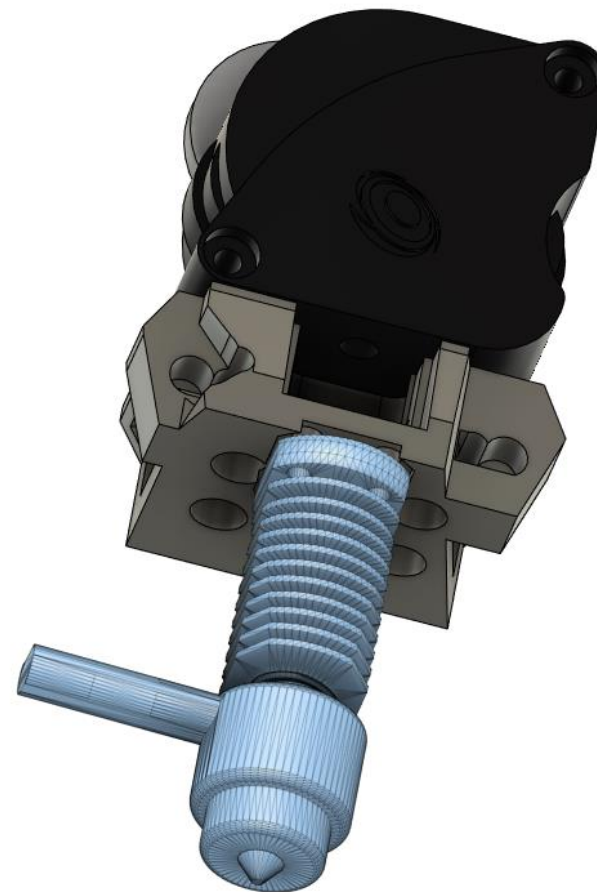


Install the lgx lite.




Install the rear fan  
mount.

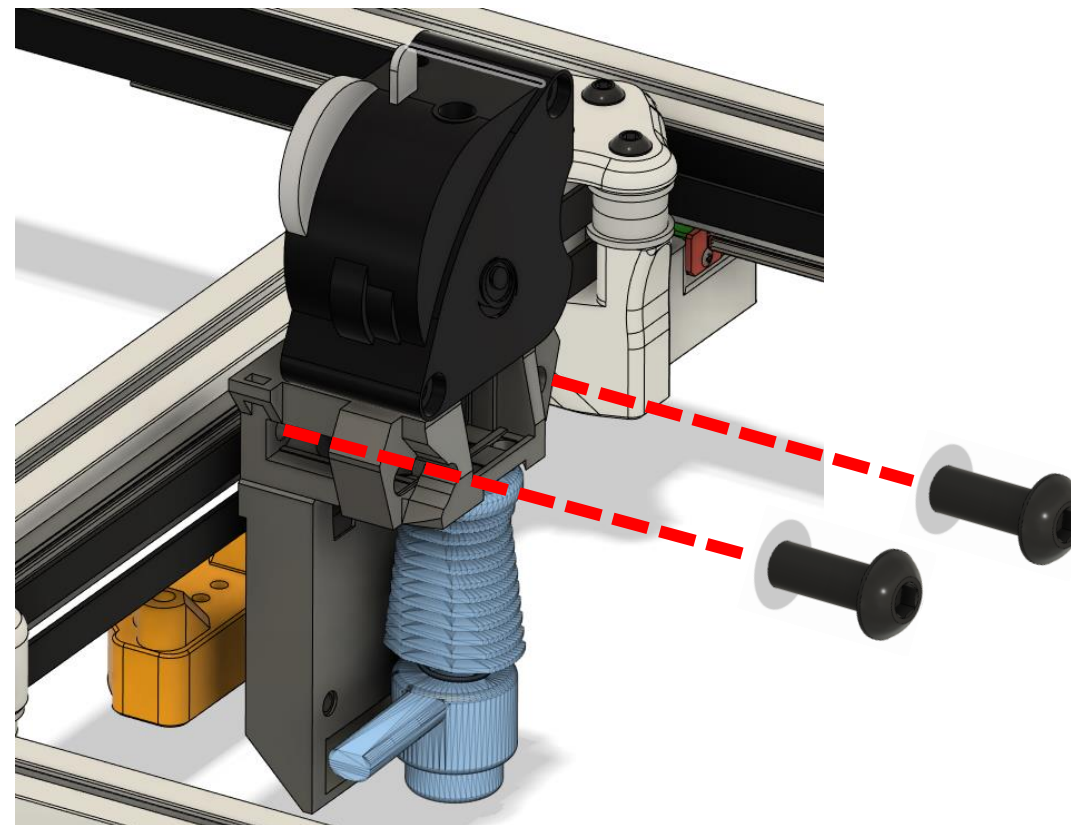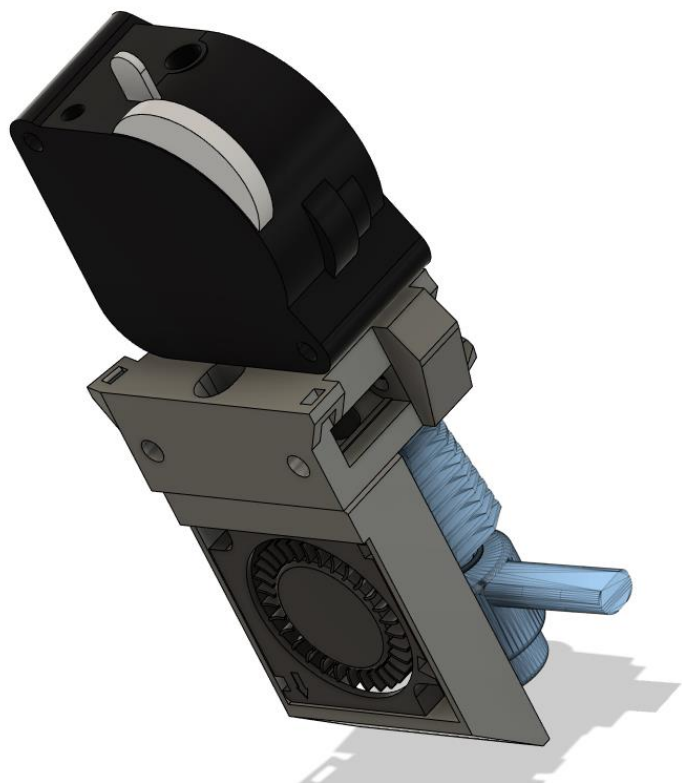

Use two m3x10 BHCS  
to install the rail mount  
to the belt carriage.

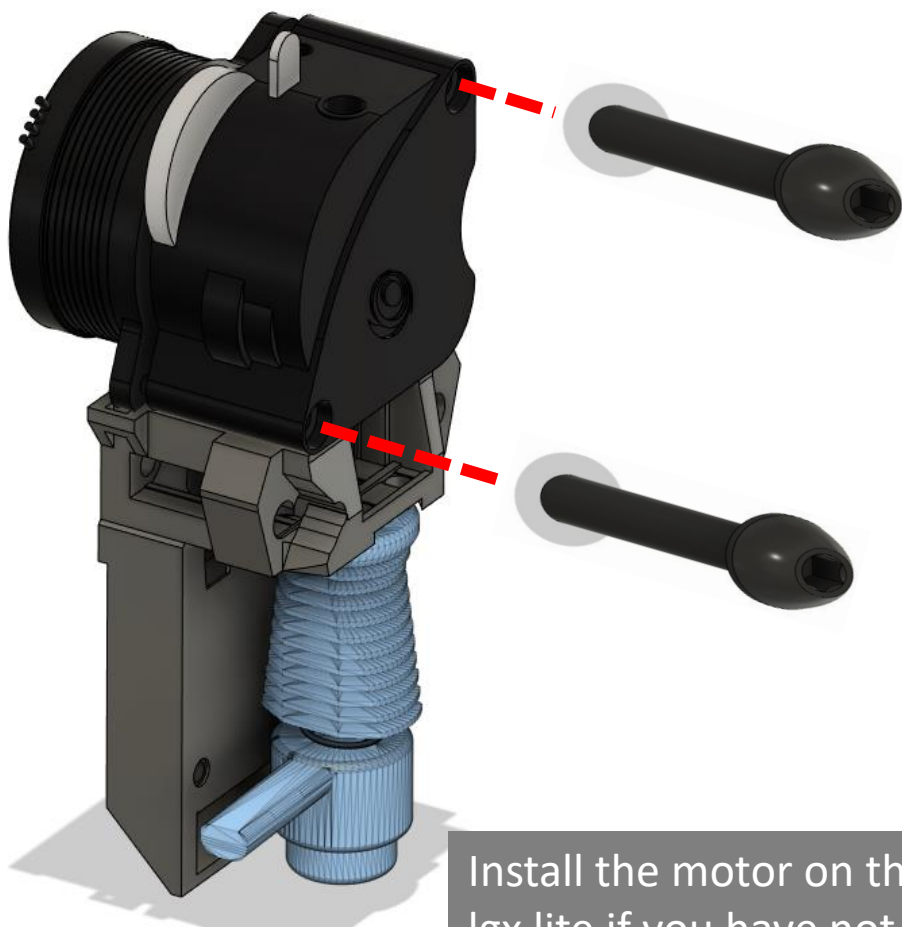

Install the motor on the lgx lite if you have not already.

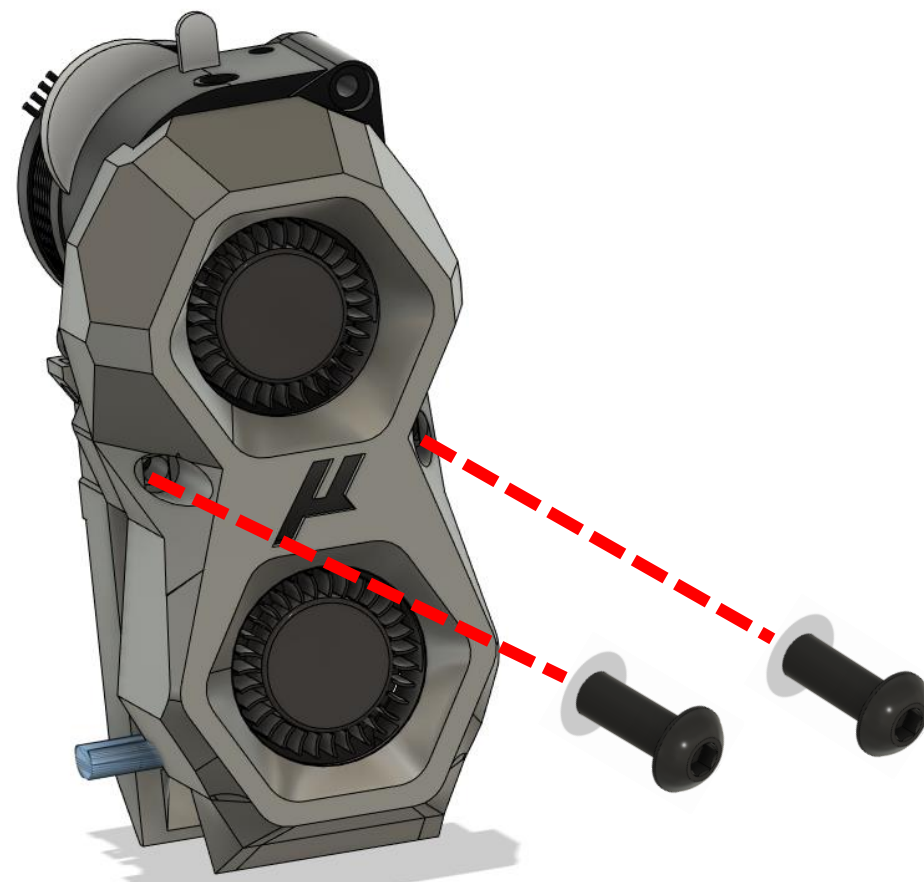

Install the shroud or faceplate using two m3x12 bolts.



Attach wires using  
ziptie mounts.

