

Mullet Melter Assembly

Required:

(3) 3010 Blower Fans ([DFH](#)) ([West3d](#))

LGX Lite

Revo Voron or Rapido


(5) m3x6

(4) m3x10

(2) m3x10 BHCS

(2) m3x12


(1) m3x8

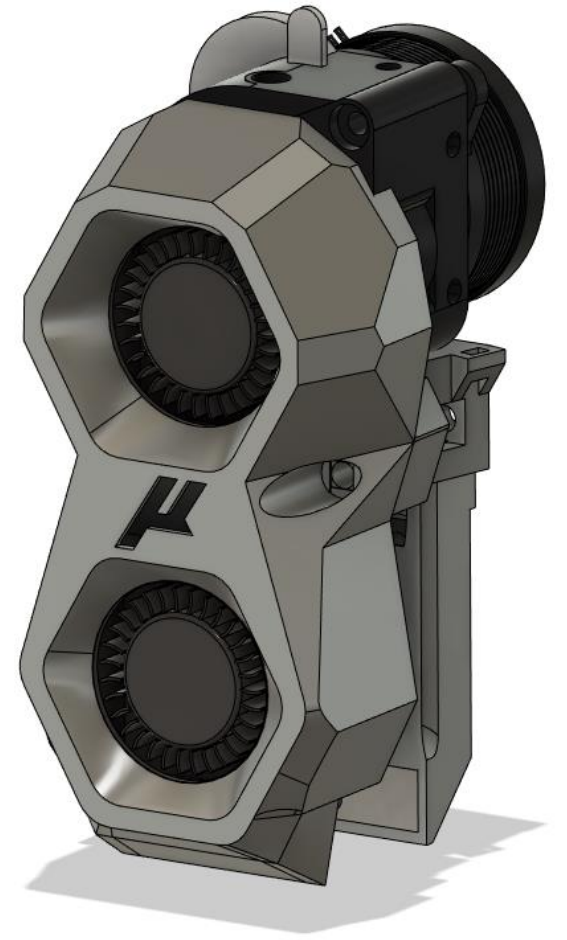


Shroud




Rail Mount

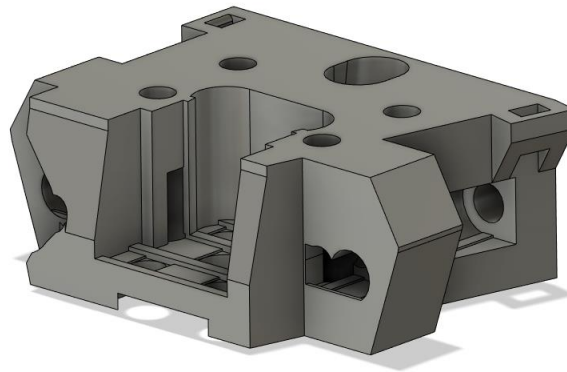

Rear Fan Mount

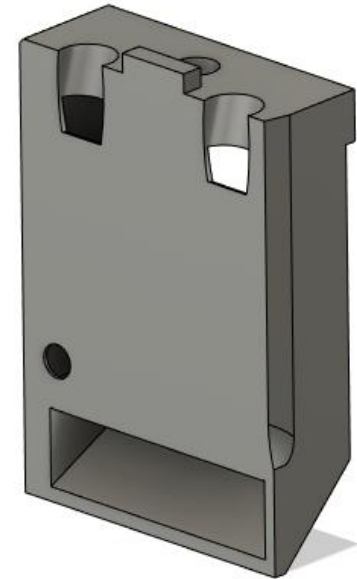


Route fan power cable
on the side of the
bottom fan.

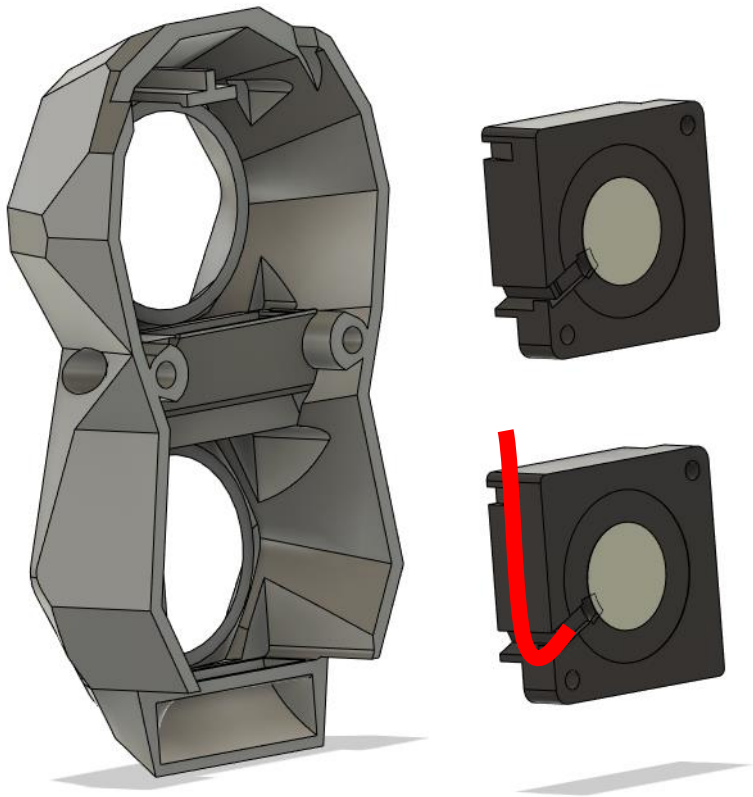


Install both fans.


The cable will run
under the ledge and
exit the shroud through
a small notch like this.

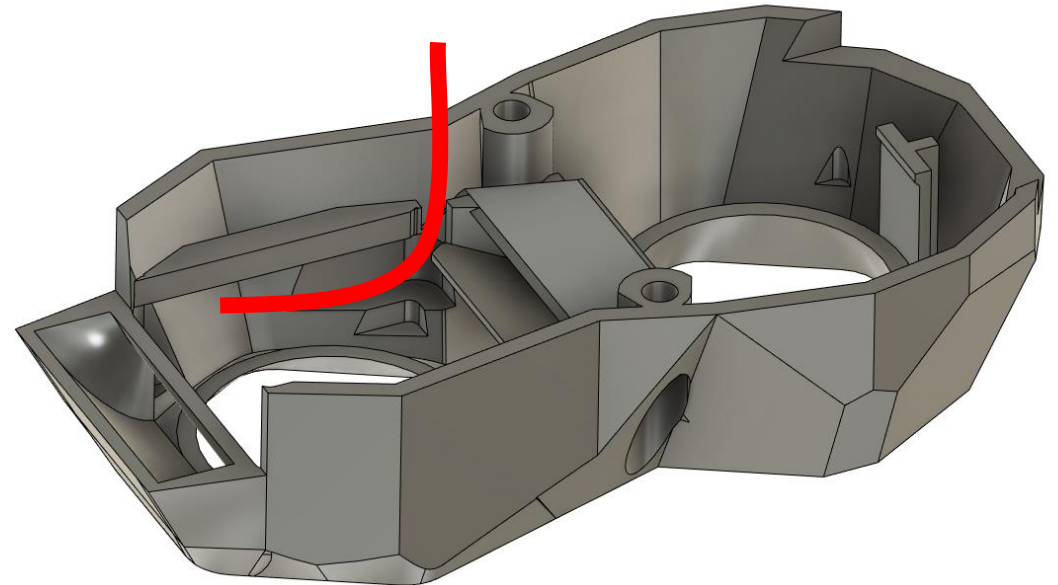


Use an m3x6 bolt to pre thread this hole in the 3010 blower.

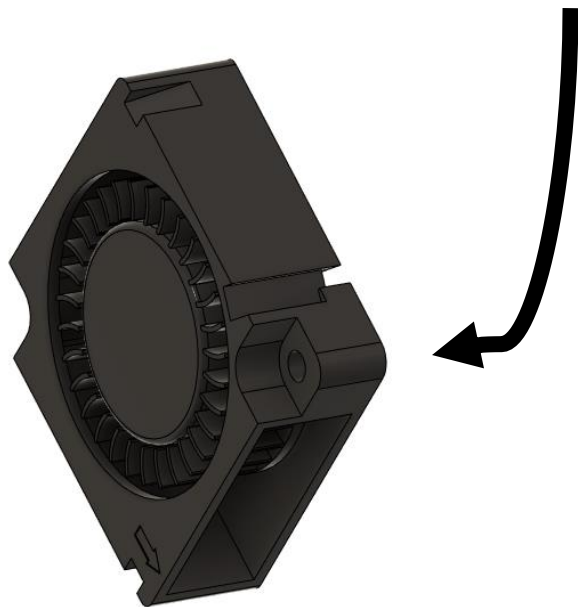


Remove bolt and re-install into the rear fan mount.

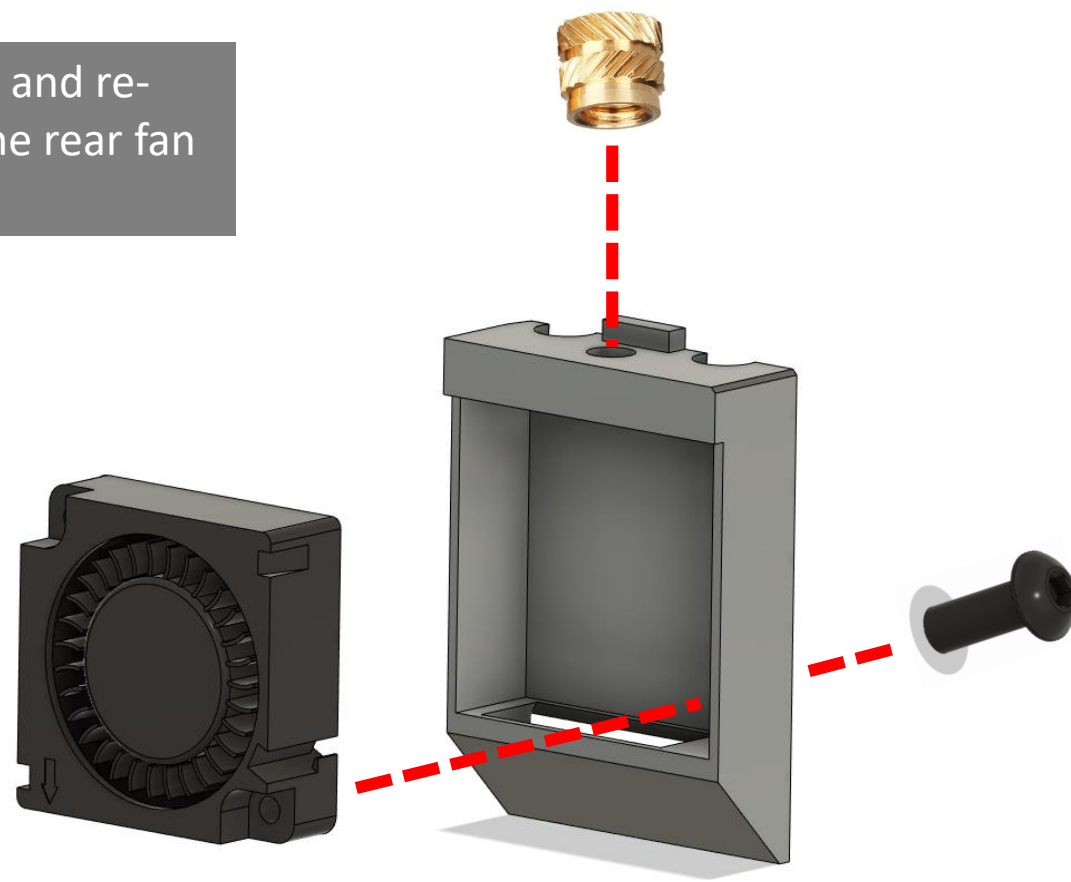


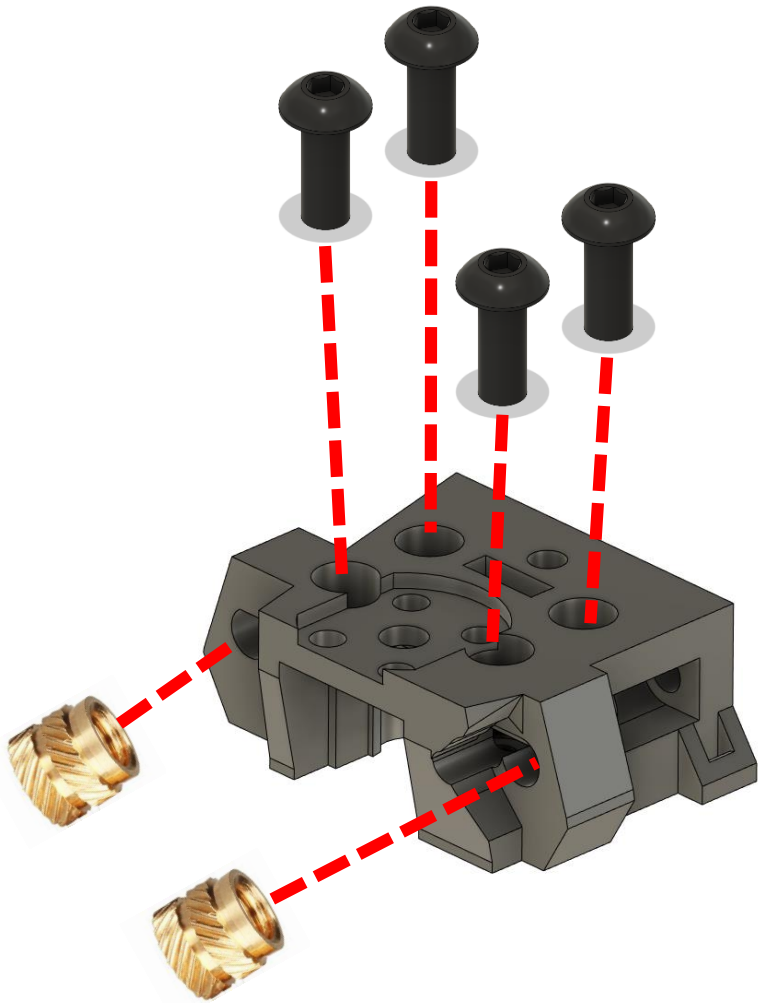

Insert m3x10 bolts into
lgx lite holes. (they will
be trapped soon)


Install m3x6 bolts into
revo voron.

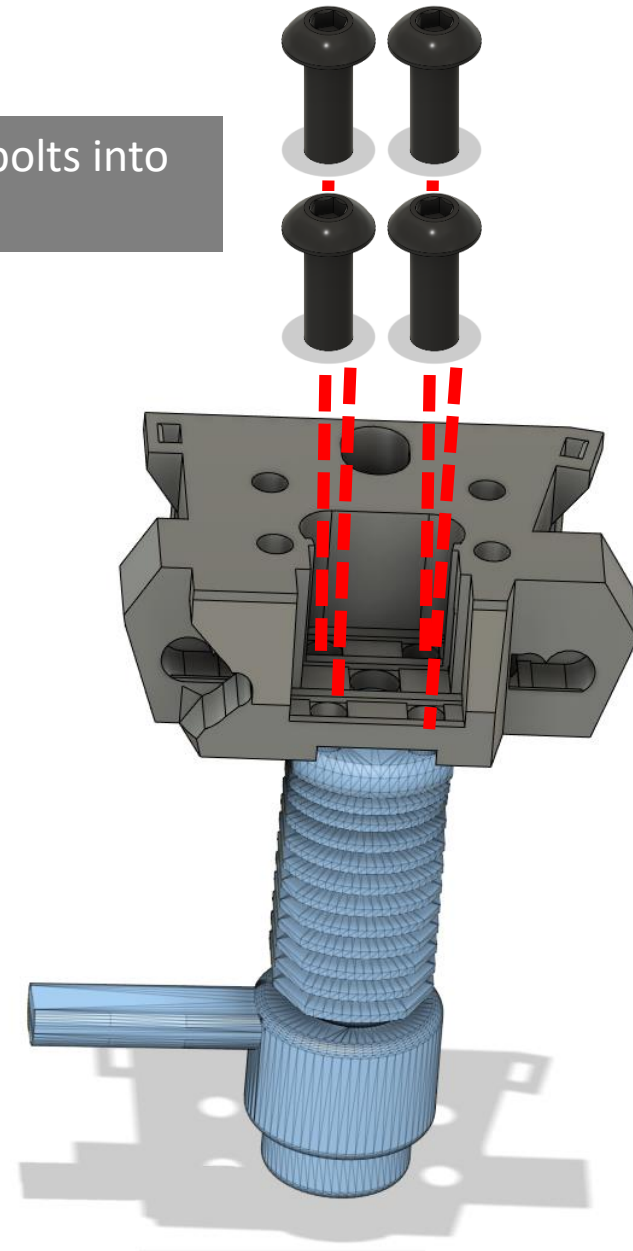

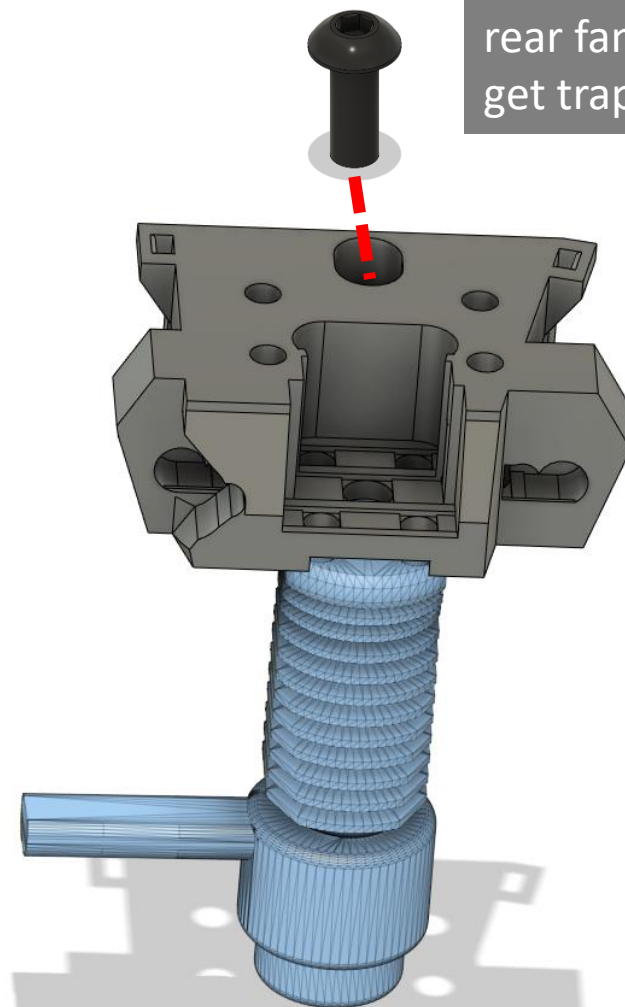



Insert an m3x8 bolt into the hole for the rear fan mount. (it will get trapped)

Cut ptfe tube to 24.5 mm and place inside revo.

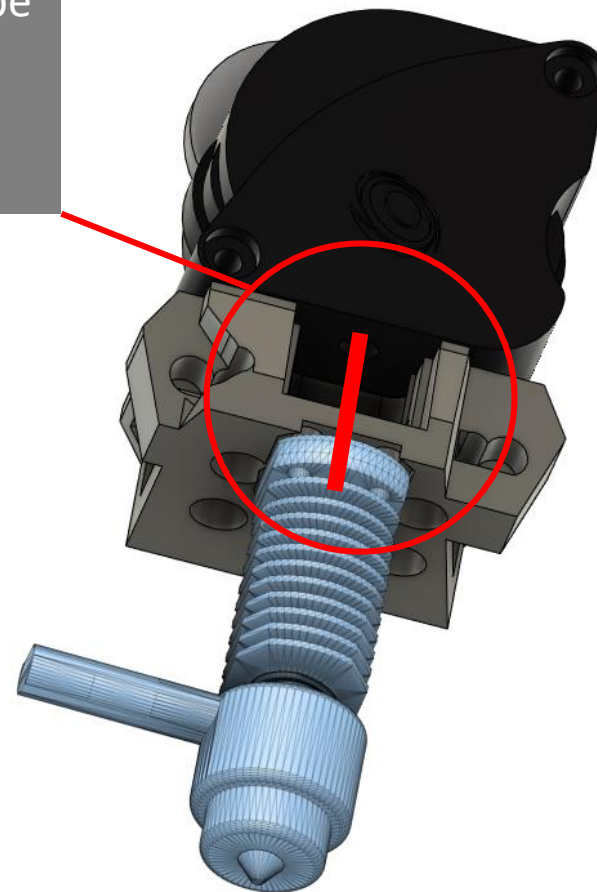


Install the lgx lite.


Install the rear fan mount.

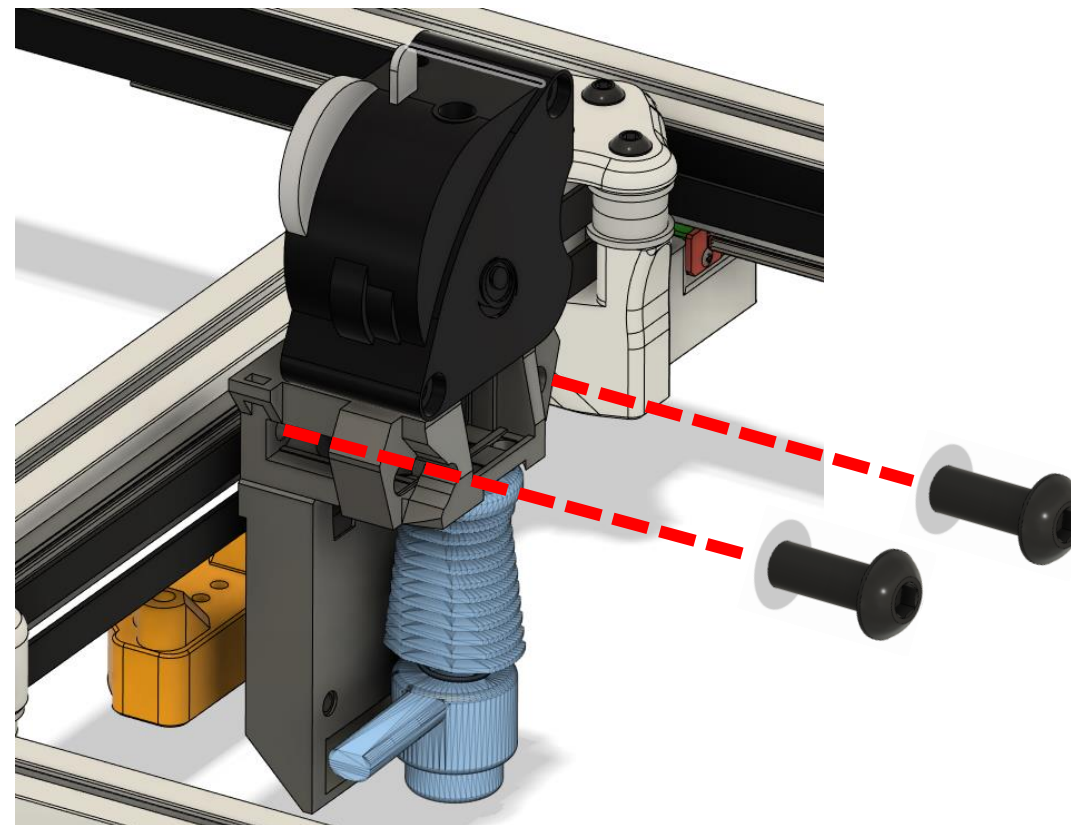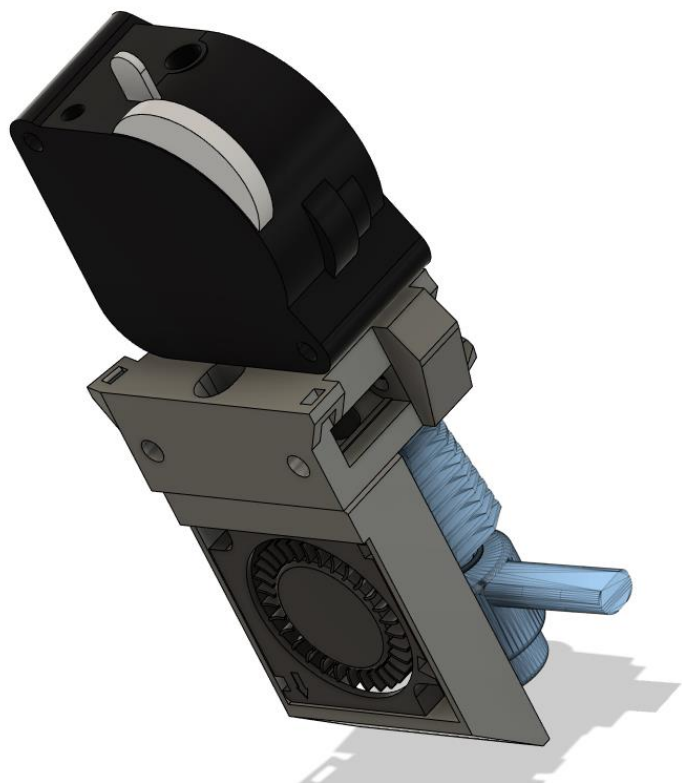

Use two m3x10 BHCS to install the rail mount to the belt carriage.

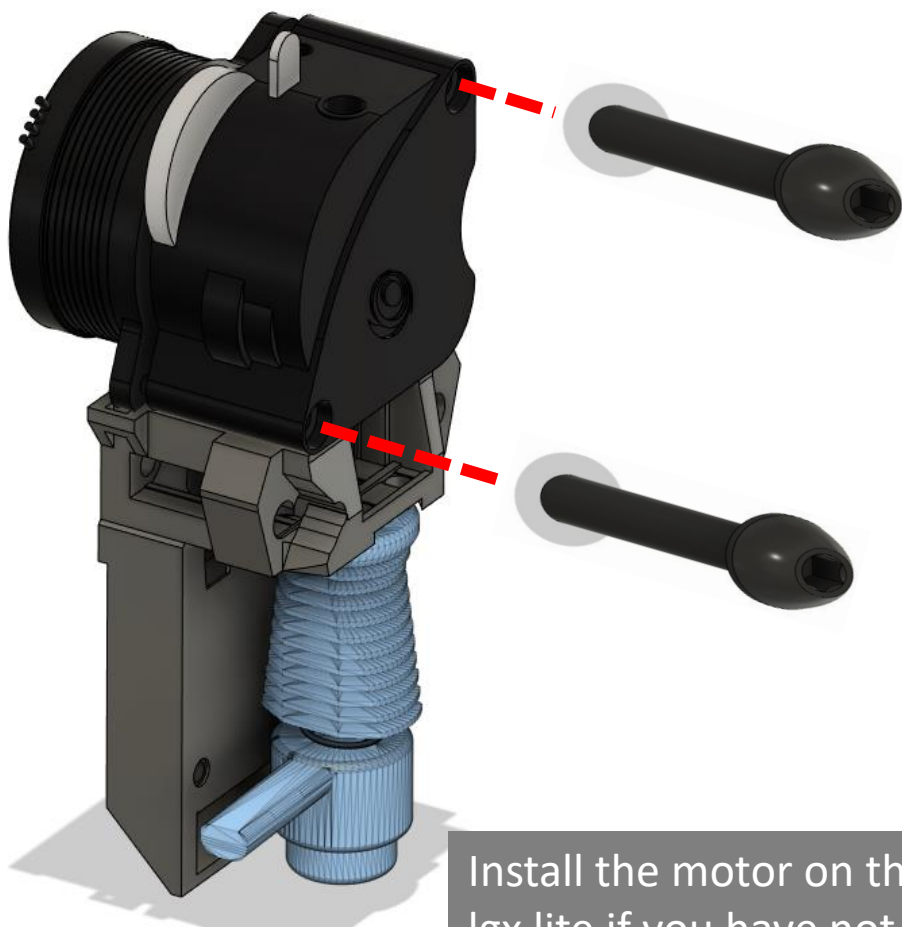

Install the motor on the lgx lite if you have not already.

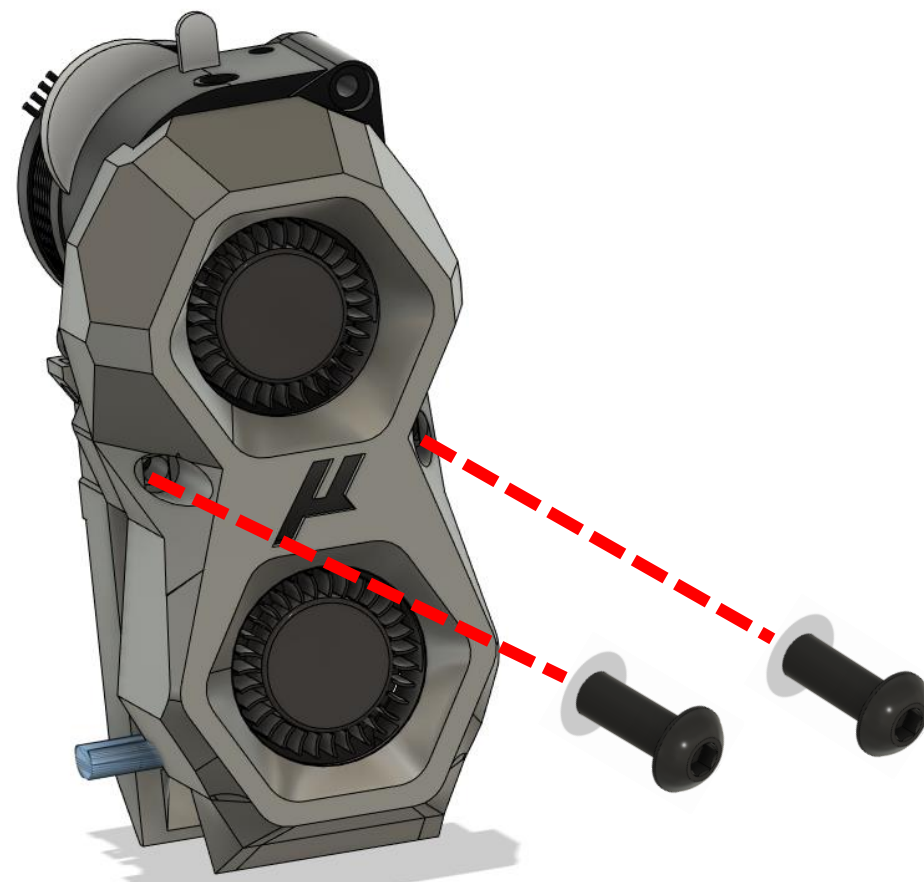

Install the shroud or faceplate using two m3x12 bolts.

Attach wires using
ziptie mounts.

