

DRAMCO PLANTSENSOR

Assembly instructions

1620 Battery with holder

See print for rechargeable LIR1620 or
non-rechargeable CR1620

Cover pad with piece of tape

USB connection

LED: Red/Green LED

Mind polarity (flat side to USB)

R3: 1 M Ω

R4: 10 k Ω

D6: 1N4148


Mind polarity

R1: 68 Ω

R2: 470 Ω

C3: 1 nF

102

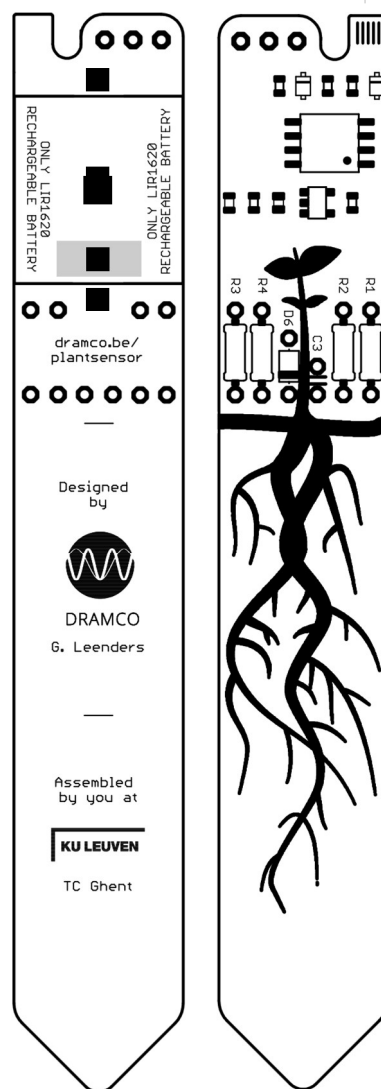

DRAMCO PLANTSENSOR

Bill of materials (and checklist)

○	Bat	Battery holder	1620
○	R1	Resistor	68 Ω
○	R2	Resistor	470 Ω
○	R3	Resistor	1 M Ω
○	R4	Resistor	10 k Ω
○	D6	Diode	1N4148
○	C3	Capacitor	1 nF
○	LED	Red/Green LED	(Flat side facing USB)