



STEP 1

INSERT TENON INTO MORTISE

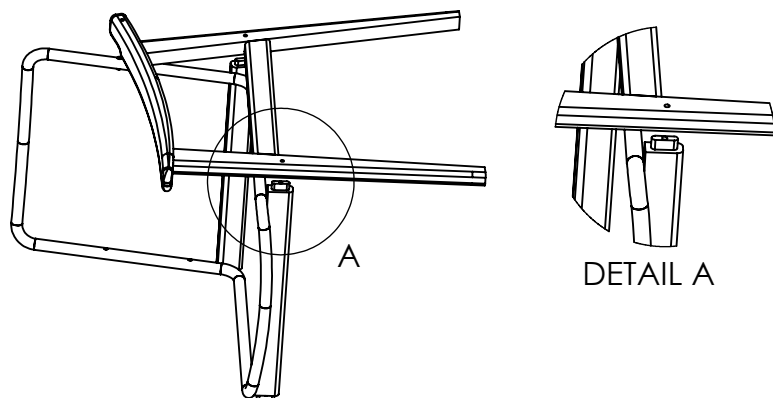

STEP 2


INSERT THE BOLT INTO THE HOLE THEN TIGHTEN

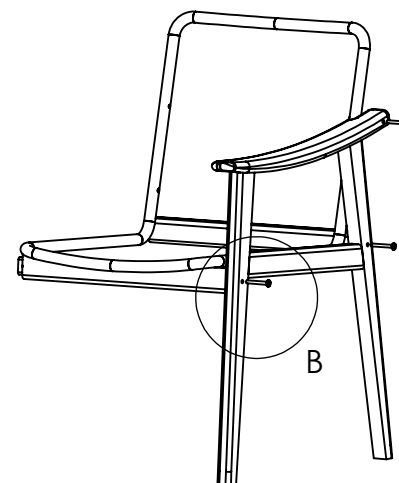

DETAIL B

STEP 3

DO THE SAME
STEP AS STEP 1 & STEP 2

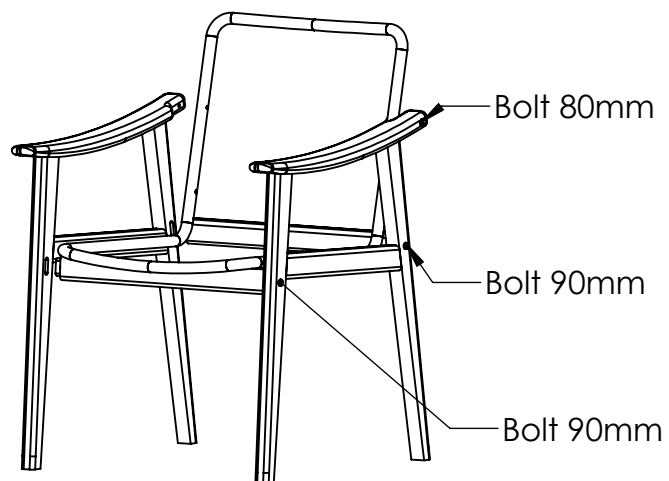

PART NAME

Bolt 90mm : 4pcs
Bolt 80mm : 2pcs
Fastener : 1pcs