

Workarounds for short bed heater wire on SK-Go

Web <https://seckit3dp.design>


FB <https://facebook.com/seckit.3dp>

Email seckit.3dp@gmail.com

Method 1:

Follow the wiring diagram in Assembly Manual, but drill a new hole, or pass the wire to be connected to Line terminal through the hole for power socket.

Back panel

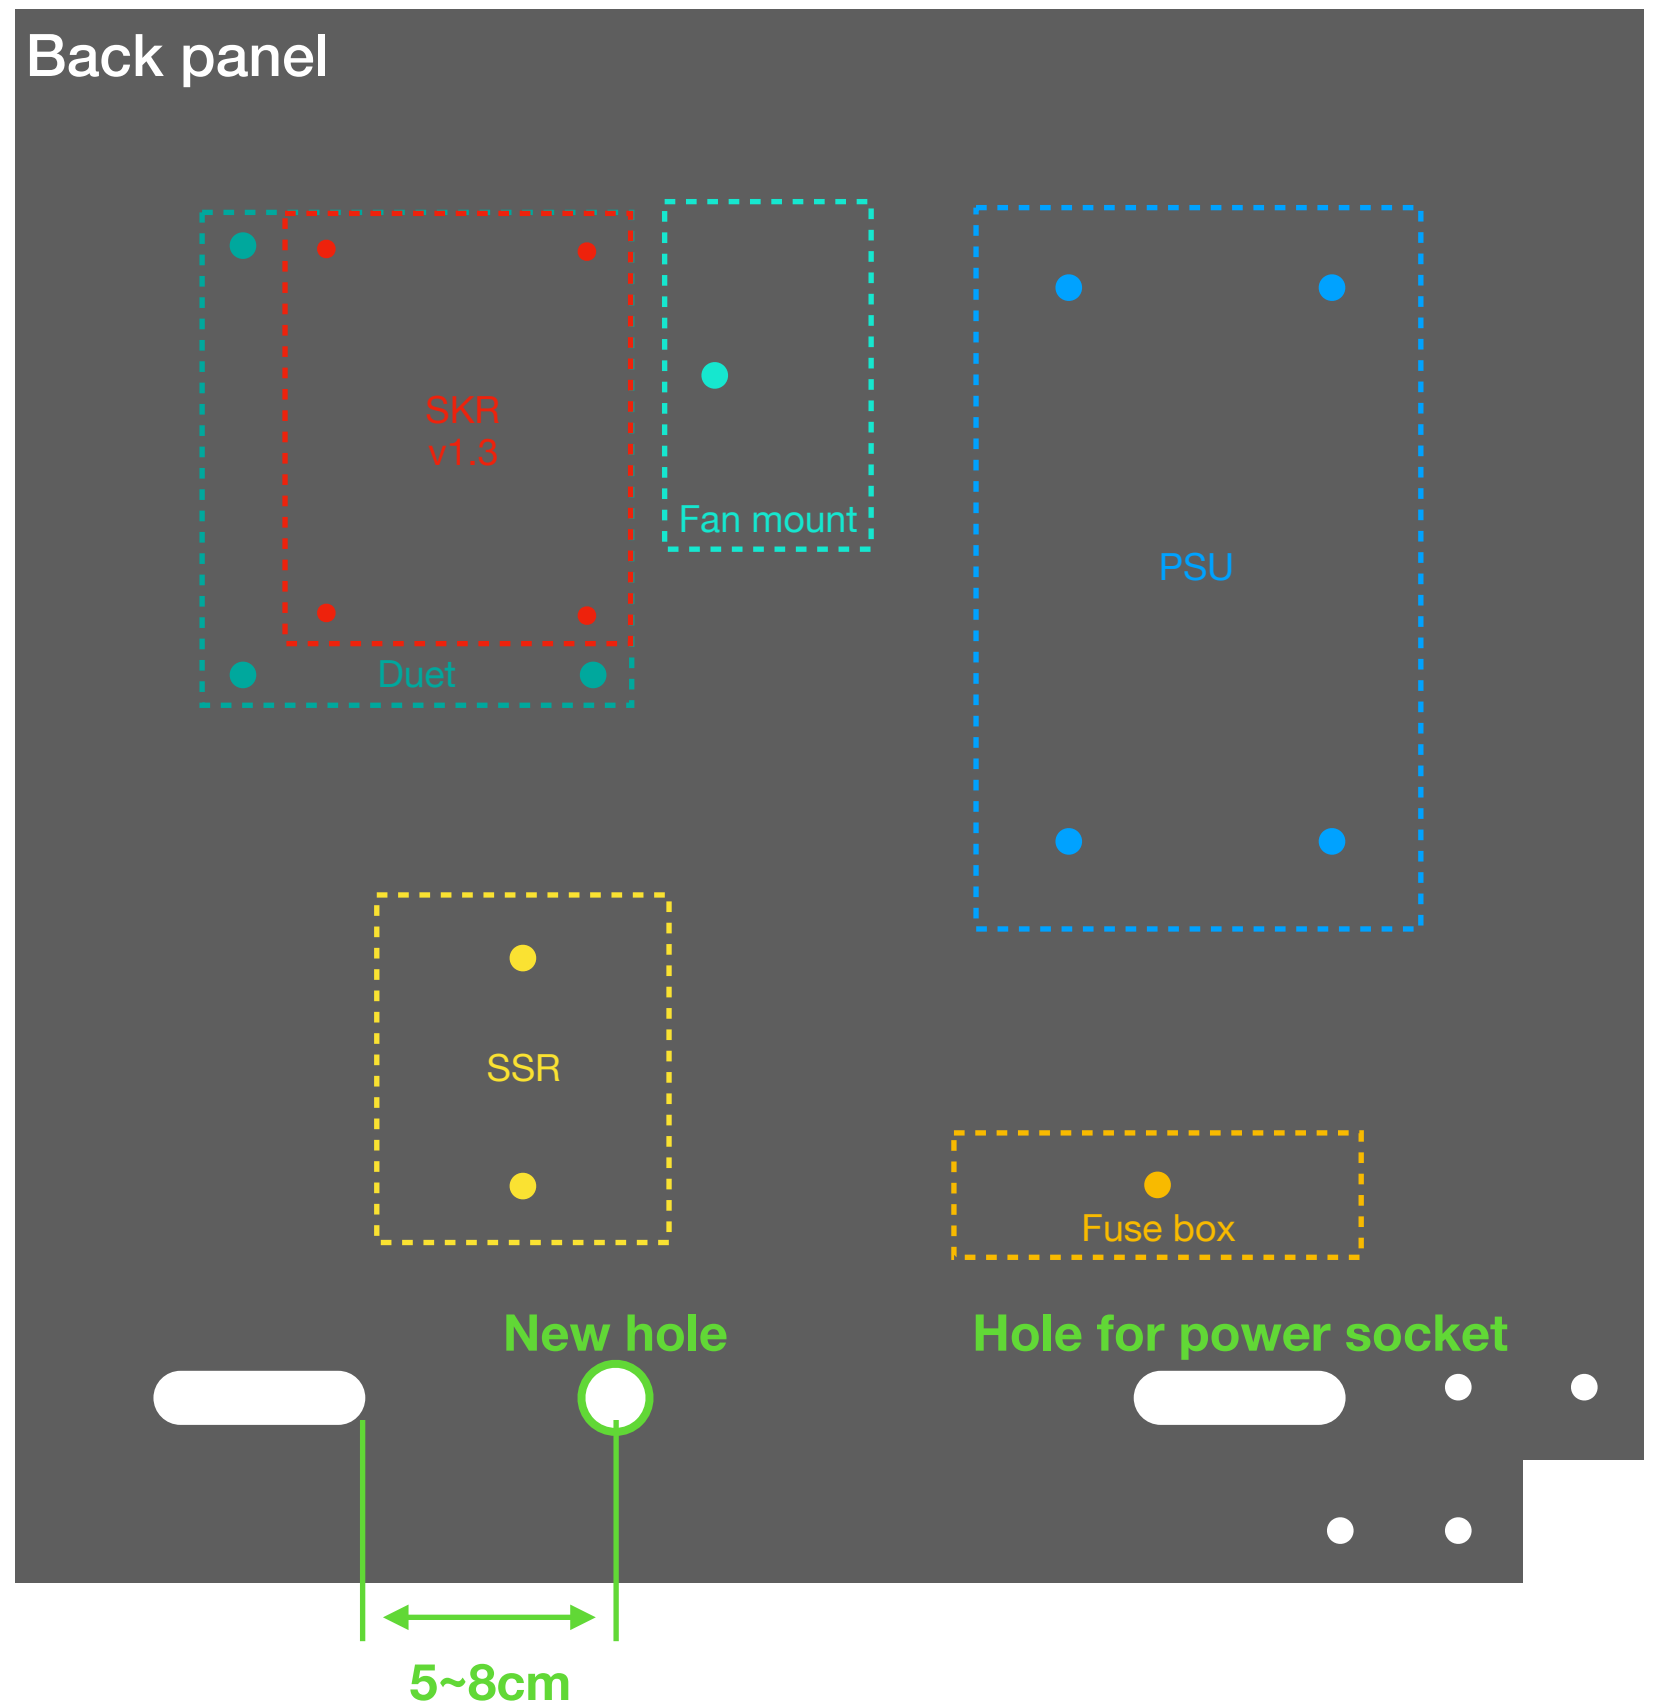

Method 2:

Use a new wire of 20cm 16AWG and follow the wiring diagram below

