


# MOBILE CABINET

## INSTALLATION MANUAL

### Mobile Cabinet


#### Quantity of Accessories

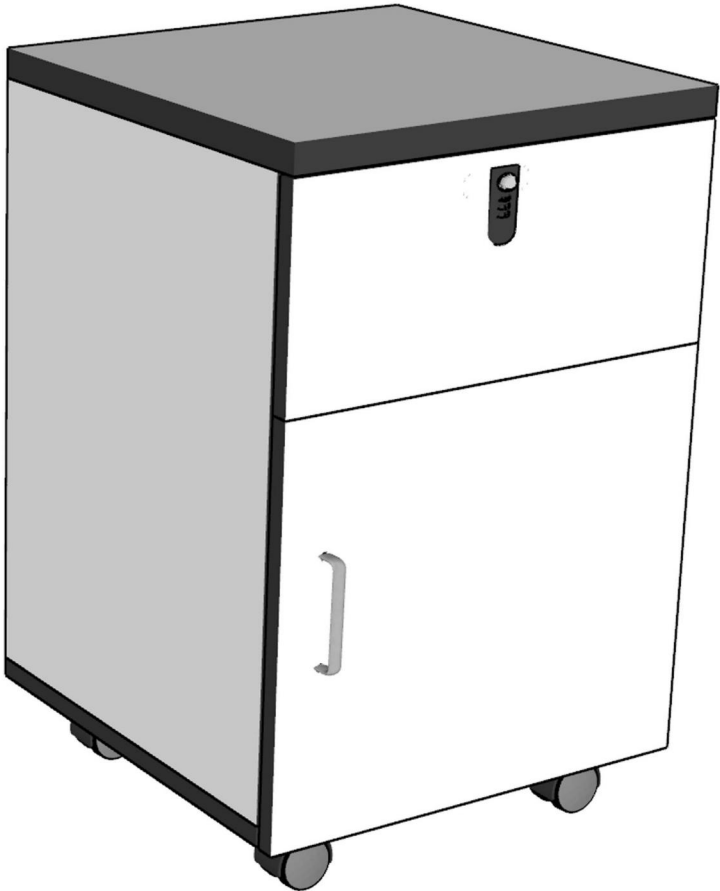


 <p>Furniture Connector Bolts and Cams × 16 sets</p>	 <p>Drawer Bottom Guide Rail × 2pcs</p>
 <p>Swivel Casters with Brakes × 4pcs</p>	 <p>Full Overlay Hinge × 2pcs</p>
 <p>Handle × 1pcs</p>	 <p>Handle Screws × 2pcs</p>
 <p>Mechanical Combination Lock × 1</p>	 <p>Screws × 40</p>

Step 1

Insert the bottom plate of drawer 1# into the opening groove of the back plate of drawer 2#.

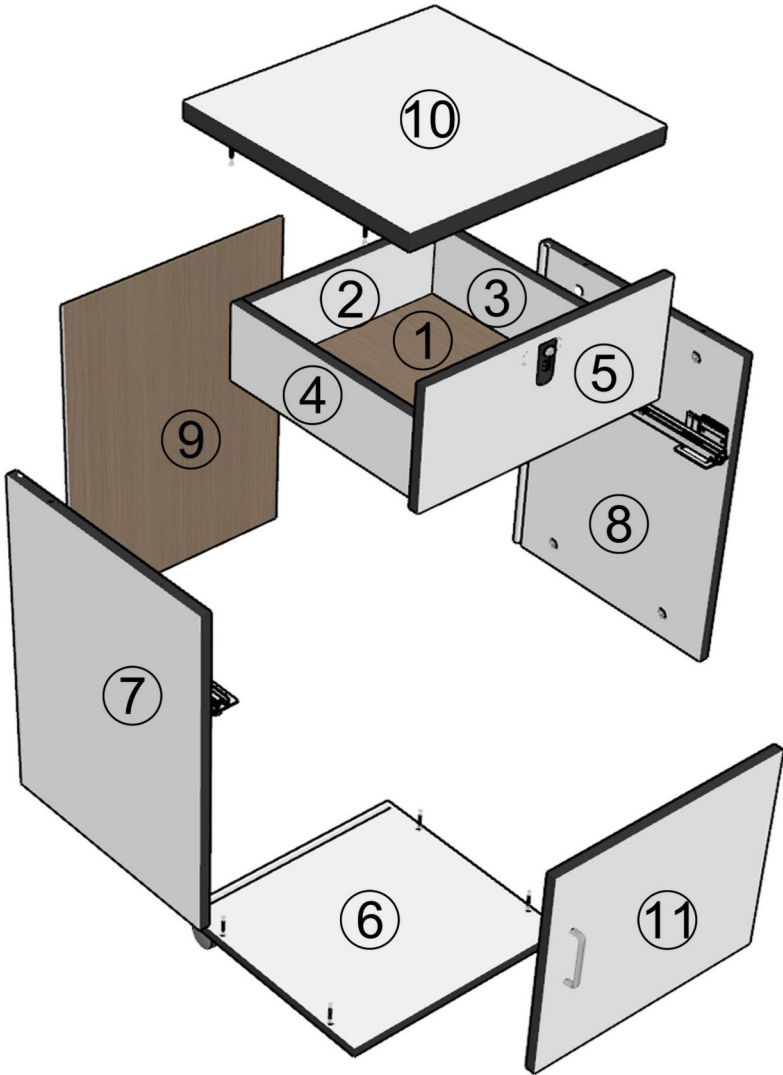


① Drawer Bottom Panel	② Drawer Back Panel
③ Drawer Right Side Panel	④ Drawer Left Side Panel
⑤ Drawer Front Panel	⑥ Cabinet Bottom Panel
⑦ Cabinet Left Side Panel	⑧ Cabinet Right Side Panel
⑨ Cabinet Back Panel	⑩ Cabinet Top Panel
⑪ Cabinet Door Panel	

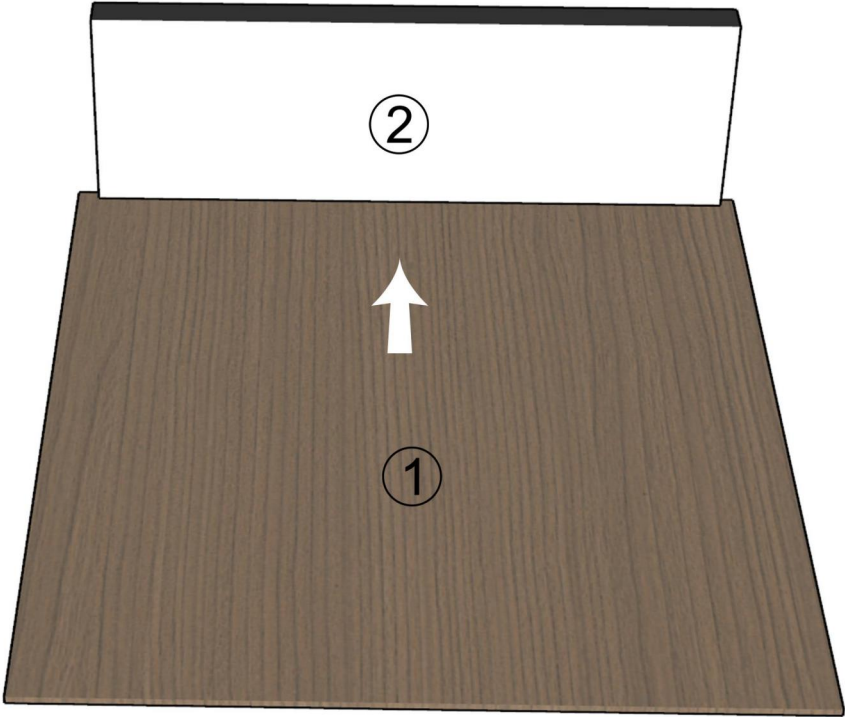


## step 2

Insert the 3# right side panel of drawer into the 1# bottom panel of drawer, and connect the side panels of drawers 2# and 3# using 1/4-inch Furniture ConnectorBolts and Cams.

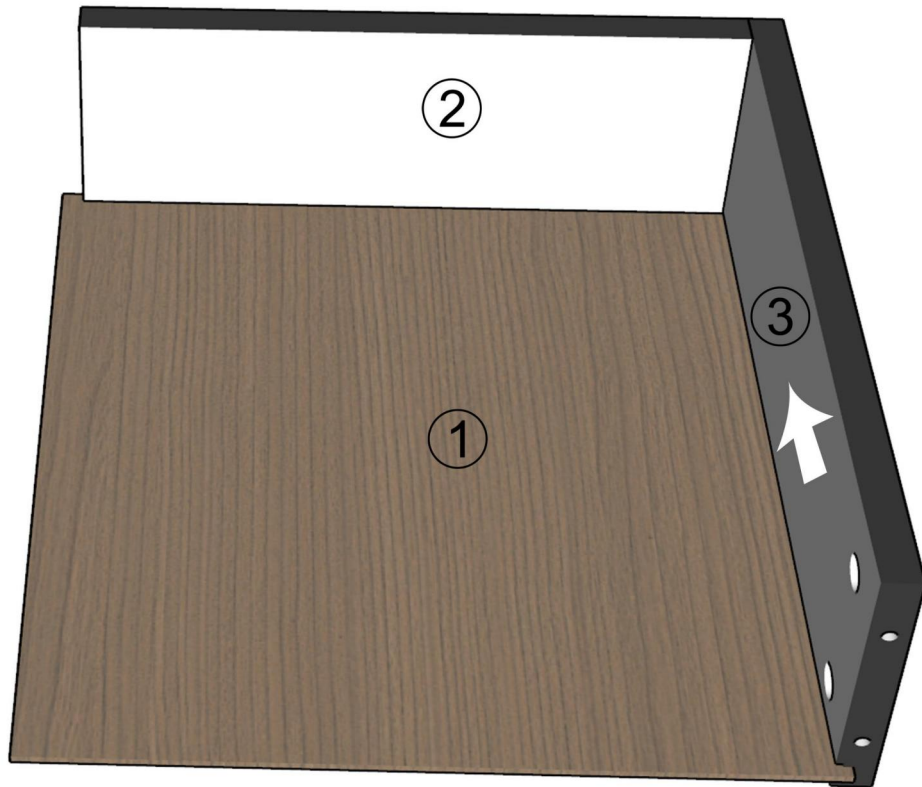


## 3-in-1 Furniture Connector Bolts and Cams Connection Method

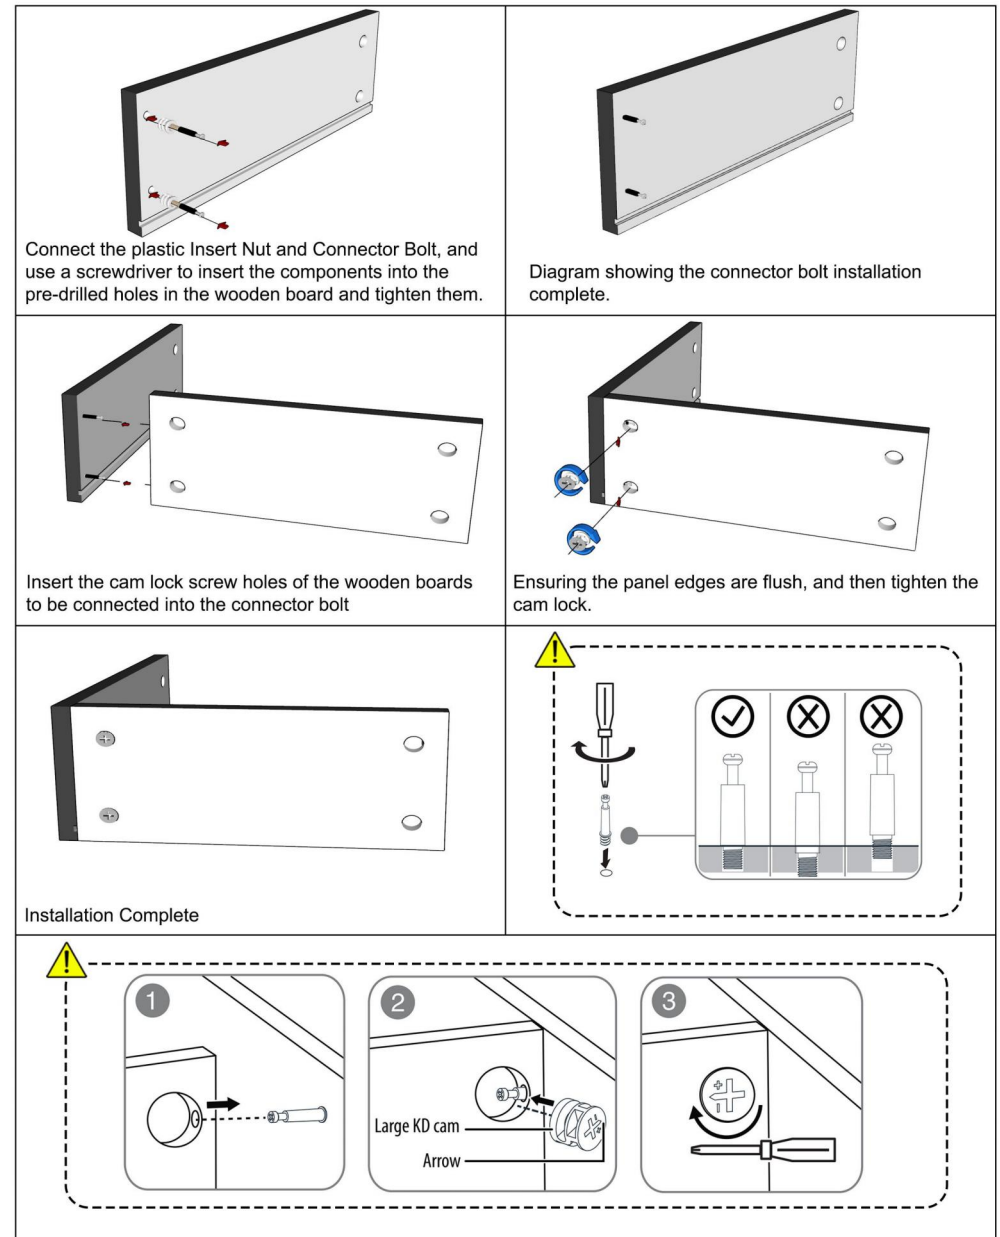


### Step 3

Install the 4# left side panel of drawer , insert the bottom panel of drawer #1 into the slot of drawer 4#, and connect drawers #2 and #4 using 3-in-1 screws.

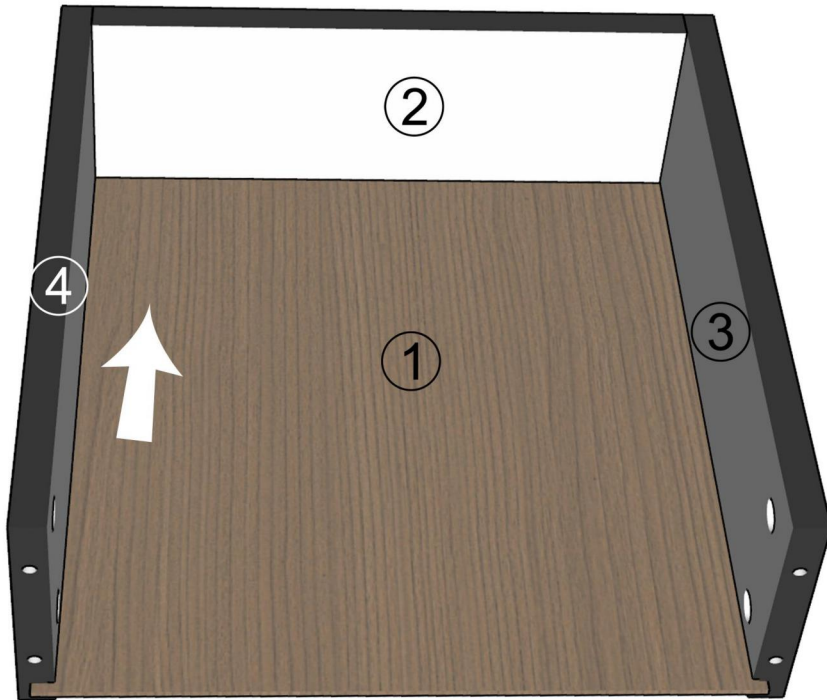

### Step 4

Install the front panel of drawer #5. Ensure boards #2, #3, and #4 are flush, insert the bottom panel of drawer #1 into the slot in board #5, and connect boards #3, #4, and #5 using 3-in-1 screws.

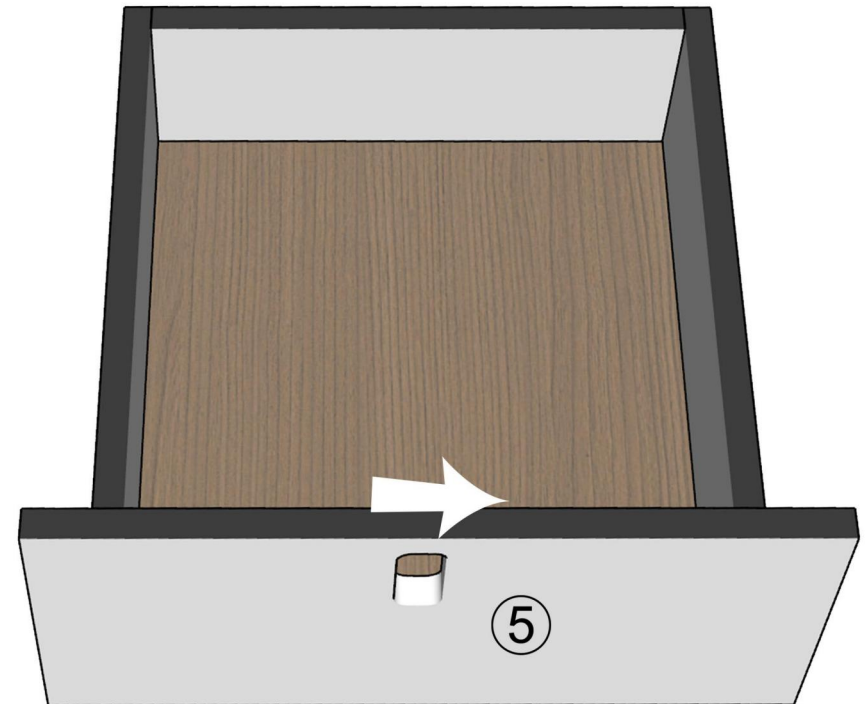




## Step 5

Install the mechanical combination lock and secure it with screws.


Drawer installation complete.

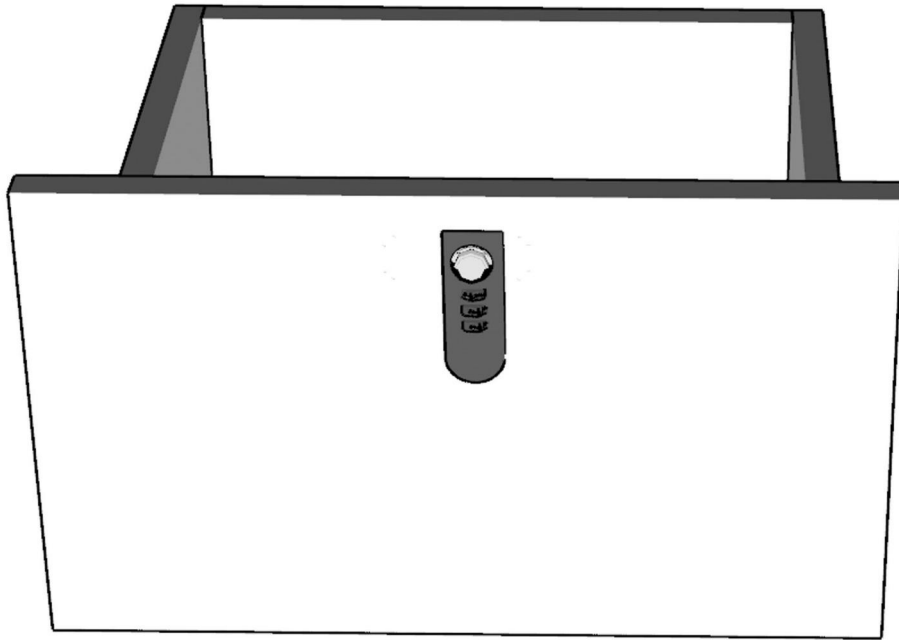

The default password is "000". Please change the password immediately after installation.


## Step 6

Install drawer slides on the 7# left side panel and #8 right side panel of the cabinet. Positioning points with small holes are marked on panels #7 and #8; install the slides according to these positioning points.

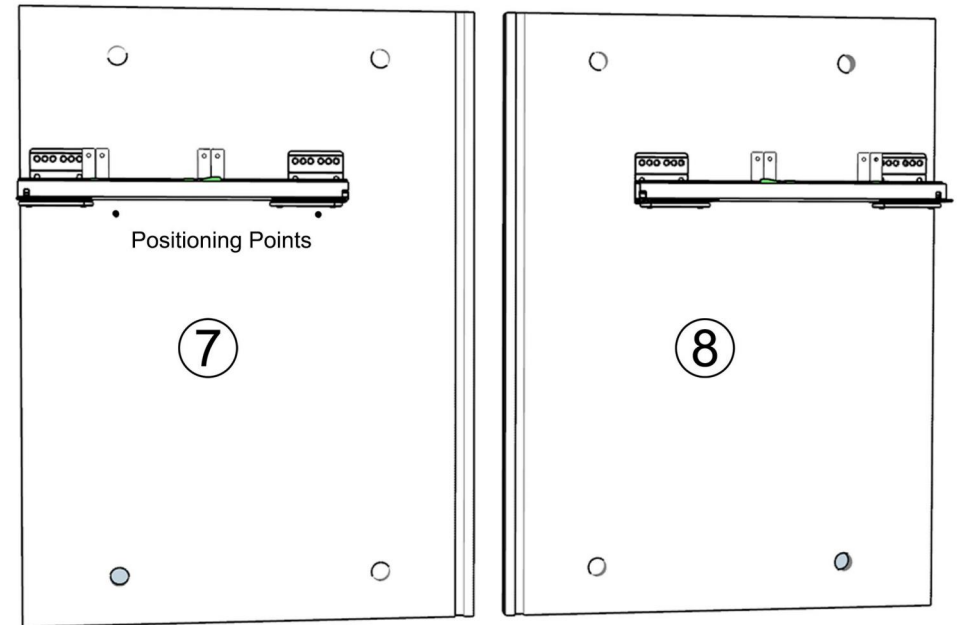


## Step 7

Install door handles and hinges, use handle screws to install handles for small circular holes, and install full overlay hinge for large circular holes

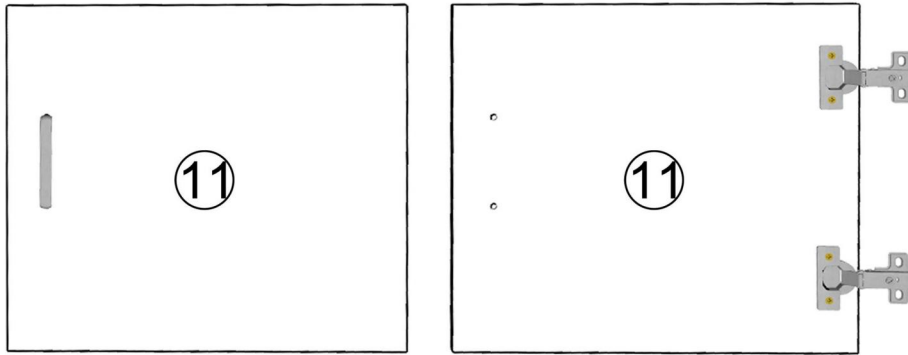


## Step 8

Connect the left and bottom plates to the aligned holes

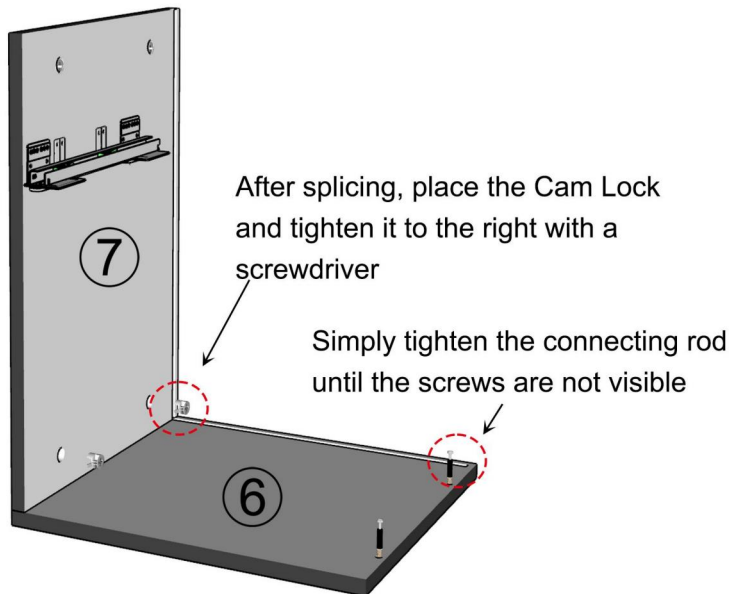


## Step 9

After installing the right side panel, tighten the Cam Lock to the right

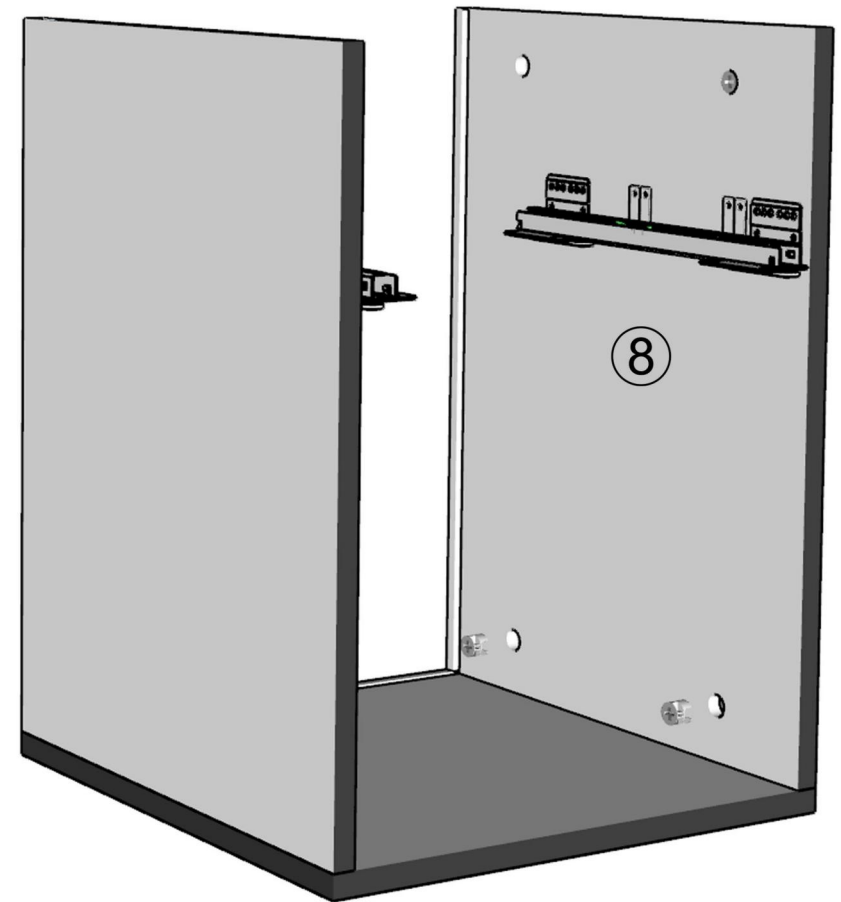


## Step 10

Insert the #9 back panel into the opening slots of the #7 side panel and #8 side panel.

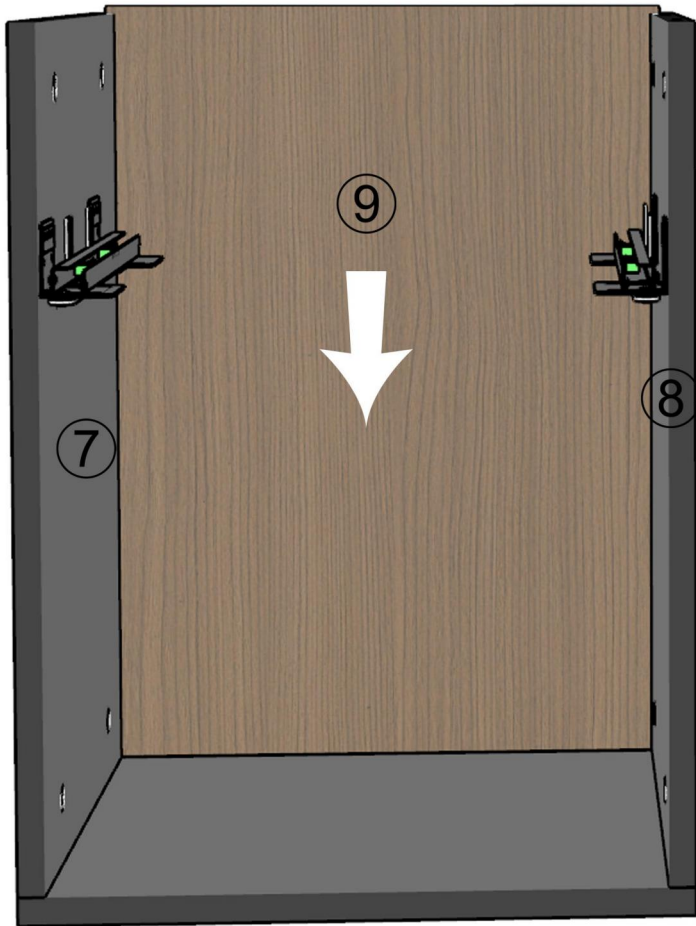

## Step 11


Install the cabinet top panel using the three-in-one screws, then tighten the cam lock to the right.

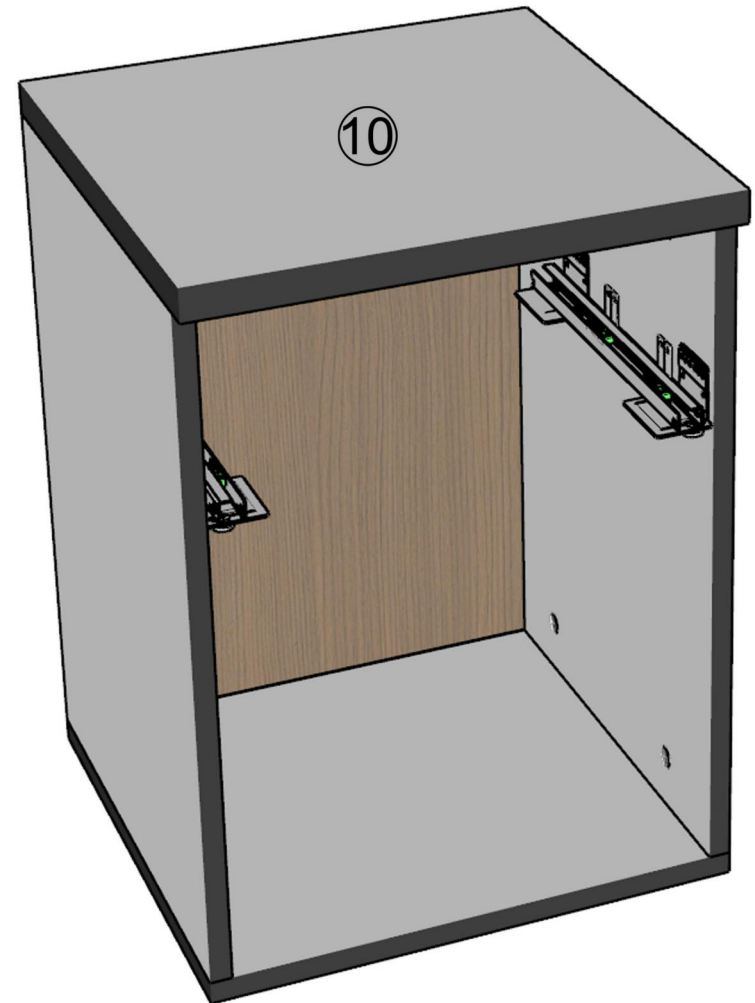

## Step 12


Install the cabinet top panel using the 3-in-1 screws, then tighten the cam lock clockwise.

Install the drawer stopper on the inside of the top panel, with the stopper edge positioned 1.1 inches from the edge of the wood panel.

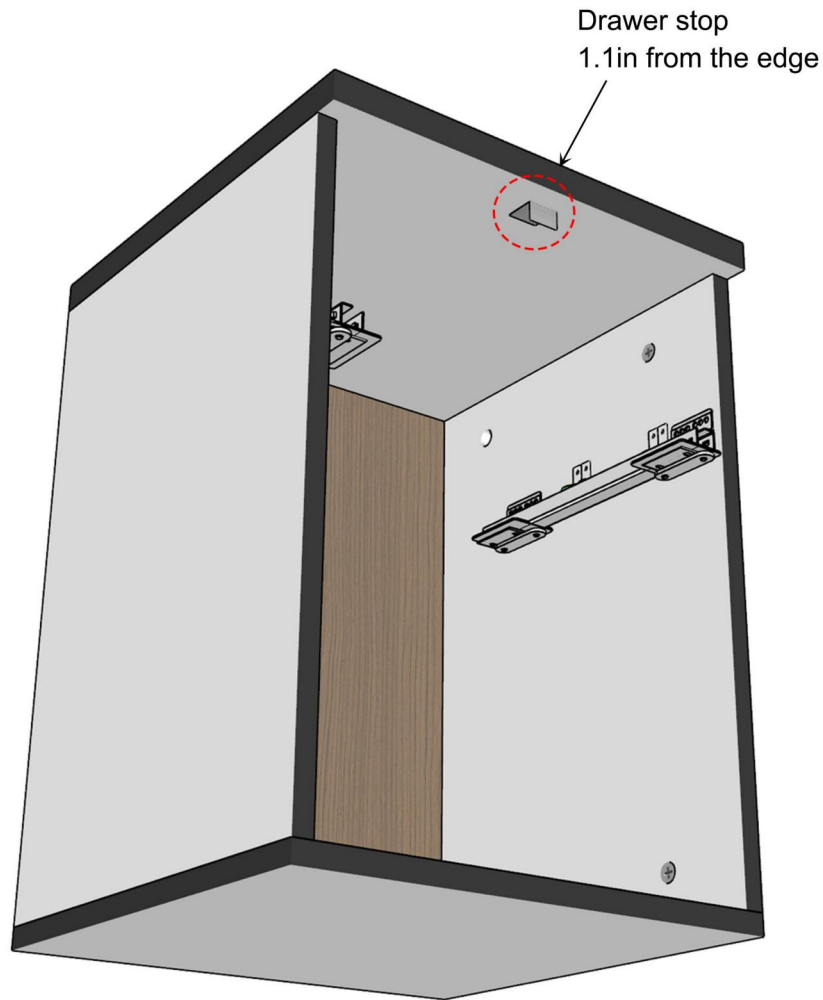

## Step 13


Pull out the drawer slides, place the drawer onto the tracks, and secure the drawer slides and drawer side panels using self-tapping screws.

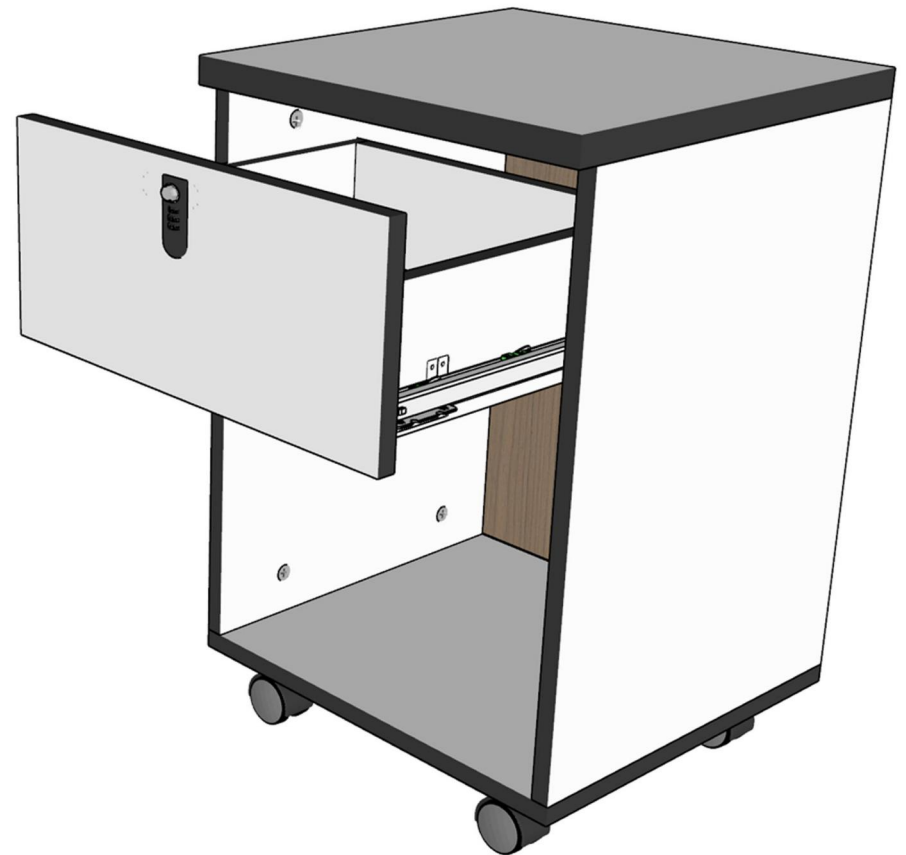



## Step 14


Connect the door panel with the handle and hinge installed to the side panel as shown in the picture

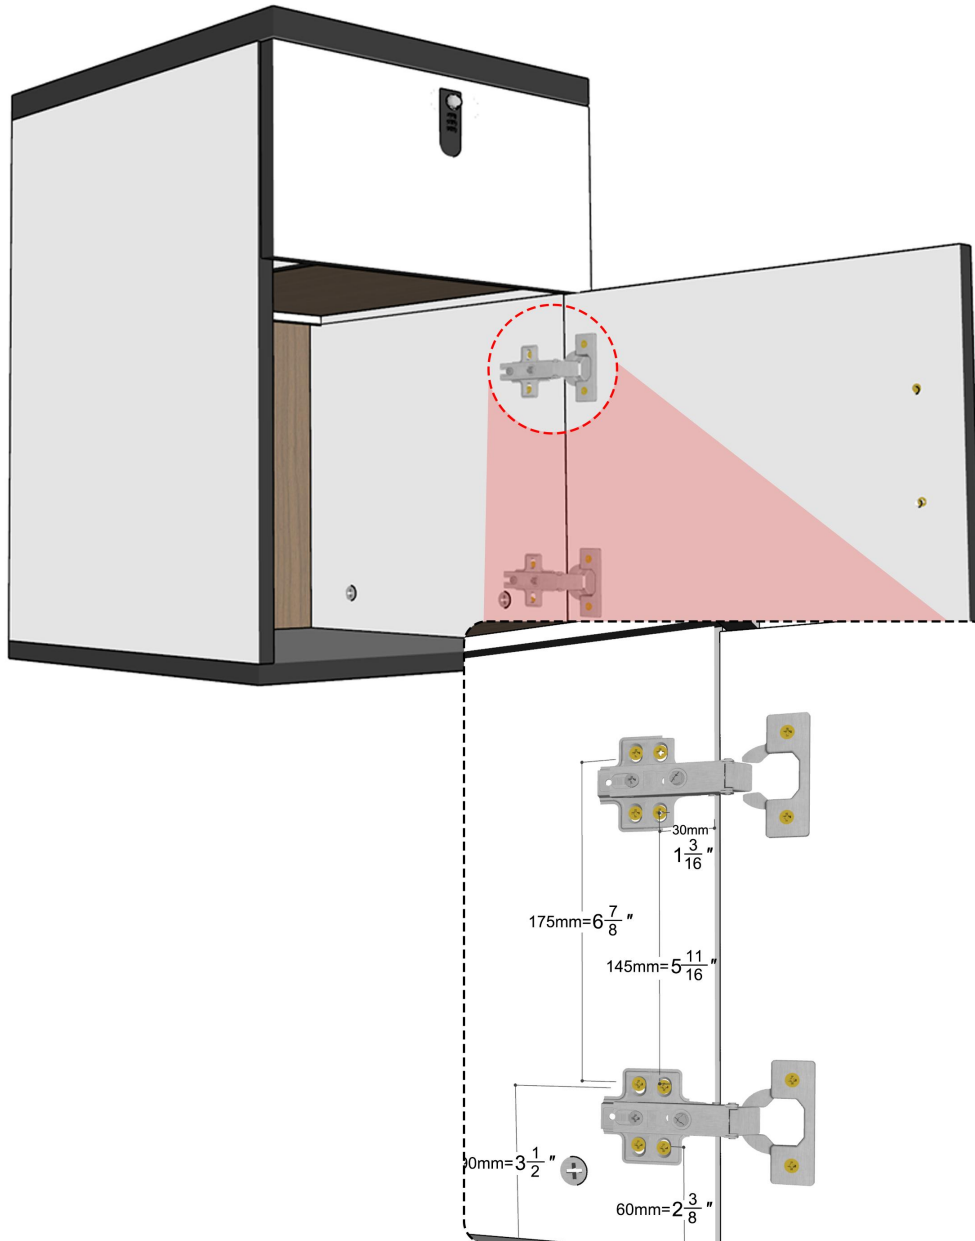

## Full Overlay Hinges Installation Instructions


### 1. Installing Hinge to Door

- Drill hole 12 mm (15/32") deep for hinge cup per template using 35mm boring bit. Do not drill through door face.
- Drill pilot holes for screws per template. Do not drill through door face.
- Insert hinge into door and fasten with screws. Do not overtighten.

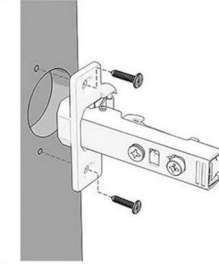


### 2. Installing Mounting Plate to Cabinet

- Drill pilot holes for screws. Do not drill through cabinet.
- Align mounting plate to holes and fasten with screws. Do not overtighten.




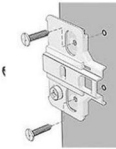


### 3. Installing Door to Cabinet


- Open hinge to full extension.
- Connect door to cabinet as shown below.

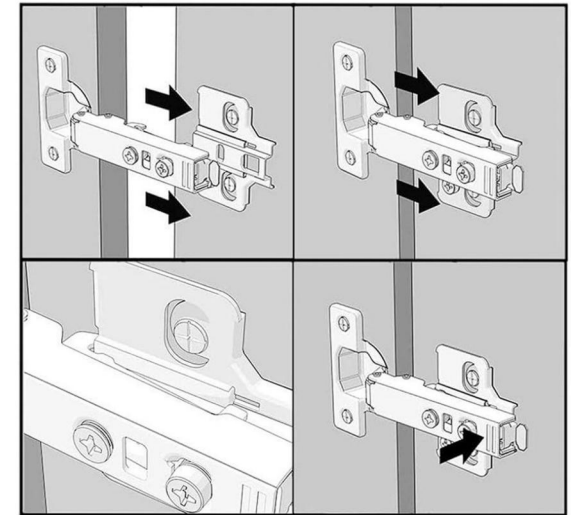

### Adjustments

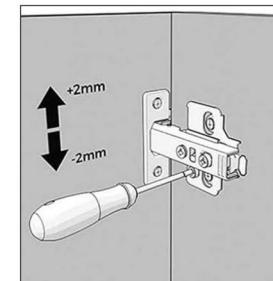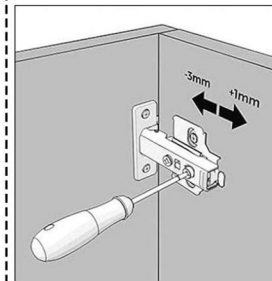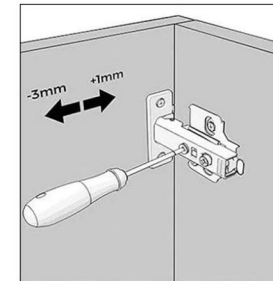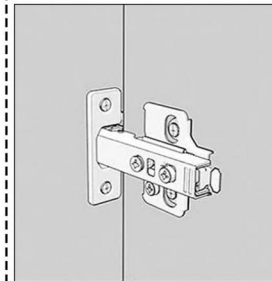


### Door width (mm)

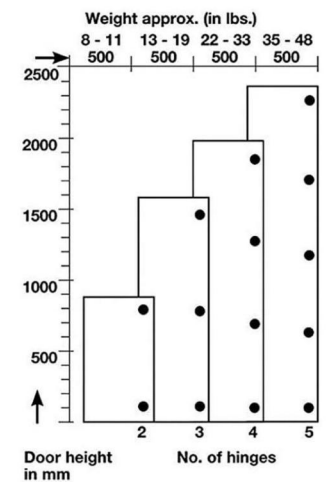

## Step 15

Place the bottom of the cabinet facing upwards and install four swivel wheels using self tapping screws as shown in the diagram

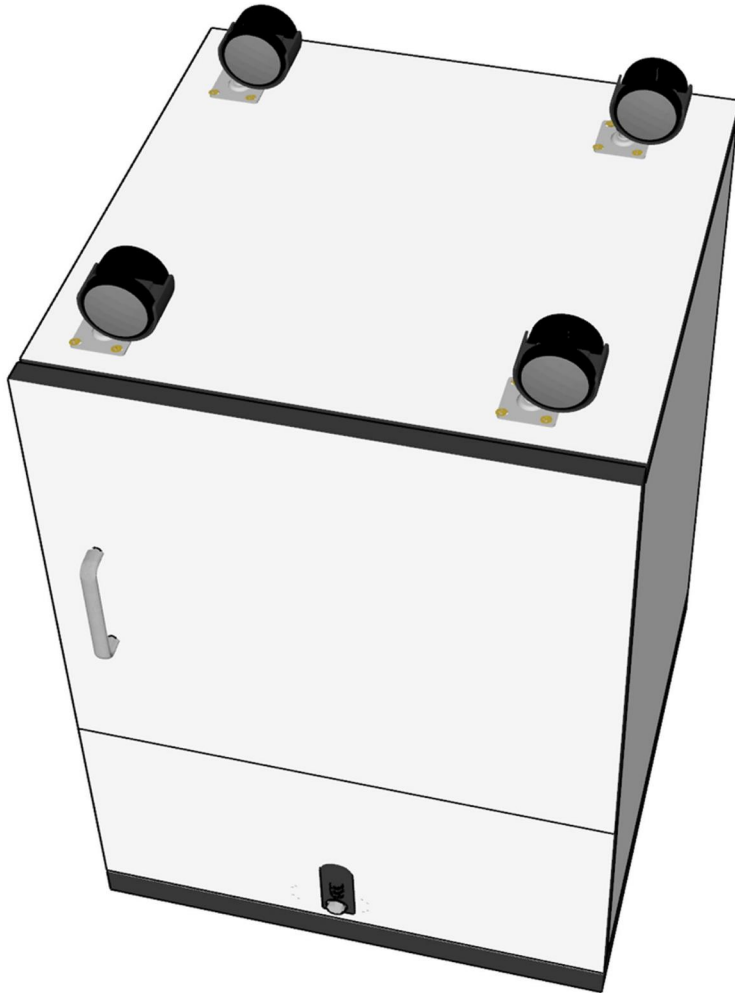

## Step 16

Mobile file cabinet installation complete.

