


Hello and thanks for Downloading!

Recover with Tcctool Guide for COWON S9/J3


- DOWNLOAD Tcctool [Link](#)
- Extract Tcctool Folder TO: C:\ROOT
- DOWNLOAD Firmware S9 [Link](#) J3 [Link](#)
- Extract FW.bin File to Tcctool Folder ROOT
- Follow Below

Install:

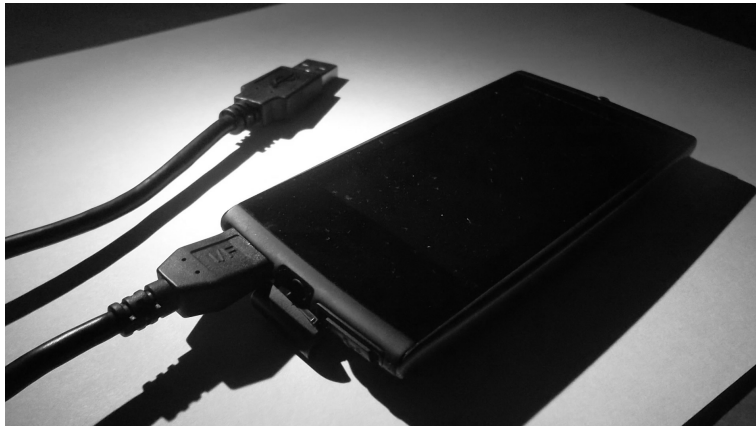


Note for Windows Vista and Windows 7 users: tcctool doesn't work and is unable to find the S9 while accepting to use Tcctool for Unbricking your S9. reboot PC and hit F8 before Vista or Win. 7 boot logo appears. There will be several options. Select **"Disable driver signature enforcement"** and that should allow you to use Tcctool. You'll have to do this step every time if you want to use Tcctool though


Hold the Play/pause button while accepting to connect to PC or Laptop

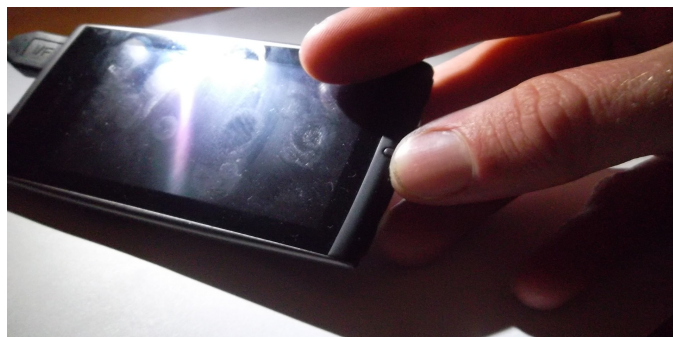


Go to Device Manager and you should see an unknown Device and Windows SHOULD not be able to install the Device

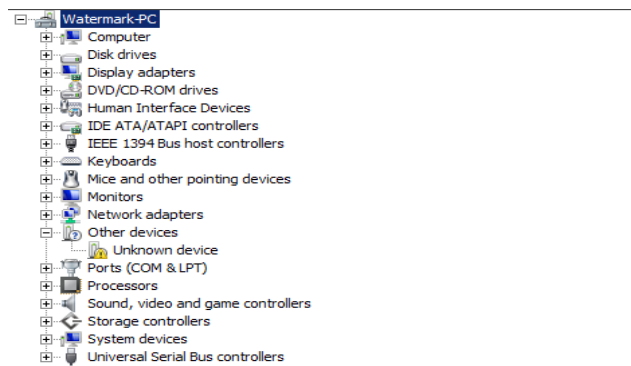


Right-Click the Device and select Update Driver...

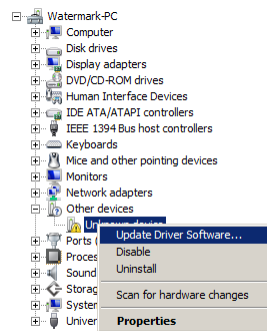


Browse my Computer...

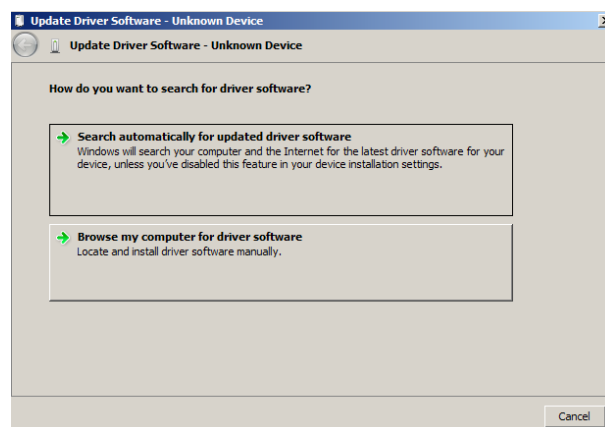


Browse through and find the Tcctool/Sub -win32 Folder

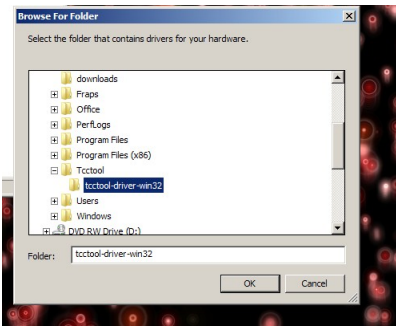


Then you should get this message and just click install anyway...

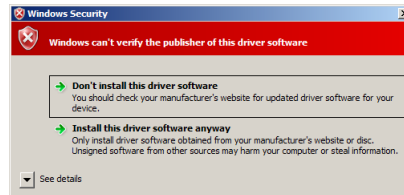

SUCCESS!!!

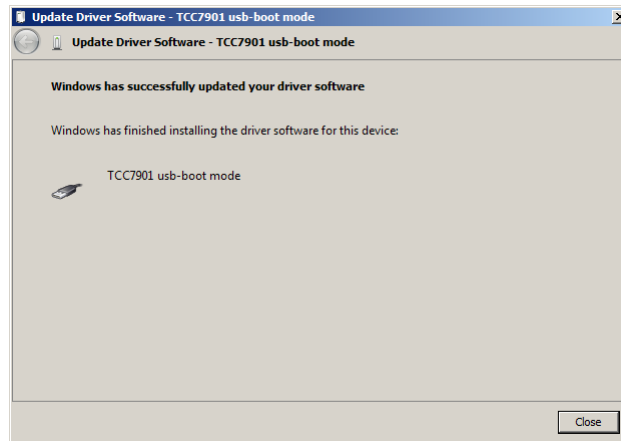

Open CMD 'Command Prompt'

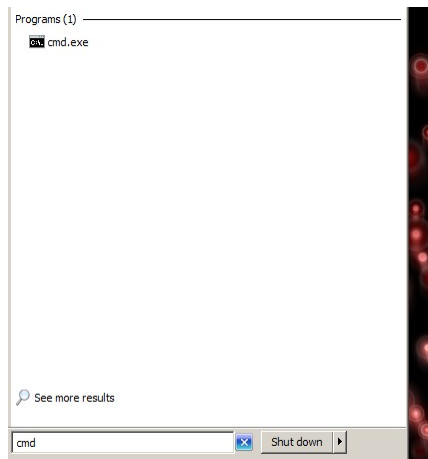

Input: cd c:\tctool then tctool -d cowon_s9_fw.bin

```
C:\Windows\system32\cmd.exe - tctool -d cowons9 cowon_s9_fw.bin
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Watermark>cd c:\tctool

c:\Tctool>tctool -d cowons9 cowon_s9_fw.bin
tctool - (C) 2007-2010 Dave Chapman
This is free software; see the source for copying conditions. There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

[INFO] Using device "Cowon S9"
[INFO] Searching for TCC device...
[INFO] Found TCC device, uploading application.
```

SUCCESS!

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Watermark>cd c:\tctool

c:\Tctool>tctool -d cowons9 cowon_s9_fw.bin
tctool - (C) 2007-2010 Dave Chapman
This is free software; see the source for copying conditions. There is NO
warranty; not even for MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

[INFO] Using device "Cowon S9"
[INFO] Searching for TCC device...
[INFO] Found TCC device, uploading application.
[INFO] Patching application uploaded successfully!

c:\Tctool>
```

Your S9 or J3 should now be detected and you should be able to back any Data you want and then you should disconnect then reconnect and redo the step 'still CMD just hit the up *Arrow Key' to re-input the last command. Your S9/J3 should now start installing the FW.bin File 'FW.bin is the Firmware File!'

