




HLB PoorKoï 2

Build Guide (easy - less screws 🥵🥵)

JST / Daughterboard

- If you have a JST cable with heat shrink we recommend you to have it shrinked (just use a hair dryer) - cable will take less space and will more gentle to work with
- Connect JST to DB
- Screw DB in the aluminium center part

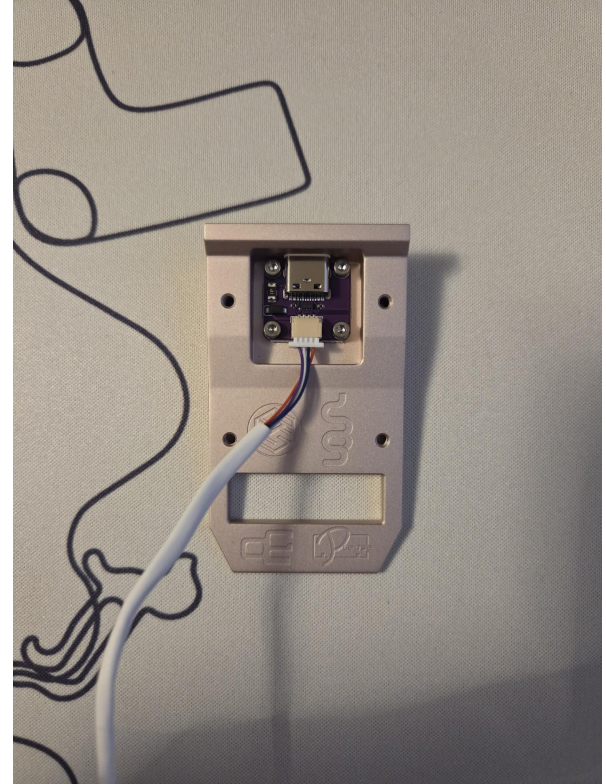

Install center part

- Install polycarbonate bottom on the aluminium part
- Use the hole for jst cable

✗ DON'T OVER TIGHT THE SCREWS


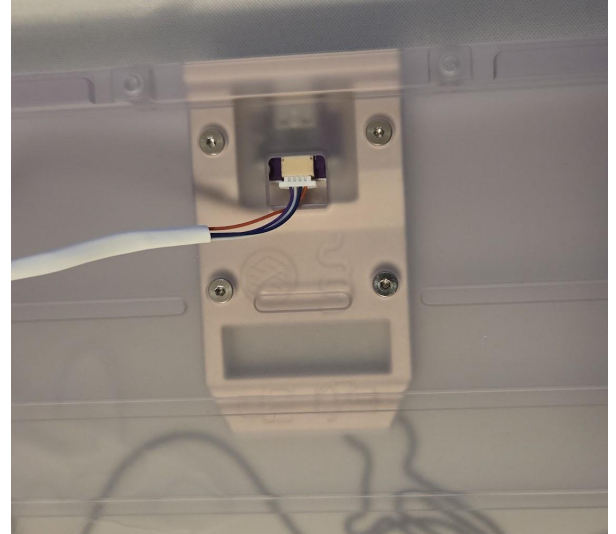


Plate / PCB

- You have 2 bags of gaskets, you can
 - Install them on the plate
 - Install them on the case
- There are 3 dimensions
 - The largest on bottom
- Once installed connect jst cable to pcb
- Install pcb on the bottom part
- Push jst on the back so it can be straight

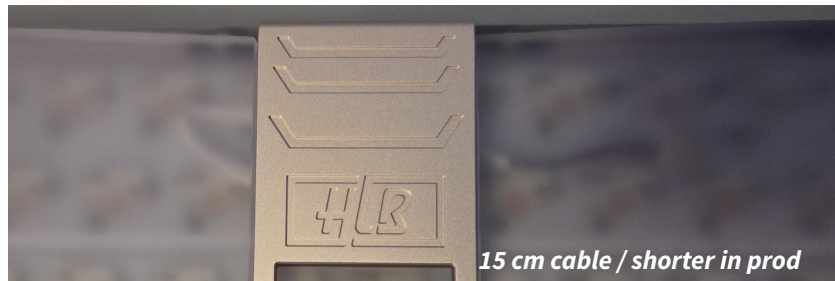

15 cm cable / shorter in prod

Finish and enjoy 🧐

- Put the top frame
- Flip the keyboard
- Close the case with screws
- Add the feet

✗ DON'T OVER TIGHT THE SCREWS

