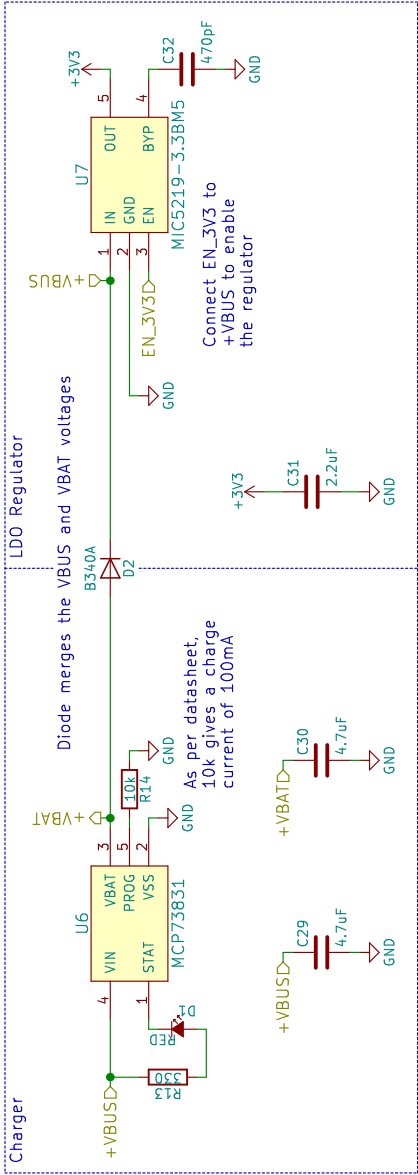


TODO:

- Connect IMU Interrupt pins (Probably not ALL necessary, but might as well)
- Expansion board breakouts (Bring most pins to headers for debug/expansion)





Sheet: /Power/
File: Power.sch

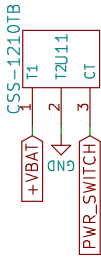
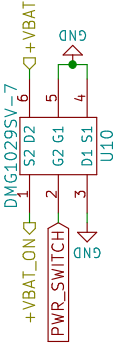
Title:

Size: A4 Date:

KiCad E.D.A. kicad 4.0.7

Rev:

Id: 3/4

1	2	3	4	5	6
A	Power Switch – Slide Switch				
A					
B	High Power Switching P-MOSFET				
B					
C					
D					
D	Sheet: /Power Switch/ File: PWRSwitch.sch				
D	Title:				
D	Size: A4 Date:				
D	KICad E.D.A. kicad 4.0.7				
D	Rev: Id: 4/4				
1	2	3	4	5	6