


Construction Step 1

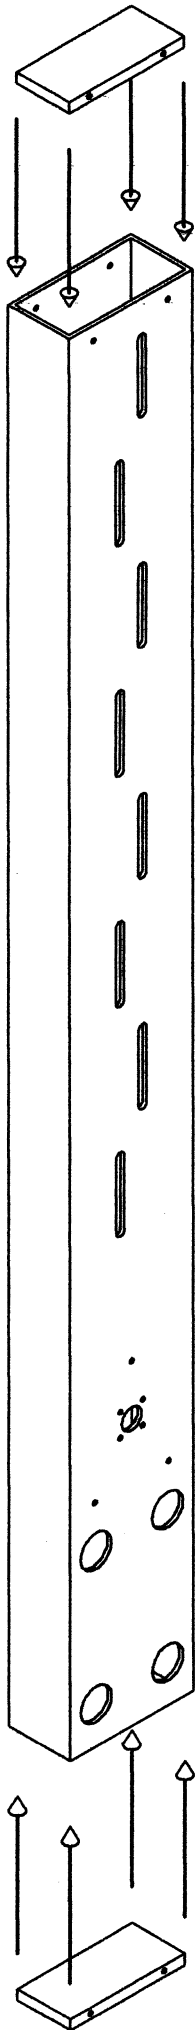


Take the machined aluminium tubing and the two machined end plates.

Lay the tube down flat, and position the end plates so that the holes in the mounting plate match up with the holes in the pipe.

If the end plate has a "lapped" side, this side should face the inside of the tubing.

Construction Step 2

After the end plates are in position, take 8 x M3, 10mm screws, and secure the end plates into position.

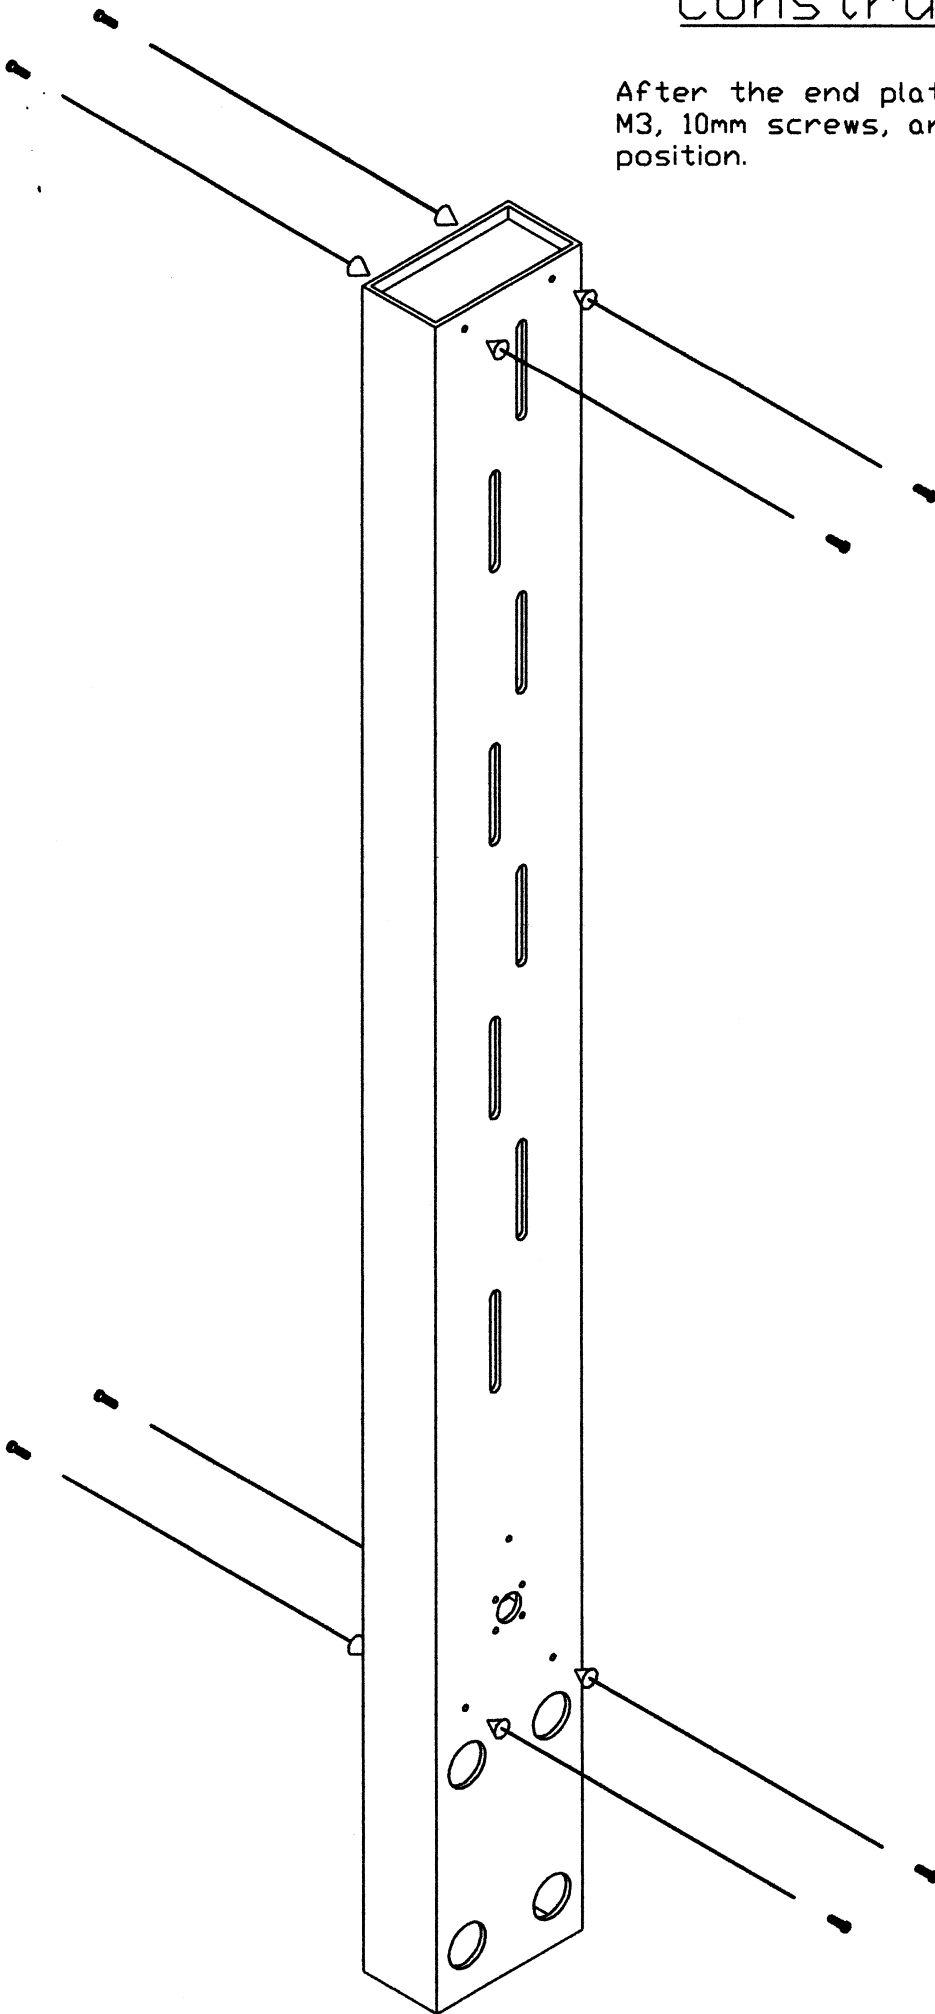

Construction Step 3

After the end plates have been secured, take the chassis mount n-connector and attach a 30.67mm stub to the centre connector.

Take 4 x M3 6mm (or less) screws, and fasten the n-connector to the tube.

