

DESIGN CONSIDERATIONS


DESIGN NOTE:
Example text for informational
design notes.

DESIGN NOTE:
Example text for critical
design notes.





DESIGN NOTE:
Example text for cautionary
design notes.

LAYOUT NOTE:
Example text for critical
layout guidelines.






DESIGN NOTE:
Example text for debug notes.

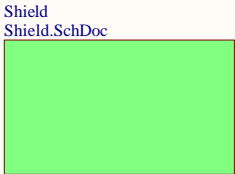

ON Development IVS		
Title: uStepper S Proto Shield		
Size: A3	Drawn By: Thomas Olsen	
Date: 6/28/2022	Sheet 1 of 2	Revision: 1.0

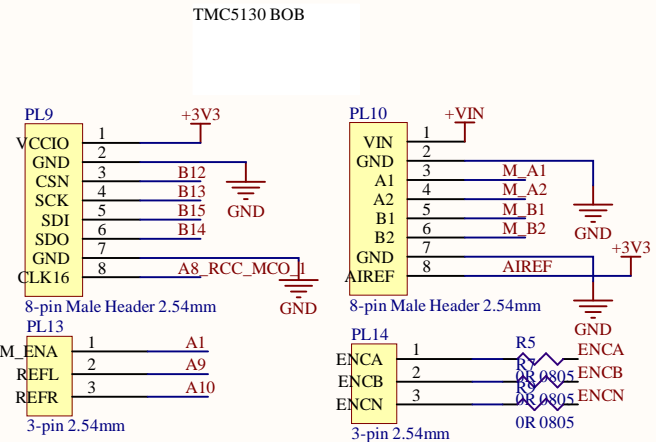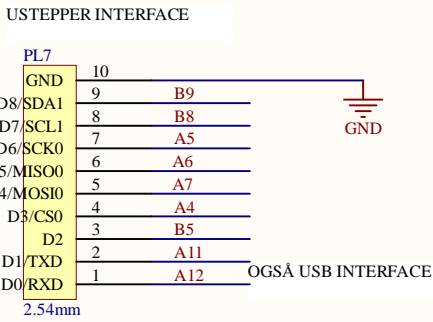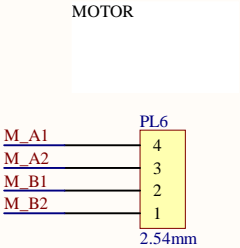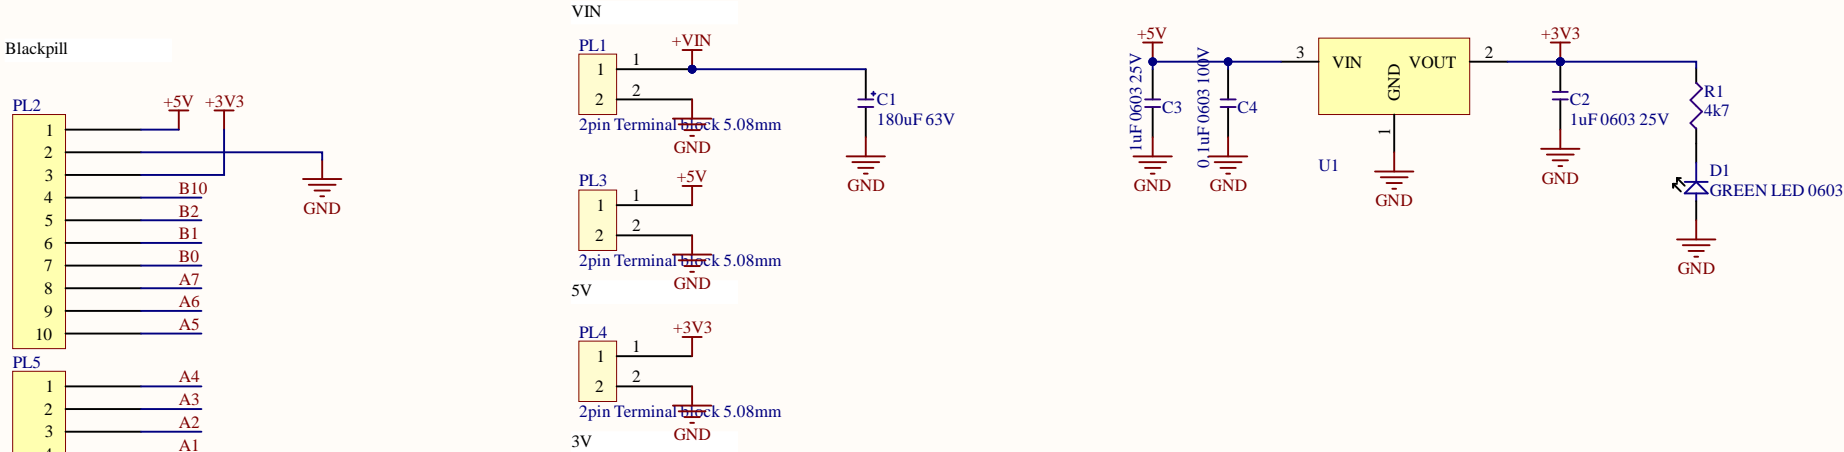

REFL/REFR er også step/dir input
Vi laver et stik så man både kan koble refr/refl eller step/dir på udefra direkte til TMC, samtidigt kører vi den på i/o så vi kan step/dir styre TMC eller step/dir styre extern driver

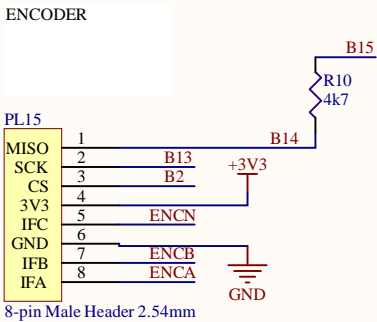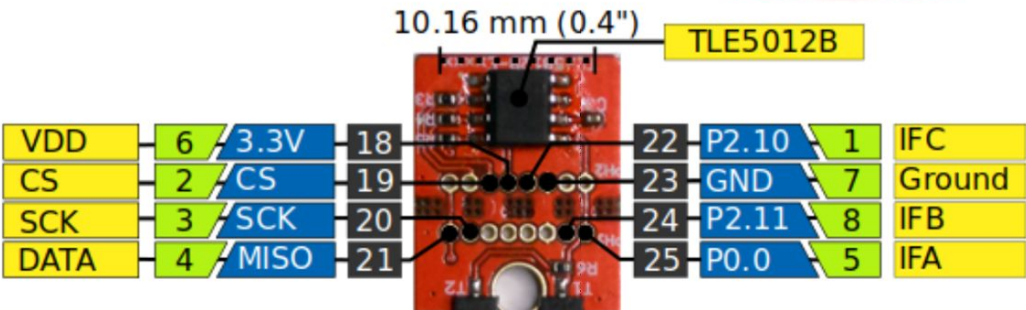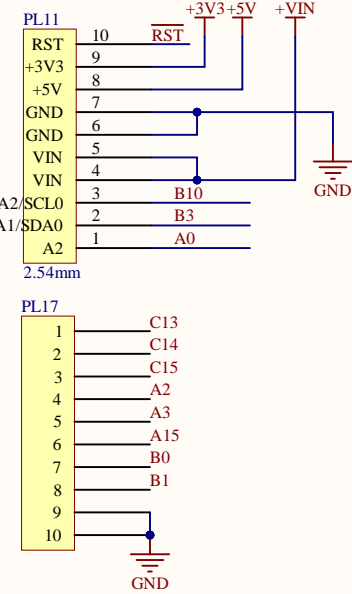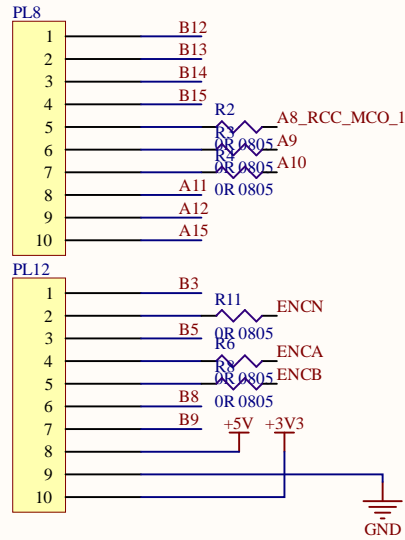

ON Development IVS

Title: uStepper S Proto Shield

Size: A3

Drawn By: Thomas Olsen

Date: 6/28/2022

Sheet 2 of 2

Revision: 1.0