




Short link, long link, and spring cams

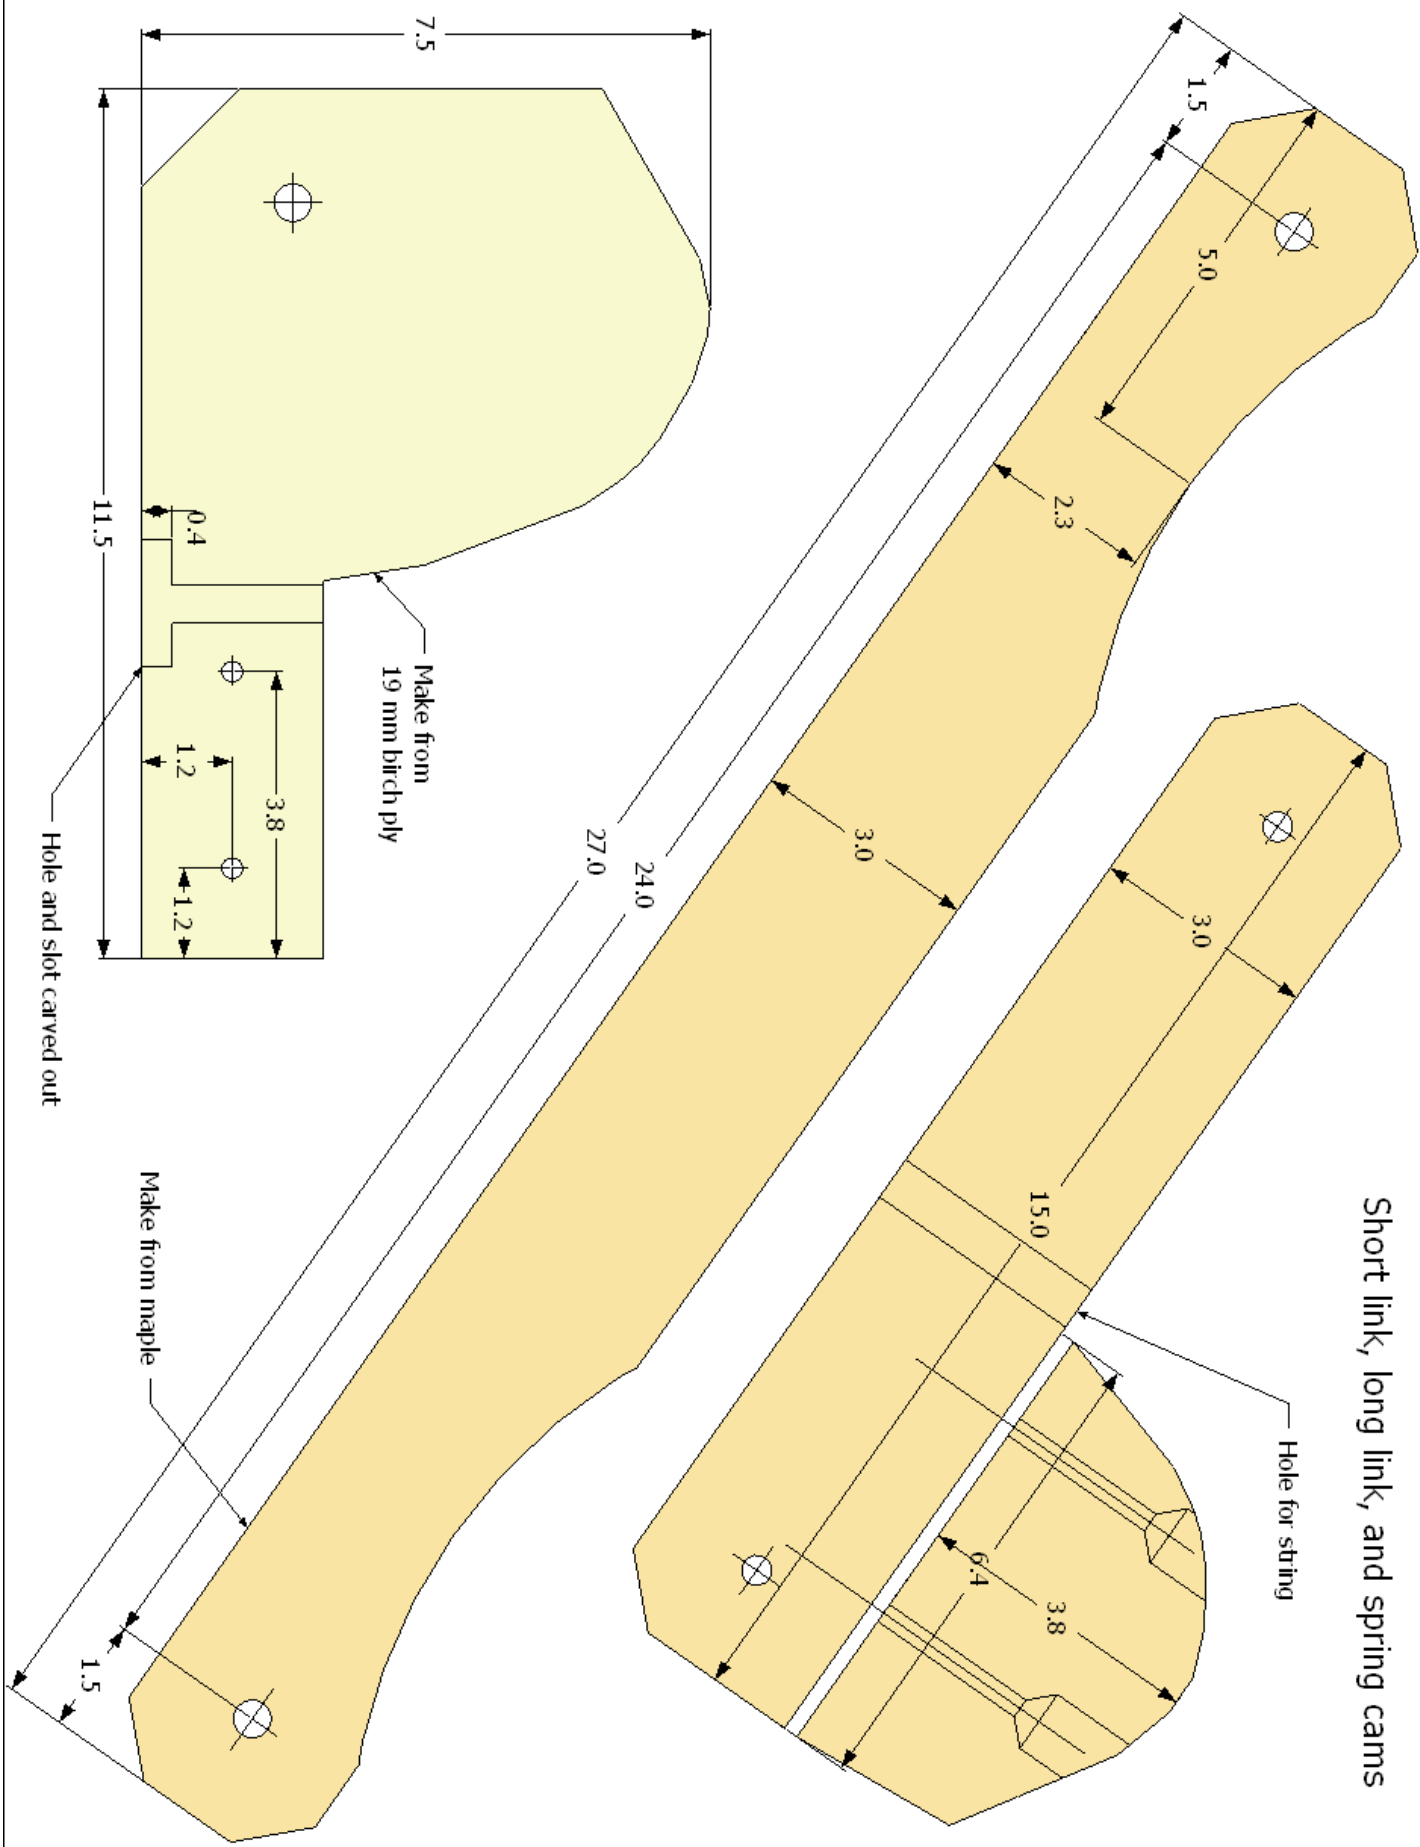


89 mm Router mount back-most layer

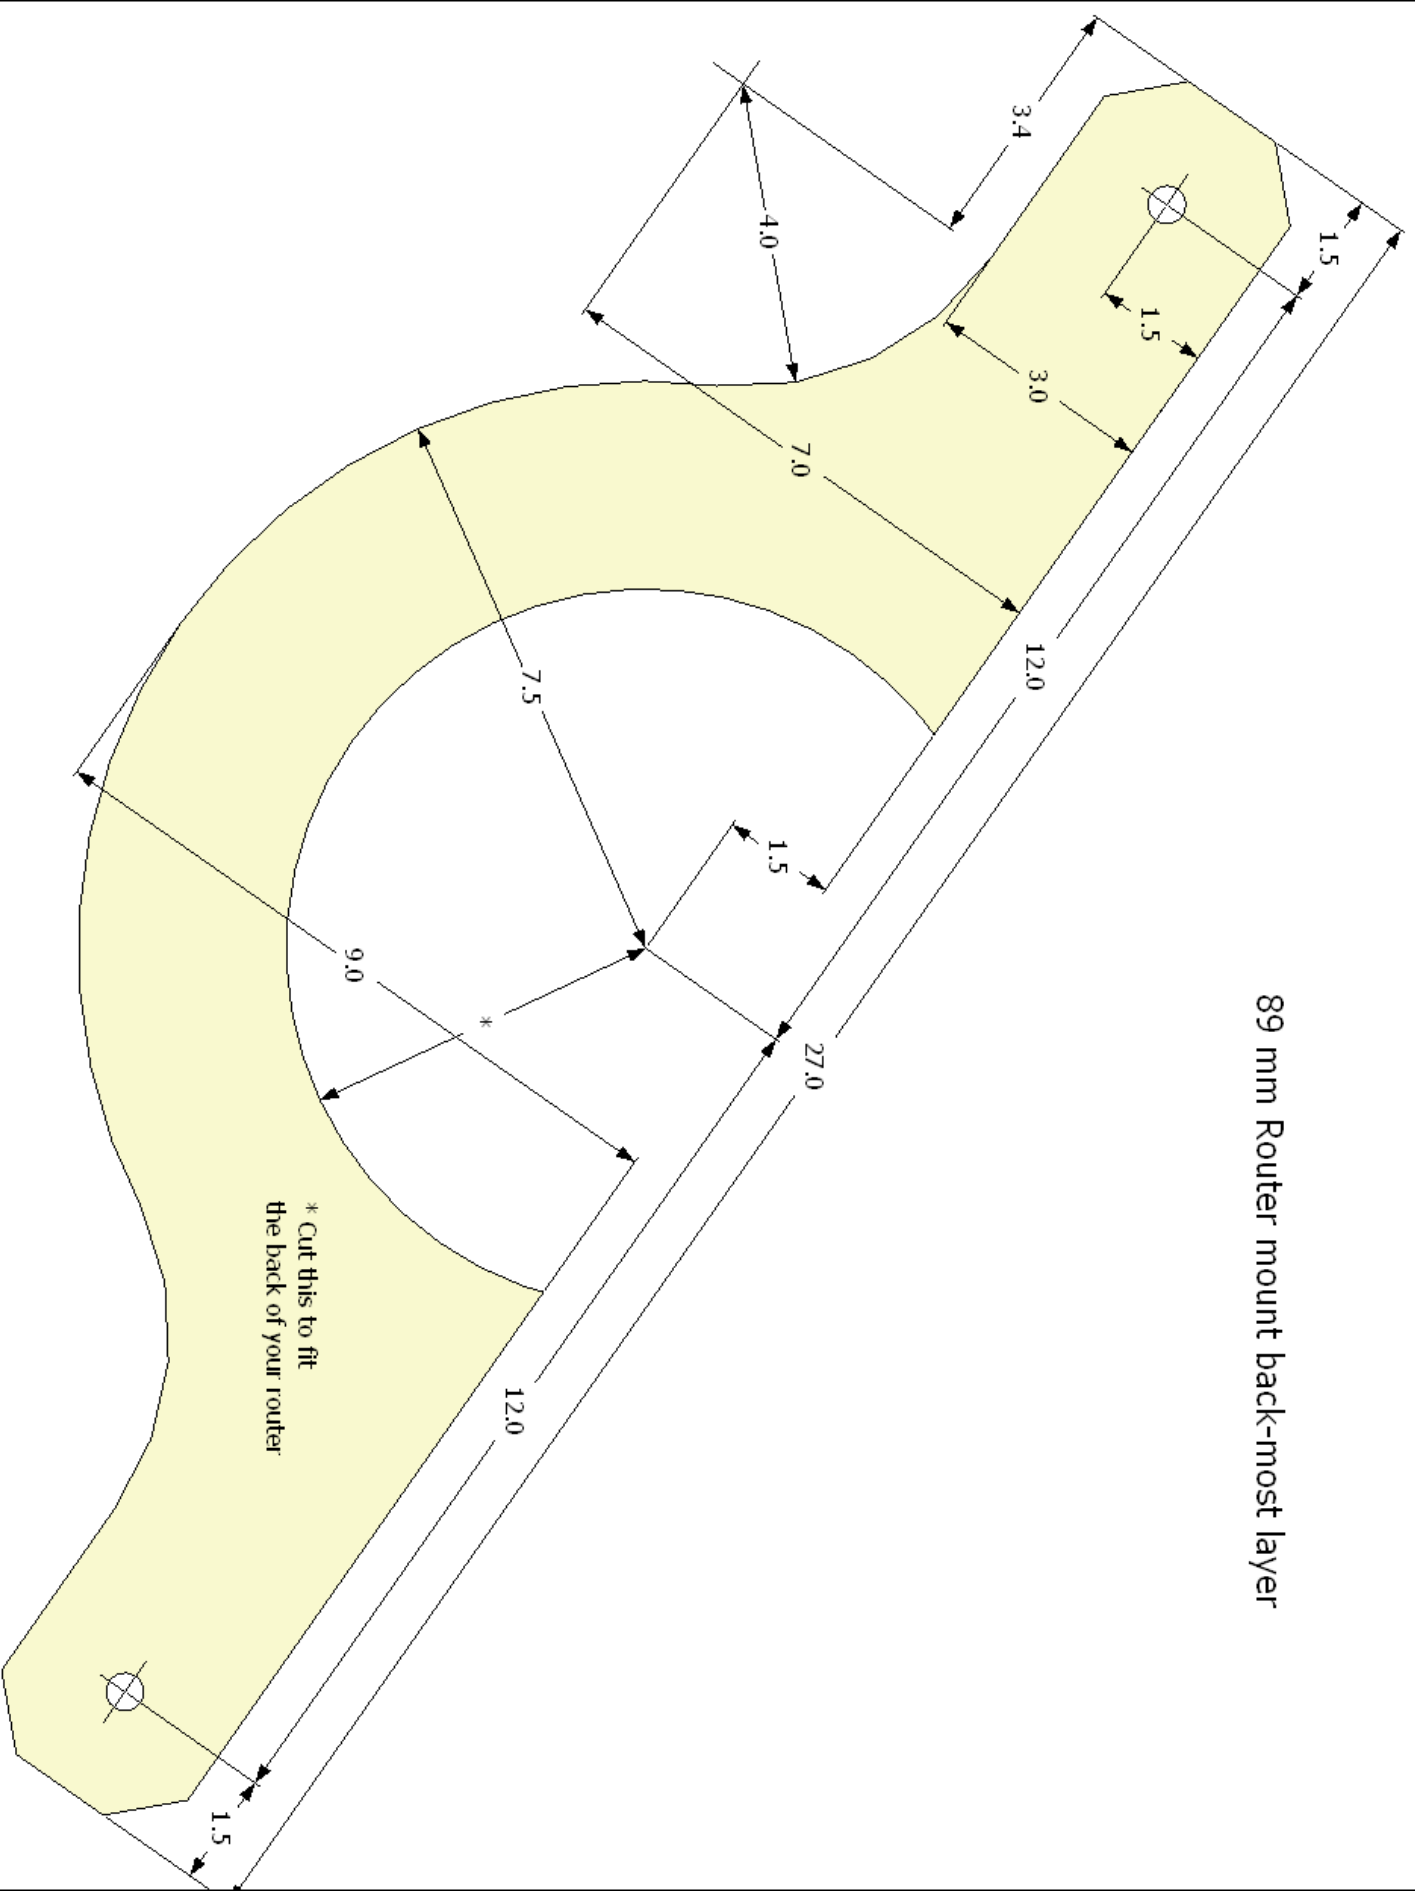


89 mm router mount - front layer

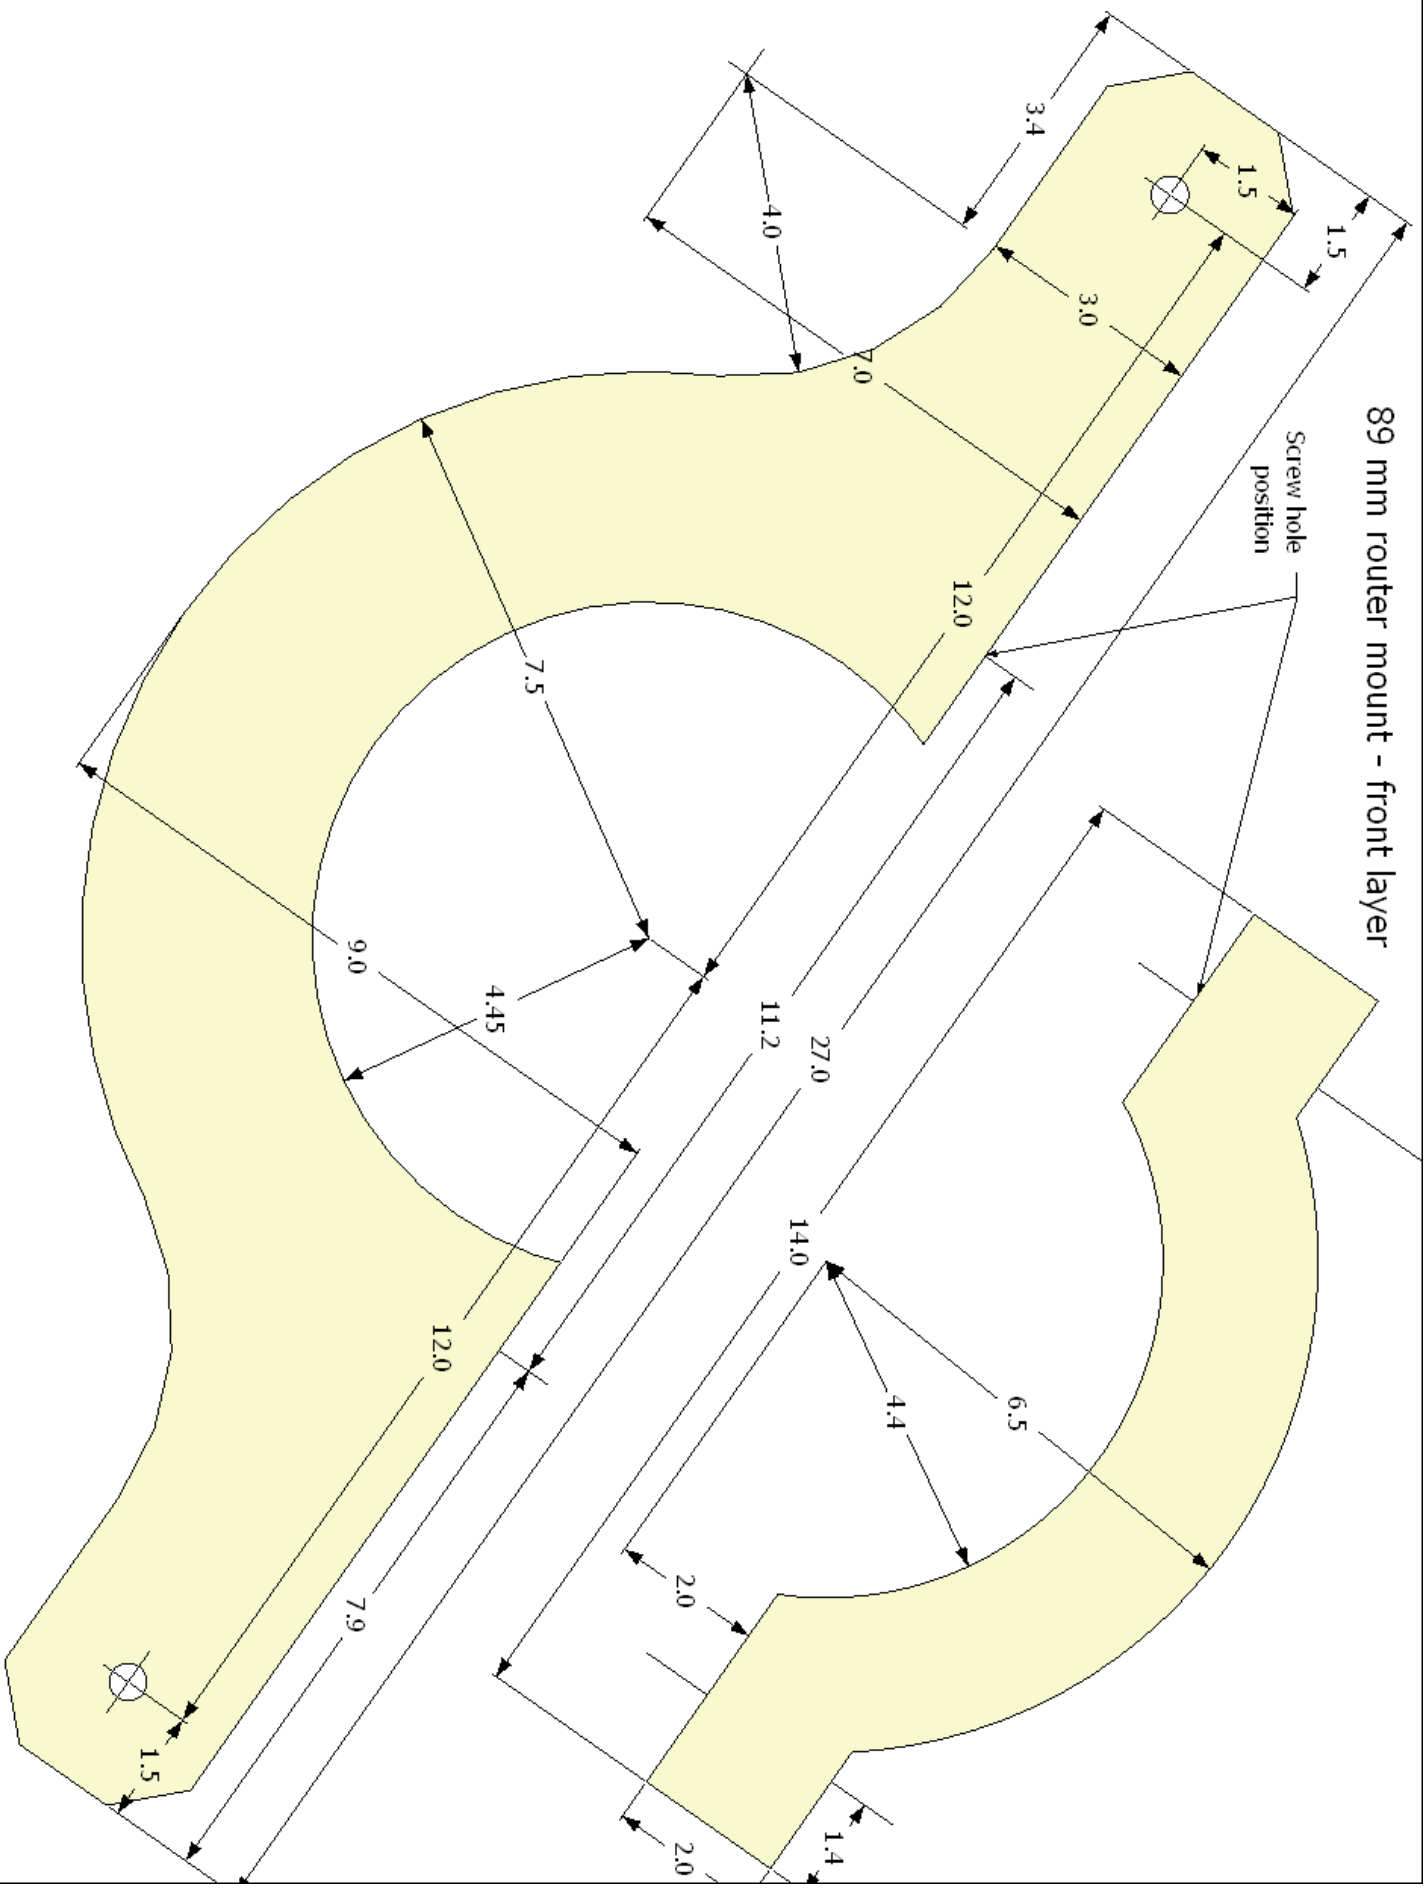

89 mm router mount - second from back layer

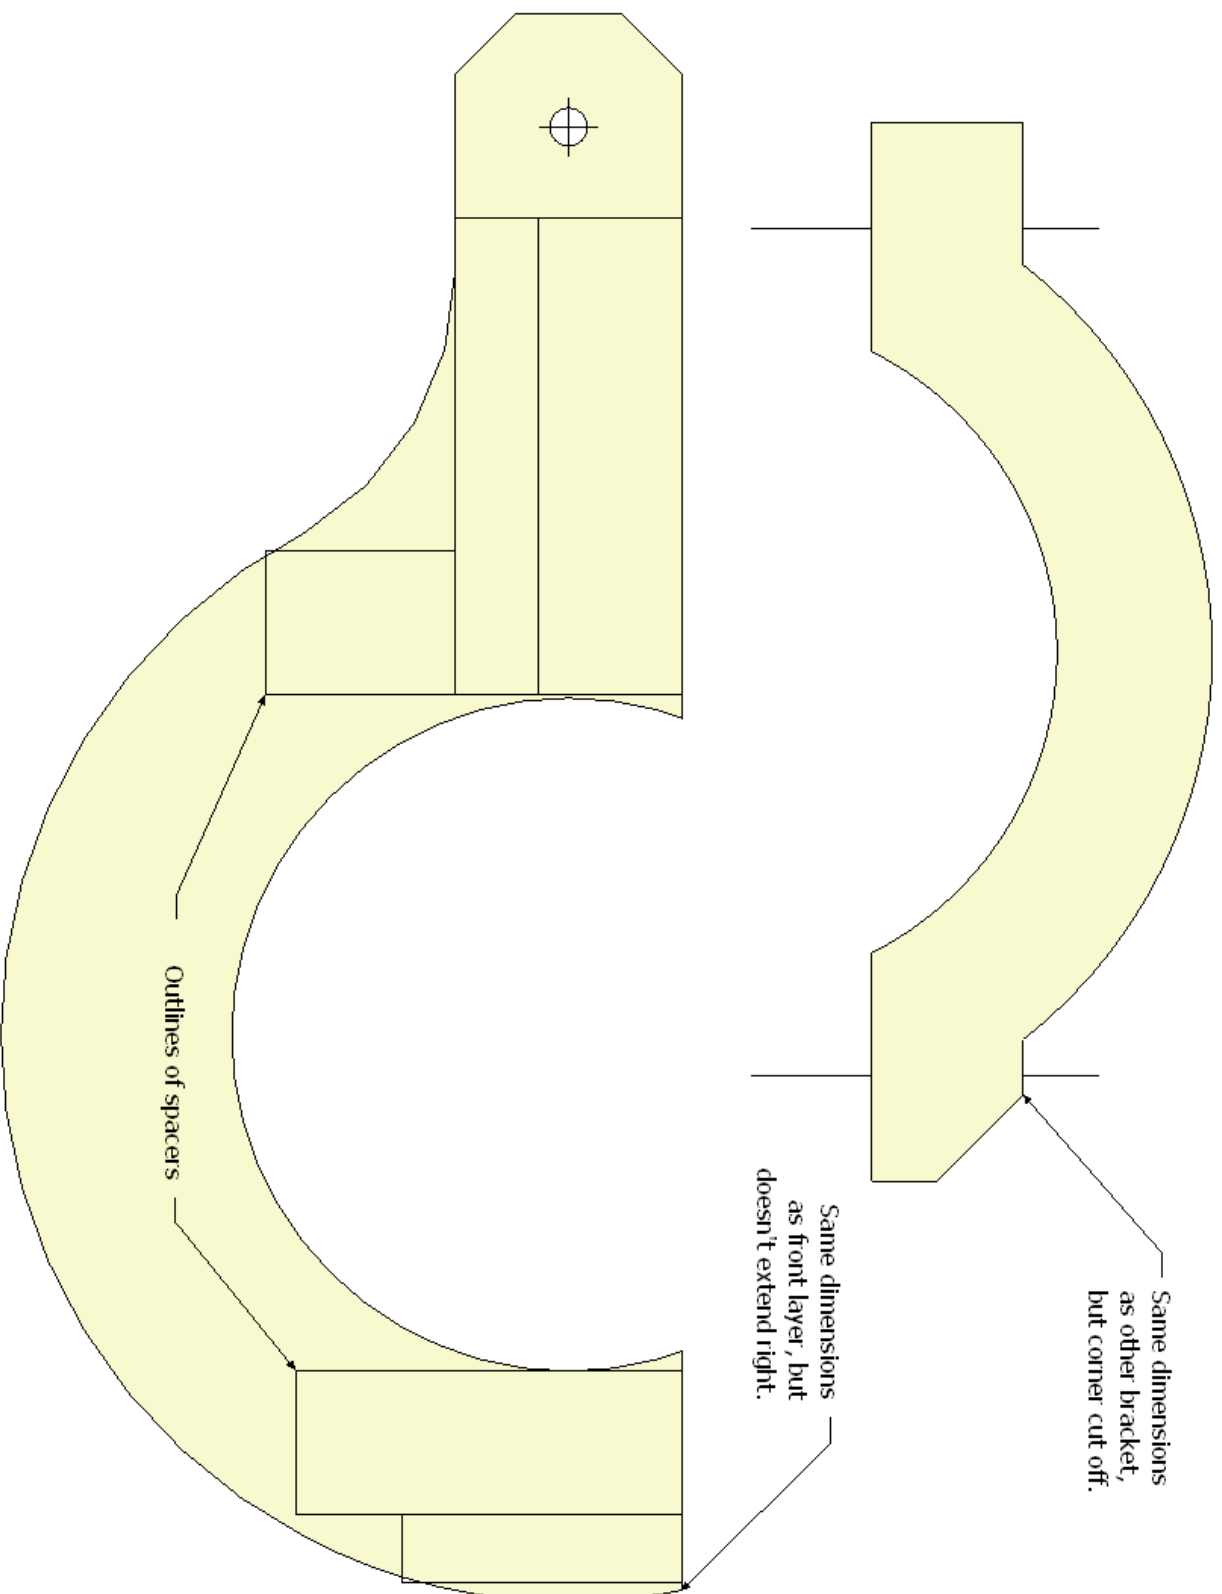

- Plunge lever bracket

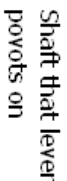

Screw

Template holder frame parts

Make from 1.5" spruce planed down to 36 mm.

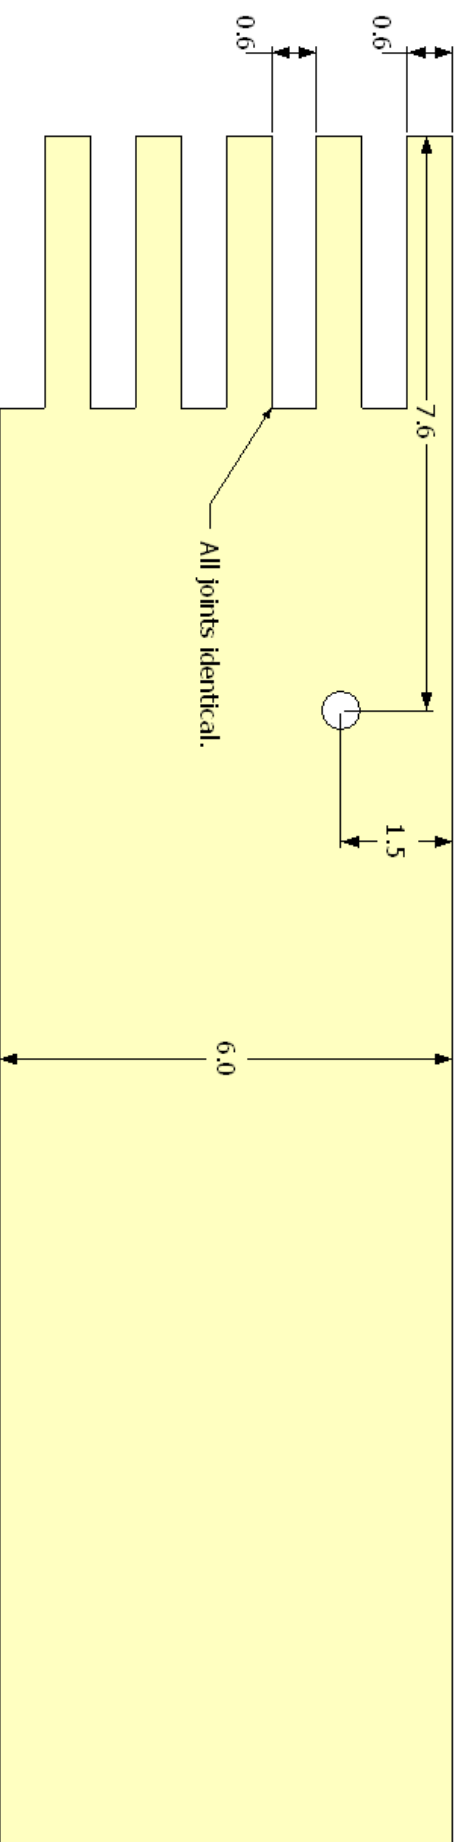
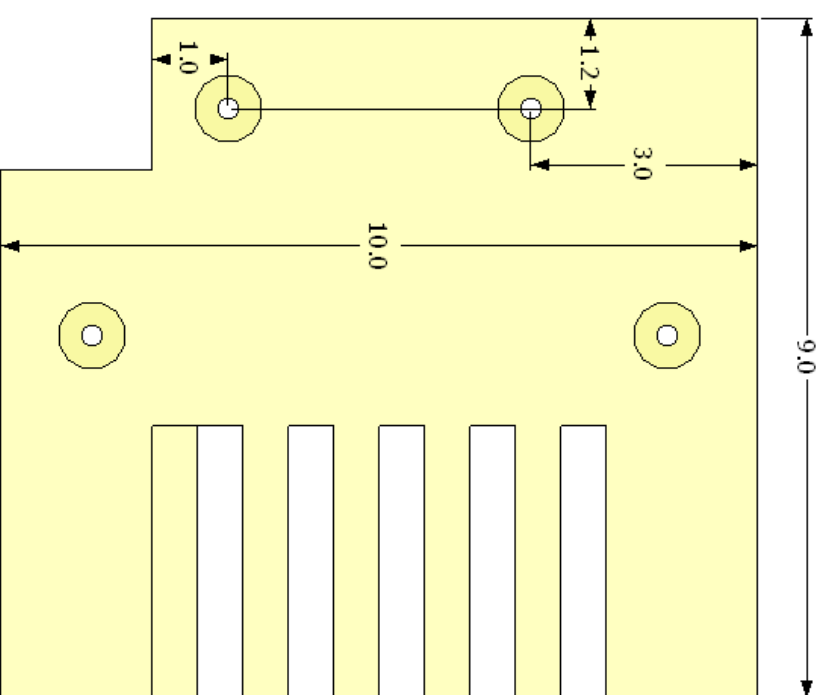
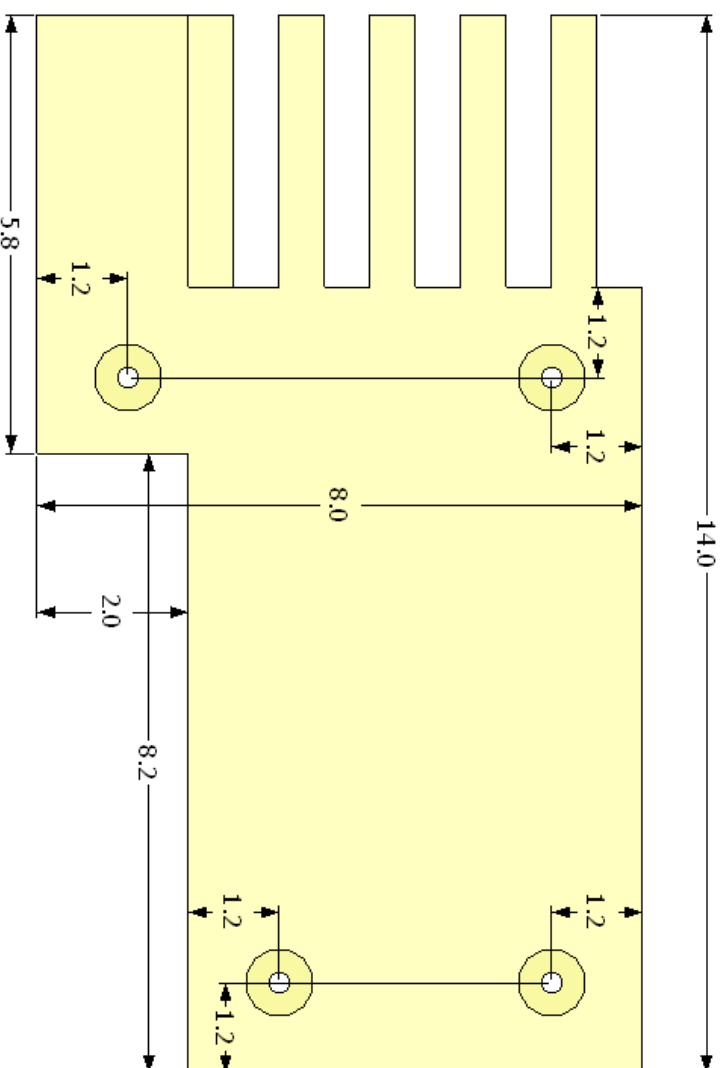


Table profile

2 mm overhang

Make from 1.5" spruce
planed down to 36 mm

1.3
1.3
1.3

16.0

Plunge lever link
attachment
screw hole

5.8

2.4


81.5

5.0

2.3



1.9

5.0



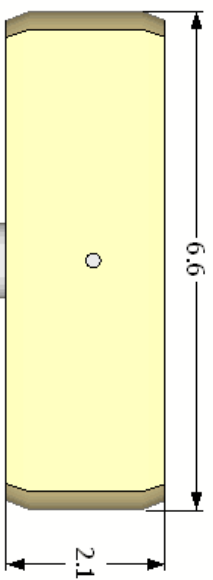


Hold-down clamp profiles

Make from maple

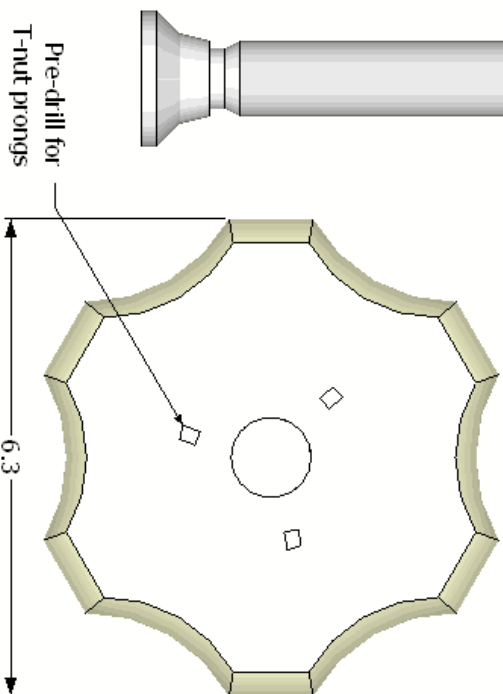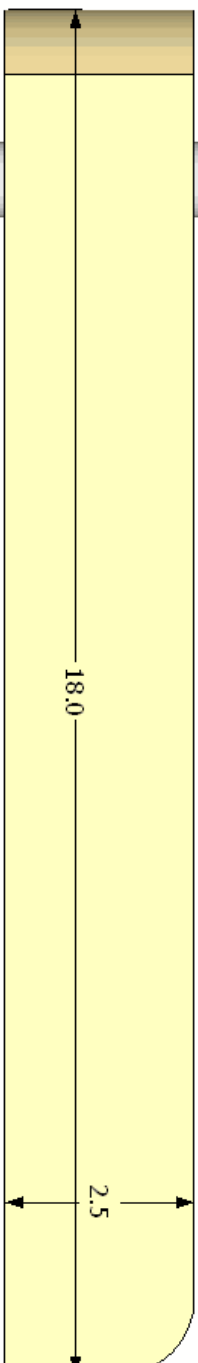

Pre-drill for
T-nut prongs

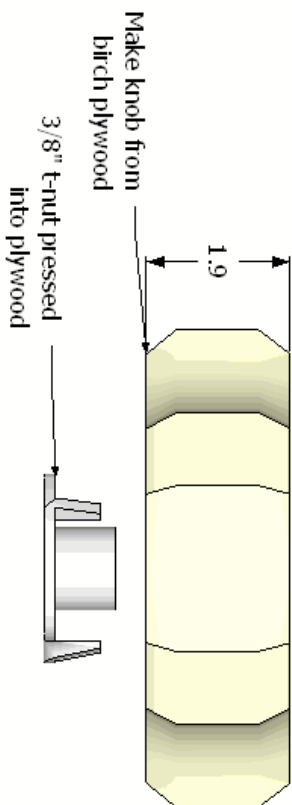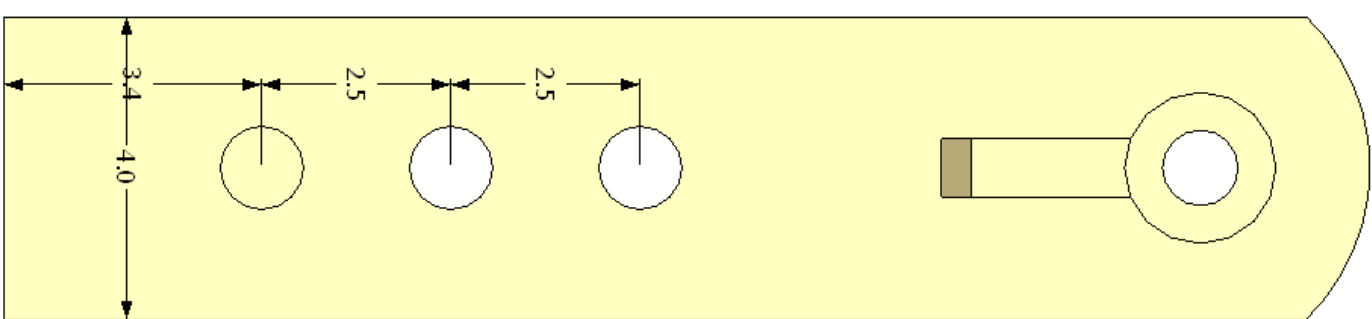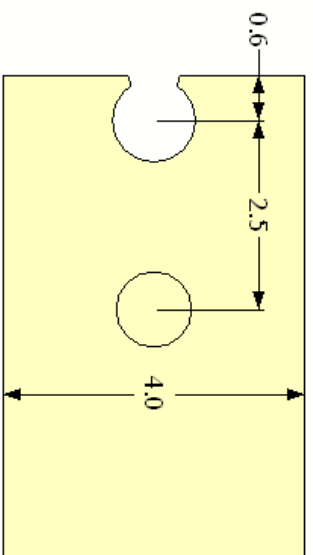

Make knob from
birch plywood
3/8" t-nut pressed
into plywood

Fence

Make from birch plywood

