




Short link, long link, and spring cams


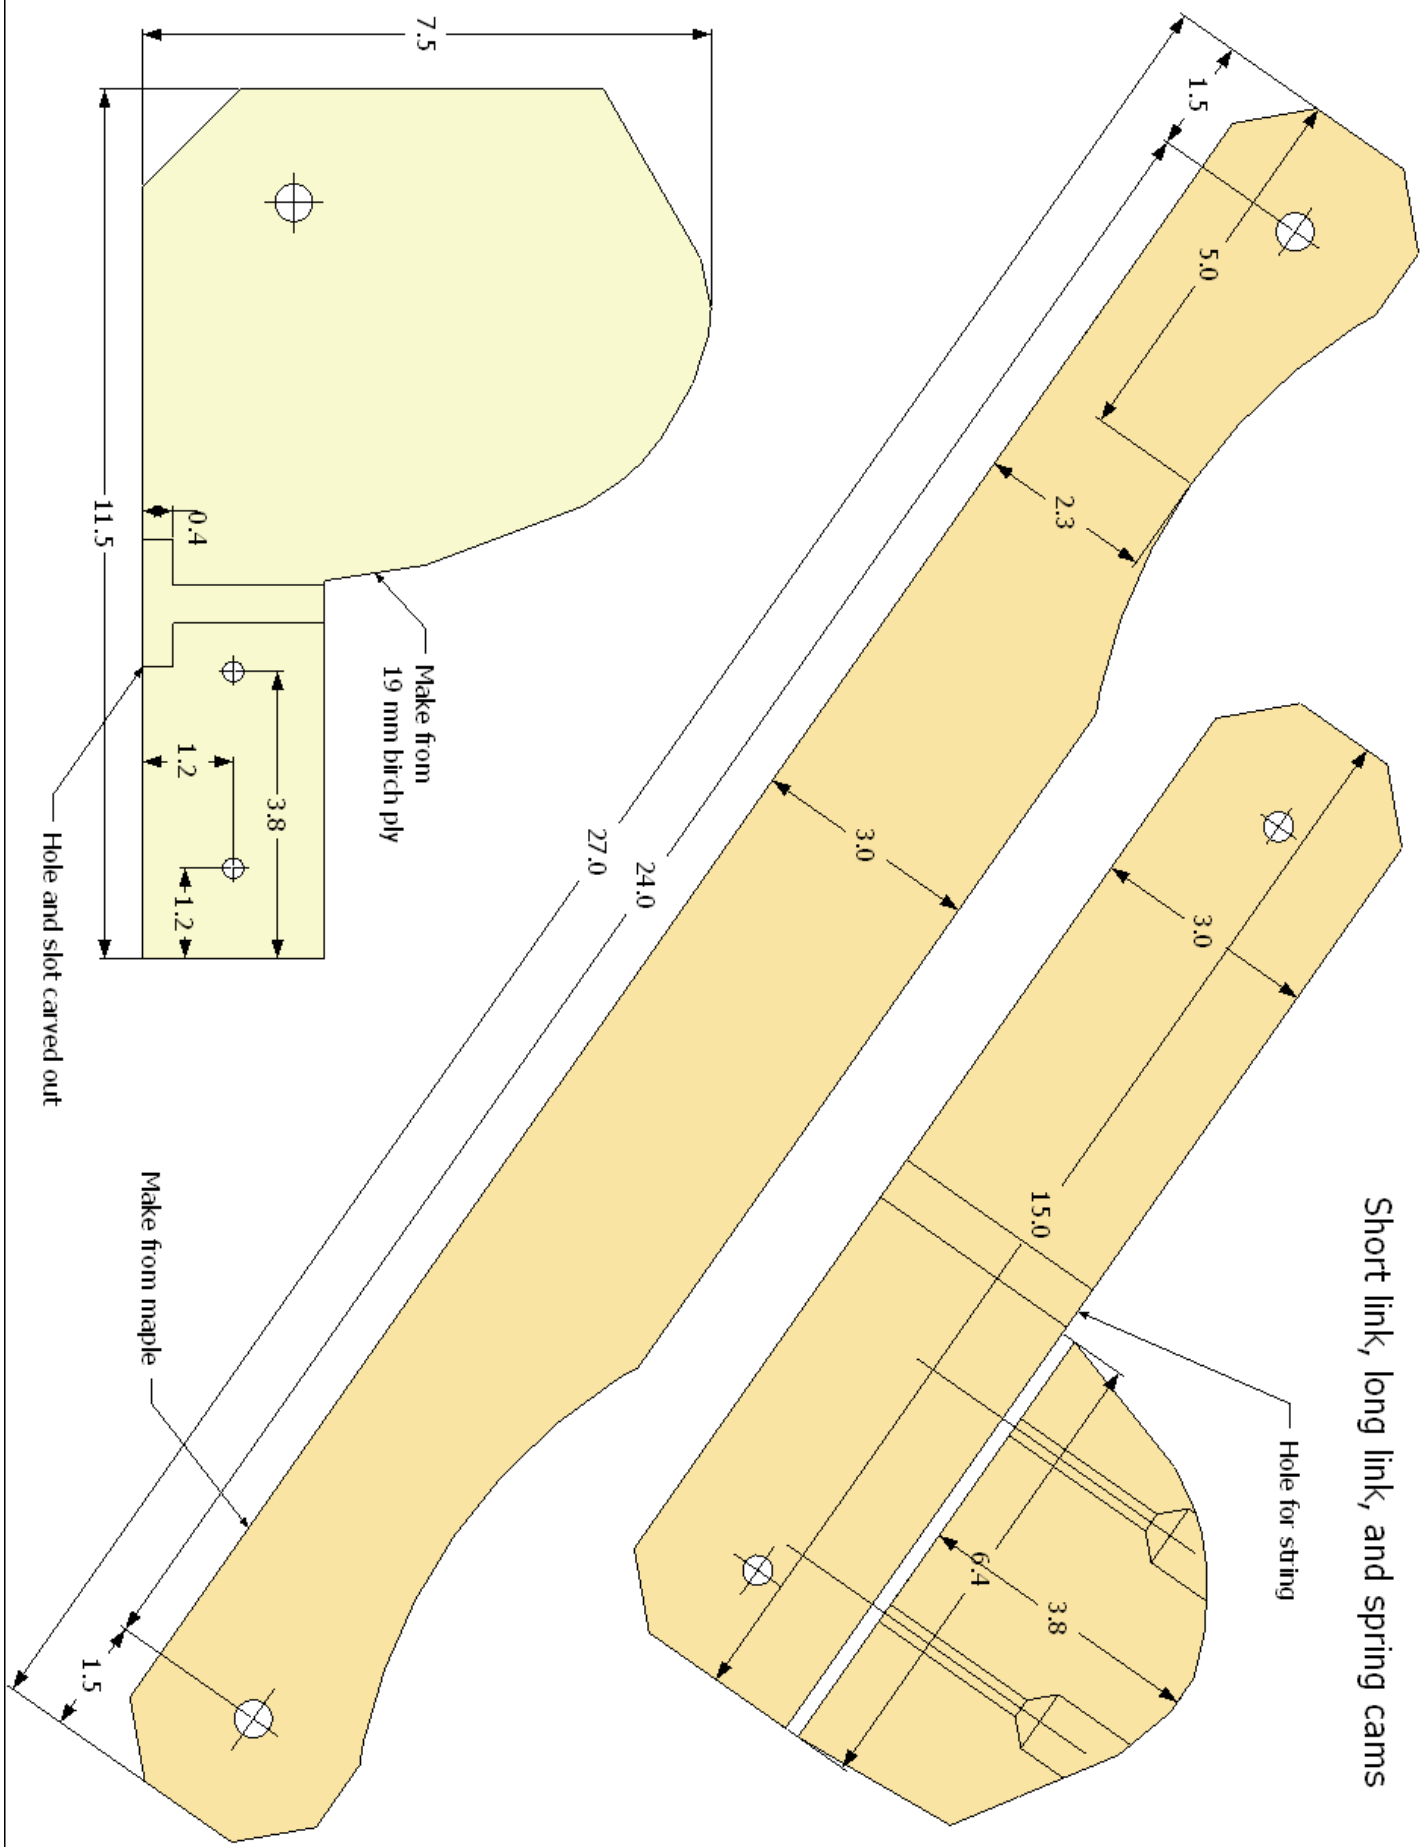


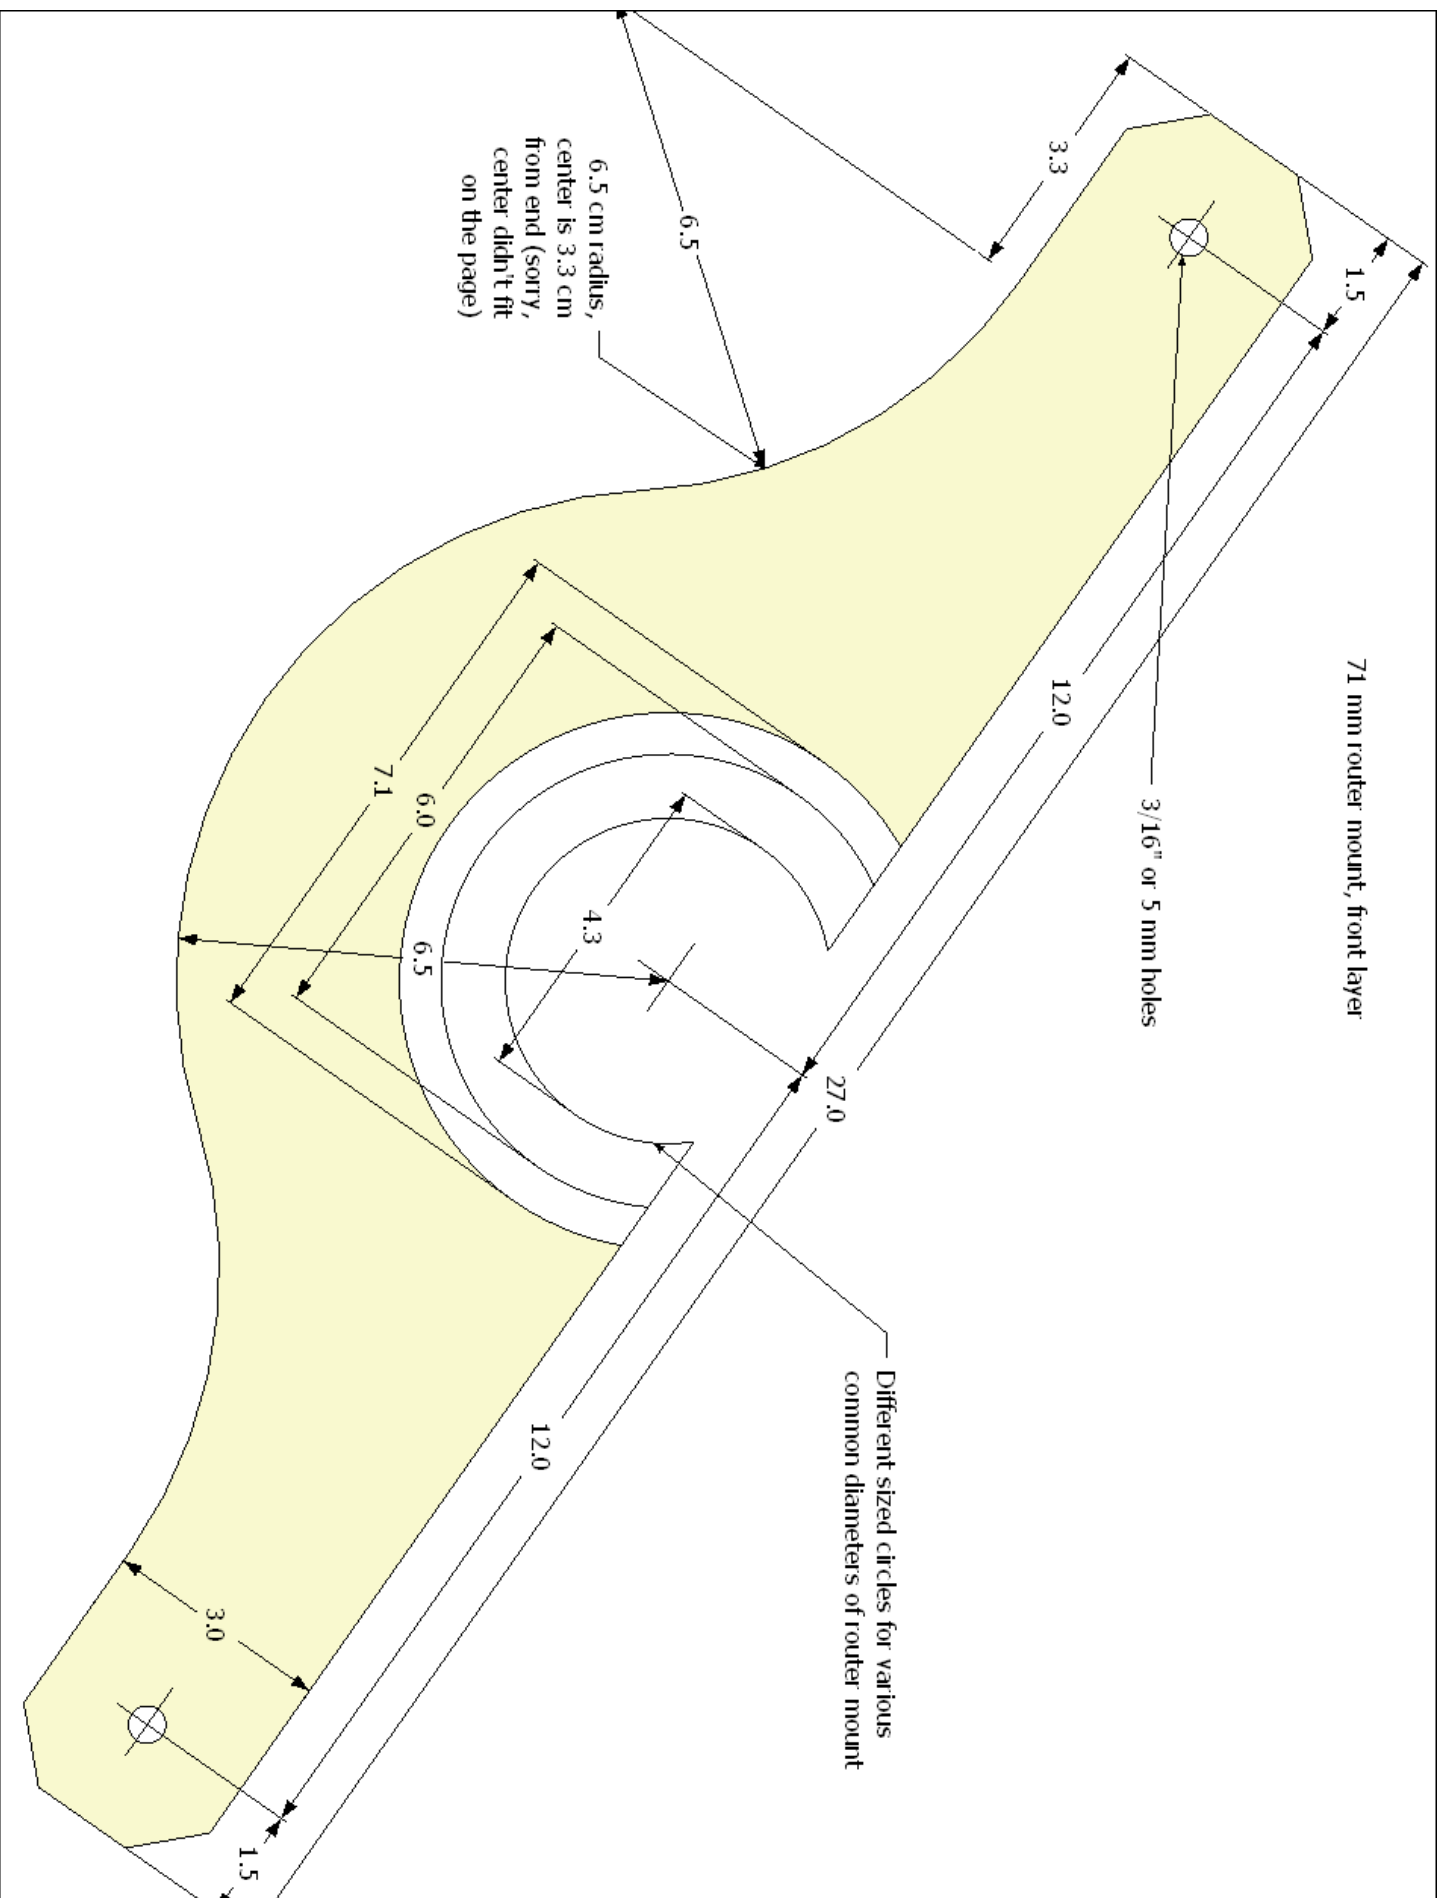

## 71 mm router mount, back layer

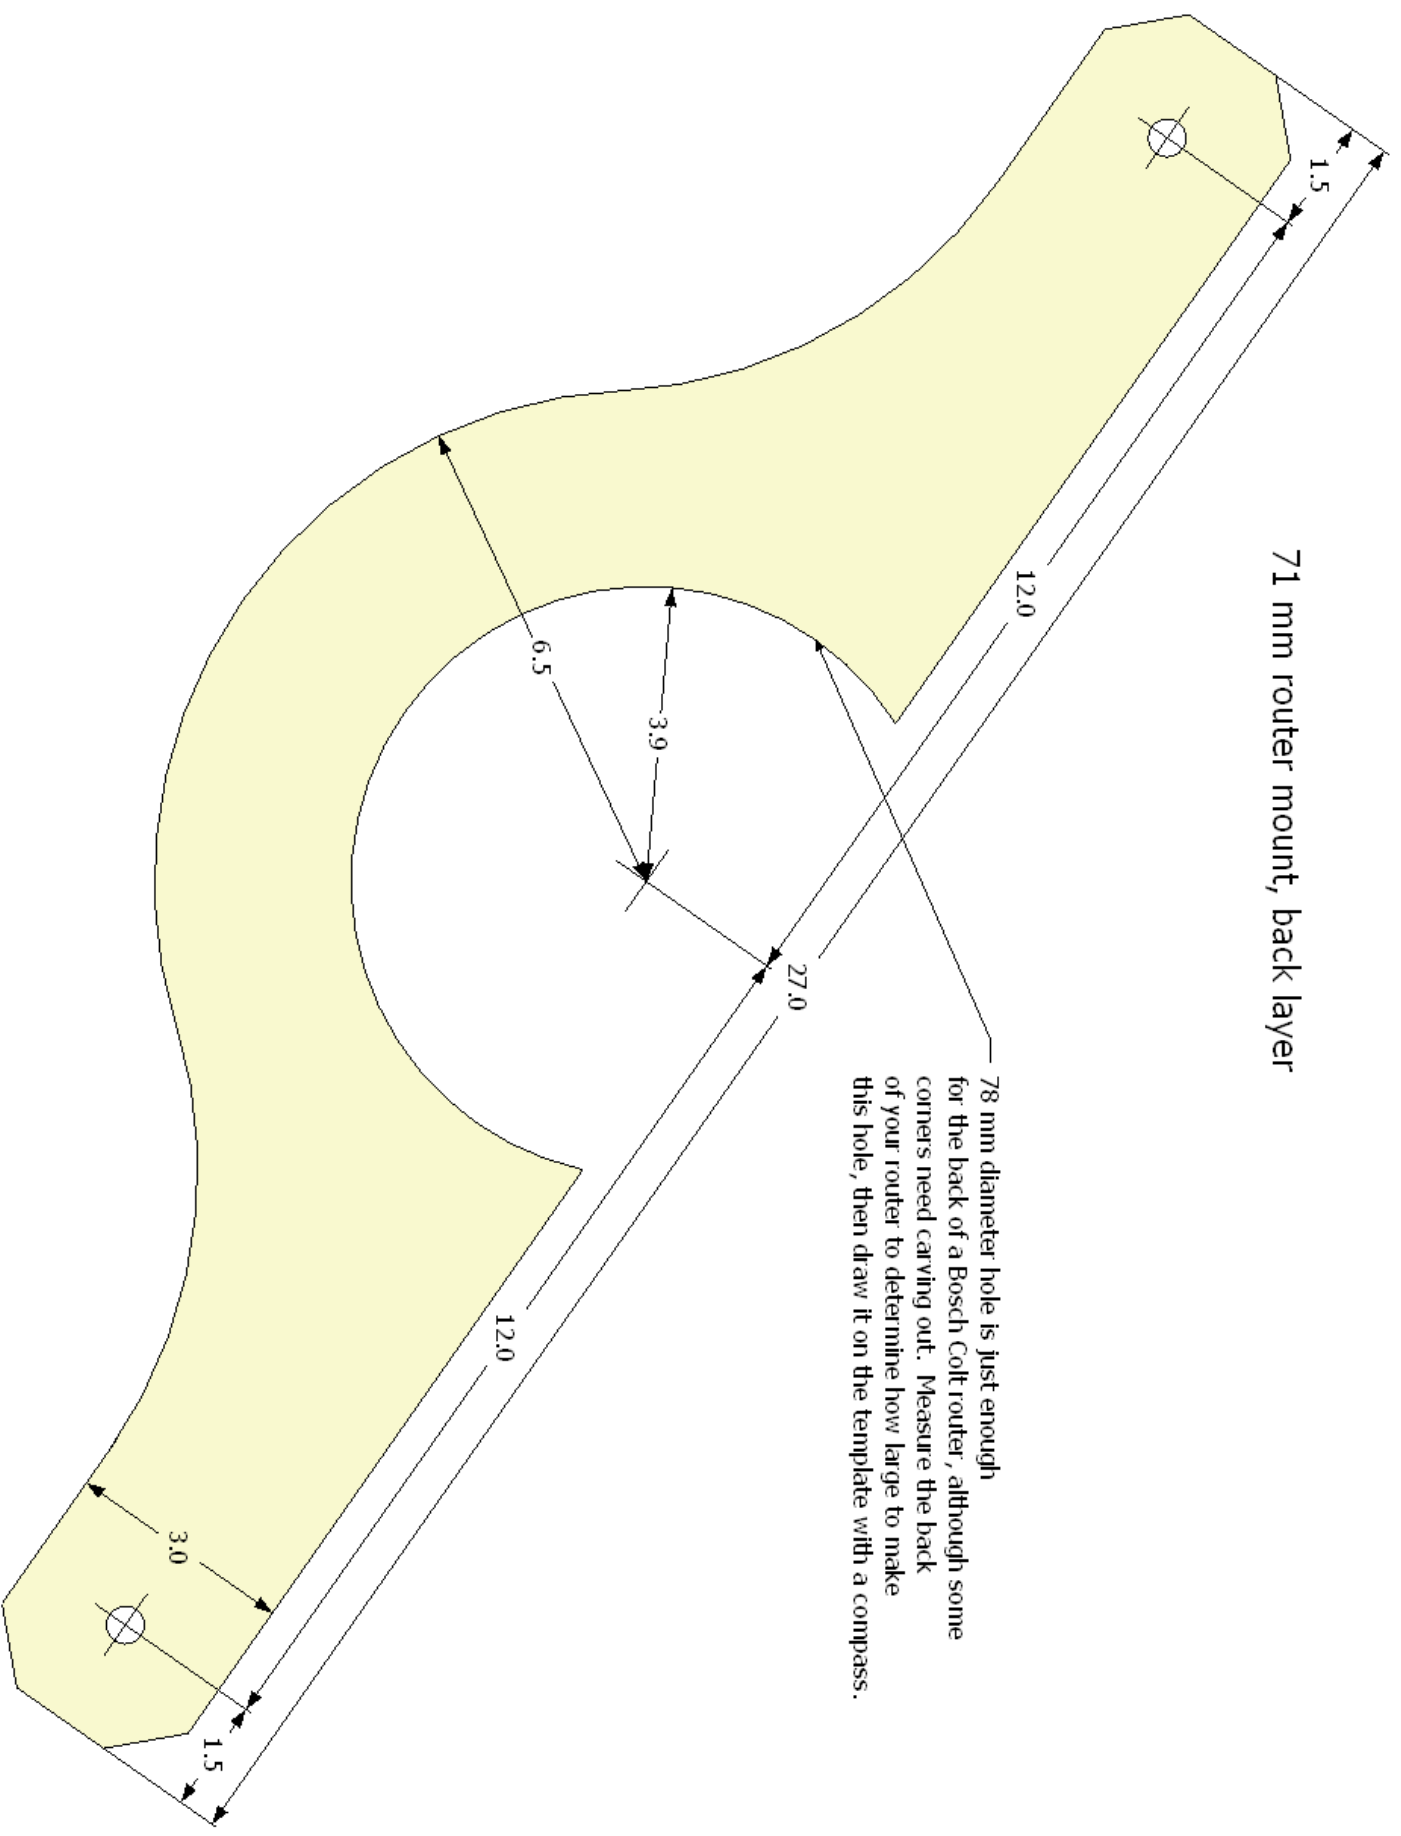


# 71 mm router mount, second from front layer

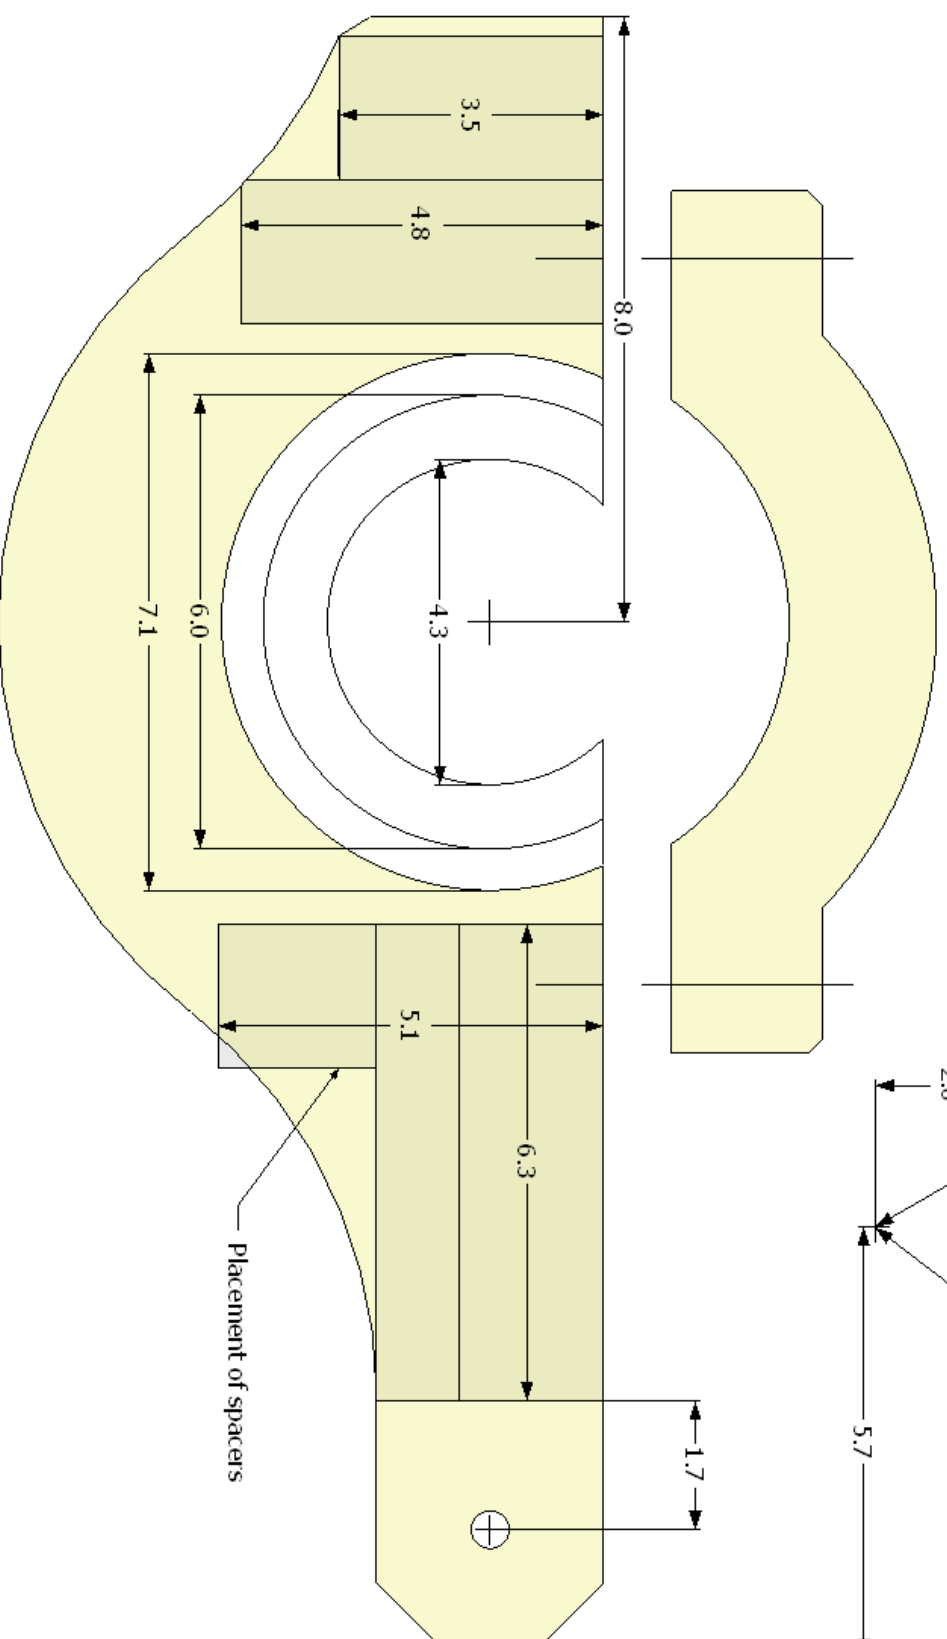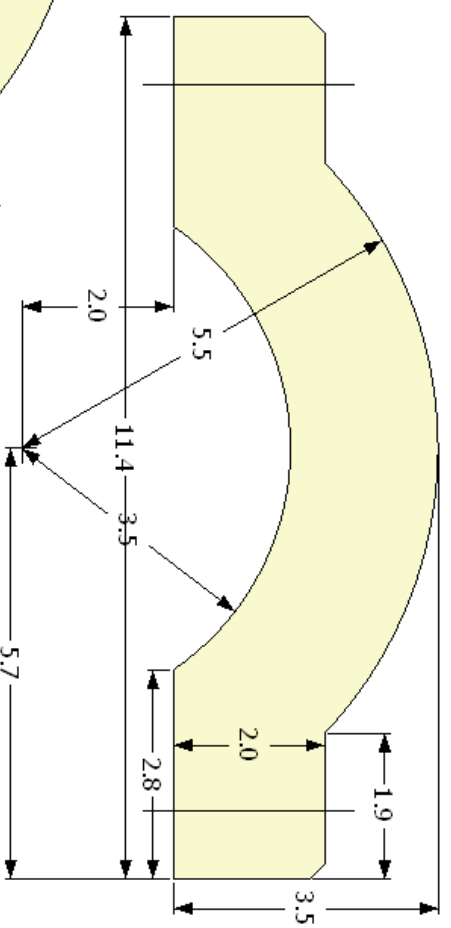


## Plunge lever details


Plunge lever bracket

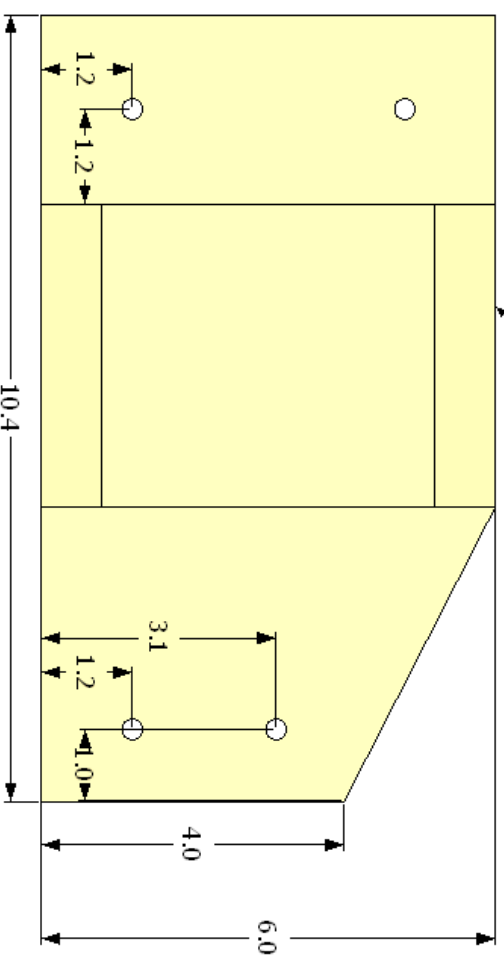

Plunge lever



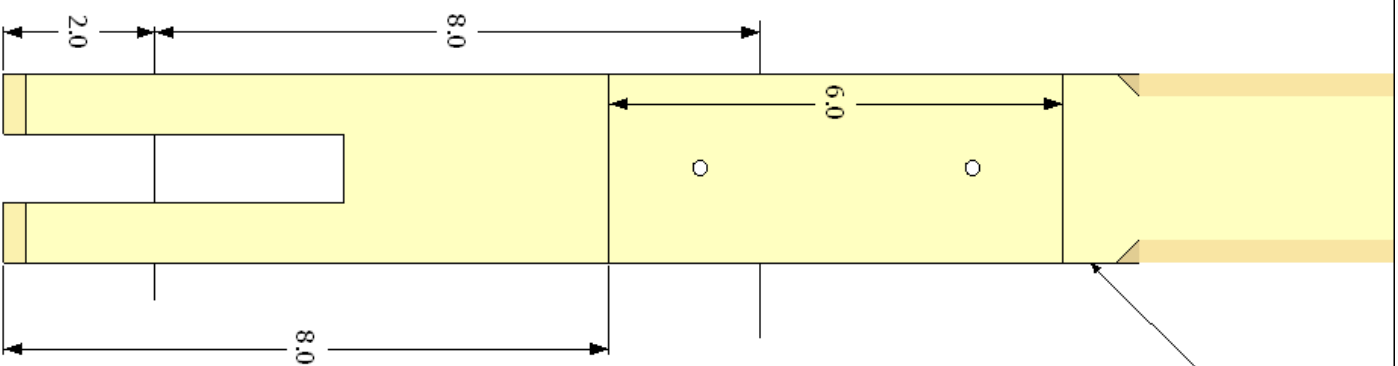


Plunge lever

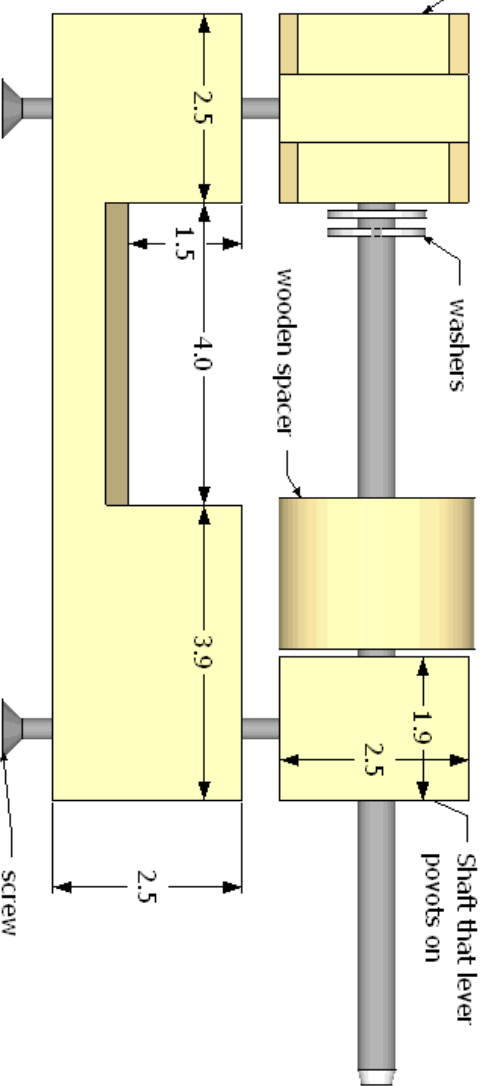

# Template holder frame parts


Make from 1.5" spruce planed down to 36 mm.

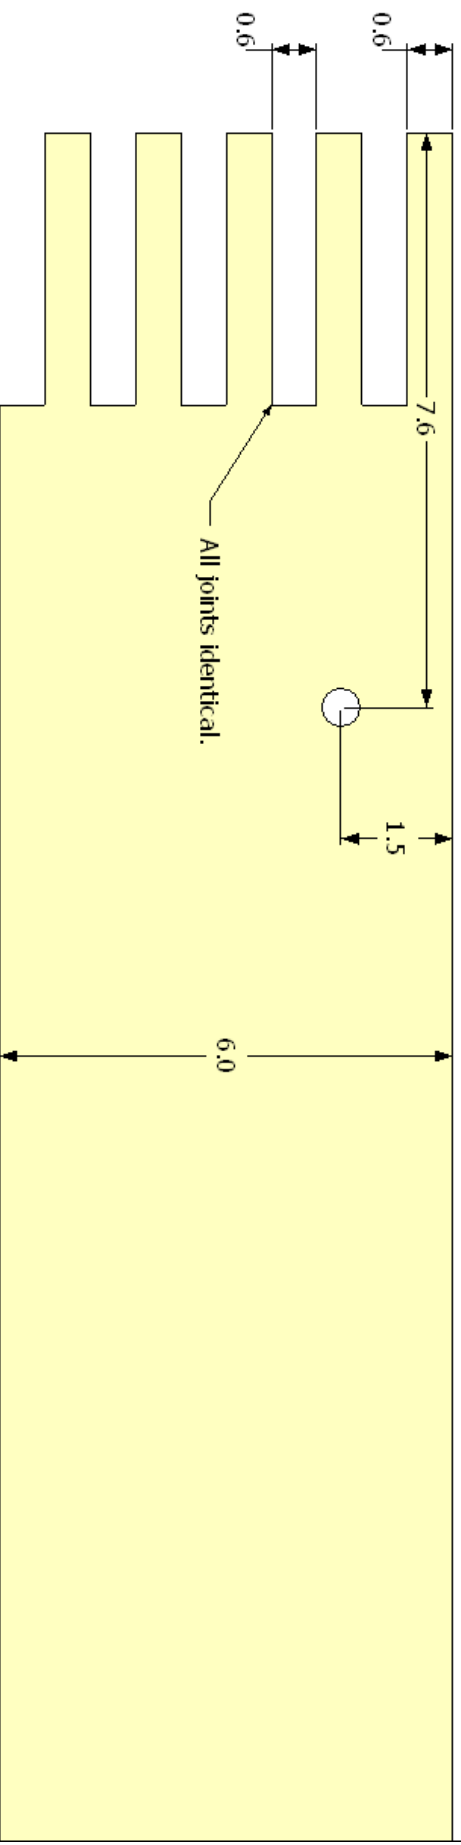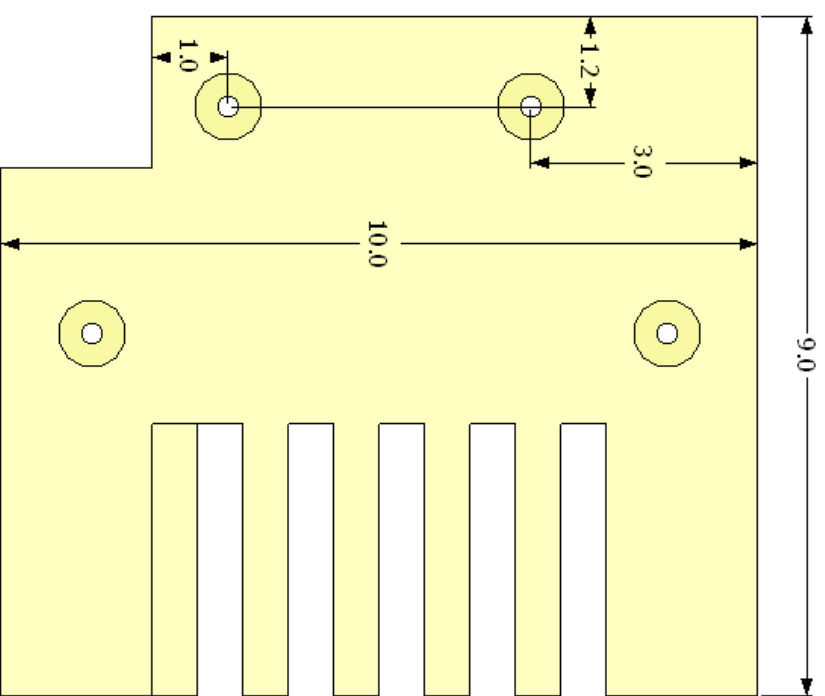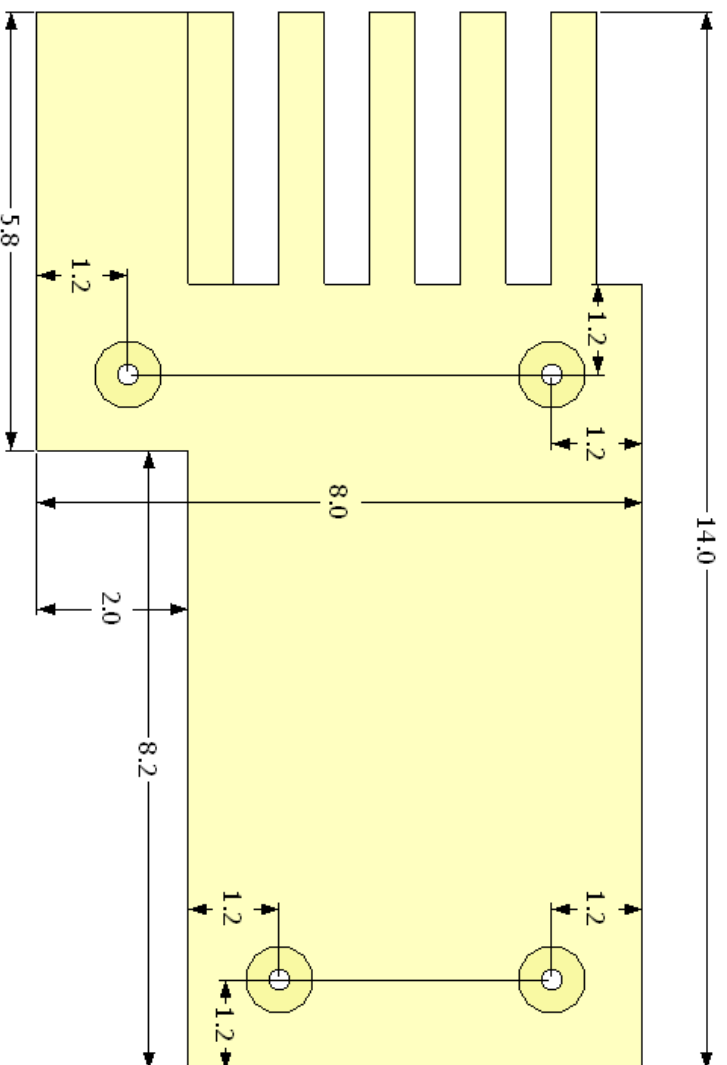


# Table profile







2 mm overhang

Make from 1.5" spruce  
planed down to 36 mm

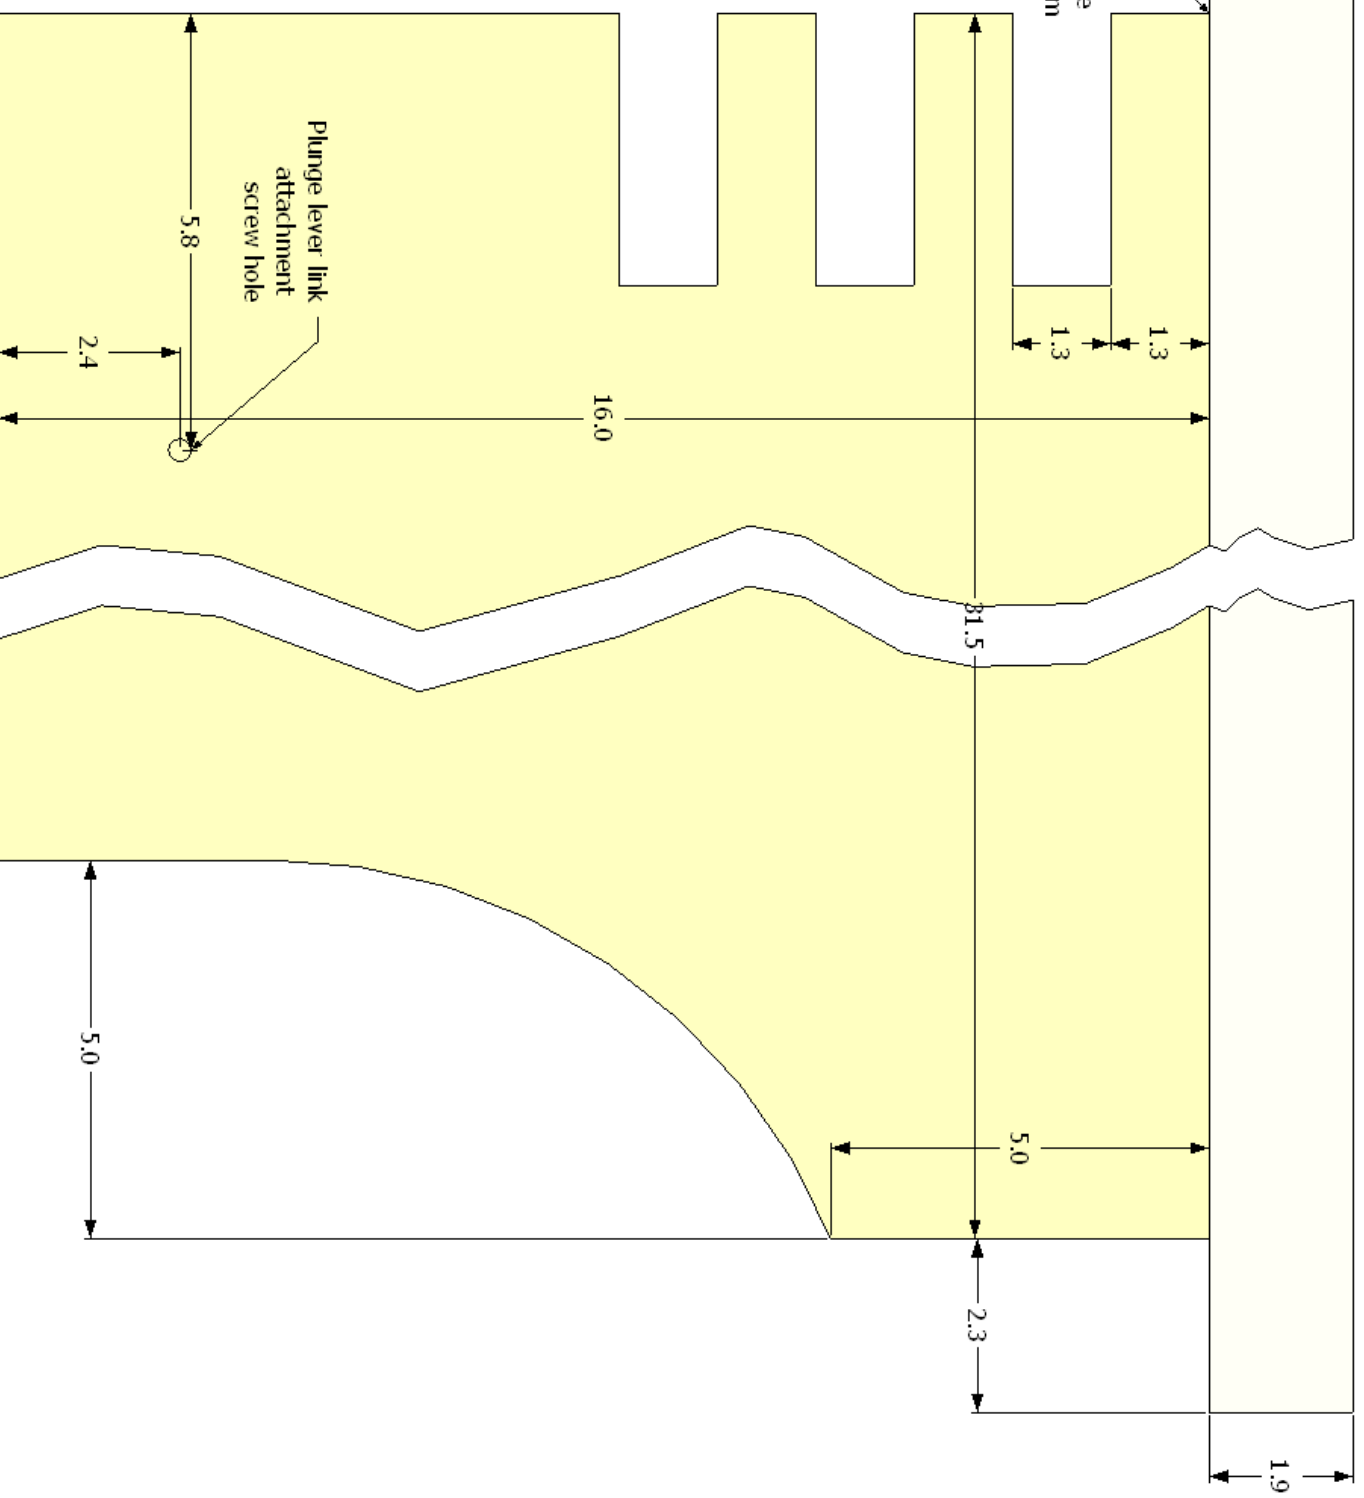

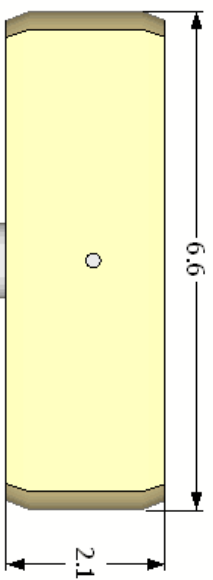

Hold-down clamp profiles  
Make from maple

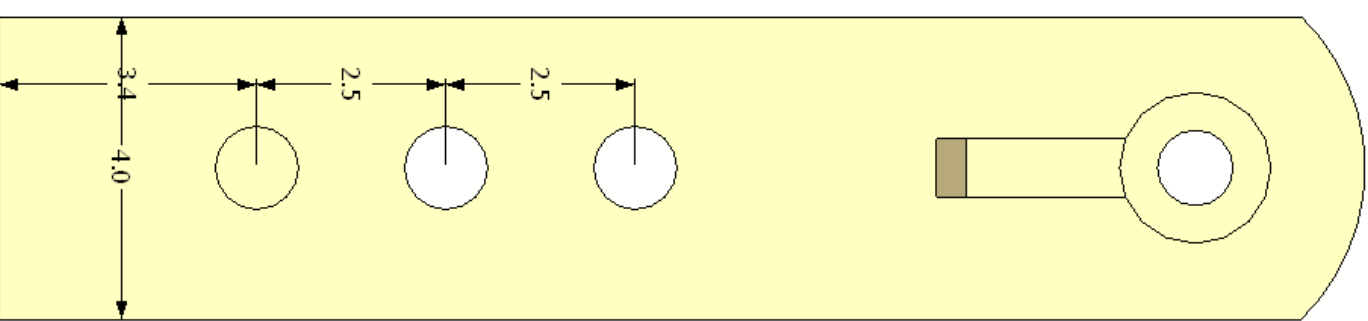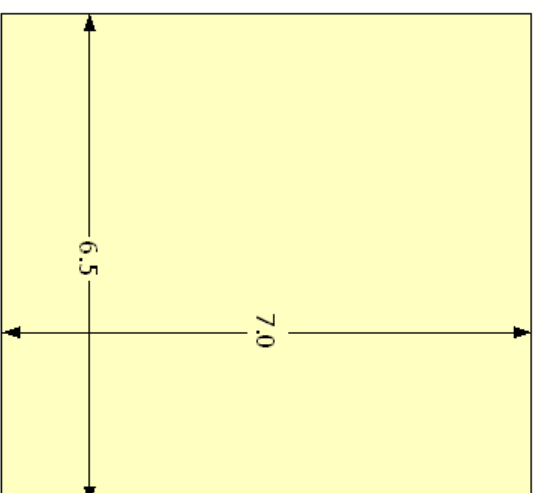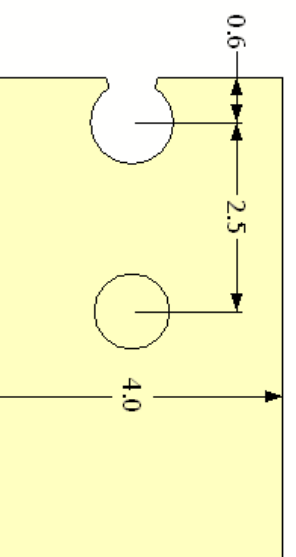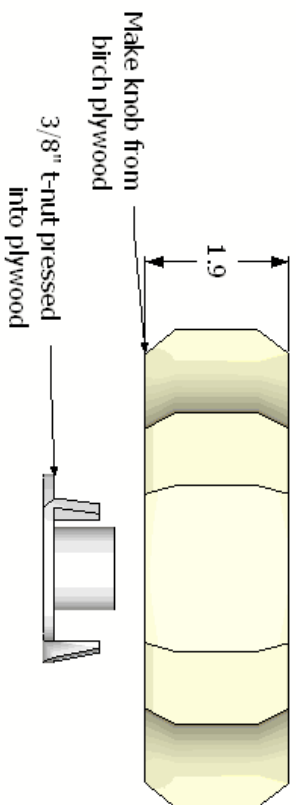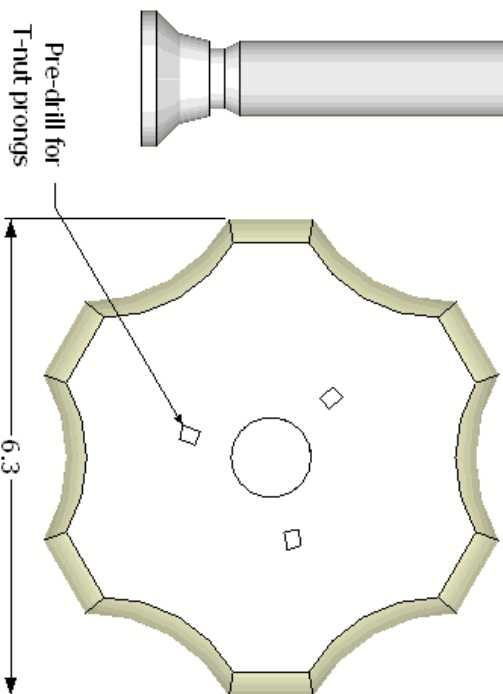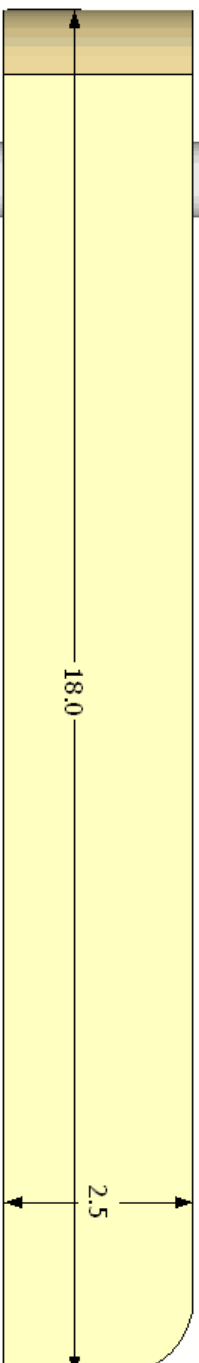



## Fence

Make from birch plywood

