



Put your phone in your 3d printed case with the three nylon wires attached

lit the top part of the phone with whatever you can find, in oder to get your phone pointing in the direction you want.

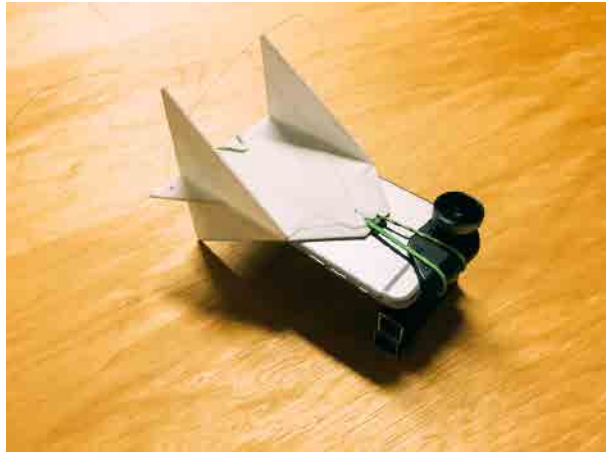

Put some weight on the phone (I used a battery)

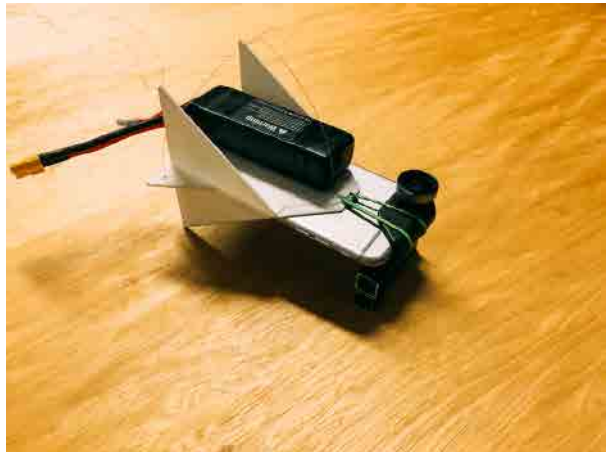

Lift the cables up until they all are straight



once the wire are straight hold them together and make a knot



When you lift your phone up, it should stay level

Try it out, and adjust the calbles until you are happy with the framing.

