

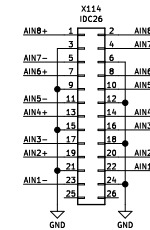


SW101  
SW\_DIP\_x08


Termination of cold Input.  
Turn on for the channels connected by RCA.  
Don't connect an external signal to the XLRs  
for these channels.

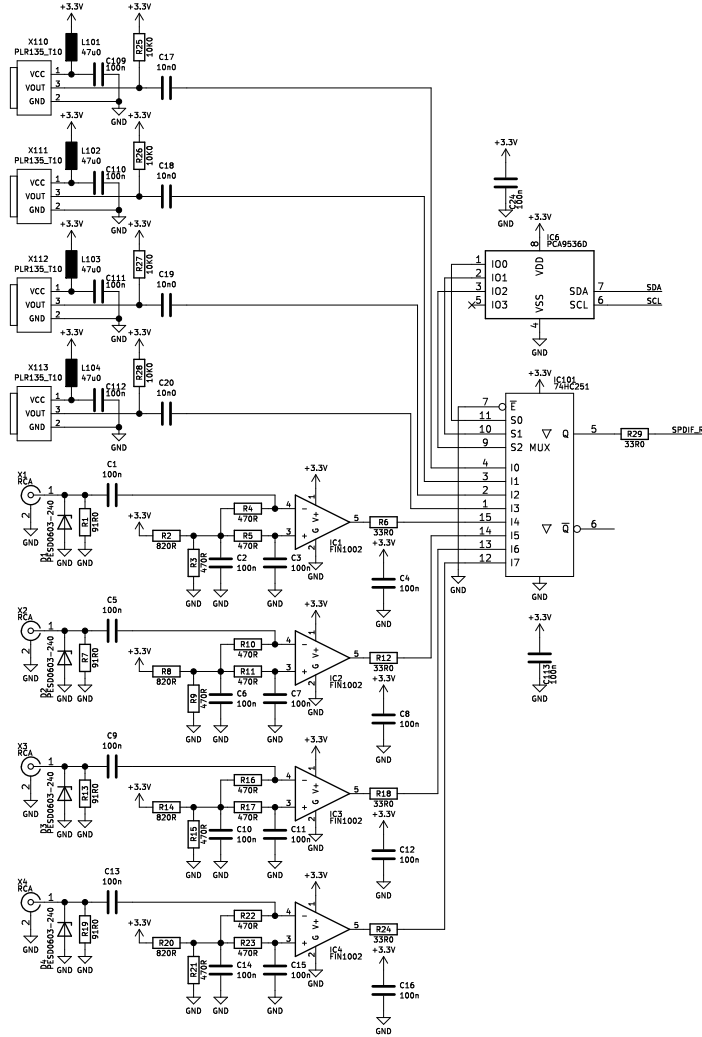


Connect to X201 on Aurora mainboard  
and to X109 on  
XLR Input Board (Board B).  
Daisy chain X109 -> X114 -> X201  
or X114 -> X109 -> X201

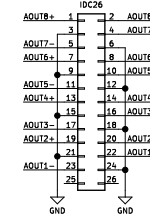



Connect to X301 on Aurora mainboard.

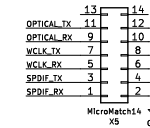

Connect to X101 on Aurora mainboard.

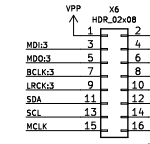

Connect to X102 on Aurora mainboard.

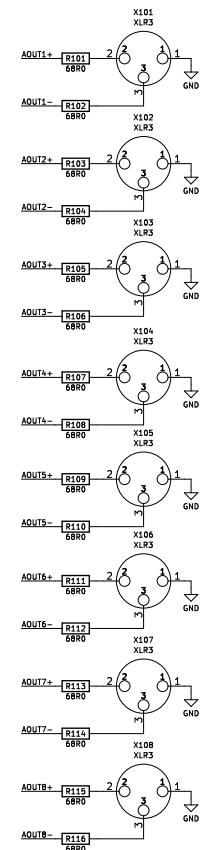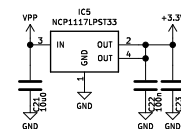

auverdlon

Sheet: /  
File: AddOnB.sch

Title: AddOn B Board A

Size: A3 Date: / /  
KiCad E.D.A. kicad (5.1.8-0-10\_14)

Rev: /  
Id: 1/1