

## Super-heterodyne Receiver

### I. Introduction

The purpose of this project is to simulate the basic components of an analog communication system using MATLAB programming. Specifically, an AM modulator and a corresponding super-heterodyne receiver will be simulated using radio-station generated signals. **You can use the audio signals provided.**

Figure 1 shows a typical AM transceiver. The input message is modulated and wirelessly transmitted. The receiver detects the message using multiple stages of mixing and filtering as we discussed in the lectures.

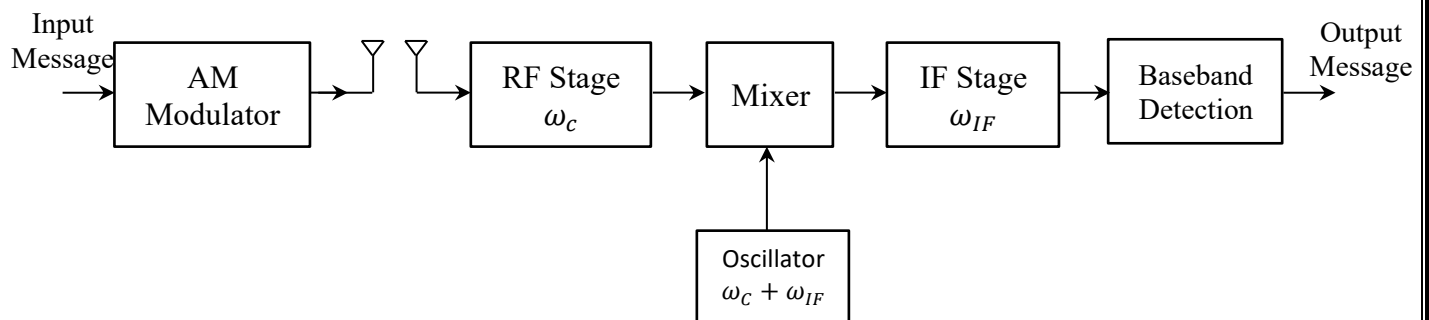


Figure 1: AM modulator and a super-heterodyne receiver

### II. Project Statement

You are given audio signals that represent the input message for the above system. The task is to design the block diagram in Figure 1 using MATLAB. The details are given as follows:

- The signals:* stereo (2-channel) signals are provided to you in the baseband. The signals are stored in files with extension 'wav'. You can read these files in MATLAB using the command 'audioread' or 'wavread' or others. For later processing, you will need to obtain the sampling frequency (which was used to digitize the recorded waves). The MATLAB function can return the sampling frequency. For more details, please refer to MATLAB Help.

Each modulating signal (the messages) has two channels representing a stereo signal. You are going to implement a monophonic receiver so there is no need for two separate channels. You can form single channel stream by simply adding the two channels. Please note that the given signals are not of equal length. You can pad the short signals with zeros so they have all equal length.

You can plot the spectrum of the signal using the 'fft' and 'plot' commands. You will have to adjust the axis scale so the signal spectrum is plotted versus frequency. By doing so, you can estimate the bandwidth of the signal. You will use this bandwidth value when you design the filters. You may find the following MATLAB tutorial useful:

<http://www.ee.nmt.edu/~elosity/matlab/matlab.pdf>

- ii. *The AM modulator*: the modulation type is DSB-SC for all the signals. The first signal is modulated with 100 KHz carrier. Each following signal is modulated with a carrier of frequency  $\omega_n = 100 + n\Delta F$ , where  $\Delta F = 55 \text{ KHz}$  and the index  $n$  is the signal index ( $n = 0$  for the first signal that is modulated at 100 KHz). The modulated signals are used to construct an FDM signal (FDM: frequency division multiplexing). You can start writing your program using two modulating messages. Multiplexing more than two signals is optional.

Note that the values of the carrier frequencies are smaller than the actual AM/FM transmission values that are in the order of megahertz. The small values of the carrier frequencies used in this project were chosen to reduce the simulation complexity. You may still face some problems due to the audio file length; if this happens you may take half or quarter the size of the file.

Another important simulation parameter is the sampling frequency  $F_s$  as mentioned before. You should obtain  $F_s$  using the 'wavread' command (or other). Now, if you want to modulate a signal, generate the carrier:  $\cos(\omega_n t)$  which, in the discrete domain (in MATLAB environment), is generated as  $\cos(\omega_n n T_s)$  where  $T_s$  is the sampling interval. This could simply be  $T_s = 1/F_s$ . However, if the carrier frequency  $F_n = \frac{\omega_n}{2\pi}$  turns out to be greater than  $F_s/2$  then we cannot use the given  $F_s$  as this will violate the Nyquist criteria.

One solution is to increase the sampling frequency  $F_s$ , say by 10 times. This is effectively done by increasing the number of samples of the modulating signals. That is, if the modulating signals are of size  $N$  which is obtained using a sampling frequency  $F_s$ , then increasing the number of samples to  $10N$  is equivalent to increasing the sampling frequency to  $10F_s$  (or reducing the sampling interval to  $\frac{T_s}{10}$ ).

To increase the number of samples of the modulating signals you can use 'interp' command in MATLAB which interpolates the signal to obtain more samples.

- iii. *The wireless channel*: in real life the modulated FDM signal is transmitted over the air from the base station. Simulating this wireless channel is out of the scope of this project. So you are not going to do anything for this part. You can go immediately to the receiver.
- iv. *The RF stage*: As discussed in the lecture, this is the stage that performs interference-image rejection. For simplicity, this stage will be implemented as a band-pass Filter (BPF) only, centered at the carrier frequency  $\omega_n$  (that is tunable at the desired station). You can refer to MathWorks tutorial for the design of BPF in MATLAB:

<https://uk.mathworks.com/help/signal/gs/design-a-filter-using-fdesign.html>

- v. *The Oscillator*: this is the generator for a carrier frequency  $\omega_c + \omega_{IF}$ , where  $\omega_c = \omega_n + n\Delta F$ . The IF frequency  $\omega_{IF} = 27.5 \text{ KHz}$ . The mixer is a simple multiplier in this simulation.
- vi. *The IF stage*: similar to the RF stage, this stage is simply modeled as a band-pass filter only, centered at the center frequency  $\omega_{IF}$ .
- vii. *The Baseband detection*: this is the final stage where the signal is obtained in the baseband. This stage thus involves mixing with a carrier of suitable frequency (it is easy to guess its value) and filtering the signal using a low-pass filter (LPF). The design of LPF can be done similarly to the BPF. You can browse MATLAB Help for the command 'fdesign.lowpass'

### III. Discussion

What you are going to deliver at the end is a report and a MATLAB code (printed in your report). Please provide the following in your report:

- a) Discuss how you designed each of the blocks of the system in Figure 1.
- b) Answer the following in your document:
  1. In two or three sentences, discuss the role of the RF, the IF and the baseband detector. Indicate why we need the IF stage?
  2. Suppose you want to demodulate the first station (i.e. at  $\omega_0$ ), plot the spectrum of the outputs of the RF, the IF and the baseband stages. Hint: use the 'fft' command in MATLAB. You may also find the 'fftshift' command useful.
  3. Use the command 'sound' on the demodulated signal and check whether you can successfully listen to the radio station. Please comment about this step in your report
  4. Repeat parts 2 and 3 but after removing the RF BPF. That is, the RF stage does not exist, what would happen if you try to demodulate the station at  $\omega_0$ ?
  5. What happens (in terms of the spectrum and the sound quality) if the receiver oscillator has frequency offset by 0.1 KHz and 1 KHz?

### IV. Project Assessment

We will assess your project based on your deliverables. Please do the following:

1. Write your code so it can be readable by others. Define your variables clearly (not abbreviated). Use comments as much as you want.
2. The figures that you are going to show must be well presented. They must have clear labels, titles, and maybe legends.
3. Your answers to the questions in the previous section must be appropriately enumerated.
4. Put your MATLAB code at the end of the report, and be ready to send a softcopy of the code if we ask you to send it separately.