





Step 1.

Thread the nylon through one of the five belting holes and the mirroring drop-off plate hole.

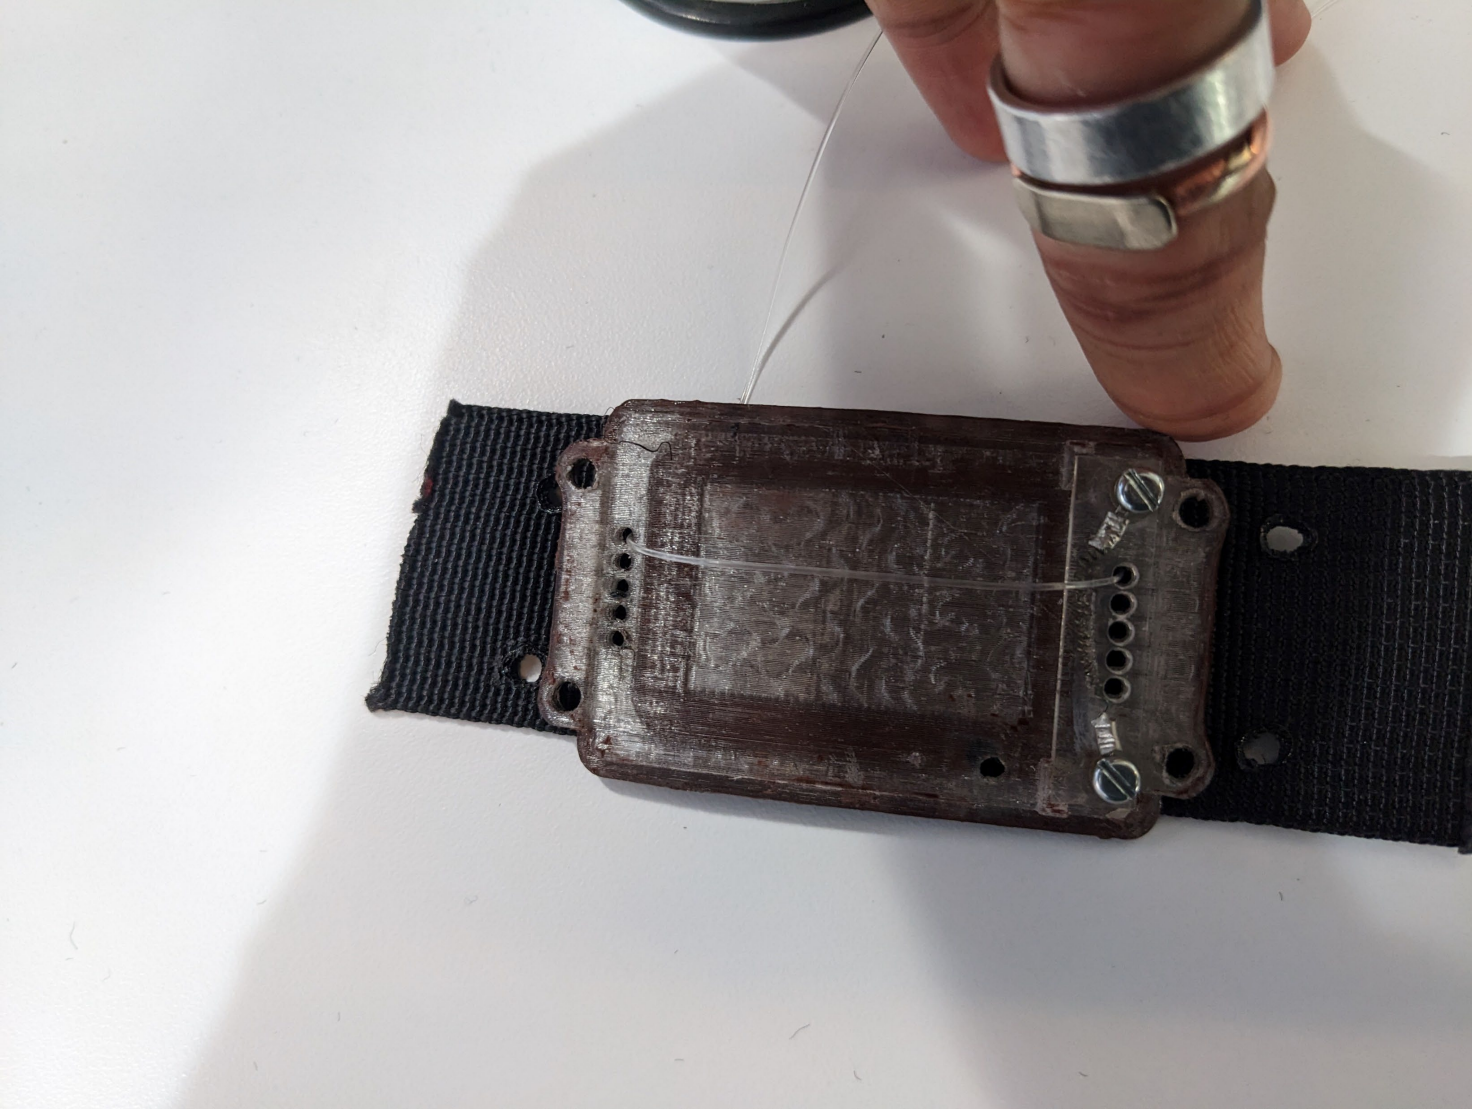

Step 2.

Thread the nylon back through the drop-off plate and the belting.

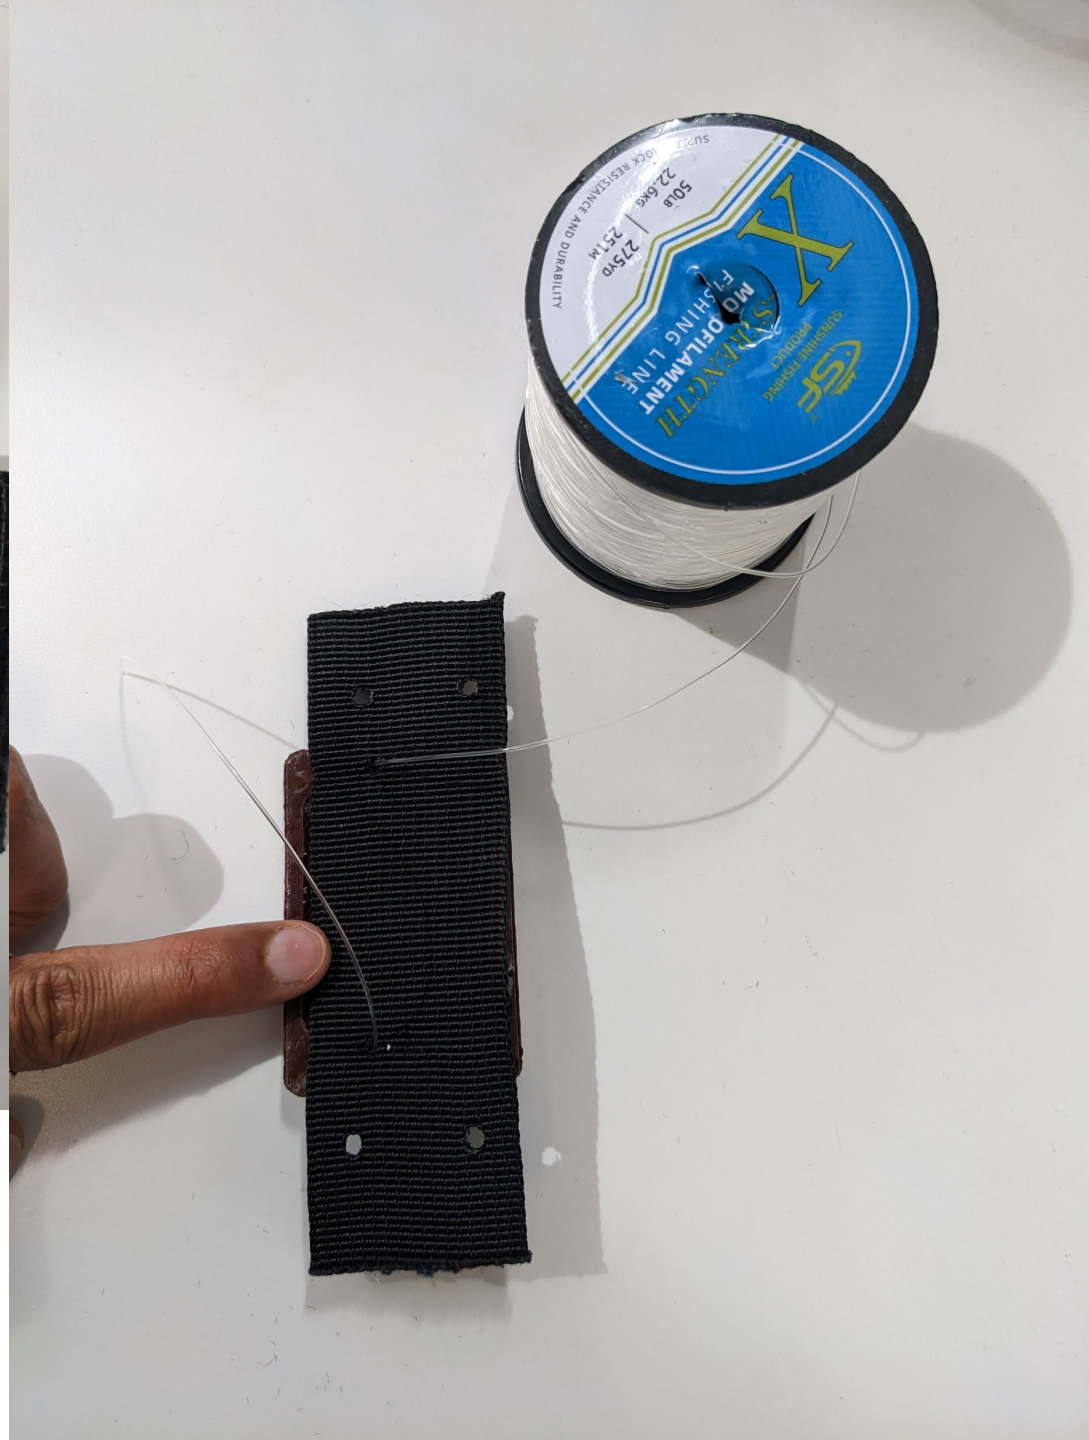



Step 3.

Tie a knot

In previous deployments, we used the Weston knot: https://youtu.be/s_CJl2GZFdQ

Repeat steps 1-3 for as many of the four other holes (not shown in image) as needed.