


Delrin SCAR Stringing Guide

by Kuryaka

Materials

- Delrin SCAR
- 8-14 lb monofilament fishing line (3 ft)
 - Lighter is preferred
- Masking tape/Clear tape
 - for shimming
- Duct tape / masking tape
 - for line hold-down
- Scissors
 - snip snip



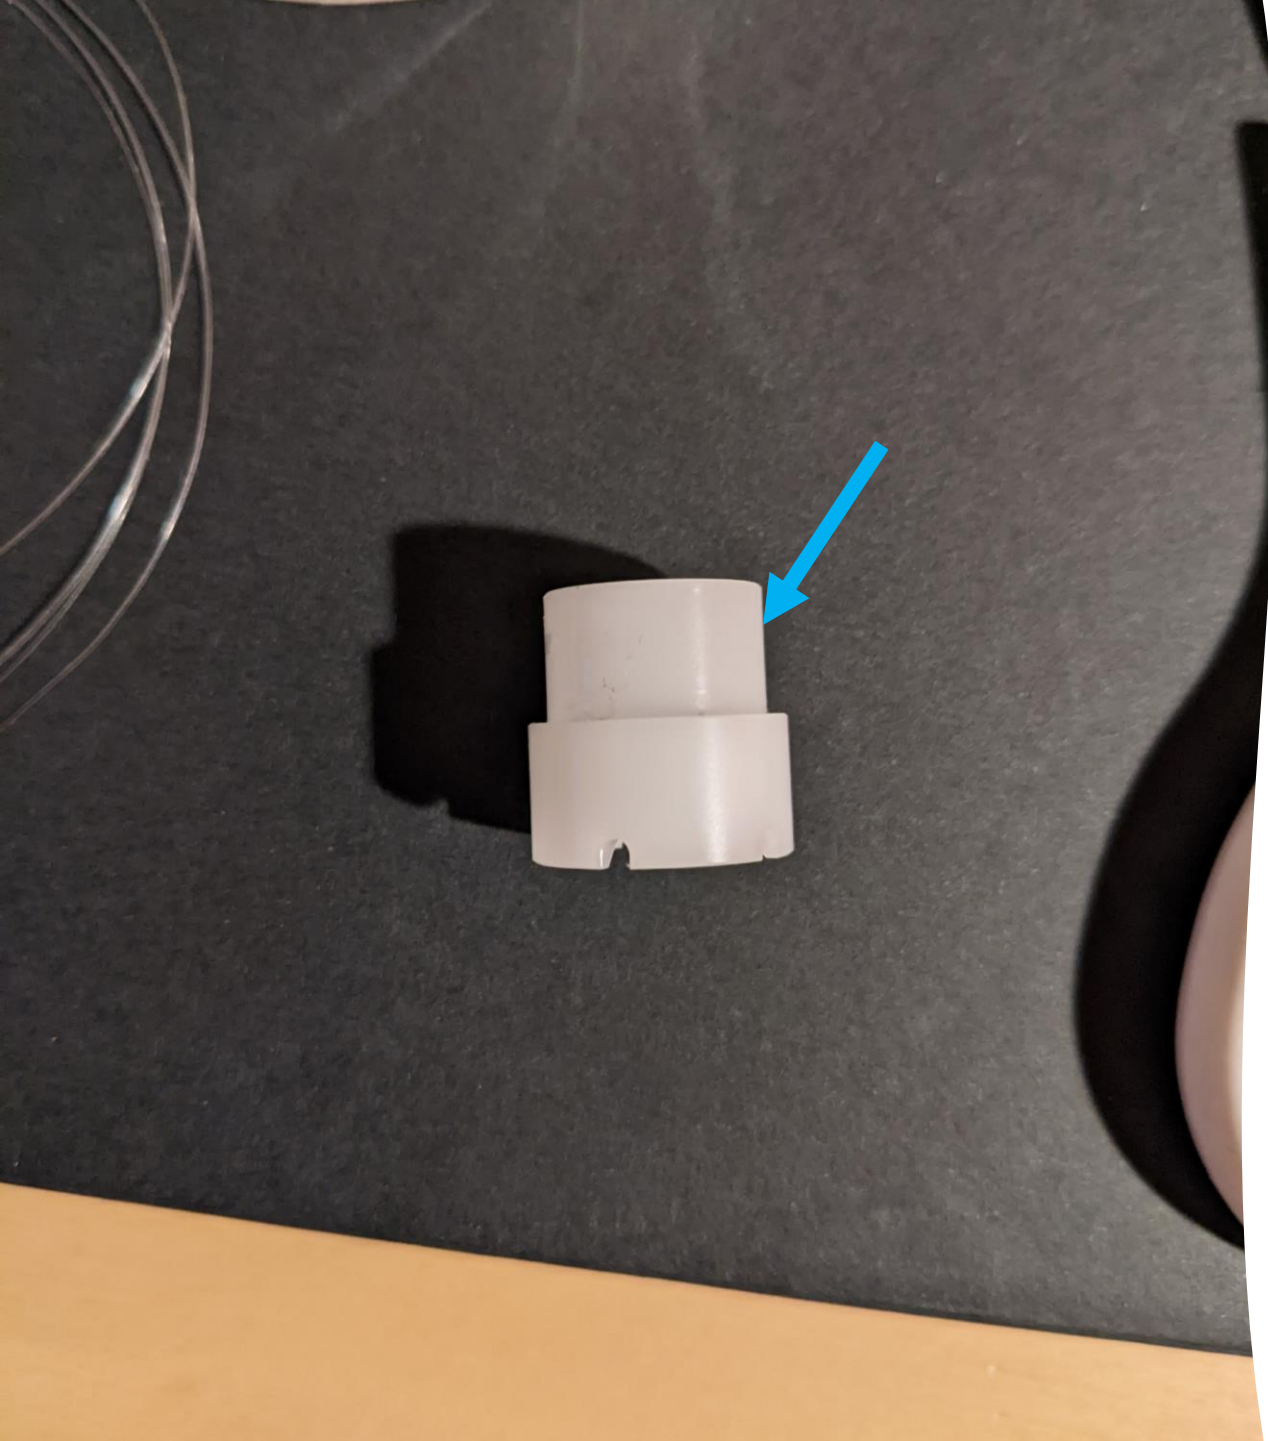


Add tape to tighten front piece.

Only a small amount is needed – I used $\frac{1}{2}$ to $\frac{3}{4}$ of a wind of clear tape.


Tip: Bend fishing line tip to control the direction it goes after being fed through hole.



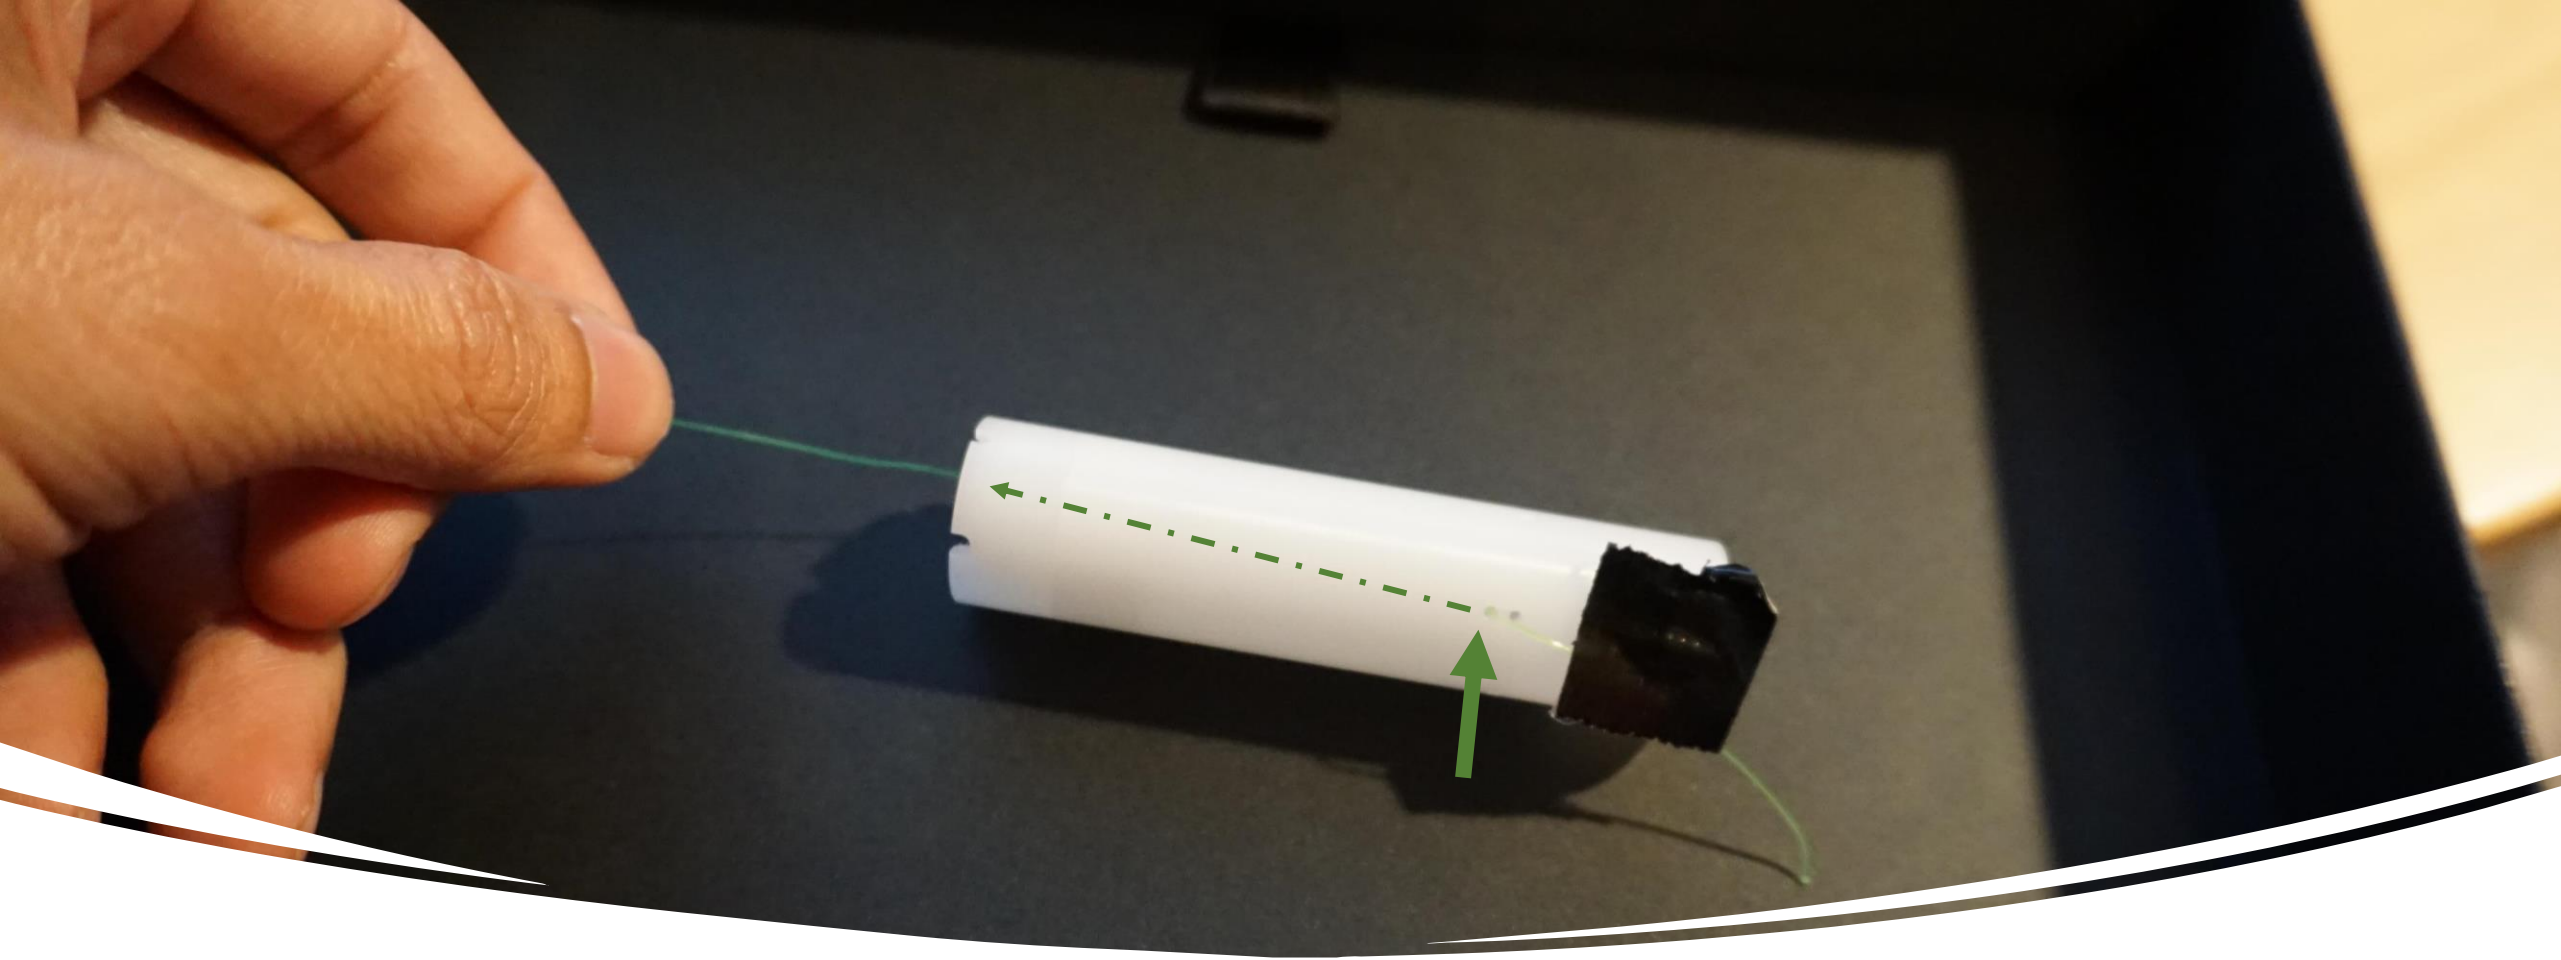

Insert fishing line in
FRONT dual hole,
from the outside.


Tape down the short tail end.

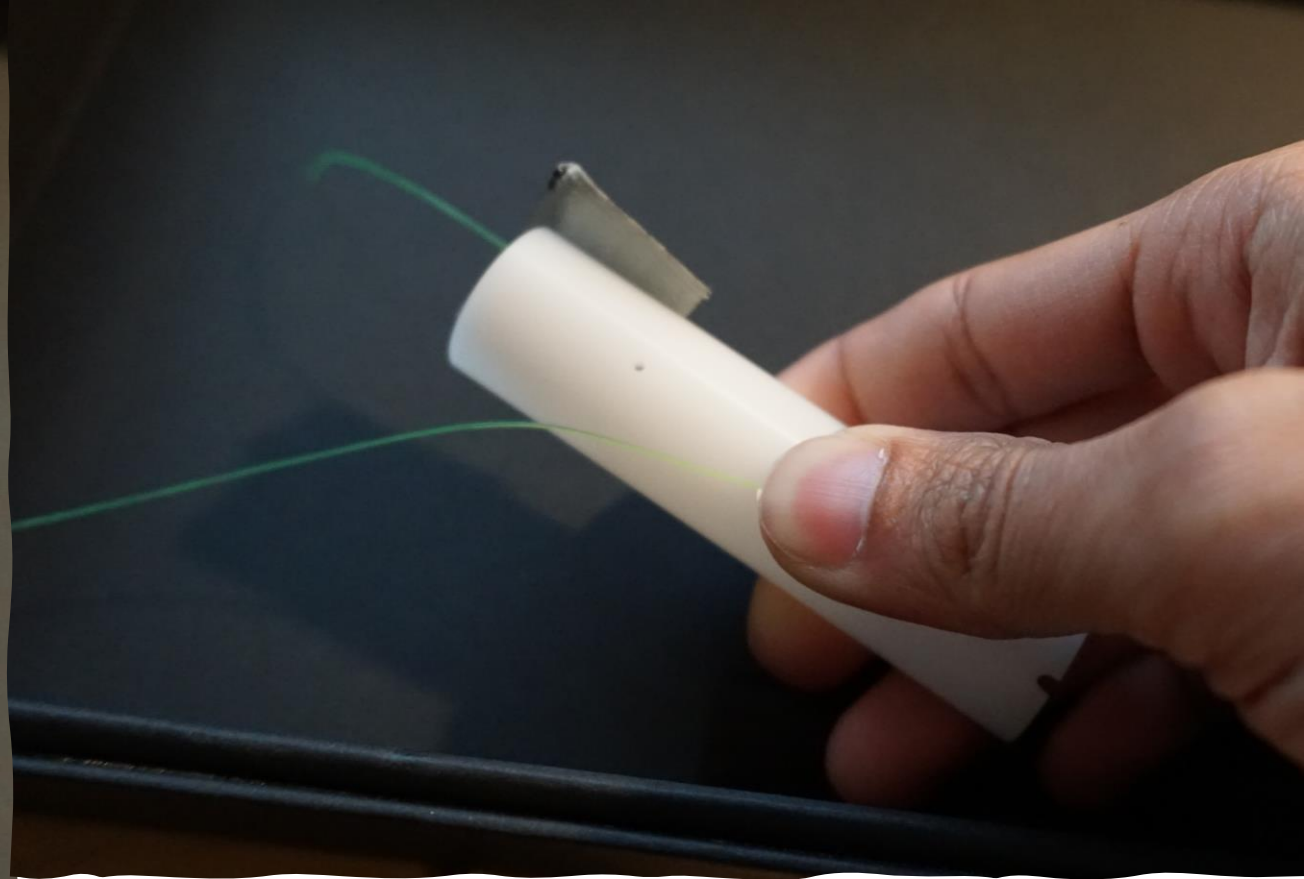

Check for knots when
inserting line through
from outside.

Use a finger to hold string taut while threading it
through to reduce the risk of knots.

This might still take a few tries.

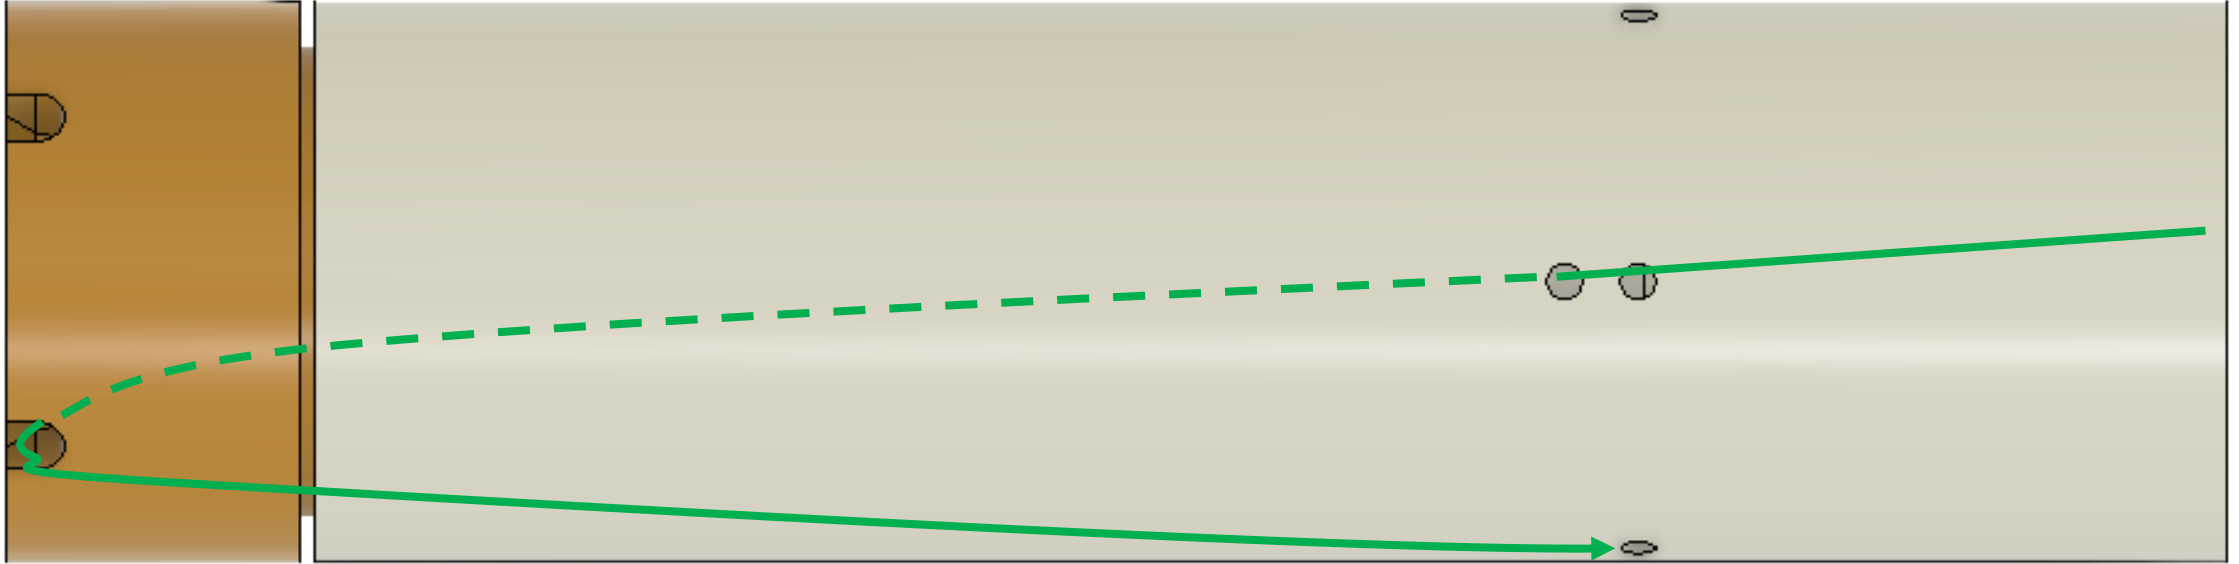

Wrap Sequence



Feed through the hole toward the notch, wrap around the notch and feed through the next hole. Clockwise or counterclockwise both fine.

Repeat until you get back to the dual hole.

Feed free end through front hole.

Pull through all the way.



Then, poke the free end through the
remaining hole from the INSIDE.

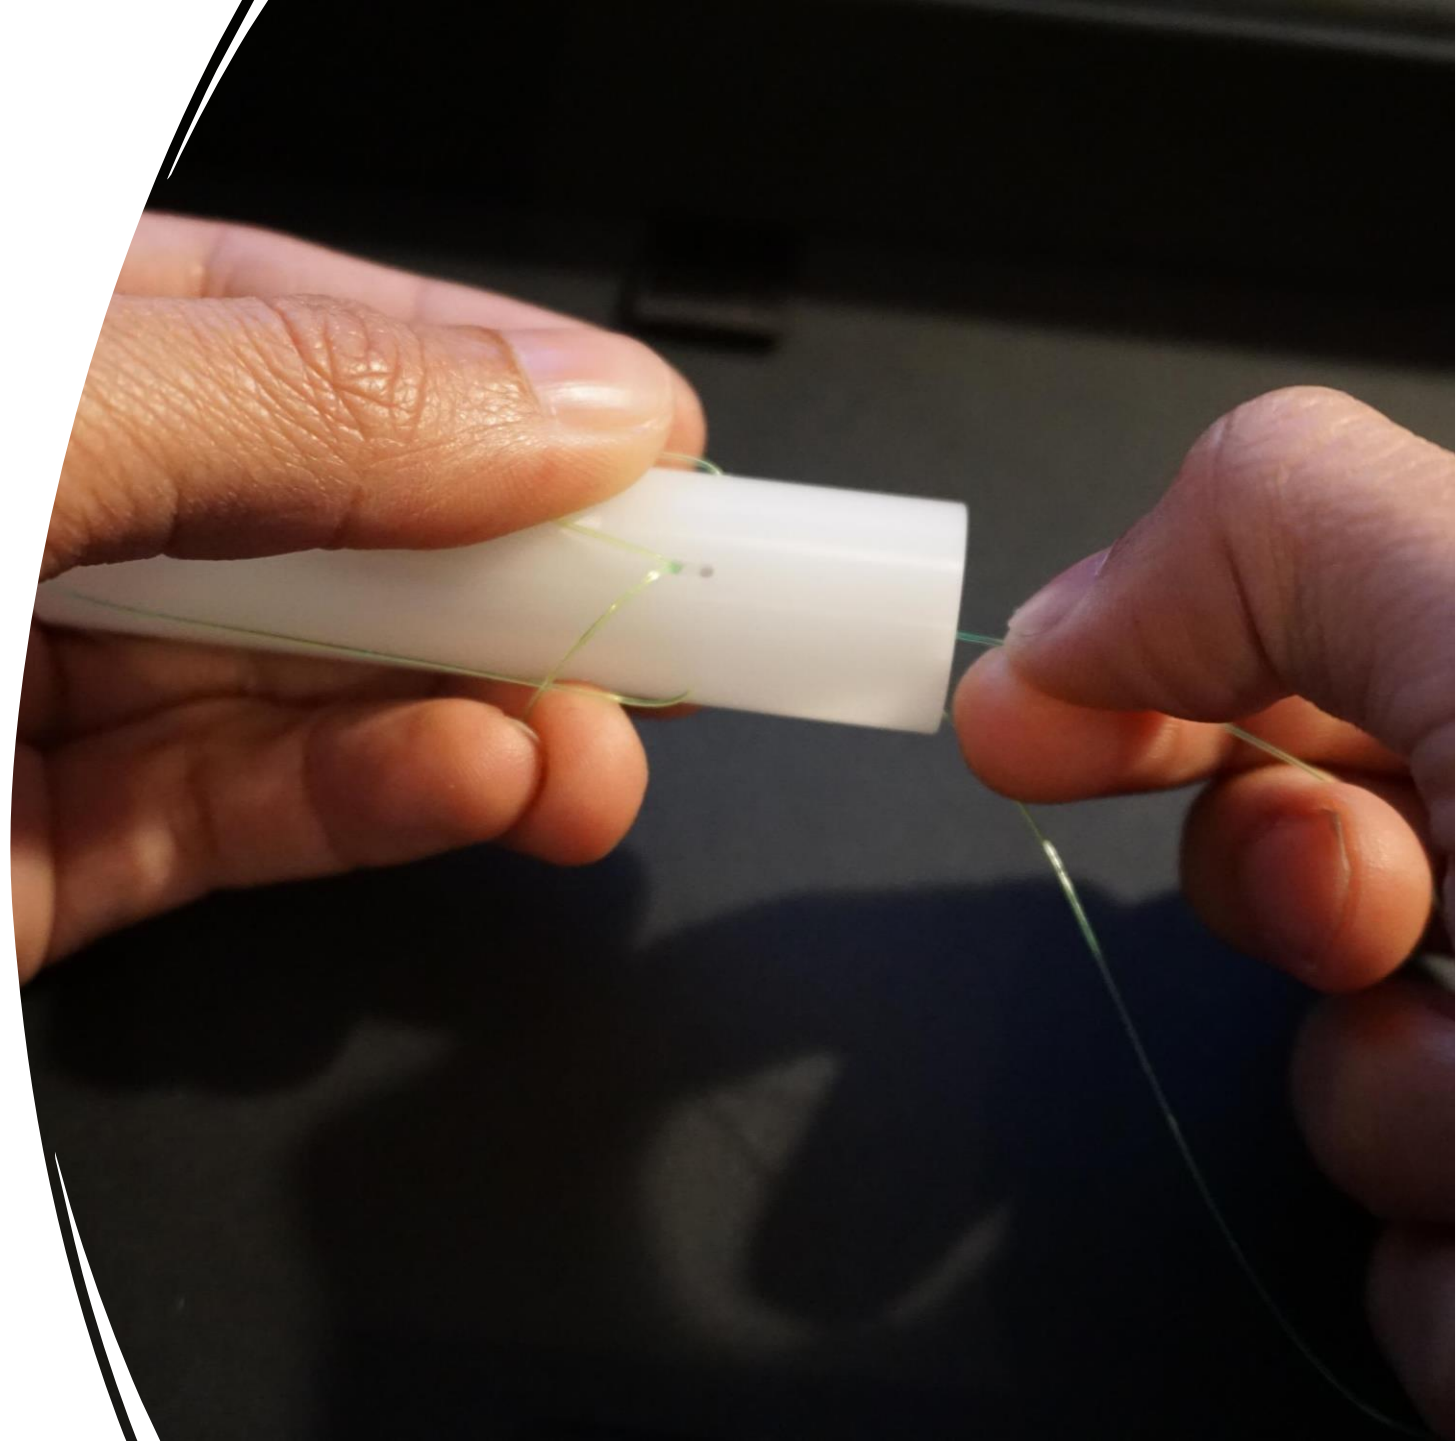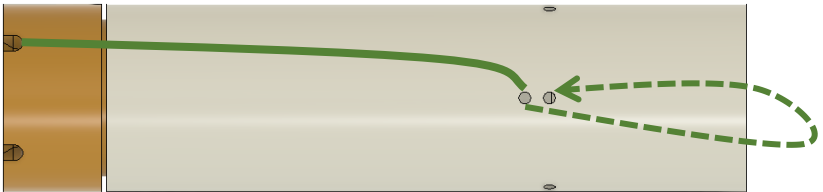


Almost done.

We will then tighten the line.



Remove the tape from the tail end and wiggle the front to make sure that the notches are offset from the holes, like so.

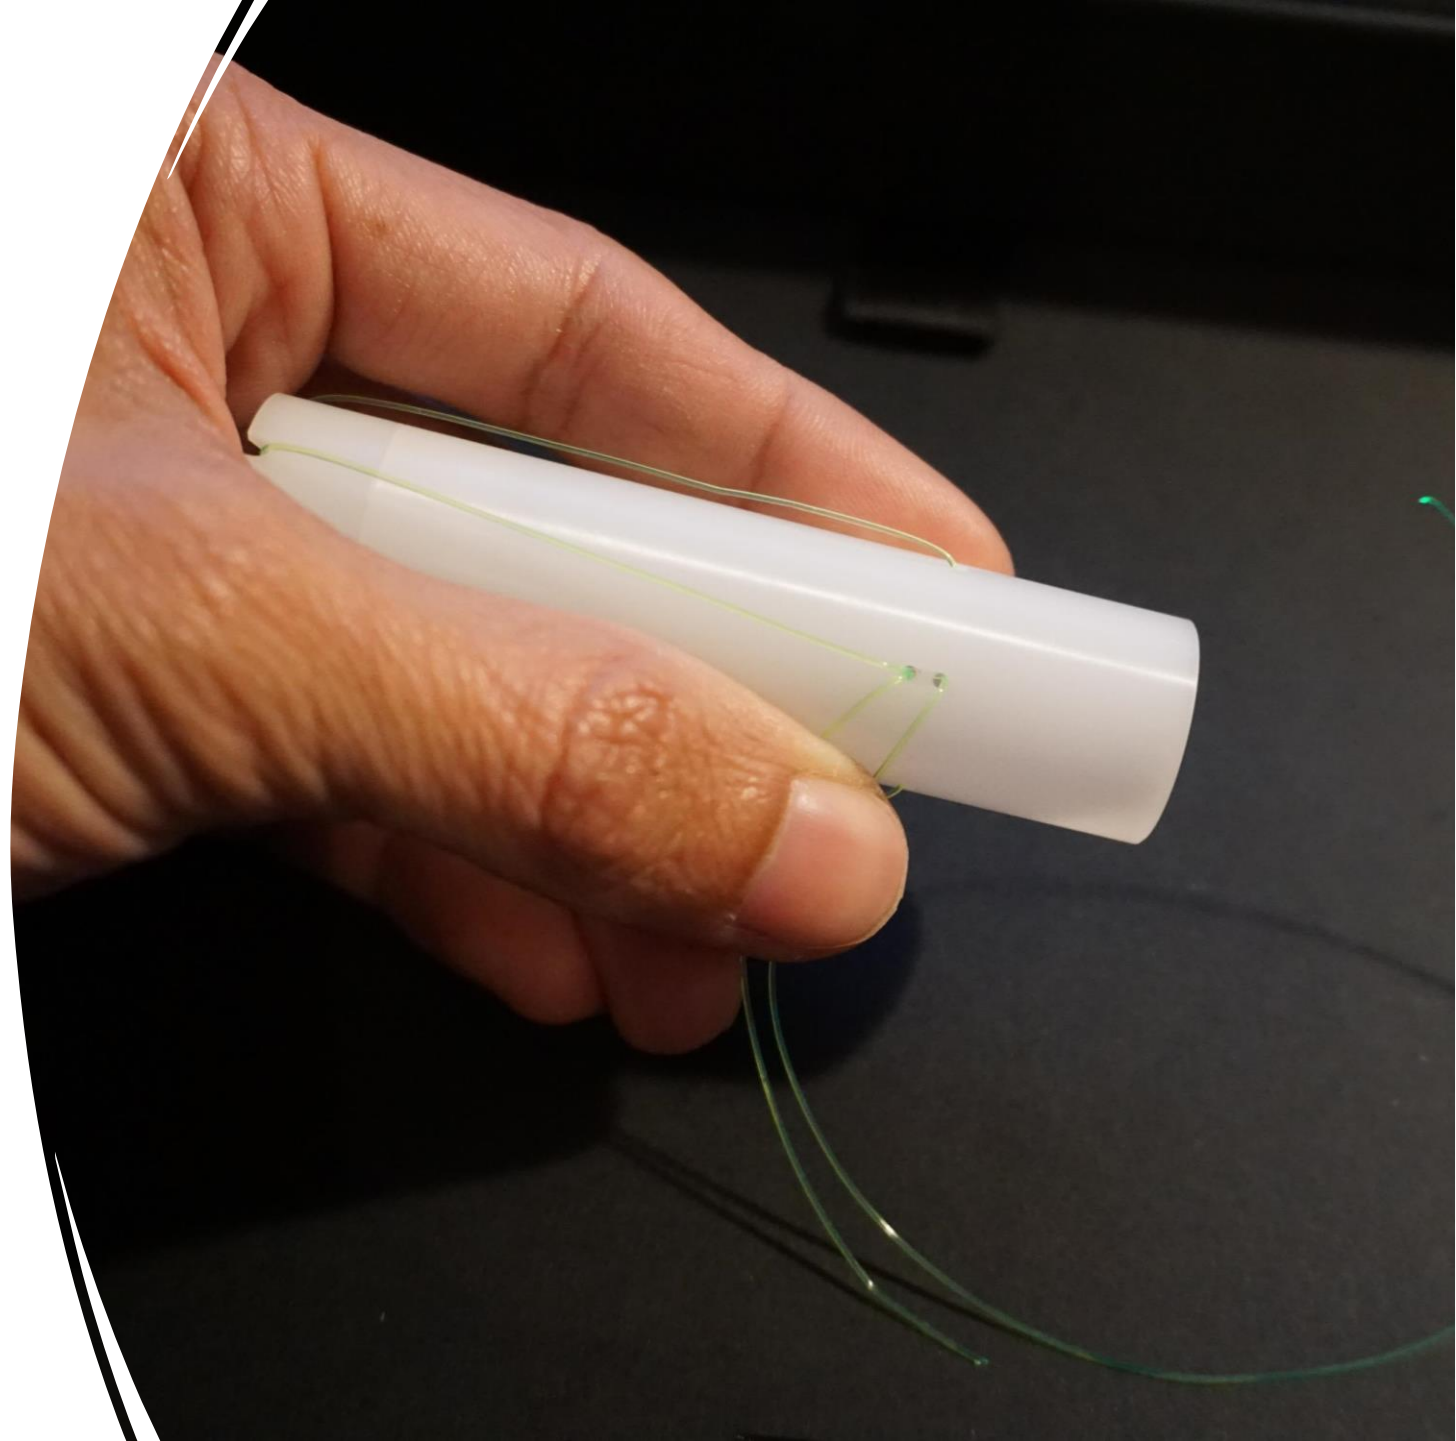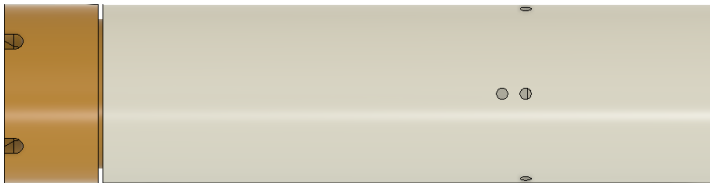

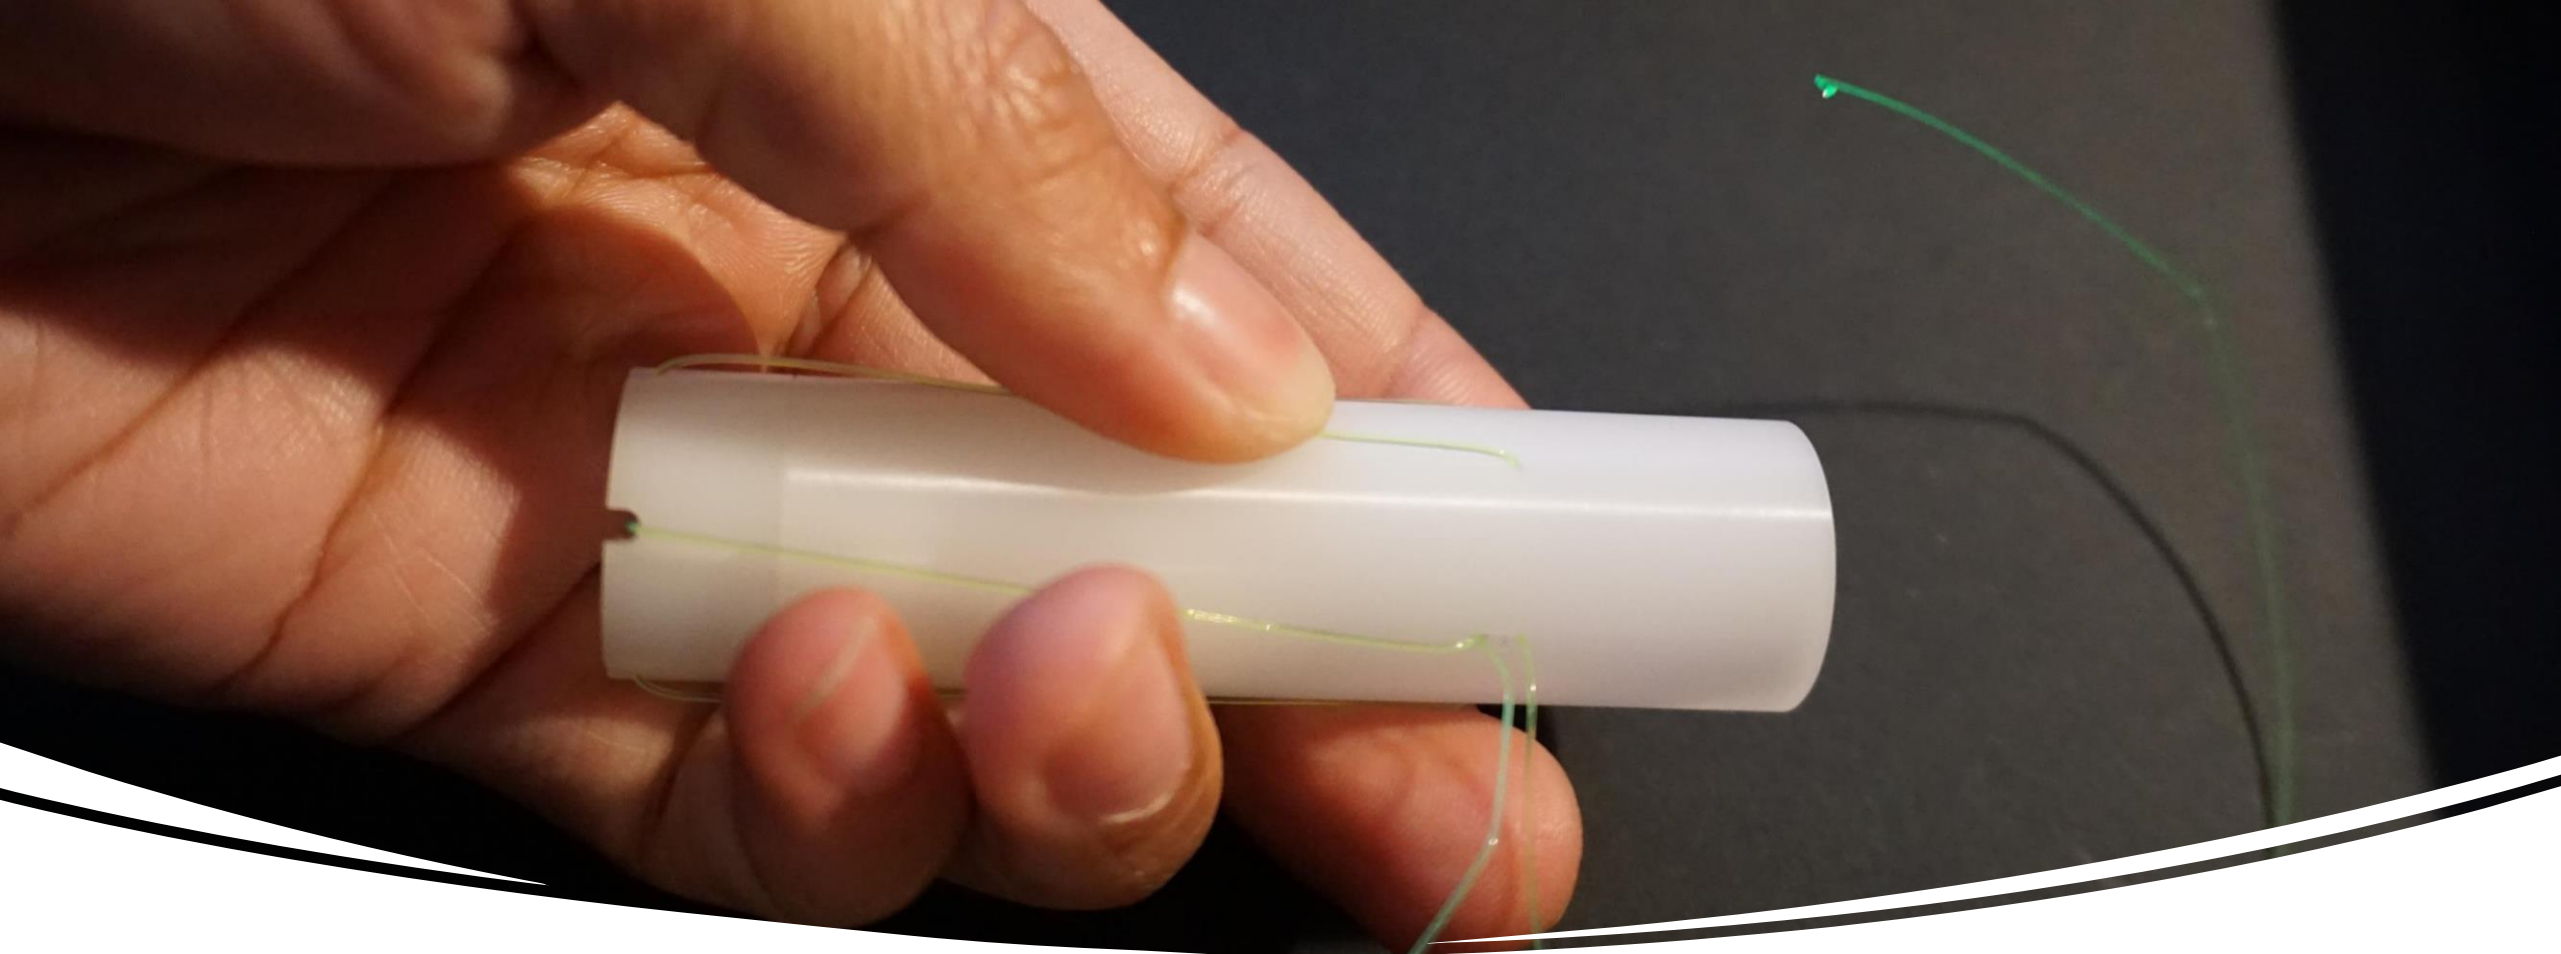

Apply tension to remove slack, working from the taped end to the free end.

“Push” the fishing line along with a finger to keep it tensioned.

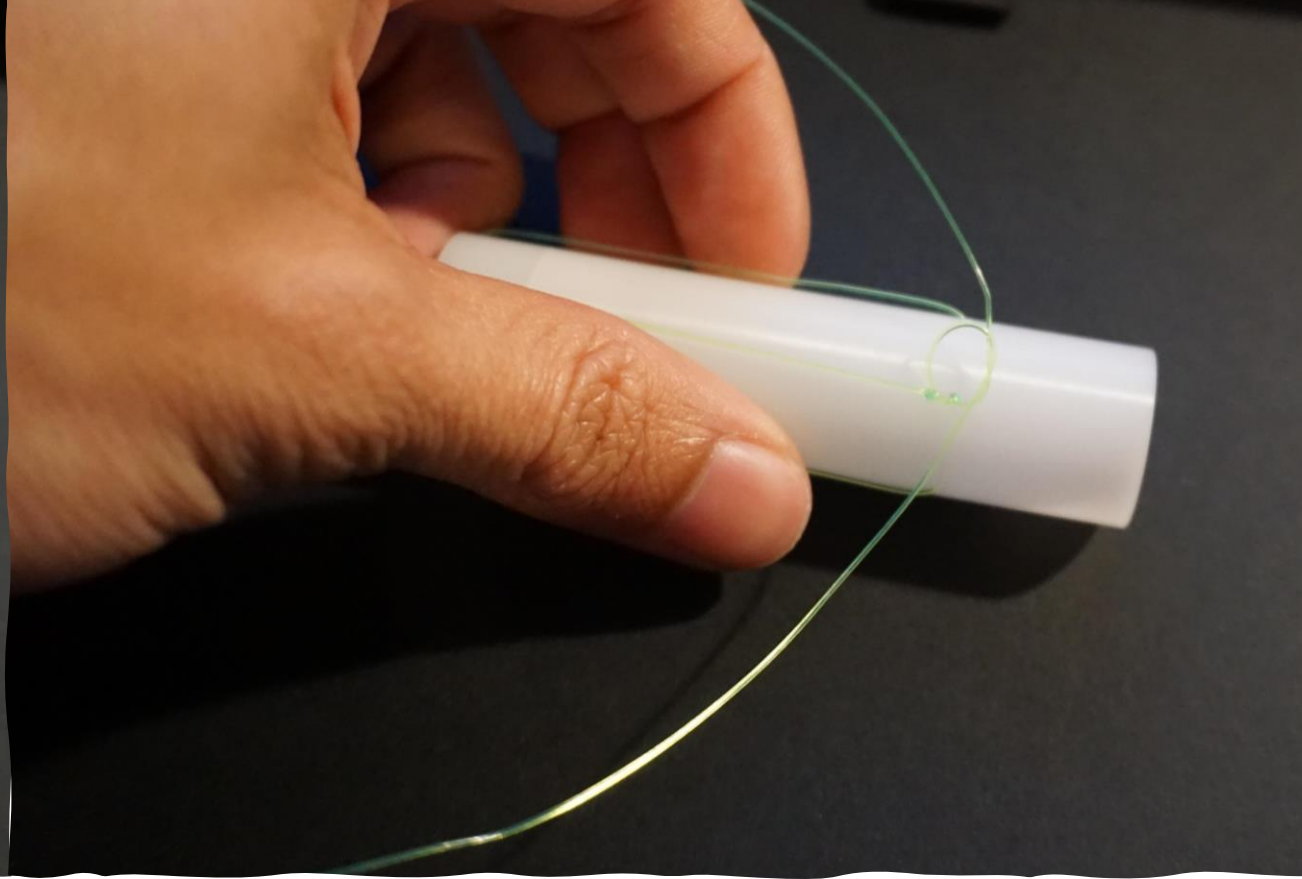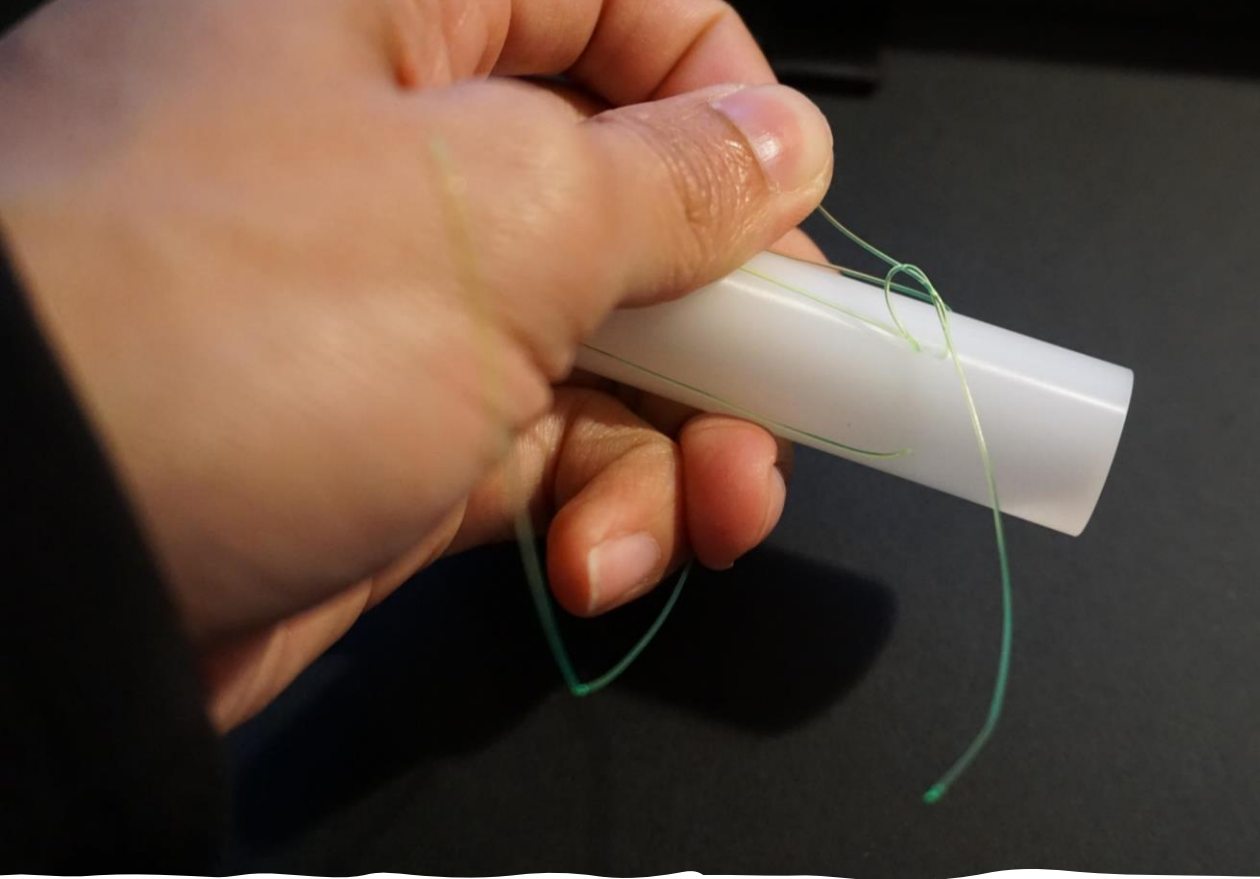

Double overhand to finish.

Then apply snip snip (scissors).