


SKU:HOD03-71

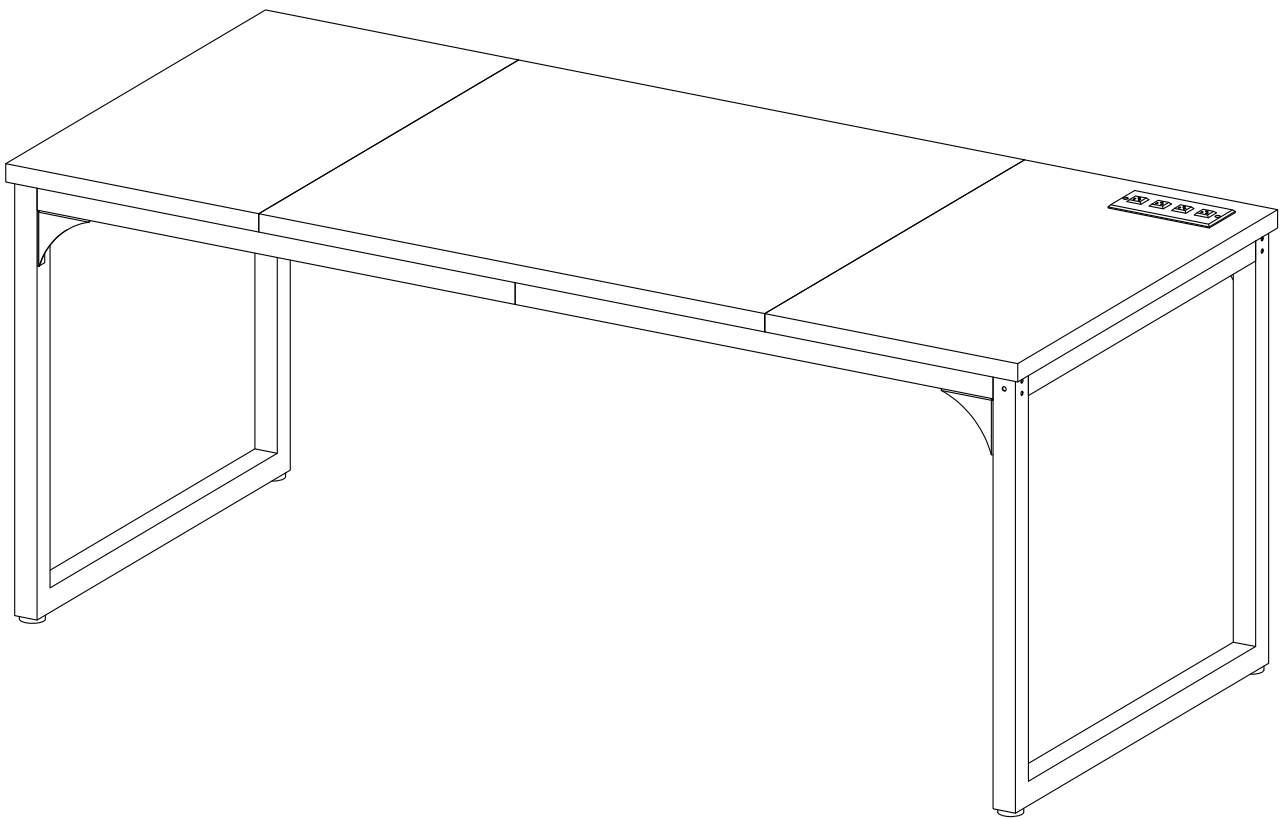

Home Office Desk with Power Outlet

Before Assembly

Please read the USER MANUAL thoroughly for quick assembly, and check according to Accessories.



Team Installation:

For larger product, we recommend that you install the product together with other people




Laying Protection:

To protect the product and your flooring during installation, please lay protection before installation



No Electric Drill:

For longer use, please use the installation tools supplied with the product.

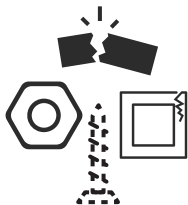

Missing Parts or Broken:

Please feel free to contact us via Amazon Orders or Customer Support Email. We promise to ship the missing or replacement parts to you free of charge.




Any questions?

Please do not hesitate to contact us!














customerservice@hkfoam.com






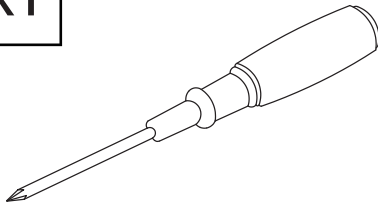
Disassembly Diagram

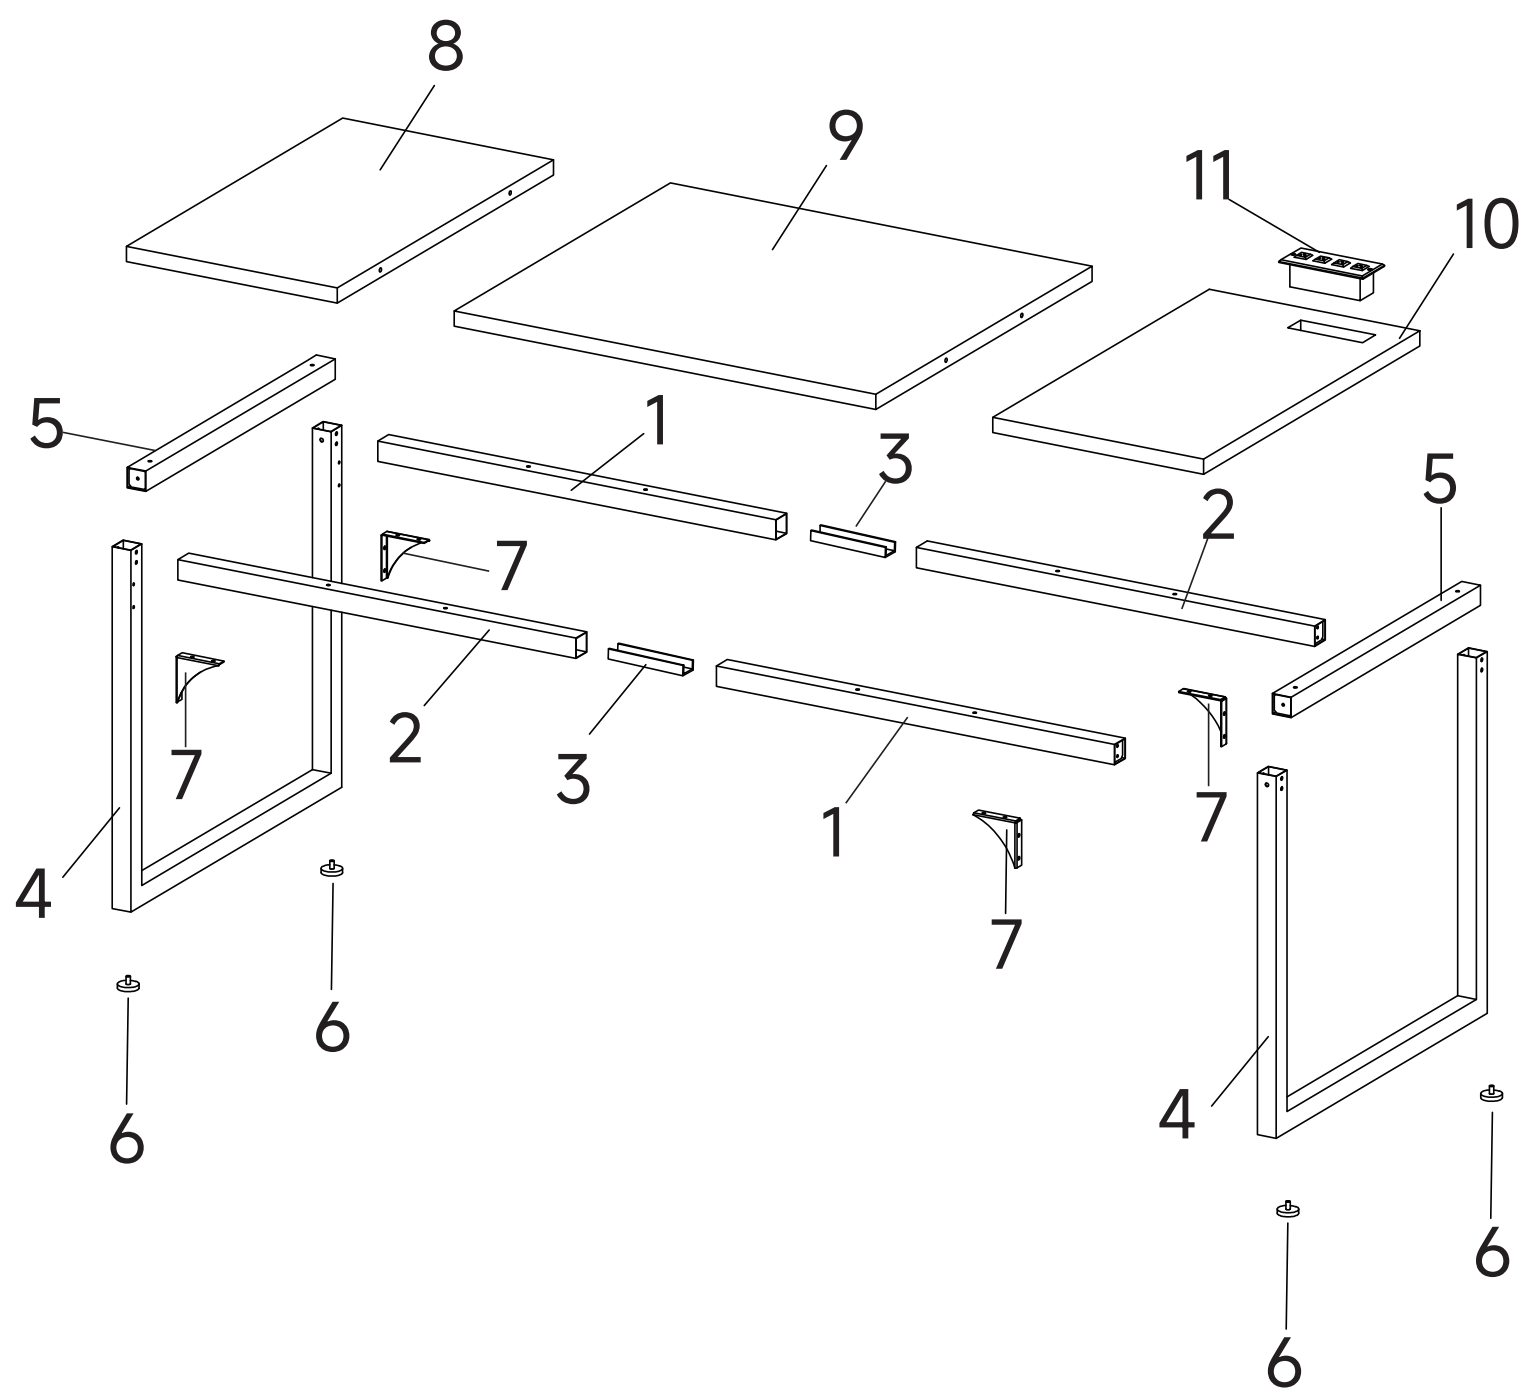

Accessories
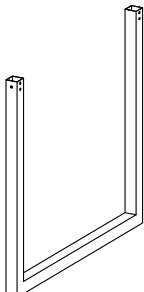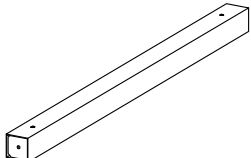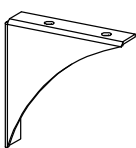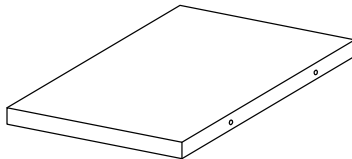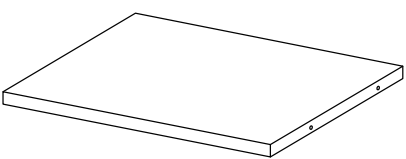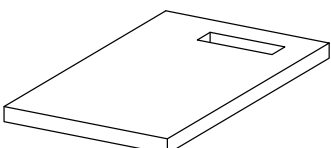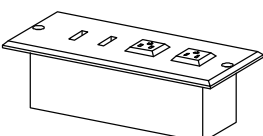
<p>1</p> <p>x2</p> 	<p>2</p> <p>x2</p> 	<p>3</p> <p>x2</p> 
<p>4</p> <p>x2</p> 	<p>5</p> <p>x2</p> 	<p>6</p> <p>x4</p> 
<p>7</p> <p>x4</p> 	<p>8</p> <p>x1</p> 	<p>9</p> <p>x1</p> 
<p>10</p> <p>x1</p> 	<p>11</p> <p>x1</p> 	

Accessories

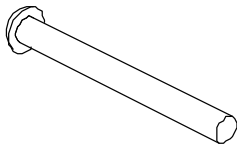

<div data-bbox="92 232 148 293">A</div> <div data-bbox="76 331 164 392">x24</div> <div data-bbox="205 432 443 577">  </div> <div data-bbox="193 591 464 647">M6*55mm</div>	<div data-bbox="587 232 638 293">B</div> <div data-bbox="568 331 655 392">x24</div> <div data-bbox="746 405 863 577">  </div> <div data-bbox="708 600 963 656">M6*12mm</div>	<div data-bbox="1082 232 1133 293">C</div> <div data-bbox="1074 331 1141 392">x1</div> <div data-bbox="1153 488 1417 566">  </div>
<div data-bbox="92 687 148 748">D</div> <div data-bbox="76 786 164 846">x2</div> <div data-bbox="236 920 392 1014">  </div> <div data-bbox="197 1072 458 1128">M4*10mm</div>	<div data-bbox="587 687 638 748">E</div> <div data-bbox="568 786 655 846">x4</div> <div data-bbox="738 931 890 1014">  </div>	<div data-bbox="1082 687 1133 748">F</div> <div data-bbox="1074 786 1141 846">x1</div> <div data-bbox="1098 824 1477 1025">  </div>

Assembly Instructions

Step 1: Assemble Under-Table Cross Tubes [1] & [2] and Insert Tube [3].

Note: The screw holes on the cross tubes are positioned towards the outer edges, as shown in the diagram.



- ① Align the two holes on one end of Insert Tube [3] with the two holes on Cross Tube [1].
- ② Repeat the same process for the other end and Cross Tube [2].
- ③ Secure all connections using Screws [B].

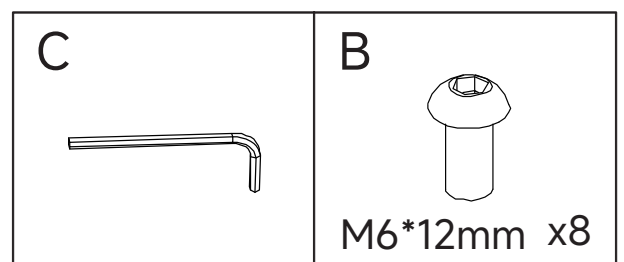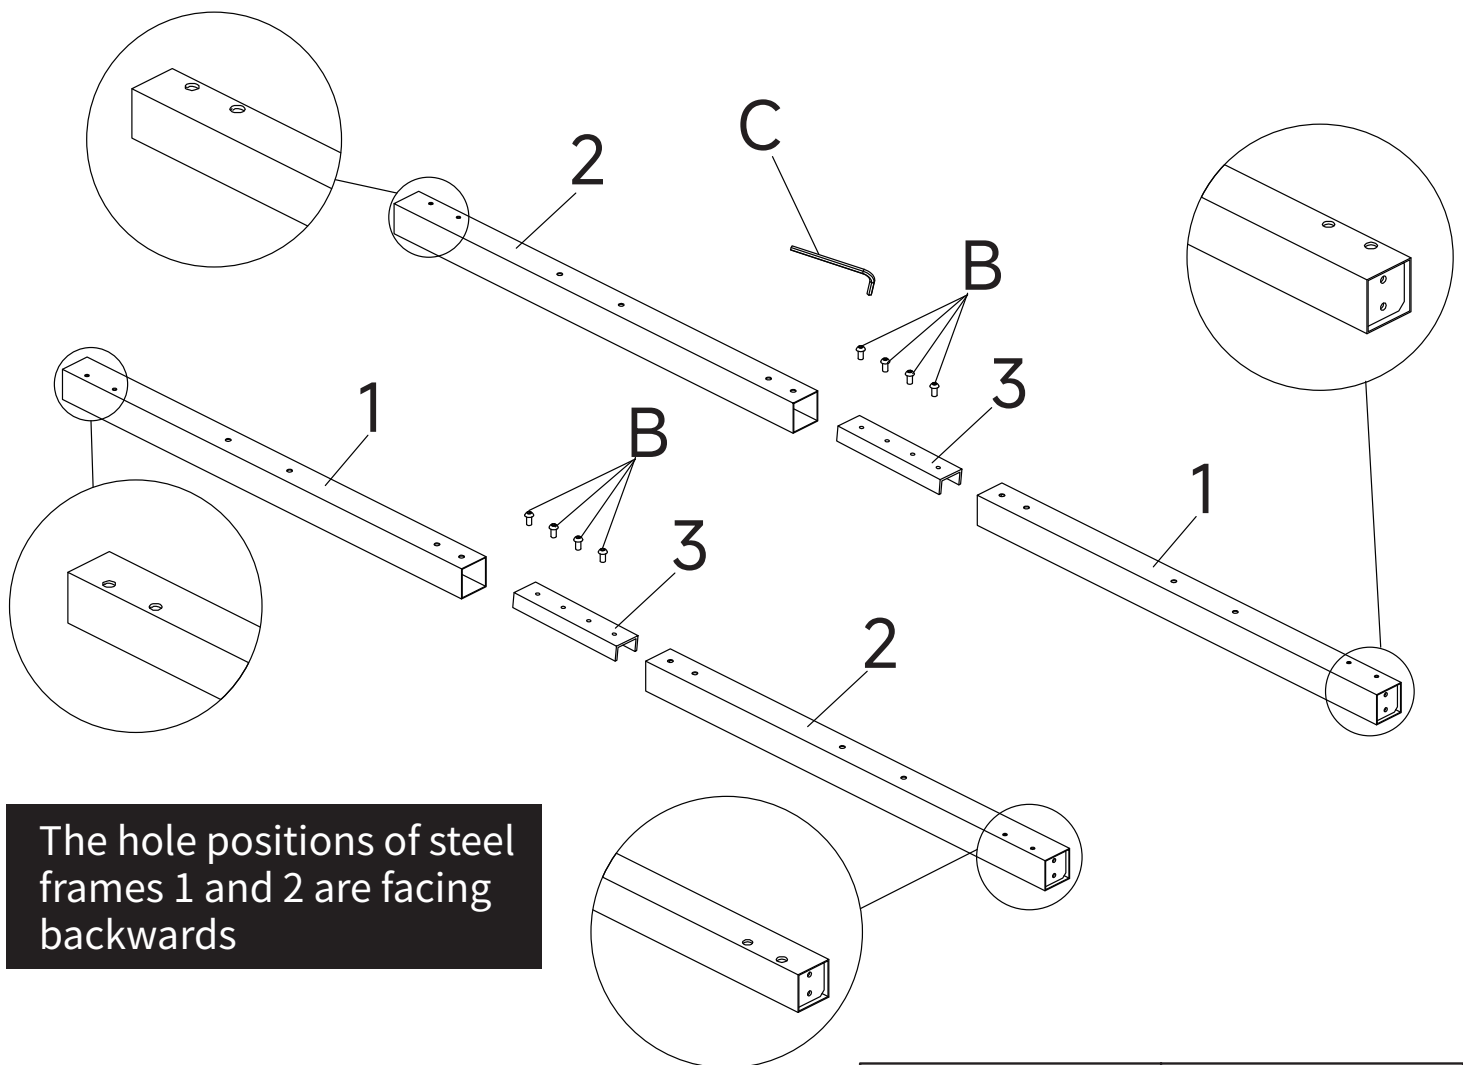

Assembly Instructions

Step 2: Assemble Leg Tubes [4] & [5].



- ① Connect Leg Tube [4] to Leg Tube [5] using Screws [A].
- ② Attach the Non-Slip Pad [6] to the bottom of Leg Tube [4].
- ③ The other leg is assembled in the same way.

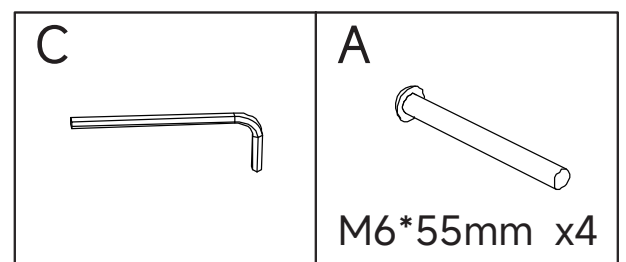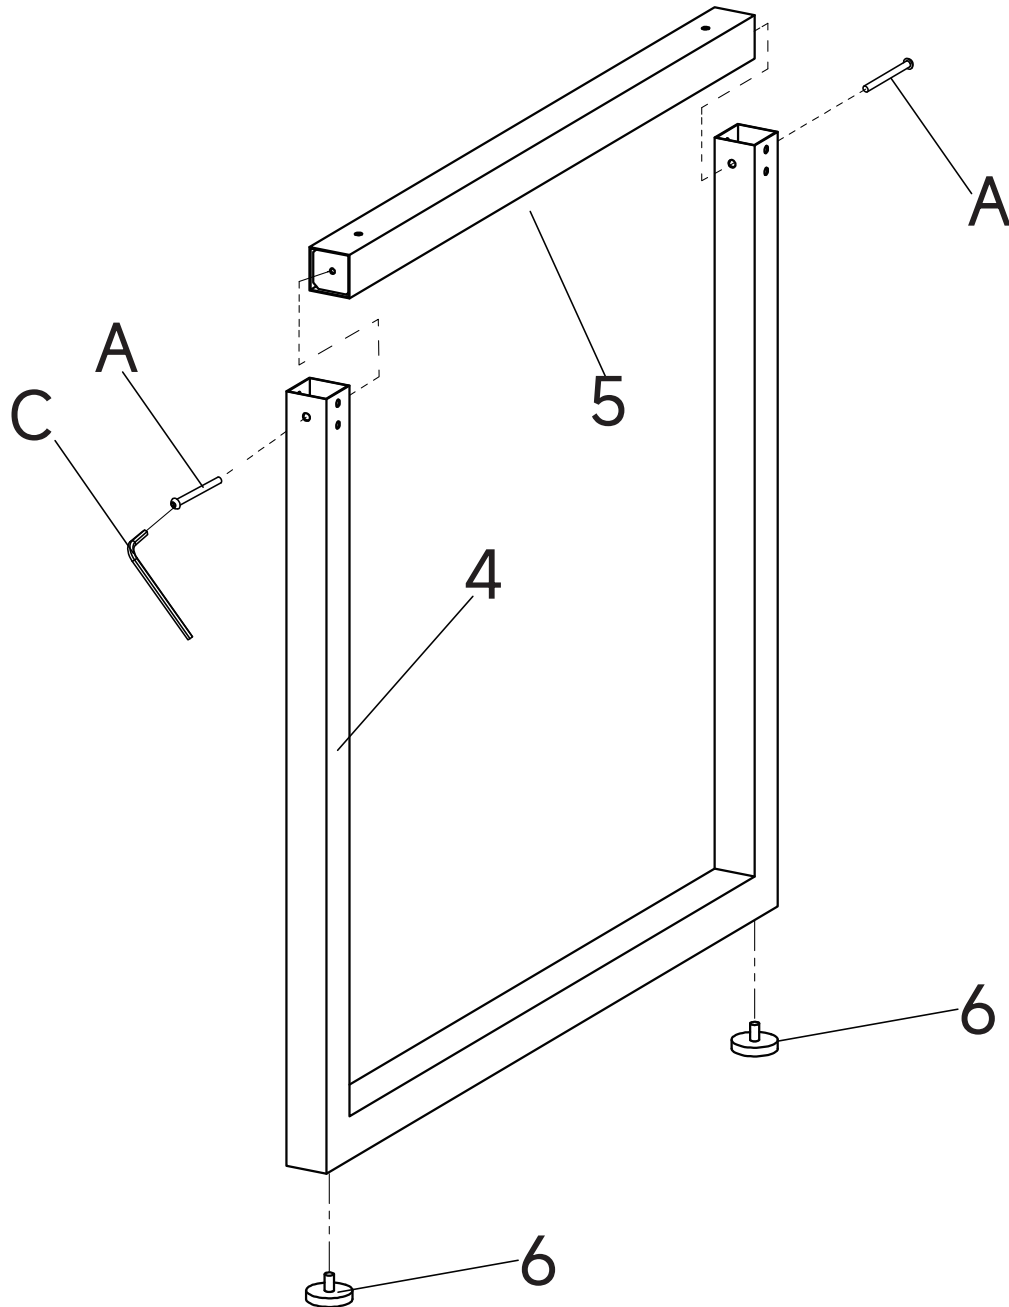

Assembly Instructions

Step 3: Assemble Tabletop.

- ① Use Wooden Dowels [E] to attach Side Panel [8] to the left side of Main Panel [9].
- ② Similarly, attach Side Panel [10] to the right side of Main Panel [9].

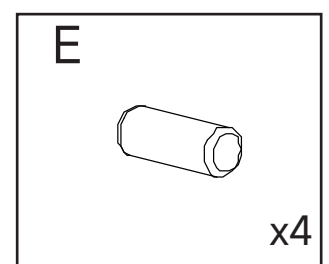
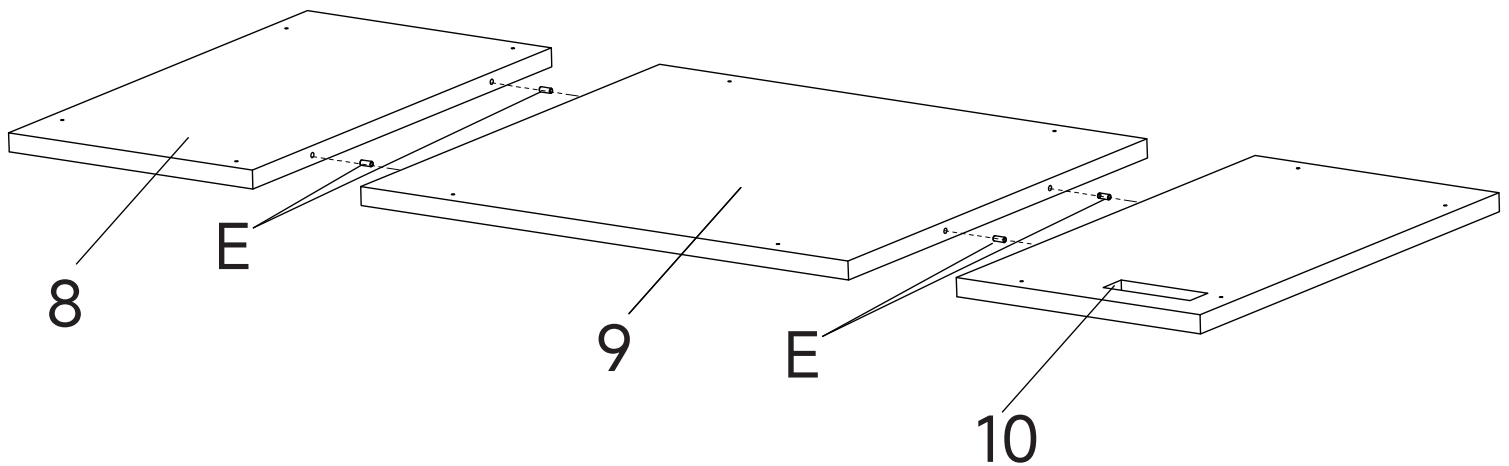


Assembly Instructions

Step 4: Attach Under-Table Frame.

Note: Do not fully tighten Screw [A] at this stage; leave it finger tight for later adjustments.

- ① Place the assembled Under-Table Frame onto the bottom of the tabletop. Align all corresponding holes.
- ② Secure the frame to the tabletop using 8 Screws [A].

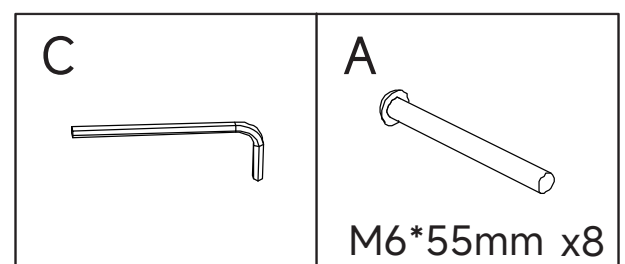
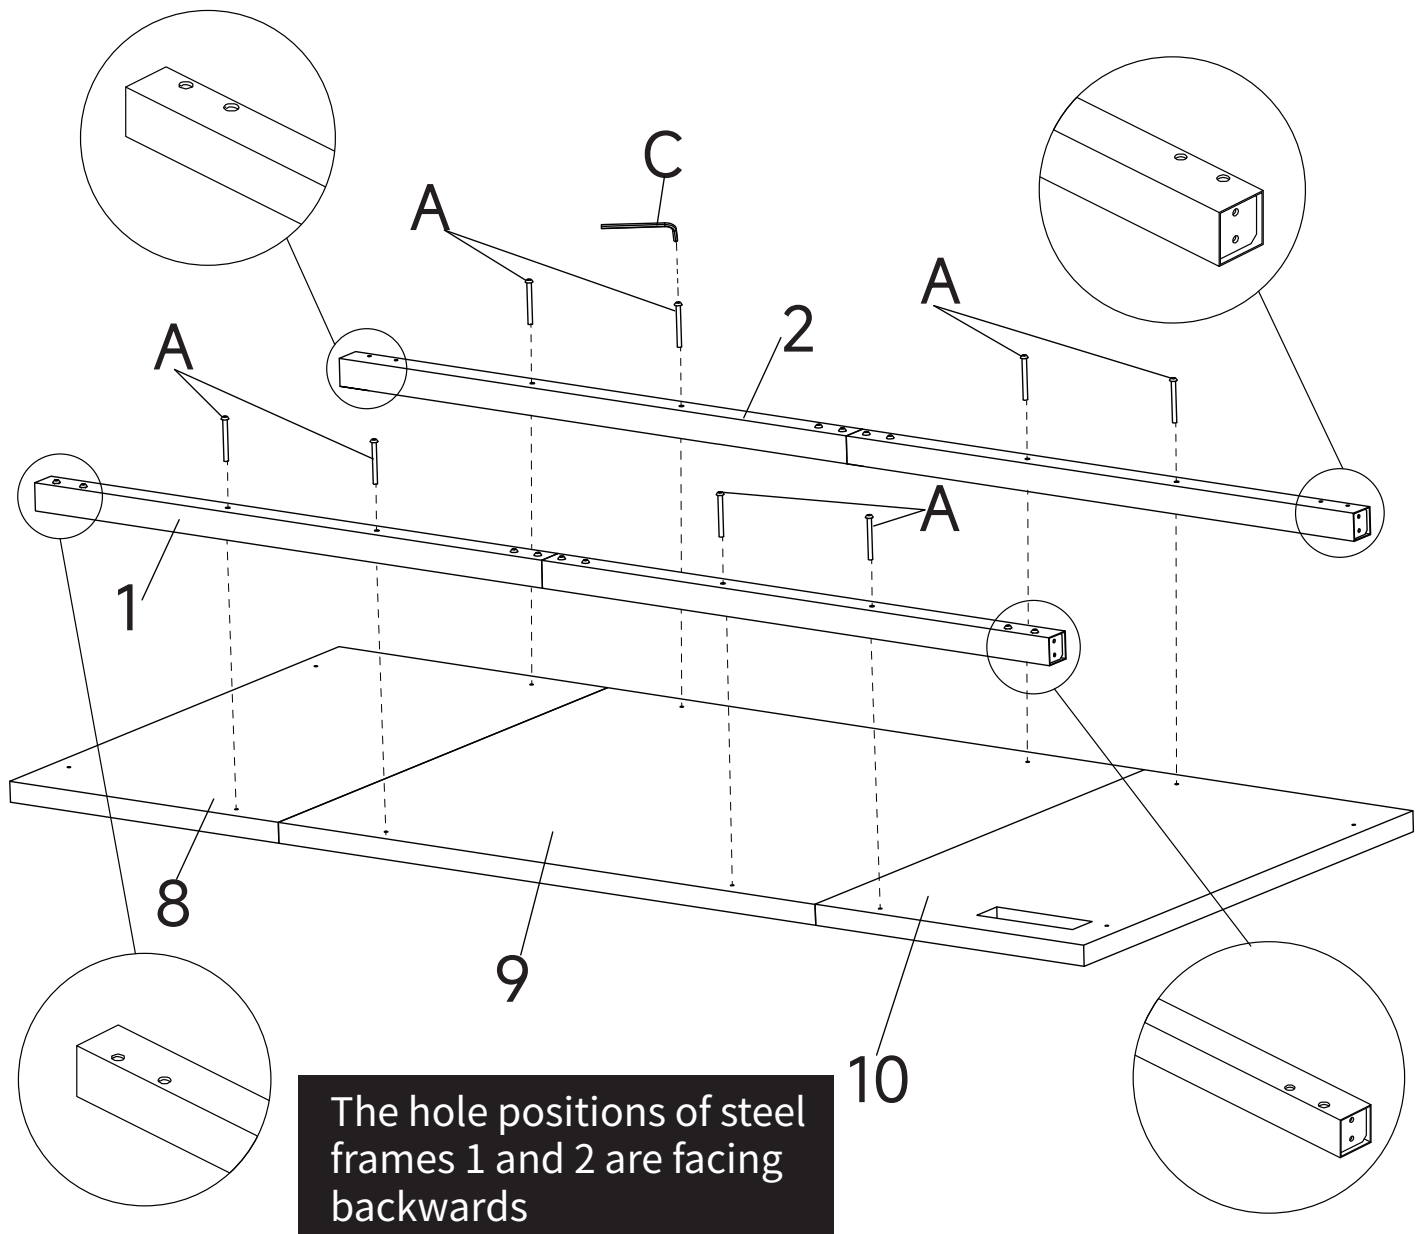


Assembly Instructions

Step 5: Attach Legs to Tabletop.

- ① Position the assembled legs onto the Under-Table Frame.
- ② Align the holes on the legs with the holes on the frame.
- ③ Secure them together using Screws [A].

The hole positions of steel frames 4 are facing backwards

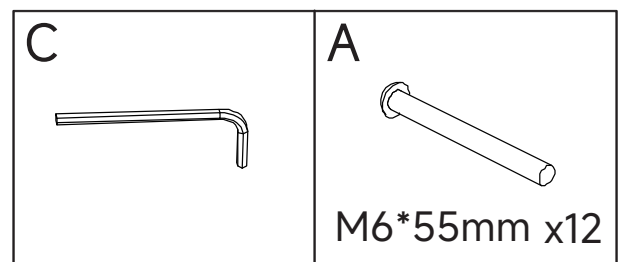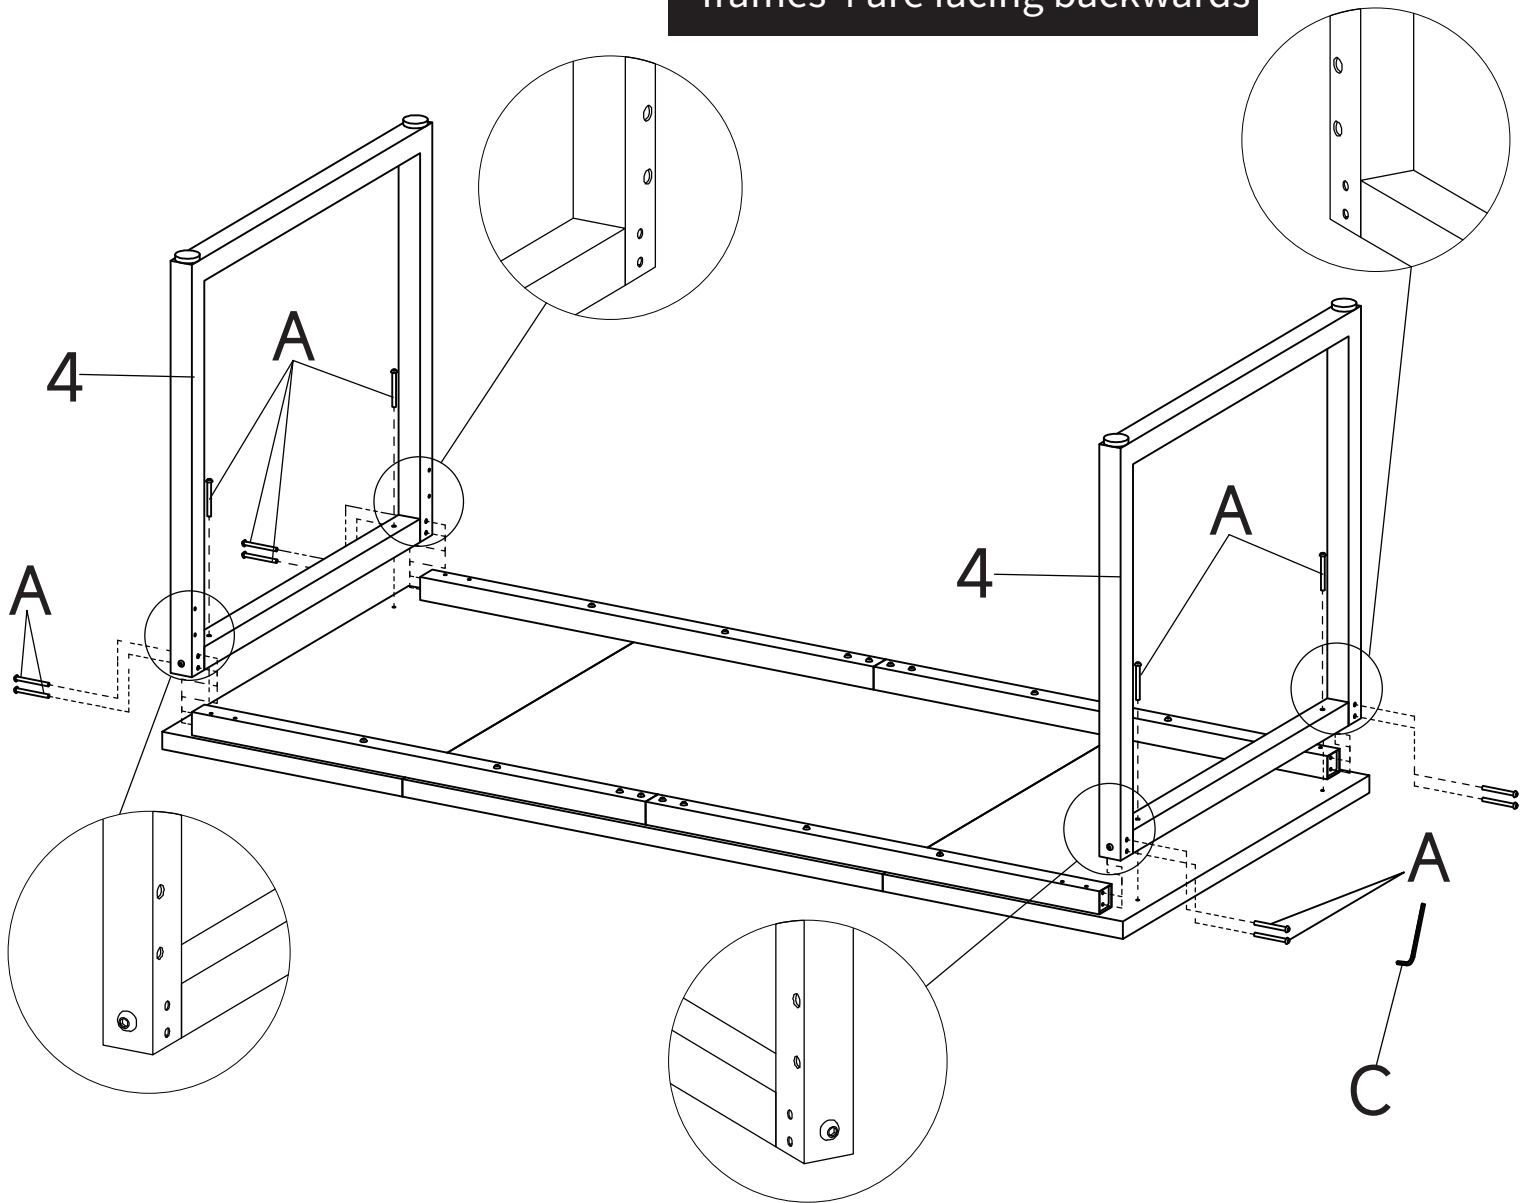


Assembly Instructions

Step 6: Install Metal Corner Braces Under Tabletop.

① Attach Part [7] (Metal Corner Brace) to the four corners underneath the tabletop.



② Secure each brace using Screws [B].

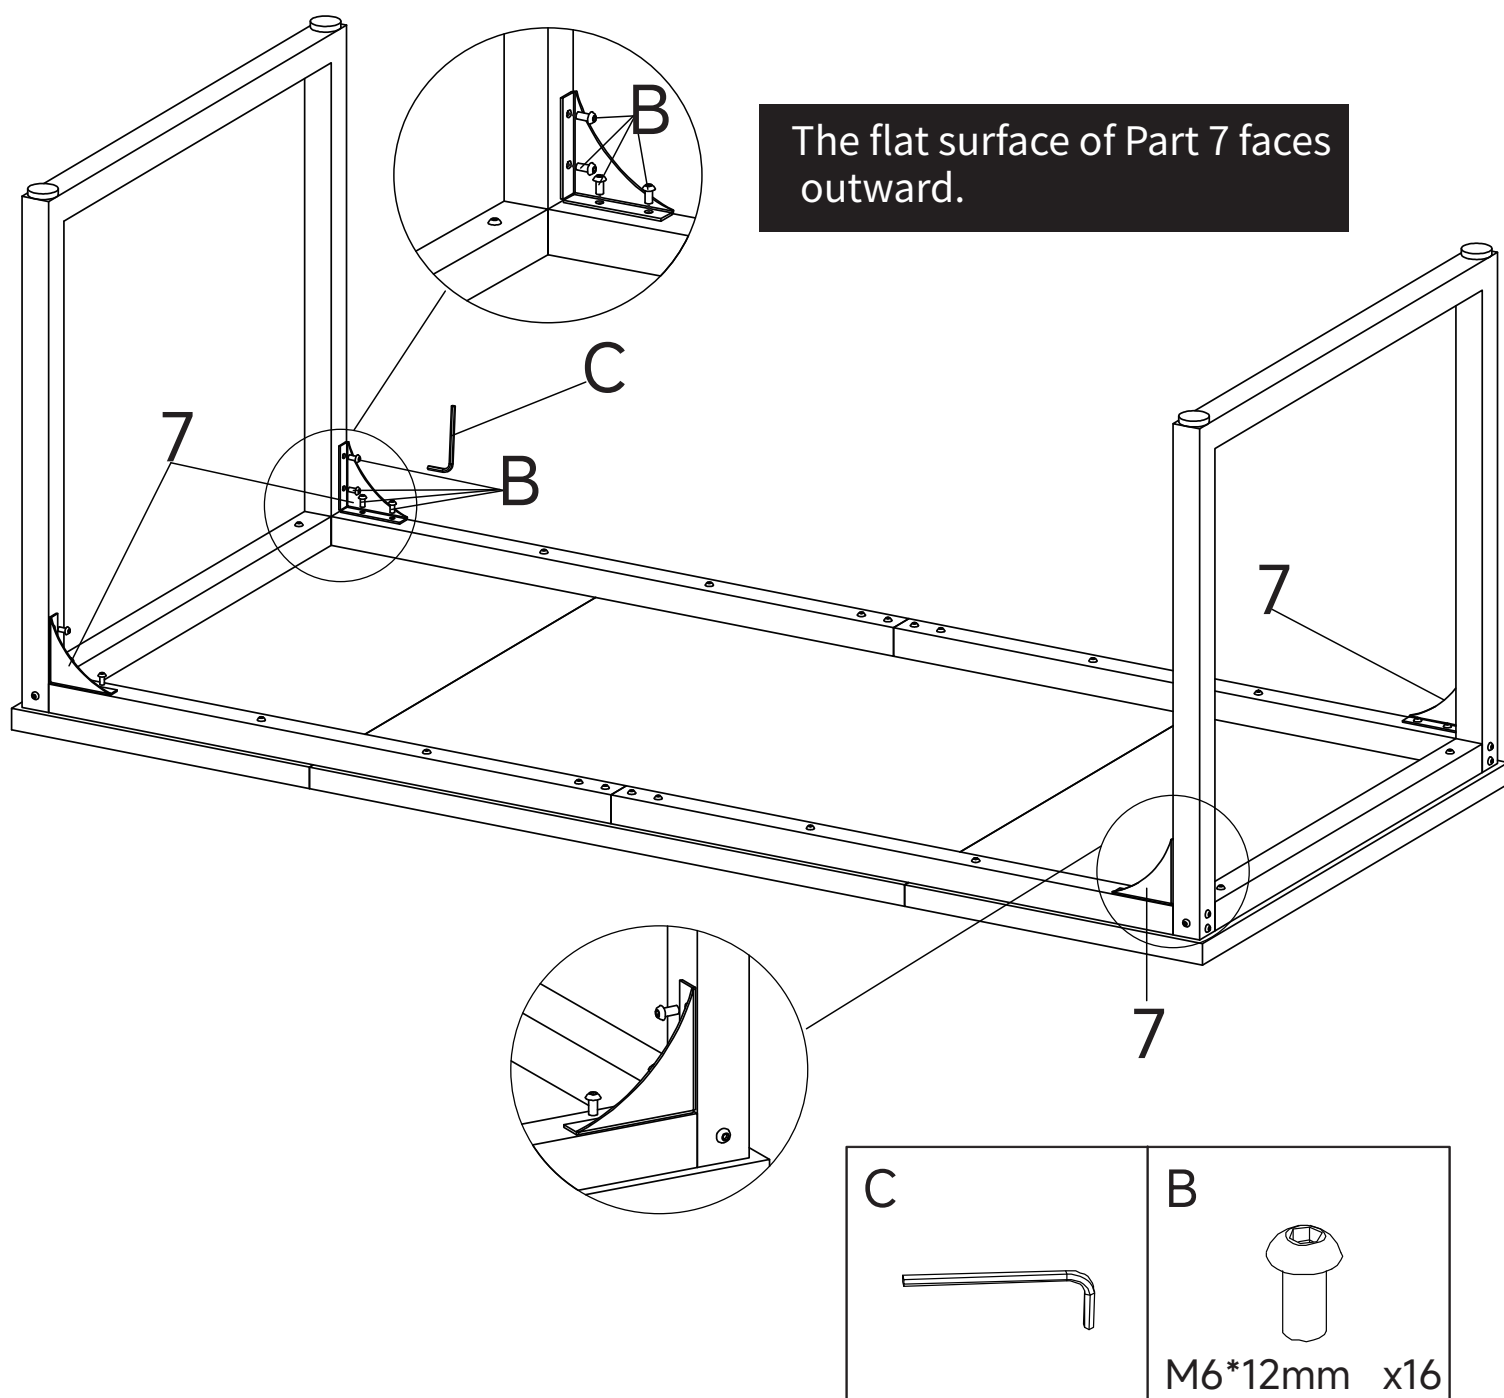

Assembly Instructions

Step 7: Firmly push the desktop until it is secure.



- ① Place the desk upright and adjust the screws.
- ② Then, firmly push the desktop until it is fully closed.
- ③ Finally, using Part [C], tighten all screws completely.

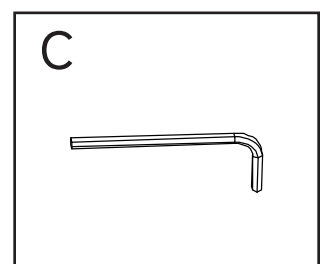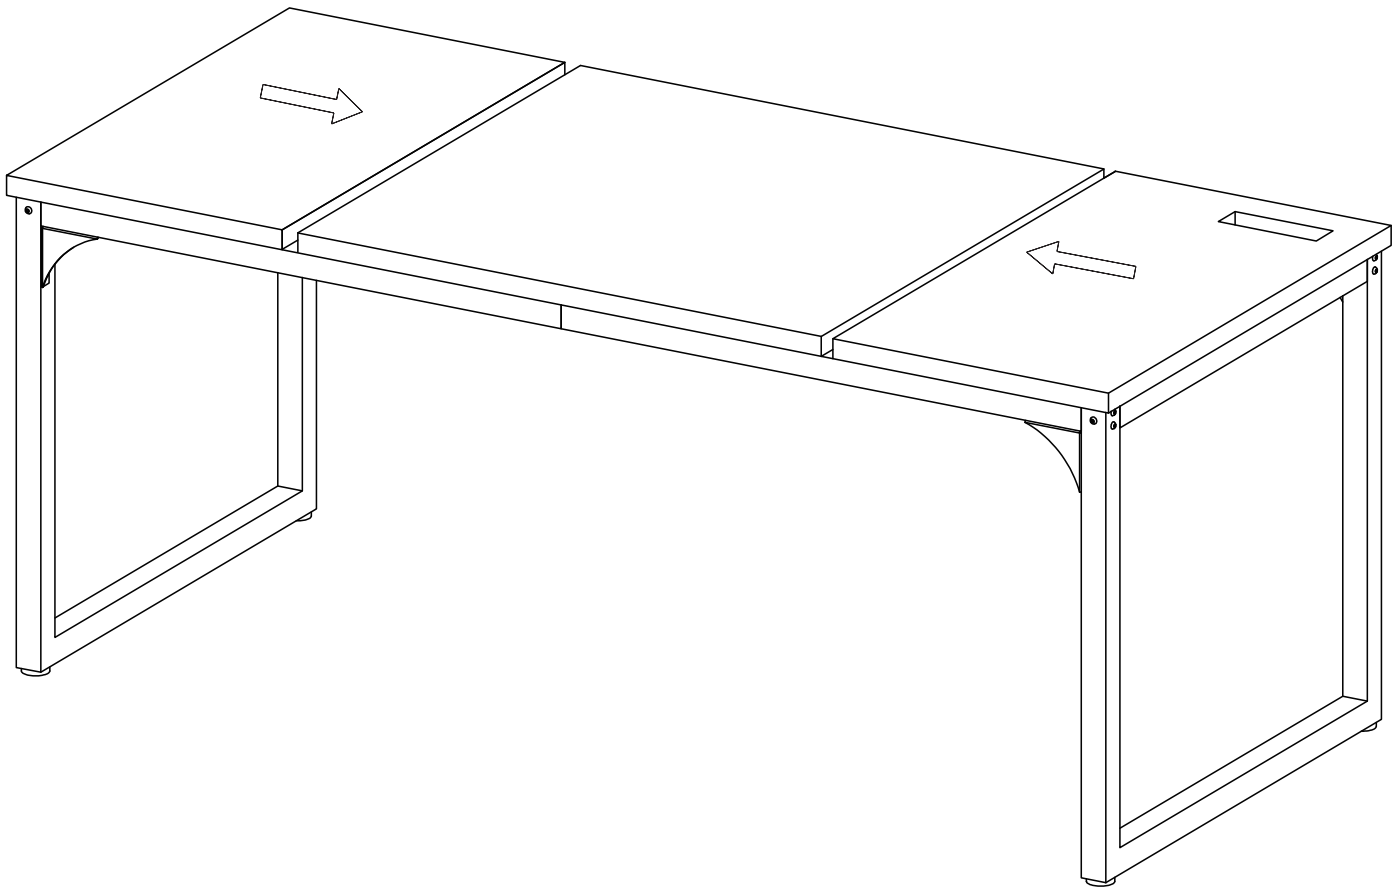



Assembly Instructions

Step 6: Install Cable Outlet [11].

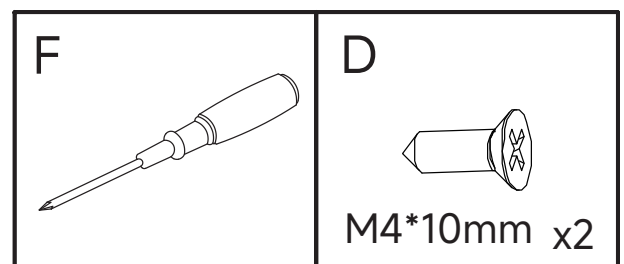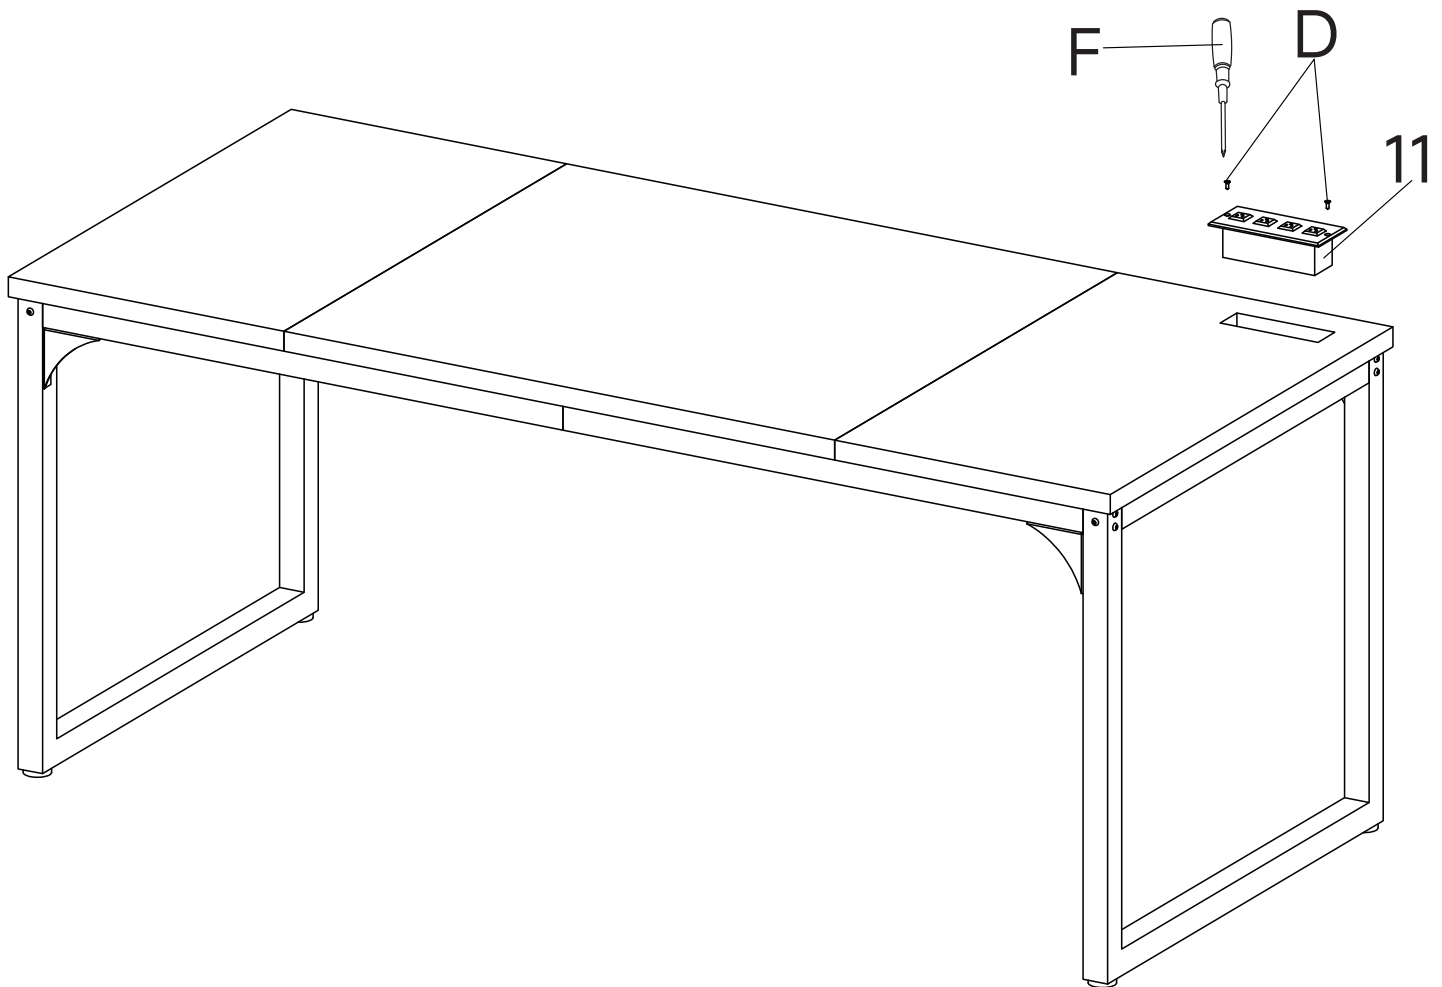- ① Place the Cable Outlet [11] into the hole on the tabletop.
- ② Using screwdriver [F] and screws [D], secure the component to the desktop.



Problems You May Encounter

PROBLEMS	SOLUTIONS
Non-human caused damage during usage.	Please Keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide a satisfactory solution.
Mismatch of screw hole positions between components.	<ol style="list-style-type: none"> 1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjust the direction of the component to check that the wrong hole position has not been selected.
Product is unstable after being assembled.	<ol style="list-style-type: none"> 1. Check if the screws are tightened. 2. Read through out the manual, check are there any parts installed incorrectly or missing assembled.
Any missing or damaged components.	To solve the problem. We are committed to providing you with Free component shipping and replacement
More problems or the above problems could not be solved.	<div>  <p>Contact us, We will support you!</p> </div> <div>  <p>customerservice@hkfoam.com</p> </div>