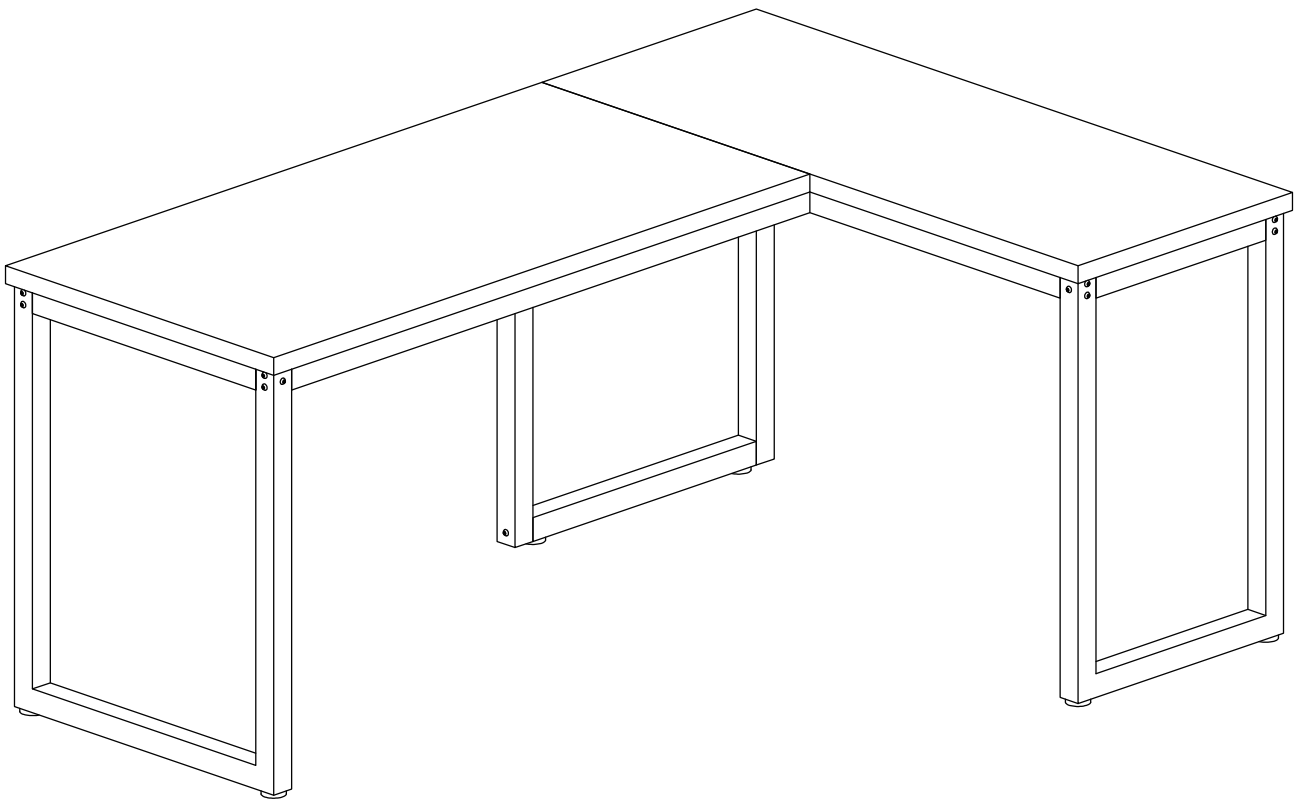


SKU:HOD04



Metal and Wood Corner Home Office Desk

Before Assembly

Please read the USER MANUAL thoroughly for quick assembly, and check according to Accessories.



Team Installation:

For larger product, we recommend that you install the product together with other people



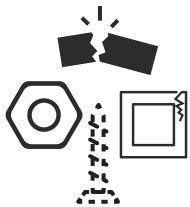
Laying Protection:

To protect the product and your flooring during installation, please lay protection before installation



No Electric Drill:

For longer use, please use the installation tools supplied with the product.



Missing Parts or Broken:

Please feel free to contact us via Amazon Orders or Customer Support Email. We promise to ship the missing or replacement parts to you free of charge.



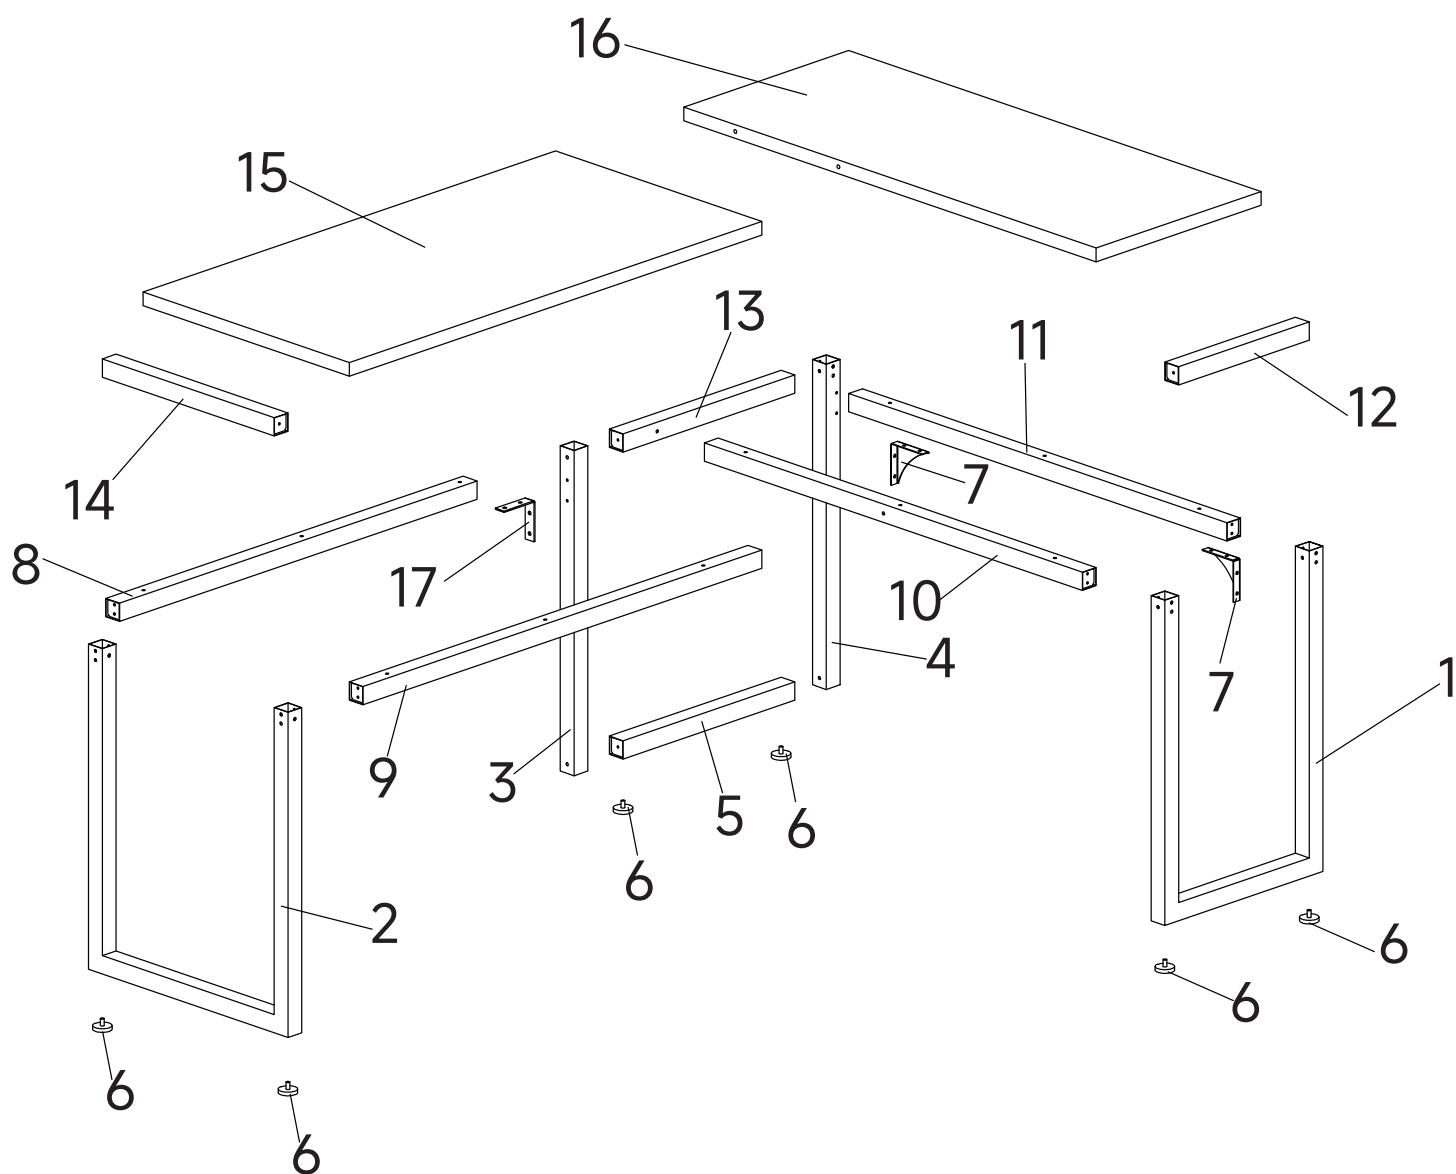
Any questions?

Please do not hesitate to contact us!

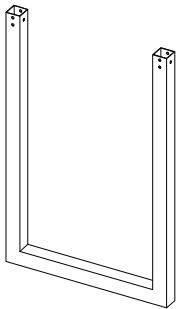
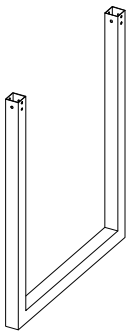

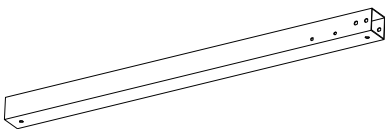
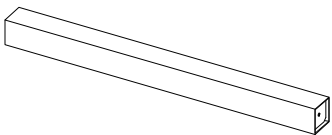

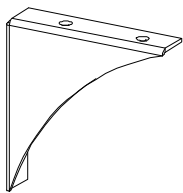
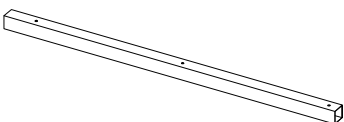






customerservice@hkfoam.com

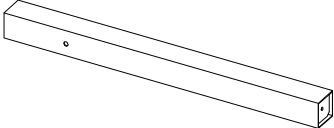
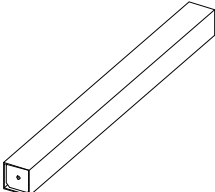
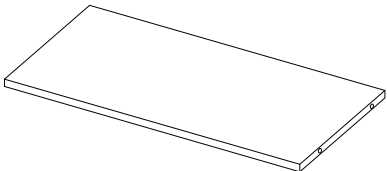
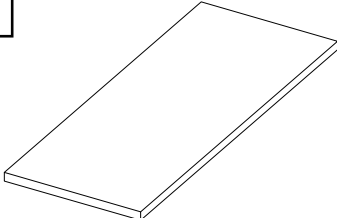
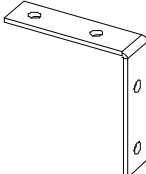
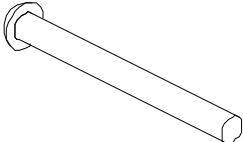
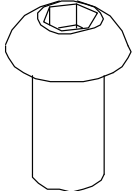


Disassembly Diagram



Accessories

1 x1 	2 x1 	3 x1 
4 x1 	5 x1 	6 x6 
7 x2 	8 x1 	9 x1 
10 x1 	11 x1 	12 x1 




Accessories

<div>13</div> <div>x1</div> 	<div>14</div> <div>x1</div> 	<div>15</div> <div>x1</div> 
<div>16</div> <div>x1</div> 	<div>17</div> <div>x1</div> 	<div>A</div> <div>x34</div>  <p>M6*55mm</p>
<div>B</div> <div>x11</div>  <p>M6*12mm</p>	<div>C</div> <div>x1</div> 	<div>D</div> <div>x2</div> 

Assembly Instructions

Step 1: Assemble Legs [1] & [12]/[2] & [14]

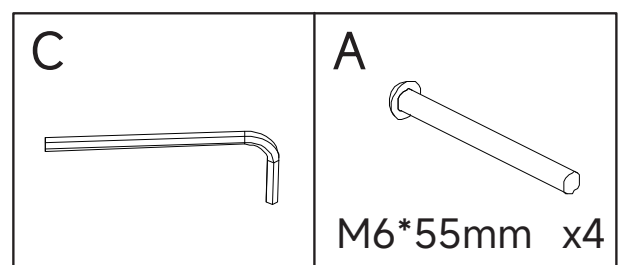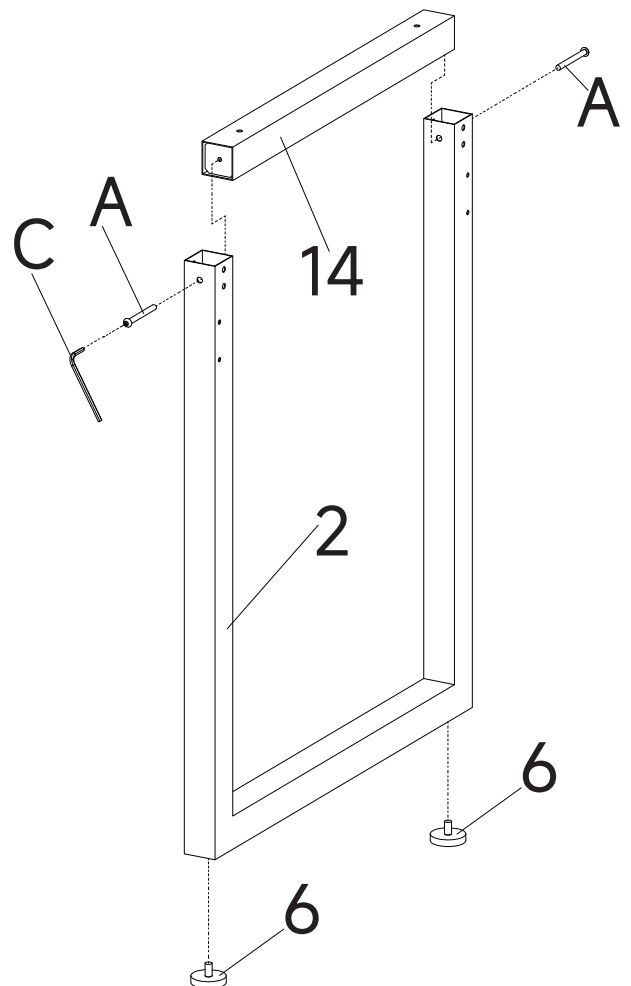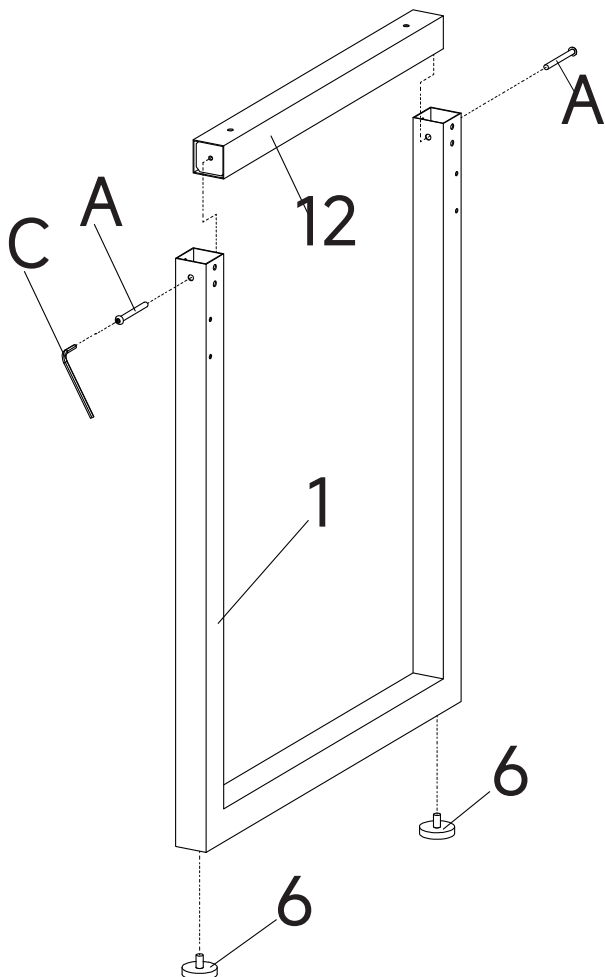
- ① Align cross tubes [12]/[14] with the holes on legs [1]/[2] respectively as shown.
- ② Use Screws[A] to secure [12] to [1], and [14] to [2].
- ③ Attach non-slip pads [6] to the bottom of legs [1] and [2].




Assembly Instructions

Step 2: Combine Leg Components [3], [4], [5], & [13]

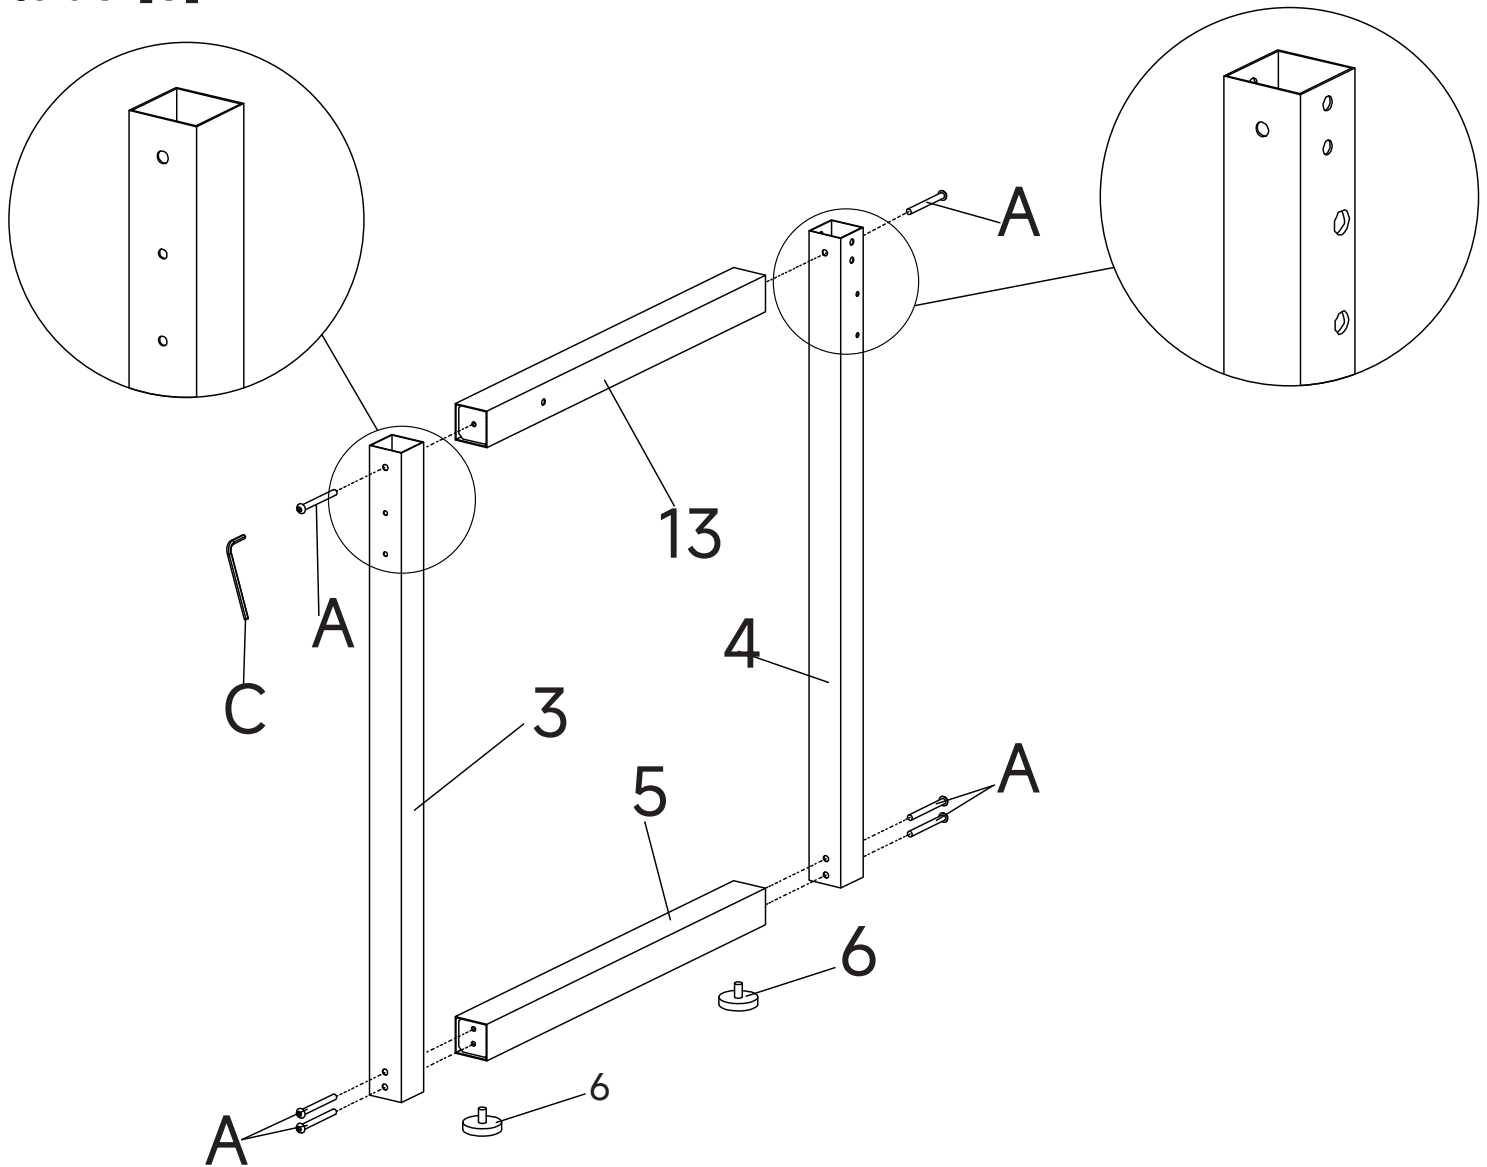- ① Align the left and right sides of the upper cross tube [13]/[5] with the holes on vertical tubes [3] and [4] as shown.
- ② Use Screws [A] to assemble [13] and [5] to [3] and [4] through the aligned holes.
- ③ Attach non-slip pads [6] to the bottom of the lower cross tube [5].




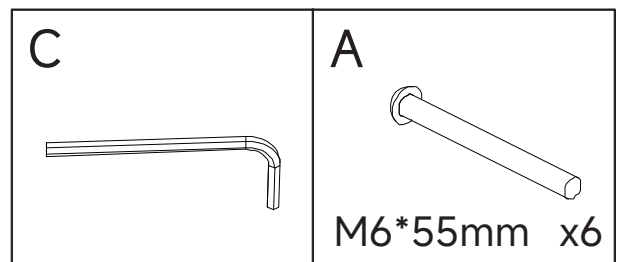
The hole positions of steel frame 3 is facing the side.
The hole positions of steel frame 4 is facing forward.



Assembly Instructions

Step 3: Assemble Desktop Panels [15] & [16]

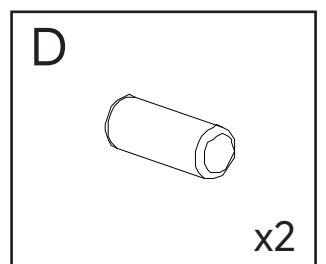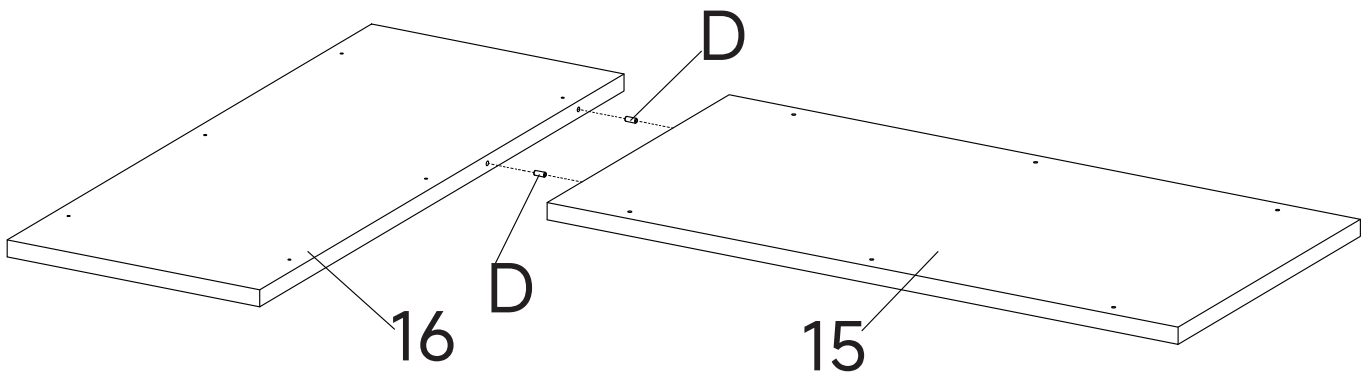① Use wooden dowels [D] to join [15] and [16] together as shown.




Assembly Instructions


Step 4: Install Under-Table Cross Tubes [10] & [11]

① Align under-table cross tubes [10] and [11] with the holes on desktop panel [16] as shown.

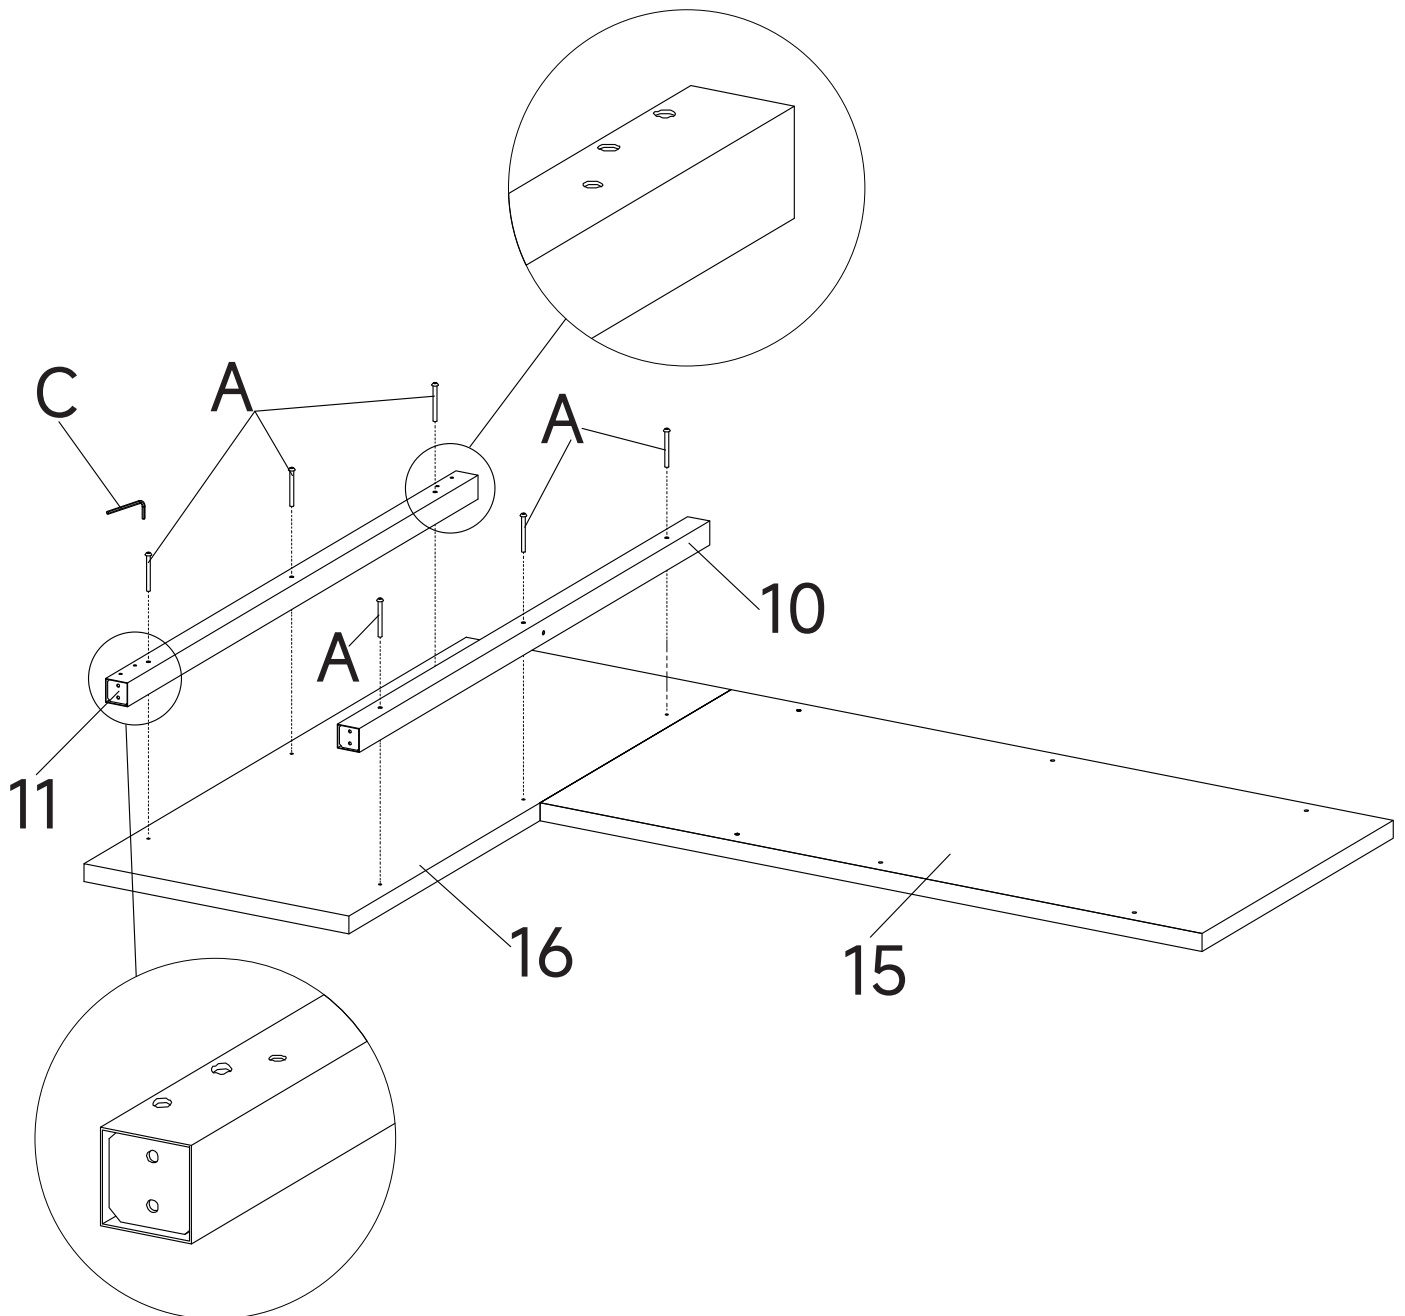② Use Screws [A] to secure tubes [10] and [11] to panel [16] through the aligned holes.



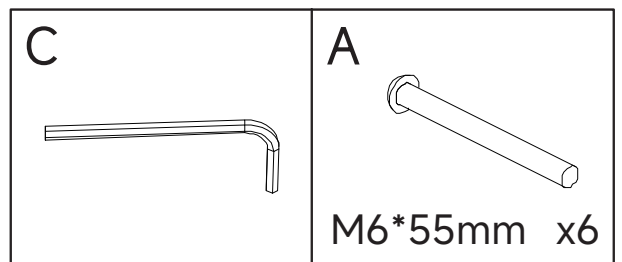The hole positions of steel frame 11 are facing Facing outward.



Assembly Instructions

Step 5: Install Under-Table Cross Tubes [8] & [9]


Note1: Do not fasten screws into the circled holes on cross tube [8] in this step.

Note2: Do not tighten Screw [A] connecting cross tube [10] and [9] at this stage.

① Align under-table cross tubes [8] and [9] with the holes on desktop panel [15] as shown.

② Use Screws [A] to secure cross tubes [8] and [9] to panel [15] through the aligned holes.

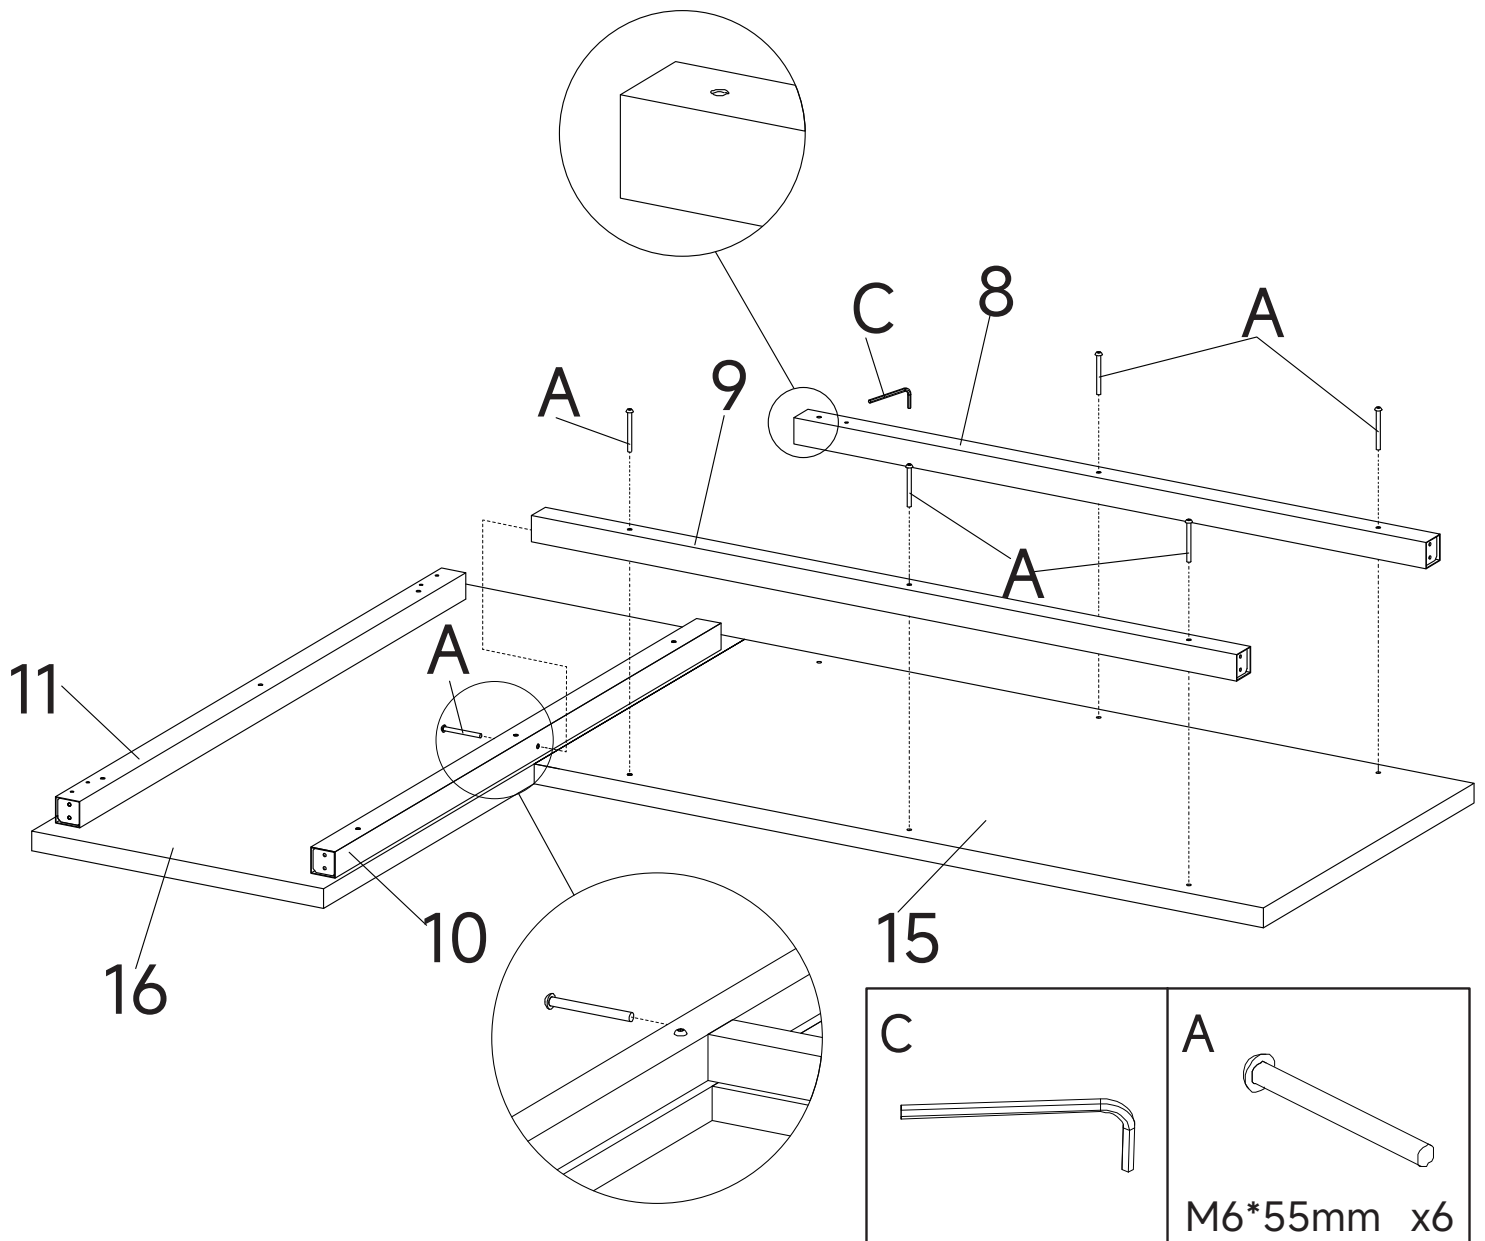
③ Use Screws [A] to secure the side of cross tube [9] to the side of cross tube [10].




Assembly Instructions

Step 6: Install All Legs

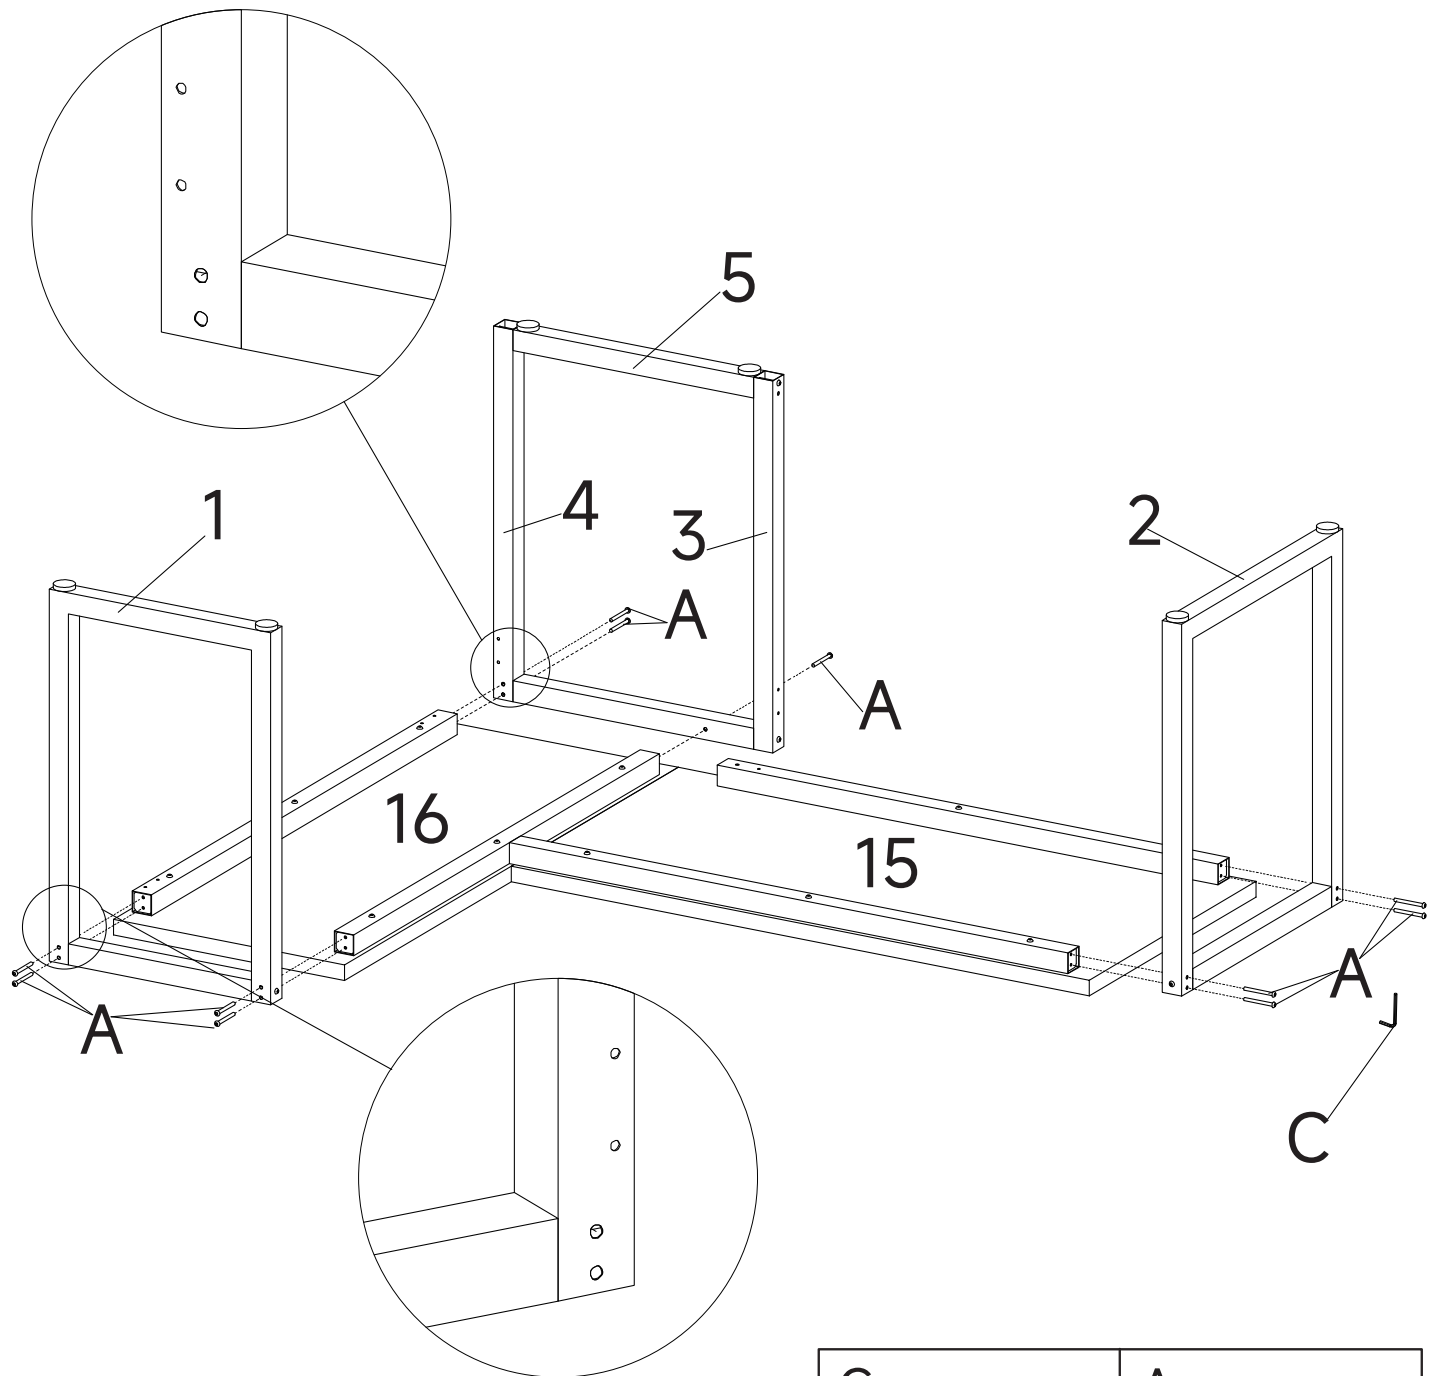- ① Position the pre-assembled leg frames from Step 1 and Step 2 into their corresponding locations as shown.
- ② Use Screws [A] to attach the three leg frames to the under-table cross tubes.



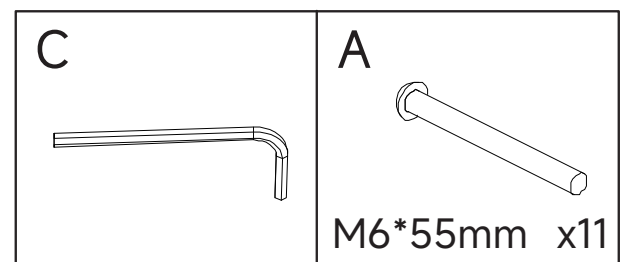The hole positions of steel frame 1 and 4 are facing outward.




Assembly Instructions

Step 7: Install Corner Brackets [7] & L-Shaped Plate [17]

Note: Do not tighten part [B] connecting part [3] and L-shaped plate [17] at this stage.

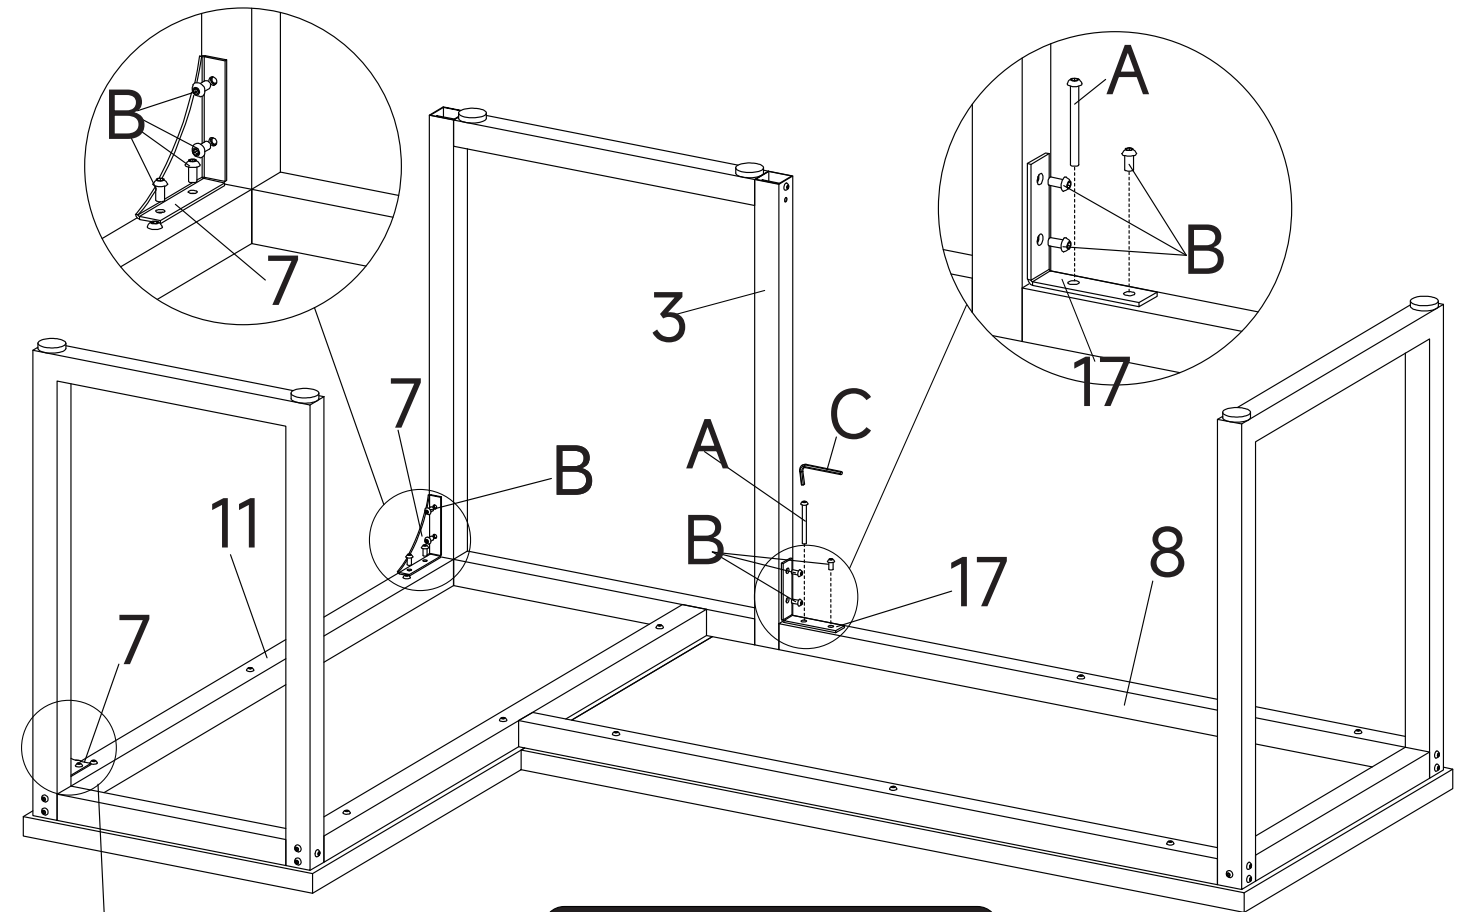- ① Place two corner brackets [7] onto cross tube [11], aligning the holes as shown.
- ② Secure each bracket using four [B] parts.
- ③ Place the L-shaped plate [17] onto cross tube [8], aligning the holes.
- ④ Secure the L-shaped plate using three [B] Screws and one [A] Screw as shown.




The flat surface of Part 7 faces outward.

C	B	A
	M6*12mm x11	M6*55mm x1



Assembly Instructions

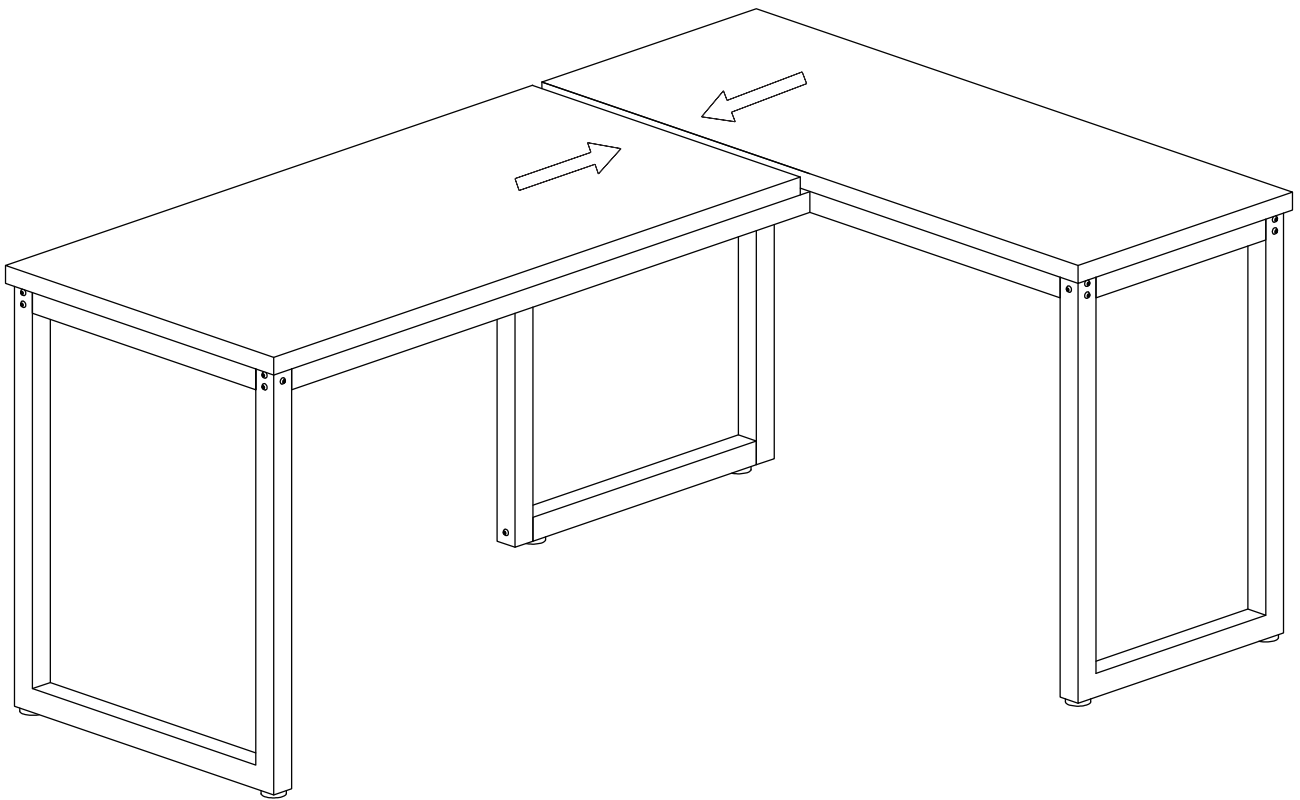Step 8: Tighten Desktop Panels

- ① Place the desk upright. Adjust the screws to push and tightly close the desktop panels.
- ② Tighten all screws that were left loose in the previous steps.



Problems You May Encounter

PROBLEMS	SOLUTIONS
Non-human caused damage during usage.	Please Keep the product and send us photos of it. We will ascertain the cause of the product damage within 48 hours and provide a satisfactory solution.
Mismatch of screw hole positions between components.	<ol style="list-style-type: none"> 1. Please tighten the screws on the board by 70%, do not tighten completely. 2. Adjust the direction of the component to check that the wrong hole position has not been selected.
Product is unstable after being assembled.	<ol style="list-style-type: none"> 1. Check if the screws are tightened. 2. Read through out the manual, check are there any parts installed incorrectly or missing assembled.
Any missing or damaged components.	To solve the problem. We are committed to providing you with Free component shipping and replacement
More problems or the above problems could not be solved.	<div>  <p>Contact us, We will support you!</p> </div> <div>  <p>customerservice@hkfoam.com</p> </div>